




**30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE
(Finger Print Resistant)**

MODELS:

WFE550S0HZ0 (Stainless)

WFE550S0HV0 (Black Stainless)


COOKTOP PARTS

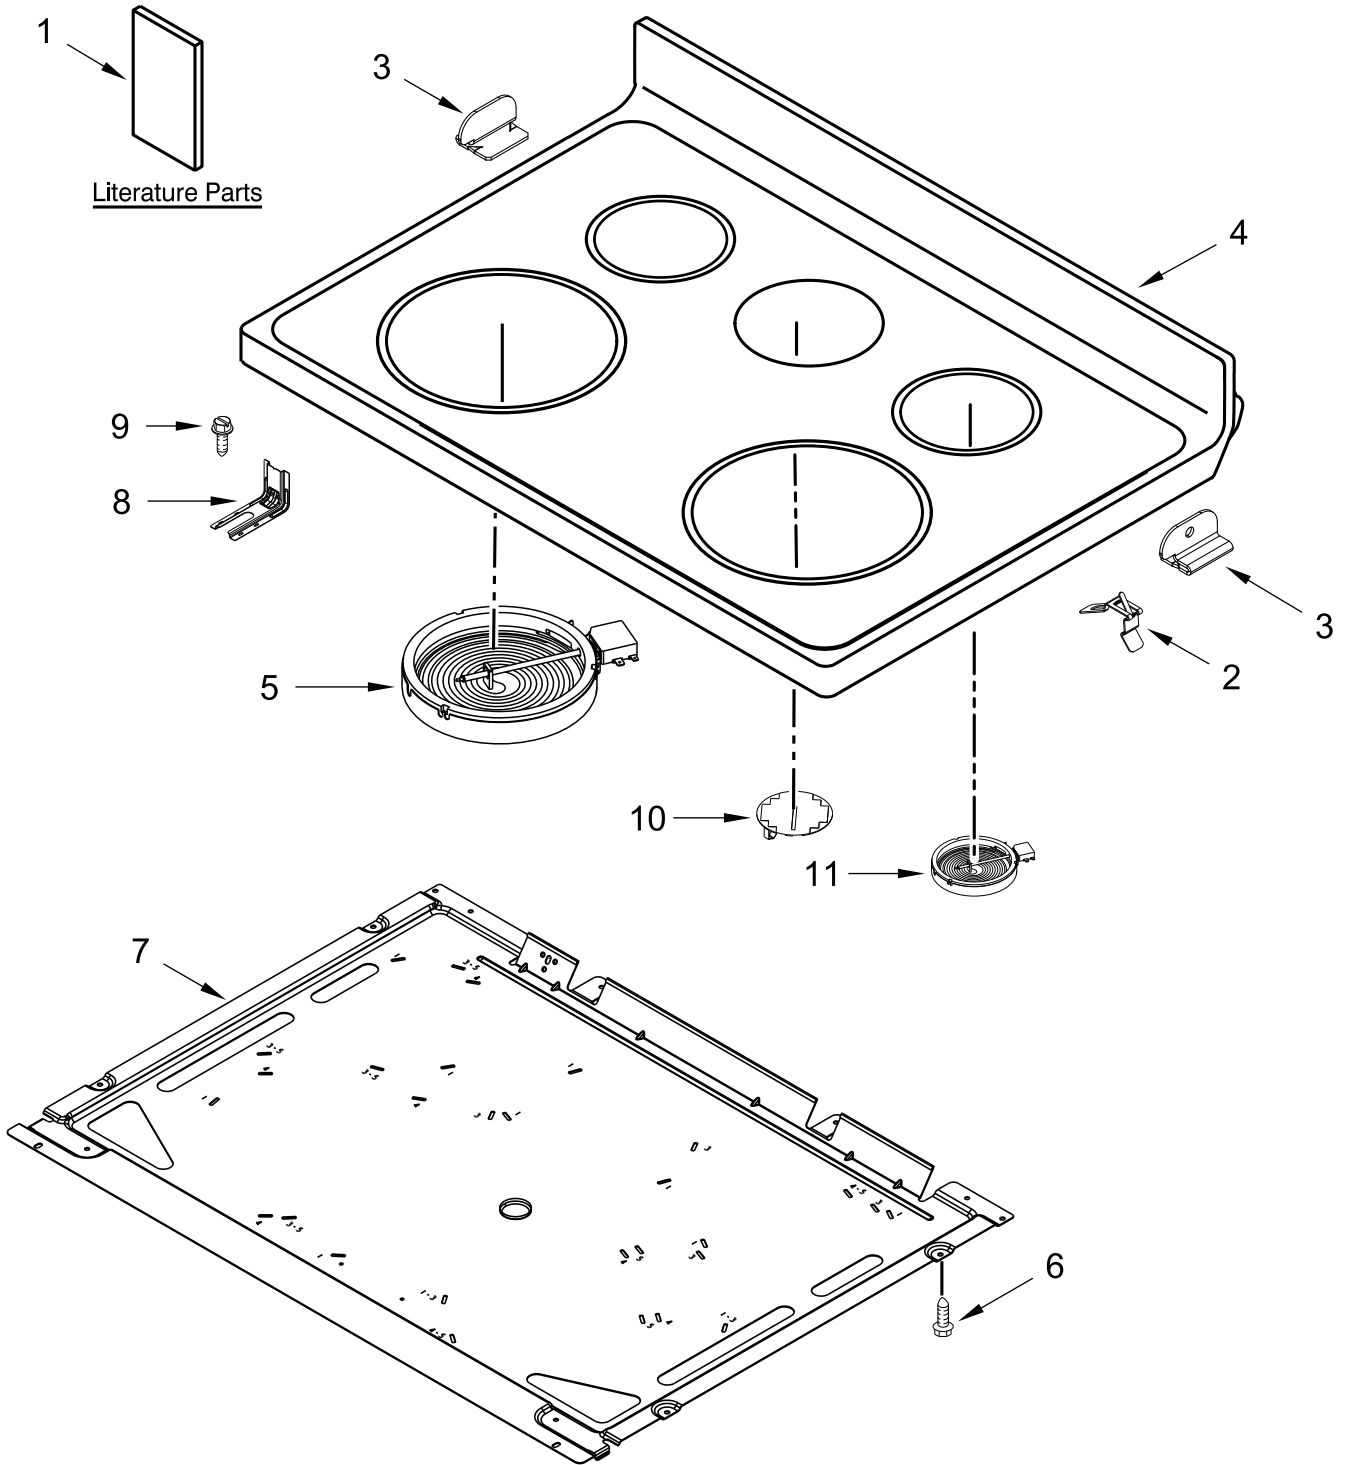

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	11	W10248261	Element (1200W) (Left Rear, Right Rear)
	W11157404	Instructions, Installation			(Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11102909	Use and Care Guide		W10711900	Element (3000W) (Left Front)		W11028535	Harness, Main
	W11102747	Sheet, Tech	6	3196169	Screw		W11028537	Harness, Cooktop (Right)
	W11109899	Wiring Diagram	7	W10691223	Pan, Radiant Element		W10848523	Harness, Cooktop (Left)
2	W10225448	Spring, Element	8	W10306542	Bracket, Anti-Tip		W10174460	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)	9	7101P485-60	Screw, Anti-Tip Kit		W10465644	Harness, Hidden Bake
	W10607642	Bracket, Cooktop (Right)	10	W10799048	Element, Warm Zone (Center)		W10183541	Clip, Spring Steel
4		Cooktop					3196520	Clip, Wire
	W11034836	Black						


CONTROL PANEL PARTS

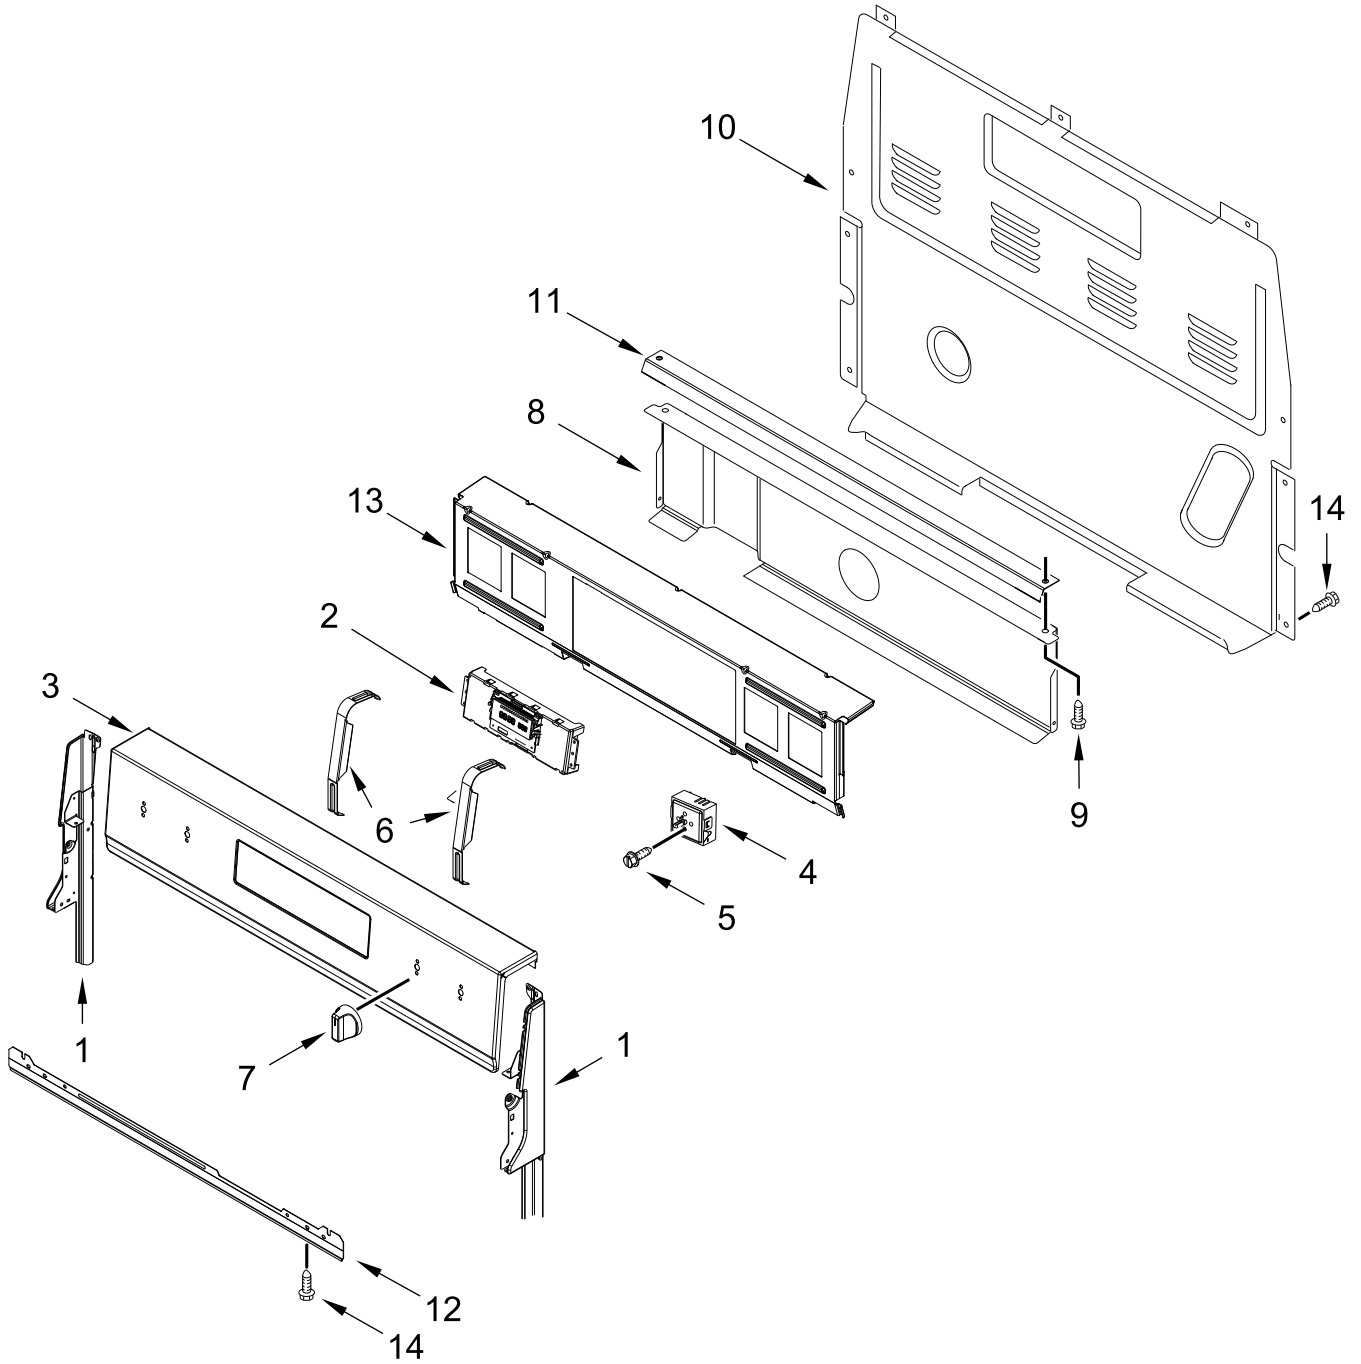

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	8	W10134247	Shield, Heat
	W11213290	Black (Left)			(Left Front and Right Front)	9	3400882	Screw
	W11213292	Black (Right)				10	8272473	Cover, Upper Rear
2		Control, Electronic (LCX)		3148951	Switch, Infinite (Right Rear and Left Rear)	11	W10525121	Bracket, Console Mounting
	W11204529	Black				12		Bracket, Eye Brow
3		Console, Assembly	5	3196178	Screw		W11051312	Black
	W11089993	Stainless	6	W10856361	Bracket, Control	13	W10901802	Panel, Backer
	W11089994	Black Stainless	7		Knob	14	3196169	Screw
				W11022717	Stainless			
				W11027166	Black Stainless			


CHASSIS PARTS

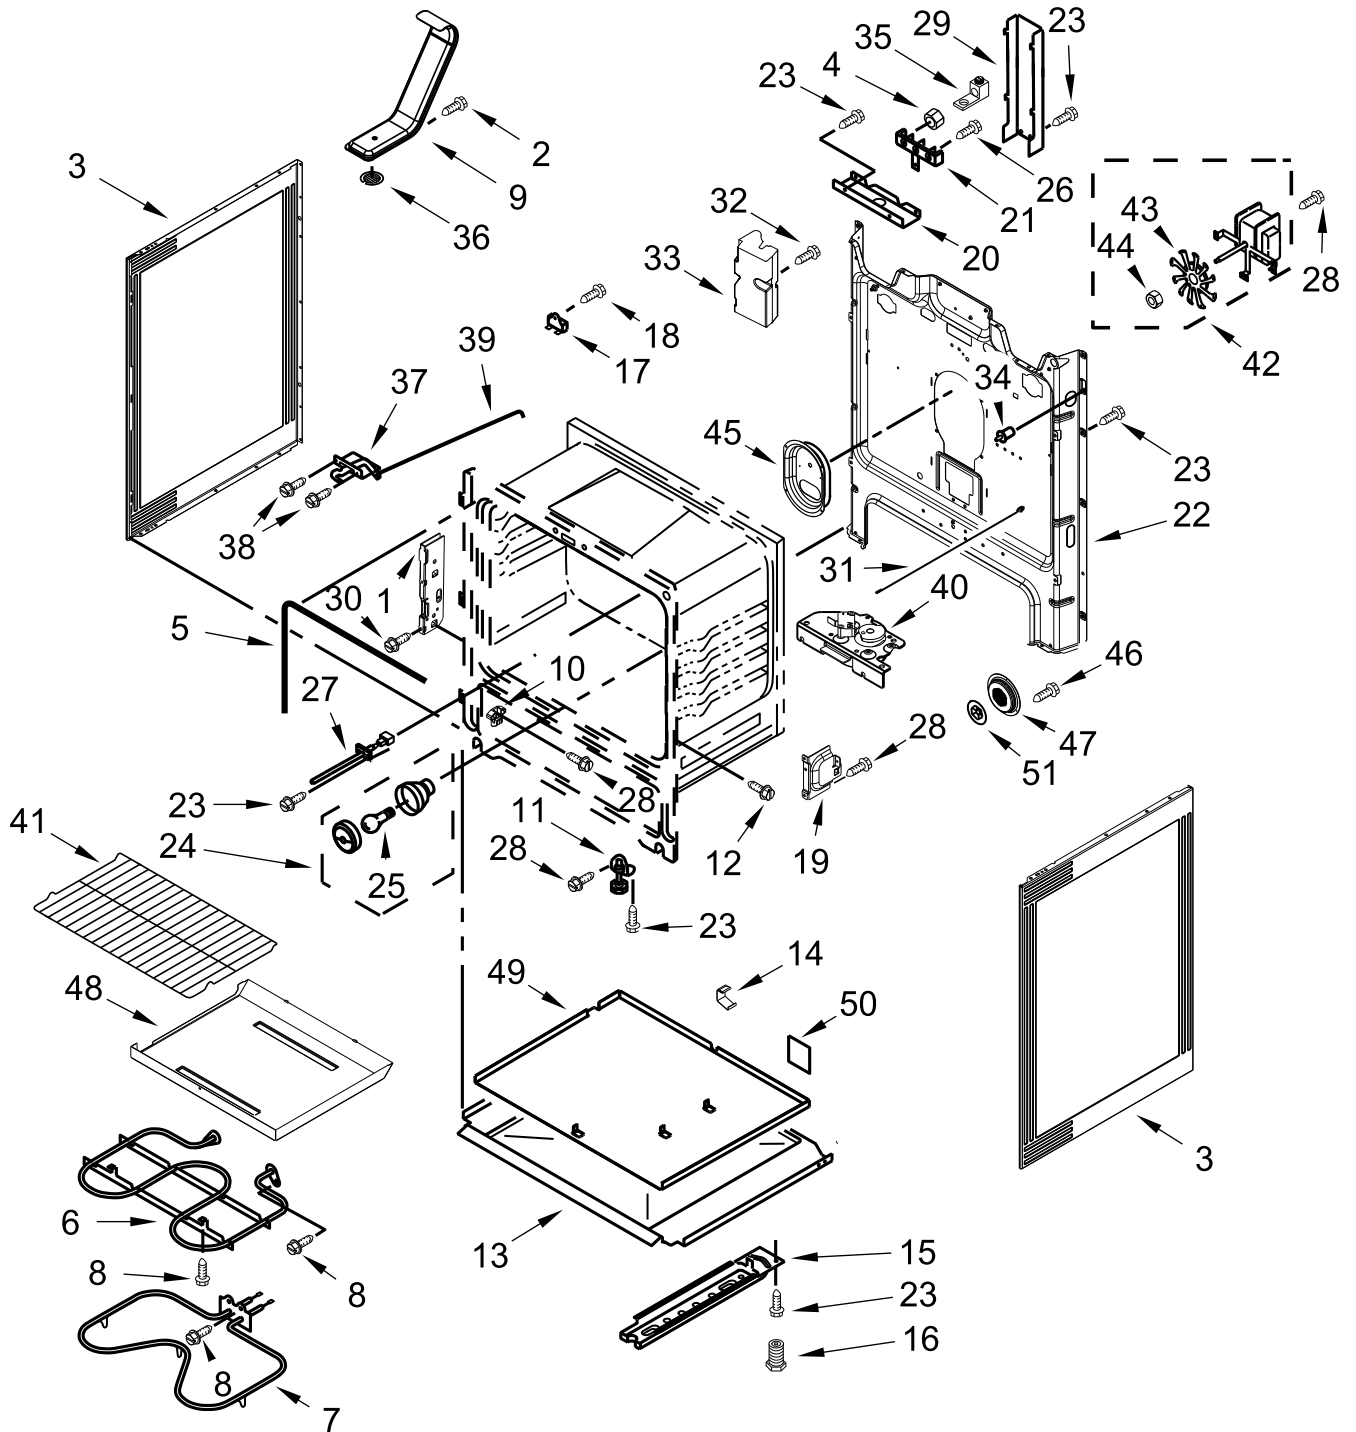

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	20	3186034	Bracket, Service	39	W10078380	Rod, Latch
2	3196154	Screw	21	W10245259	Block, Terminal	40	W10107820	Assembly, Door Latch (Rear)
3		Panel, Side	22		Back, Main (Not Serviced)	41	W10268578	Rack, Oven
	W10162245	Black	23	3196178	Screw	42	W11190726	Fan, Convection
4	3400029	Nut	24	W11175594	Assembly, Light	43	W10116351	Blade, Fan
5	W10658354	Seal, Door	25	W10571723	Bulb, Halogen 40 Watts	44	W10213748	Nut
6	9757340	Element, Broil	26	3400016	Screw	45	W10134126	Bracket, Fan
7	9755770	Element, Bake	27	W10181986	Sensor, Oven	46	4449809	Screw
8	3196174	Screw	28	3196169	Screw	47	W10134124	Cover, Conv Fan
9	W10134285	Tube, Vent	29	W10326122	Cover, Terminal Block	48	W10183712	Tray, Hidden Bake
10	W10674705	Glide, Drawer Front	30	W10031780	Screw	49	W10134125	Shield, Heat
11	W10341186	Assembly, Front Foot	31	9757239	Rod, Door Switch	50	W10646923	Card, Insulator
12	W10067840	Screw	32	W11034869	Screw	51	3400968	Nut
13	W10134121	Tray, Insulation	33	W10910404	Counterweight			FOLLOWING PARTS NOT ILLUSTRATED
14	W10137382	Clip, Panel	34	W10627802	Switch, Door		W10774939	Insulation, Wrap
15	W10390007	Assembly, Base Rail (Right)	35	W10281322	Kit, Bare Wire Adapter Block		W11127324	Insulation, Back
	W10390008	Assembly, Base Rail (Left)	36	W11092984	Screen, Vent		W10333344	Insulation, Flue
16	W10058460	Foot, Leveling	37	9761013	Assembly, Door Latch (Front)			
17	3196548	Fuse, Thermal	38	3196560	Screw			
18	3196172	Screw						
19	W10404688	Clip, Oven Support						

DOOR PARTS

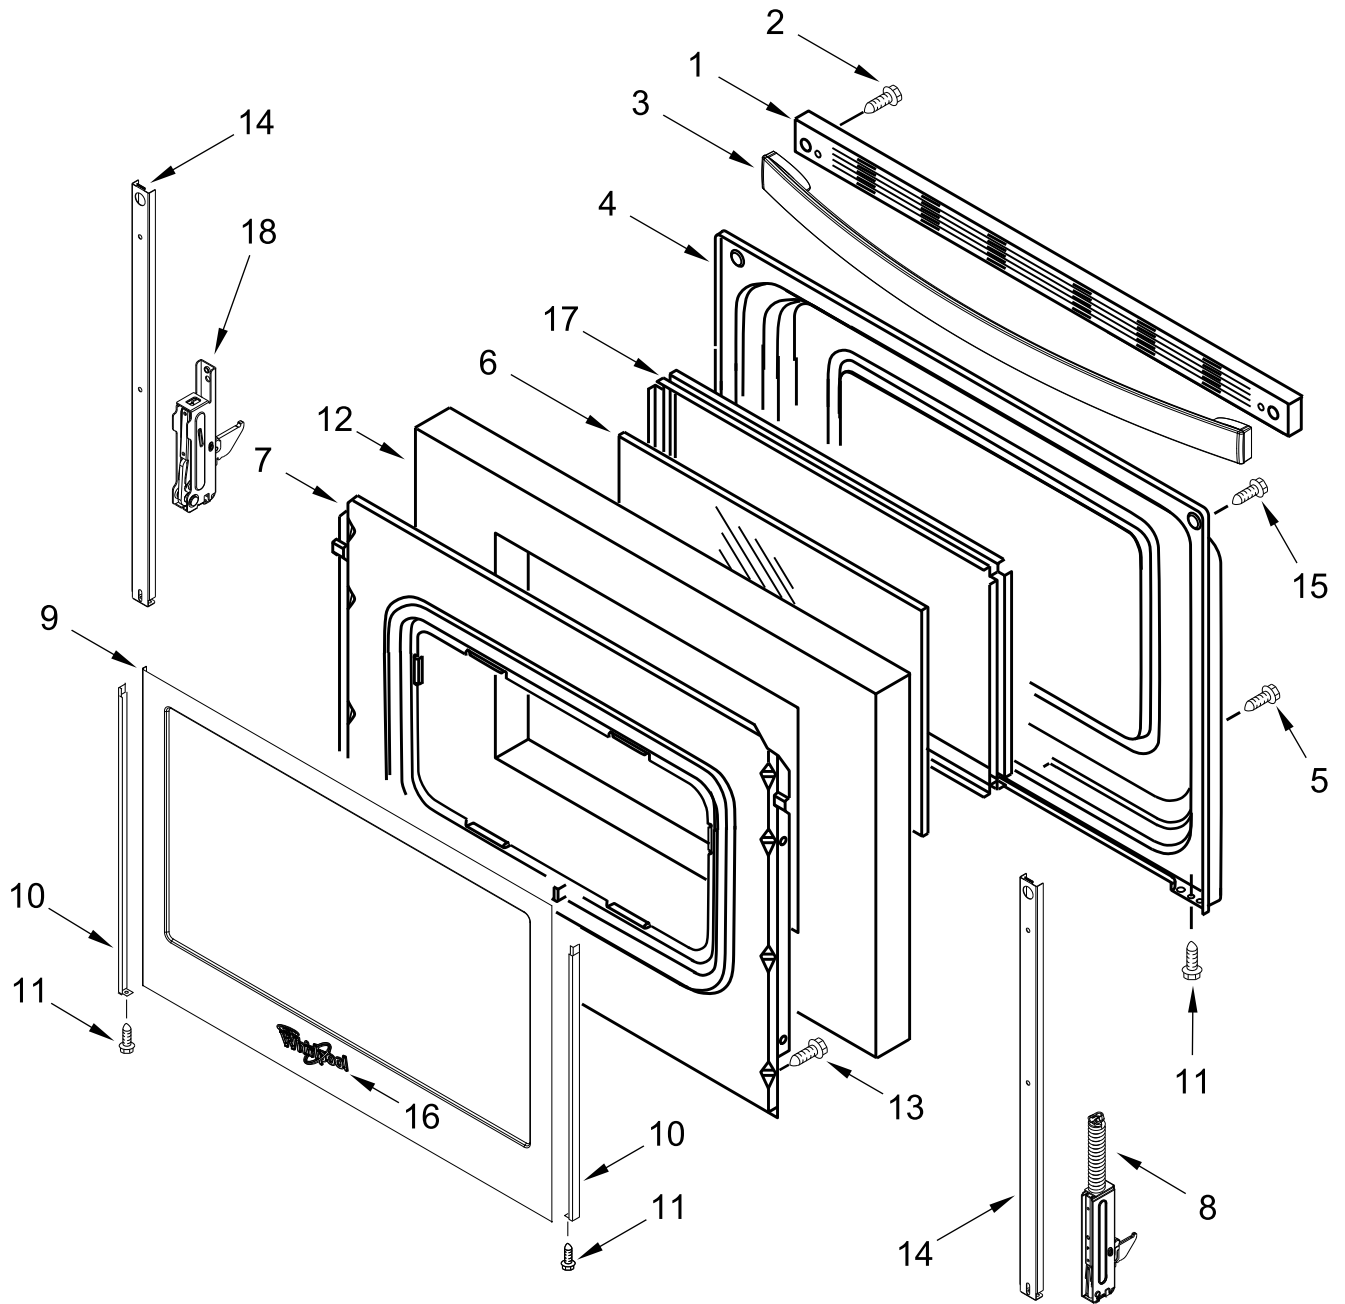


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W11047800	Stainless
	W10310922	Black
2	W10480830	Screw
3		Handle, Door
	W11039070	Stainless
	W11039071	Black Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	9761357	Retainer, Insulation
8	W10299224	Hinge, Active (With Spring)
9		Glass Assembly, Outer Door
	W11167877	Stainless
	W11169660	Black Stainless
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10327235	Screw
12	W10278991	Insulation, Door Strip
13	W10031780	Screw
14	W10544179	Strap, Door
15	W10200660	Screw
16	W10884775	Nameplate
17	W10316950	Frame, Glass
18	W10299227	Hinge, Door (Passive)

DRAWER PARTS

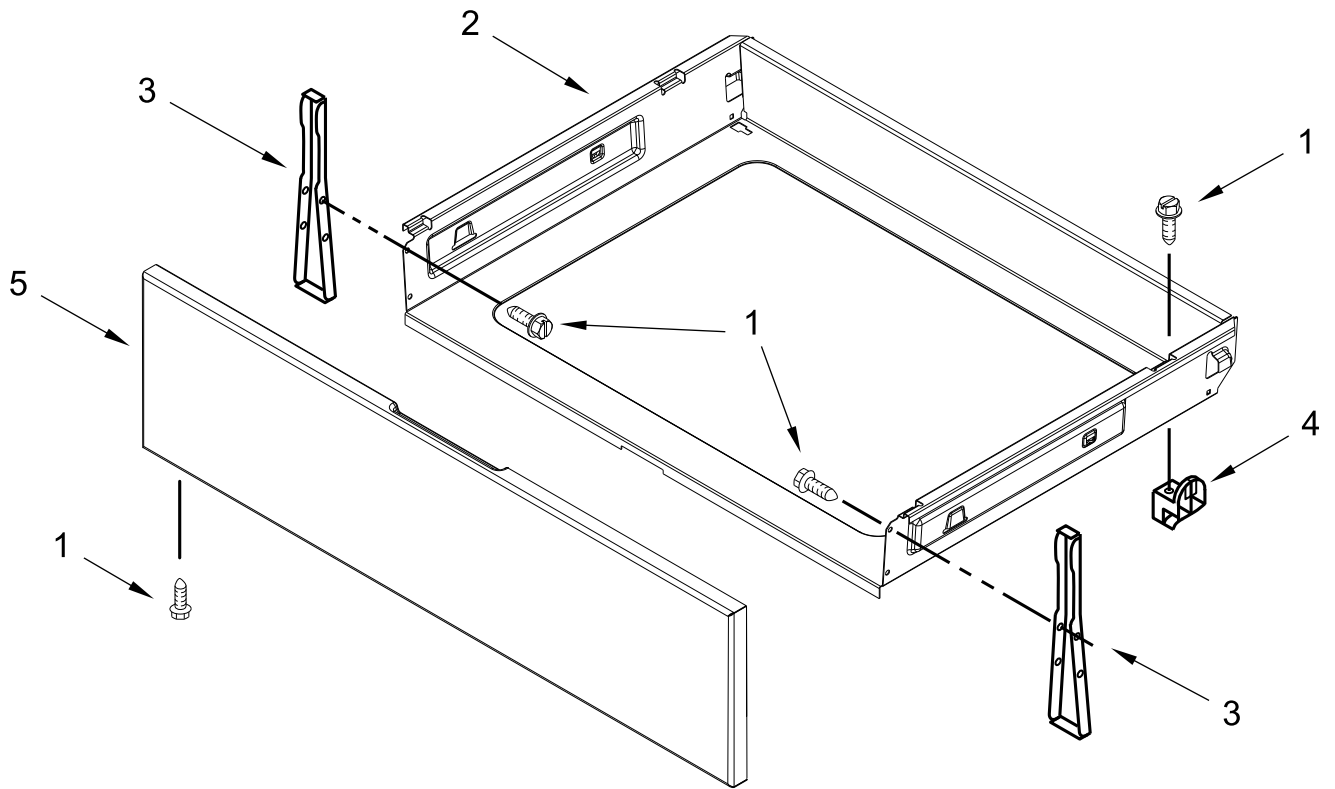

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage
3	W10462910	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W10861542	Stainless
	W11045573	Black Stainless

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting