




**30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE
Finger Print Resistant**

MODELS:

WFE525S0HZ1 (Stainless)

WFE525S0HV1 (Black Stainless)


COOKTOP PARTS

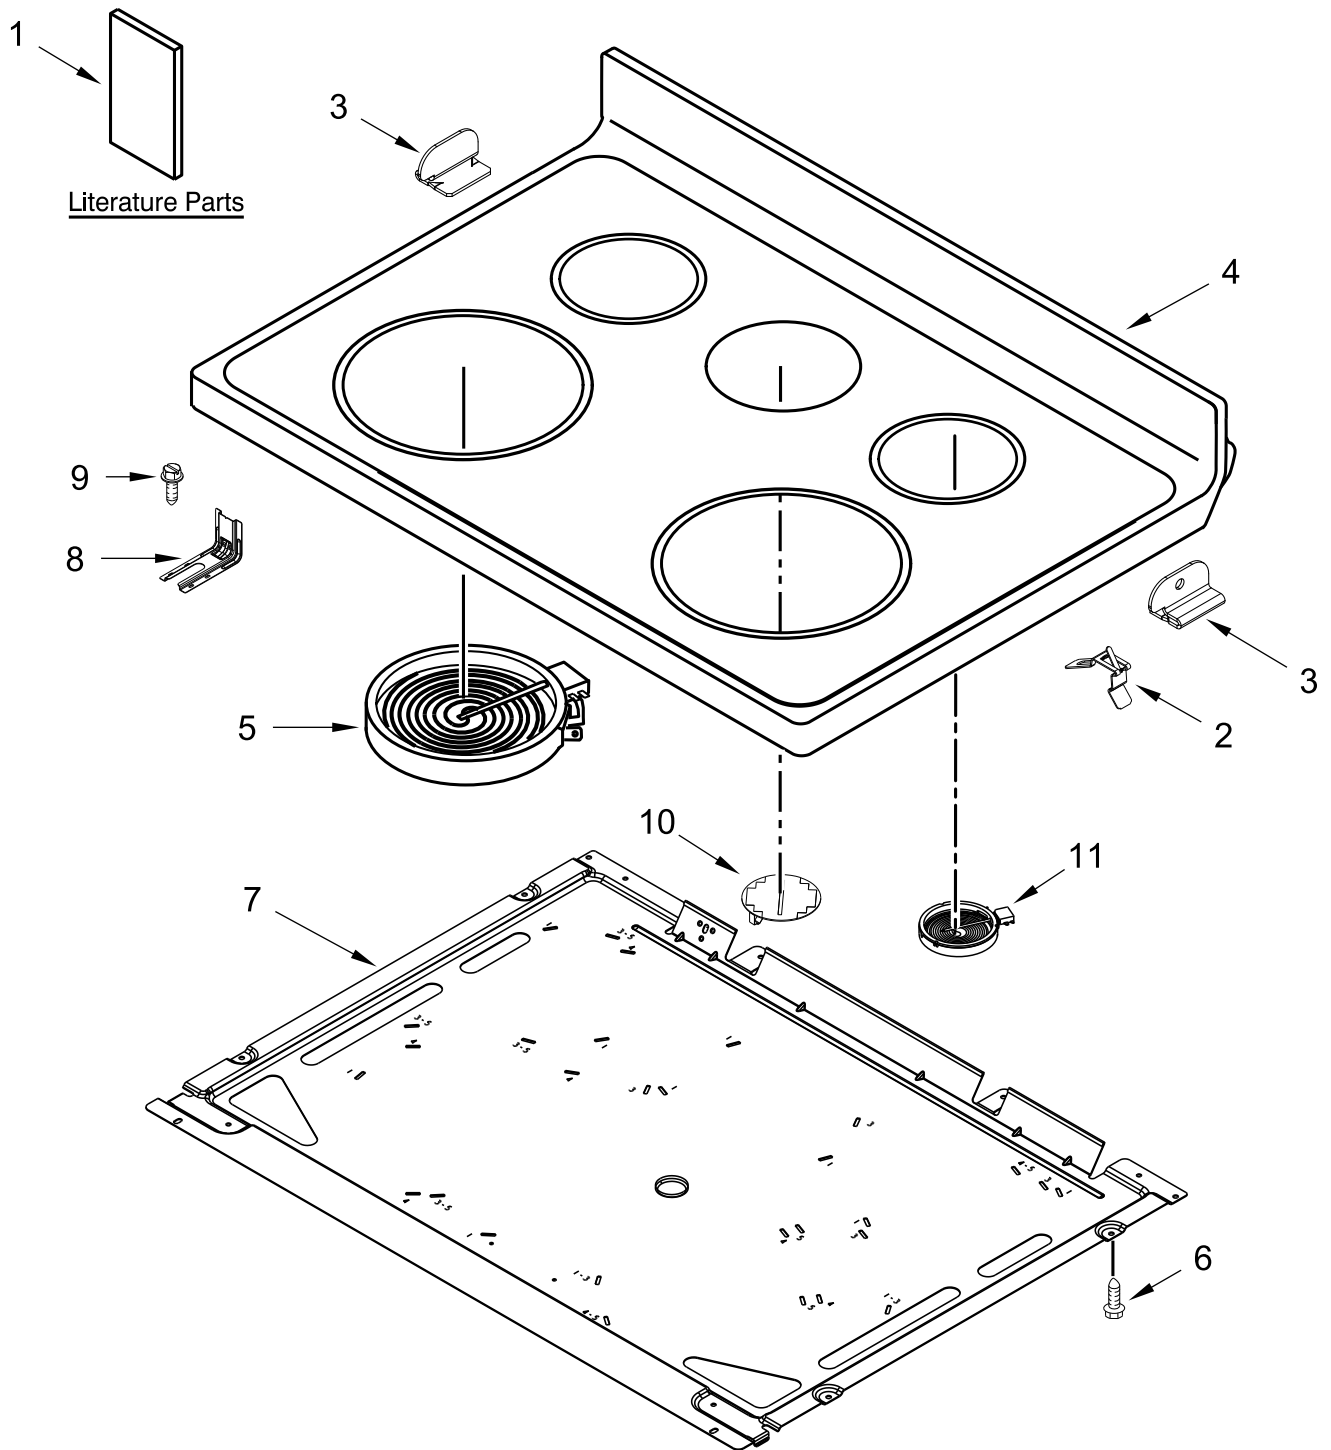

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	11	W10248261	Element (1200W) (Left Rear, Right Rear)
	W11102909	Use and Care Guide			(Left Front, Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11157404	Instructions, Installation	6	3196169	Screw		W11134844	Harness, Main
	W11109898	Wiring Diagram	7	W10691223	Pan, Radiant Element		W11134845	Harness, Cooktop (Right)
	W11102747	Sheet, Tech	8	W10306542	Bracket, Anti-Tip		W11134603	Harness, Cooktop (Left)
2	W10225448	Spring, Element	9	7101P485-60	Screw, Anti-Tip Kit		W11134592	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)	10	W10799048	Element, Warm Zone (Center)			
	W10607642	Bracket, Cooktop (Right)						
4		Cooktop						
	W11034833	Black						


CONTROL PANEL PARTS

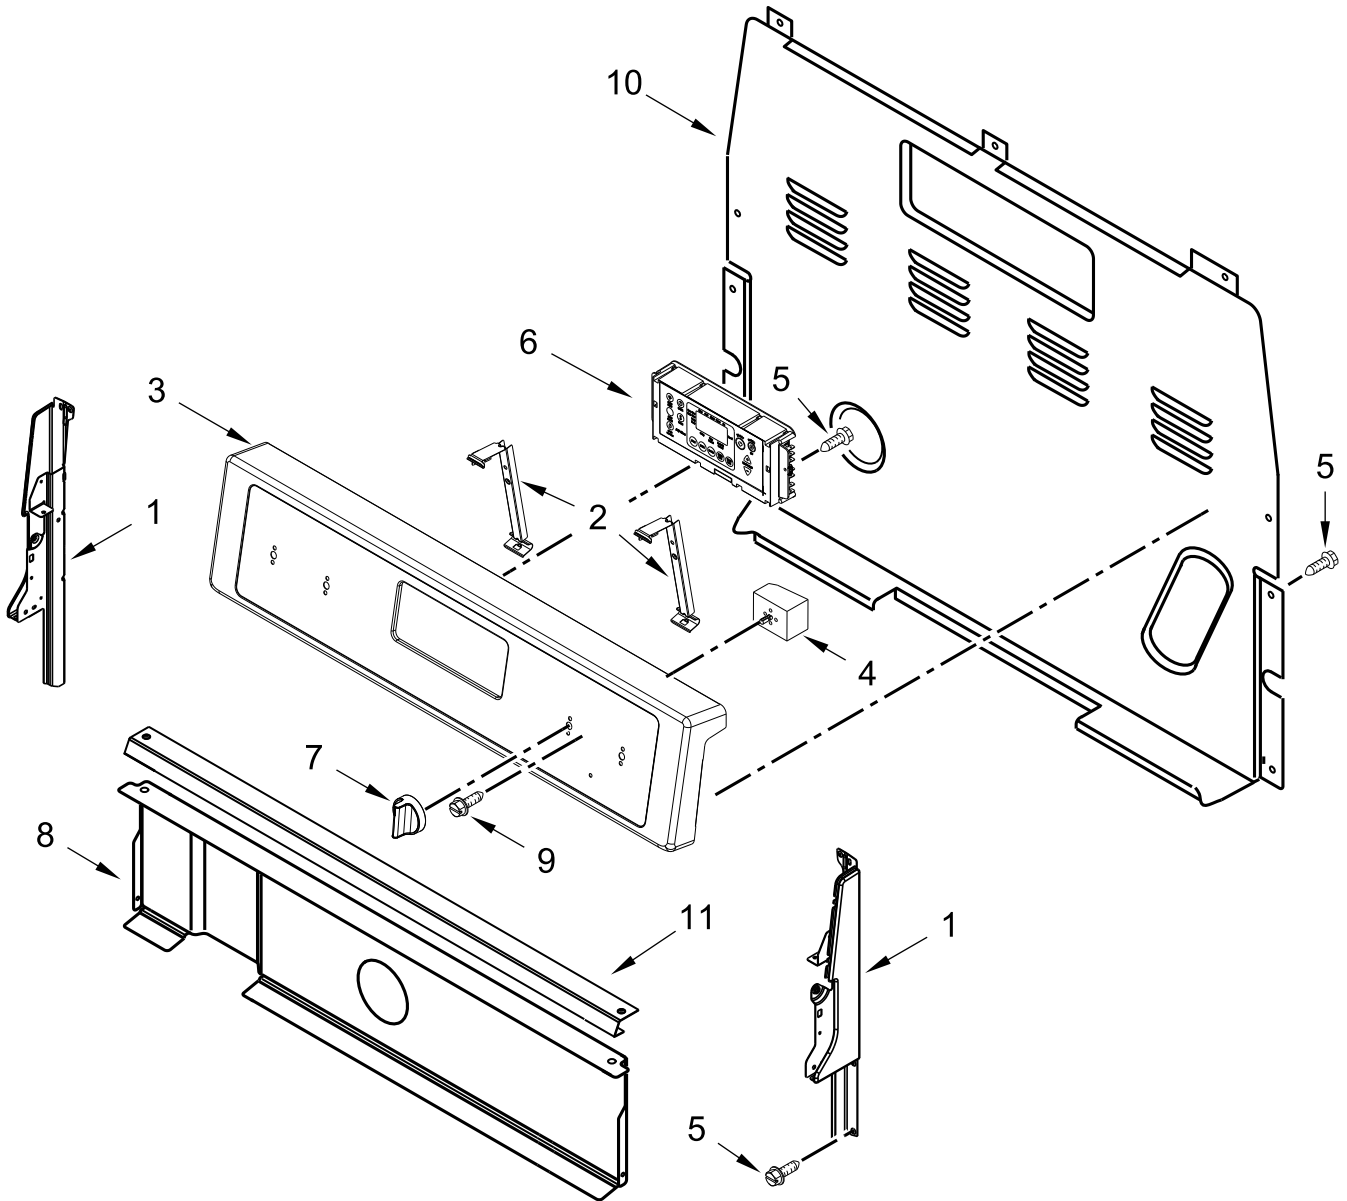

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W11130372	Black (Left)			(Left Front, Right		W11022717	Stainless
	W11130379	Black (Right)			Front)		W11027166	Black Stainless
2	W10695491	Bracket, Control		3148951	Switch, Infinite	8	W10134247	Shield, Heat
3		Console, Assembly			(Right Rear and Left	9	3400882	Screw
	W11027376	Stainless			Rear)	10	8272473	Cover, Upper Rear
	W11027381	Black Stainless	5	3196178	Screw	11	W10525121	Bracket, Console
			6		Control, Electronic			Mounting
					(LCX)			
				W11204519	Black			


CHASSIS PARTS

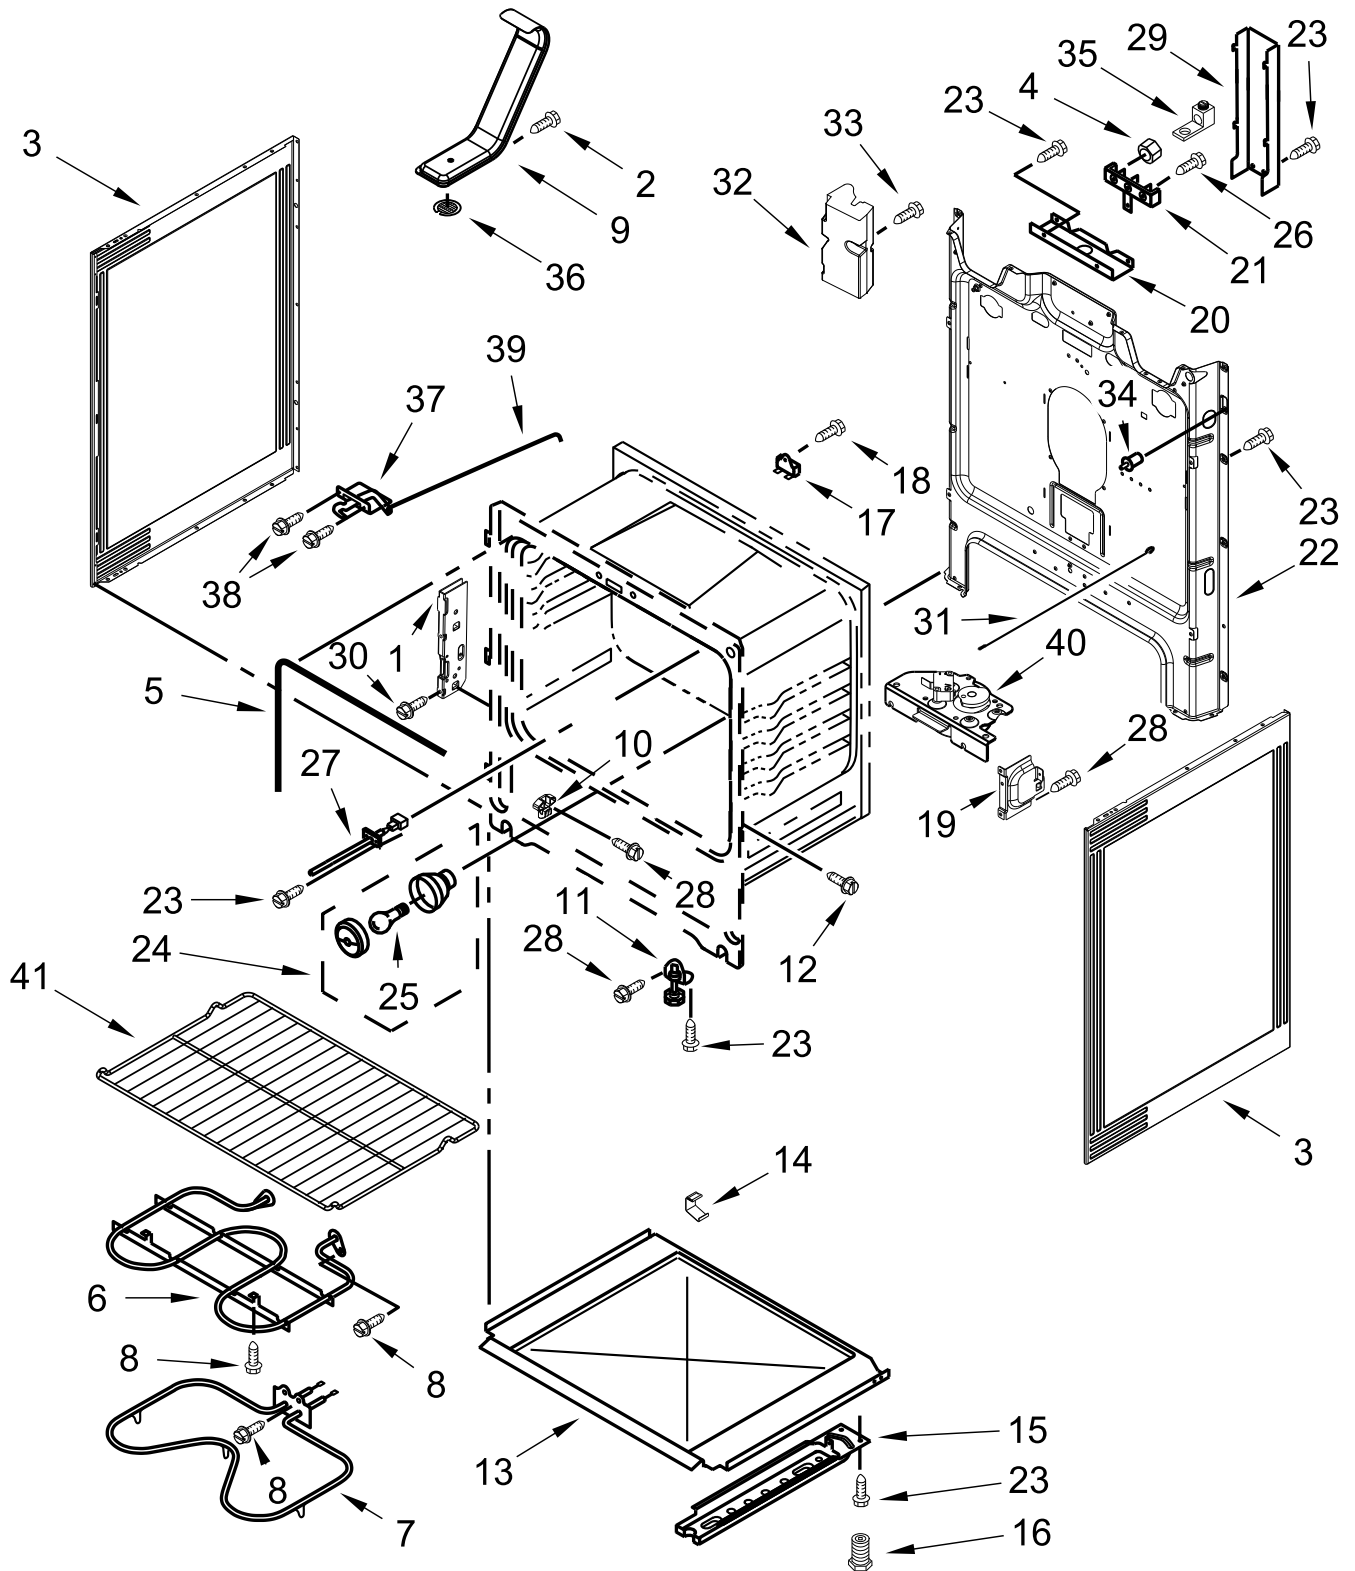

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	33	W11034869	Screw
2	3196154	Screw	17	3196548	Fuse, Thermal	34	W10627802	Switch, Door
3		Panel, Side	18	3196172	Screw	35	W10281322	Kit, Bare Wire Adapter Block
	W10162245	Black	19	W10404688	Clip, Oven Support	36	W11092984	Screen, Vent
4	3400029	Nut	20	3186034	Bracket, Service	37	9761013	Assembly, Door Latch (Front)
5	W10658354	Seal, Door	21	W10245259	Block, Terminal	38	3196560	Screw
6	9757340	Element, Broil	22		Back, Main (Not Serviced)	39	W10078380	Rod, Latch
7	W11111743	Element, Bake	23	3196178	Screw	40	W10107820	Assembly, Door Latch (Rear)
8	3196174	Screw	24	W11175594	Assembly, Light	41	W10268578	Rack, Oven
9	W10134285	Tube, Vent	25	W10571723	Bulb, Halogen 40 Watts			FOLLOWING PARTS NOT ILLUSTRATED
10	W10674705	Glide, Drawer Front	26	3400016	Screw		W10774939	Insulation, Wrap
11	W10341186	Assembly, Front Foot	27	W10181986	Sensor, Oven		W11127325	Insulation, Back
12	W10067840	Screw	28	3196169	Screw		W10333344	Insulation, Flue
13	8054068	Retainer, Insulation	29	W10326122	Cover, Terminal Block			
14	W10137382	Clip, Panel	30	W10031780	Screw			
15	W10390007	Assembly, Base Rail (Right)	31	9757239	Rod, Door Switch			
	W10390008	Assembly, Base Rail (Left)	32	W10910404	Counterweight			

DOOR PARTS

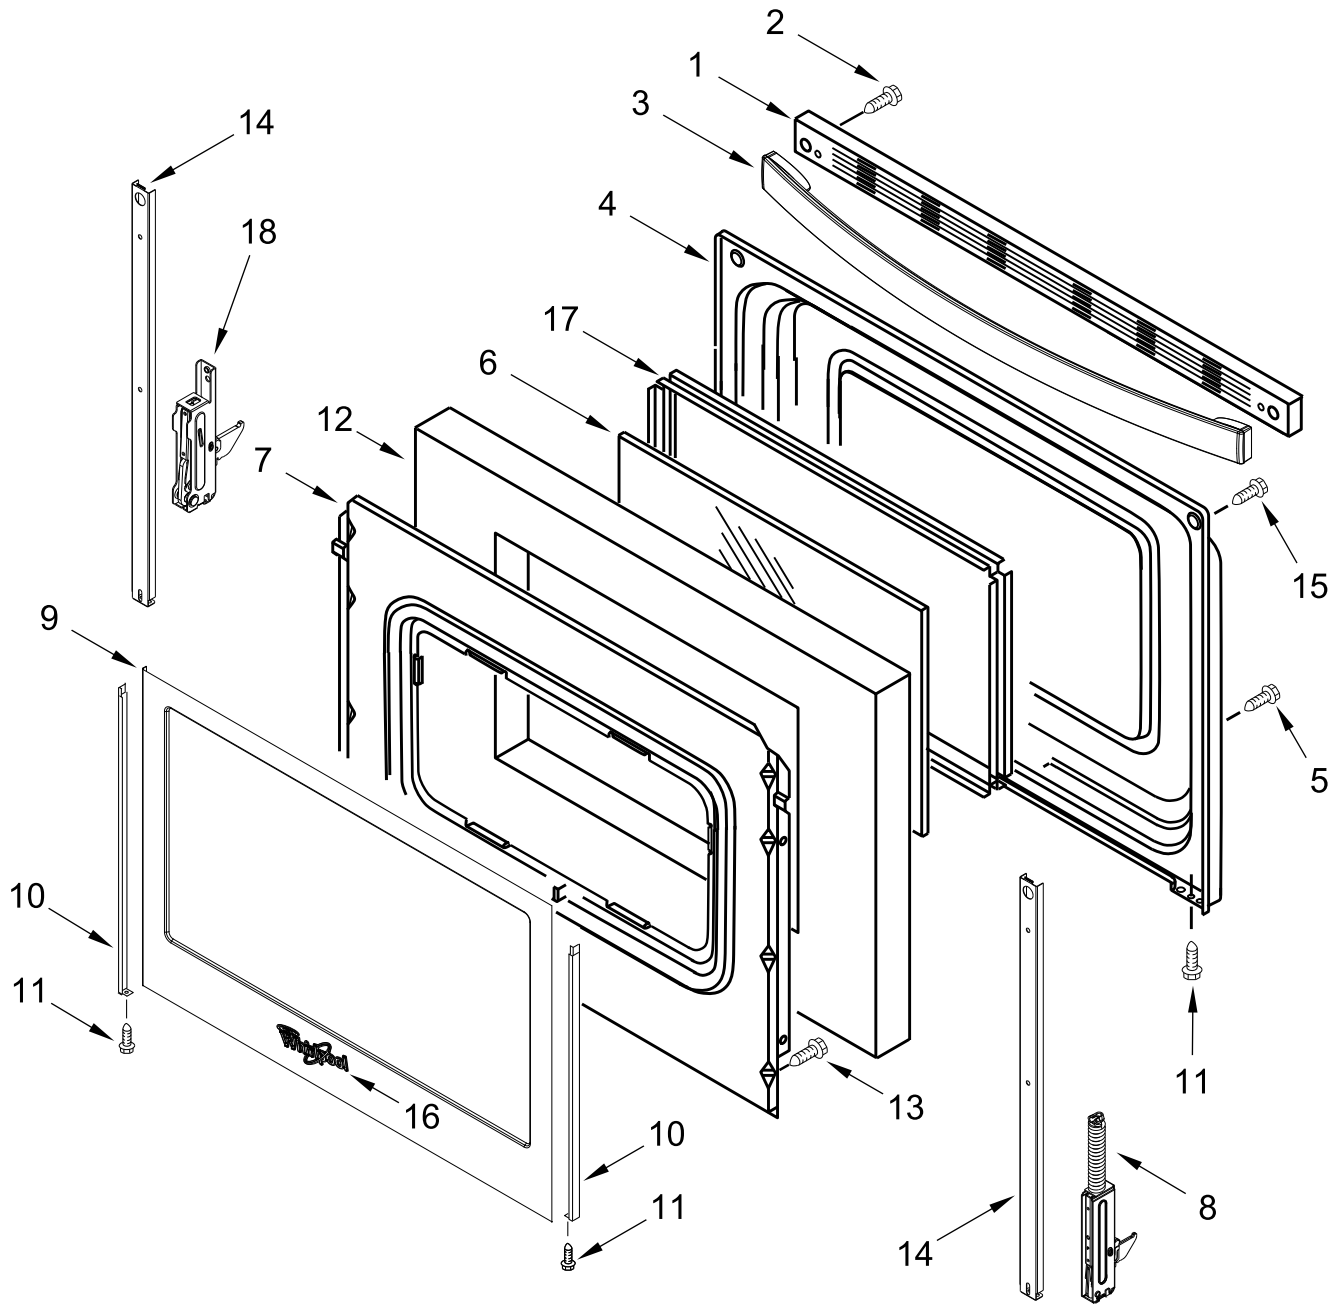


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10480830	Screw
3		Handle, Door
	W11039070	Stainless
	W11039071	Black Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	9761357	Retainer, Insulation

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299224	Hinge, Active (With Spring)
9		Glass Assembly, Outer Door
	W11167877	Stainless
	W11169660	Black Stainless
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10278991	Insulation, Door Strip
13	W10031780	Screw
14	W10544179	Strap, Door
15	W10200660	Screw
16	W10884775	Nameplate
17	W10316950	Frame, Glass
18	W10299227	Hinge, Door (Passive)

DRAWER PARTS

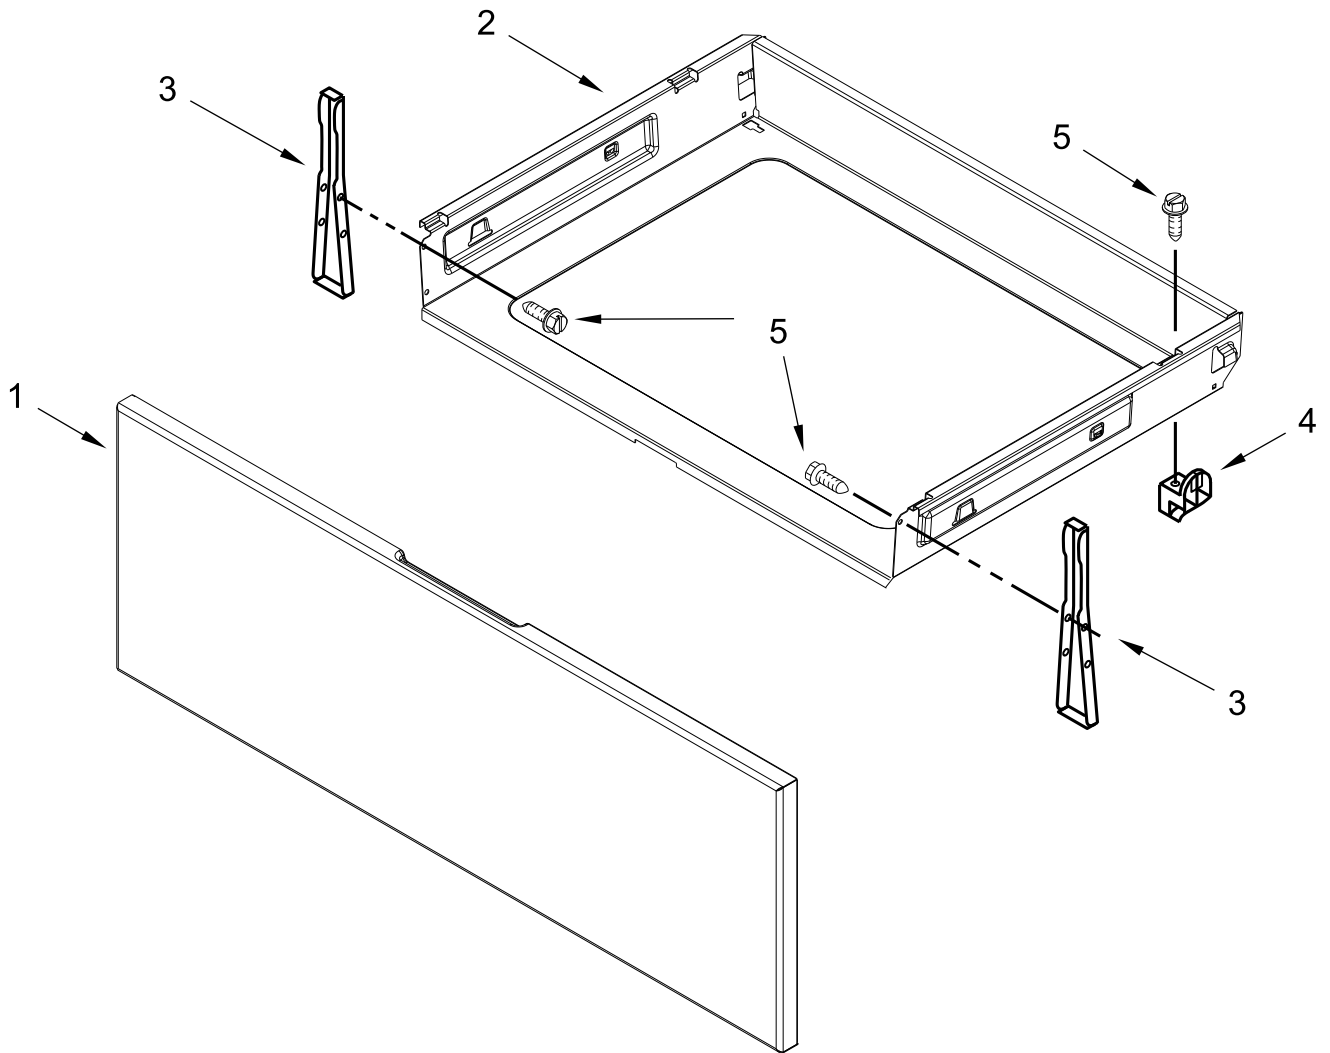

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W10861542	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw
	W11045573	Black Stainless						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting