




**30" ELECTRIC FREESTANDING RANGE
(FlexHeat Element)**

MODELS:

WFE320M0EB2 (Black)
WFE320M0EW2 (White)


COOKTOP PARTS

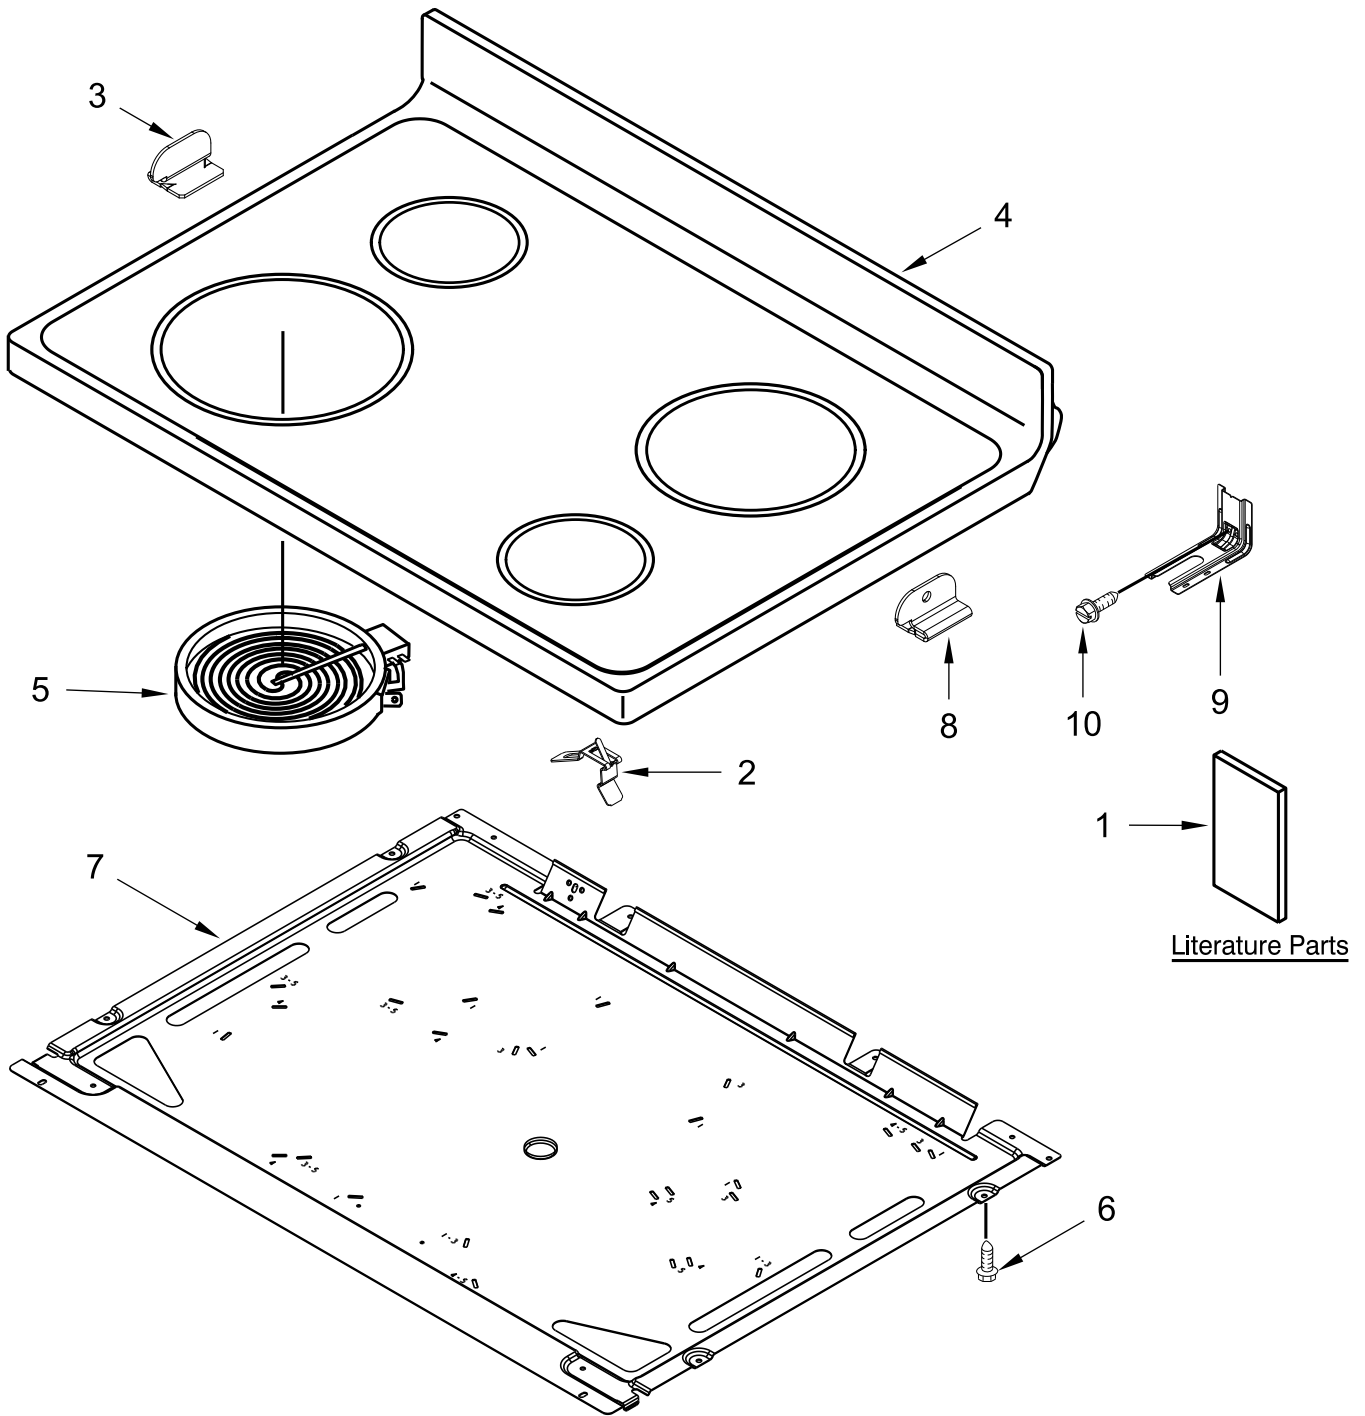

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	10	7101P485-60	Screw, Anti-Tip Kit
	W11047681	Instructions, Installation			(Left Front)			MISCELLANEOUS PARTS
	W10719733	Owner's Manual		W10248262	Element (2500W)		W11134601	Harness, Cooktop (Left)
	W10432689	Tech Sheet (English)			(Right Front)		W11134602	Harness, Cooktop (Right)
	9762761	Tips, Safe Cooking (English)		8273994	Element (1200W)		W11232223	Harness, Door Switch Sensor
					(Left Rear & Right Rear)		W11219895	Harness, Main
2	W10225448	Spring, Element	6	3196169	Screw		313660	Clip, Ground Wire
3	W10607641	Bracket, Cooktop (Left)	7	W10691223	Pan, Radiant Element			
4		Cooktop	8	W10607642	Bracket, Cooktop (Right)			
	W10380657	Black	9	W10306542	Bracket, Anti-Tip			
	W10380656	White						


CONTROL PANEL PARTS

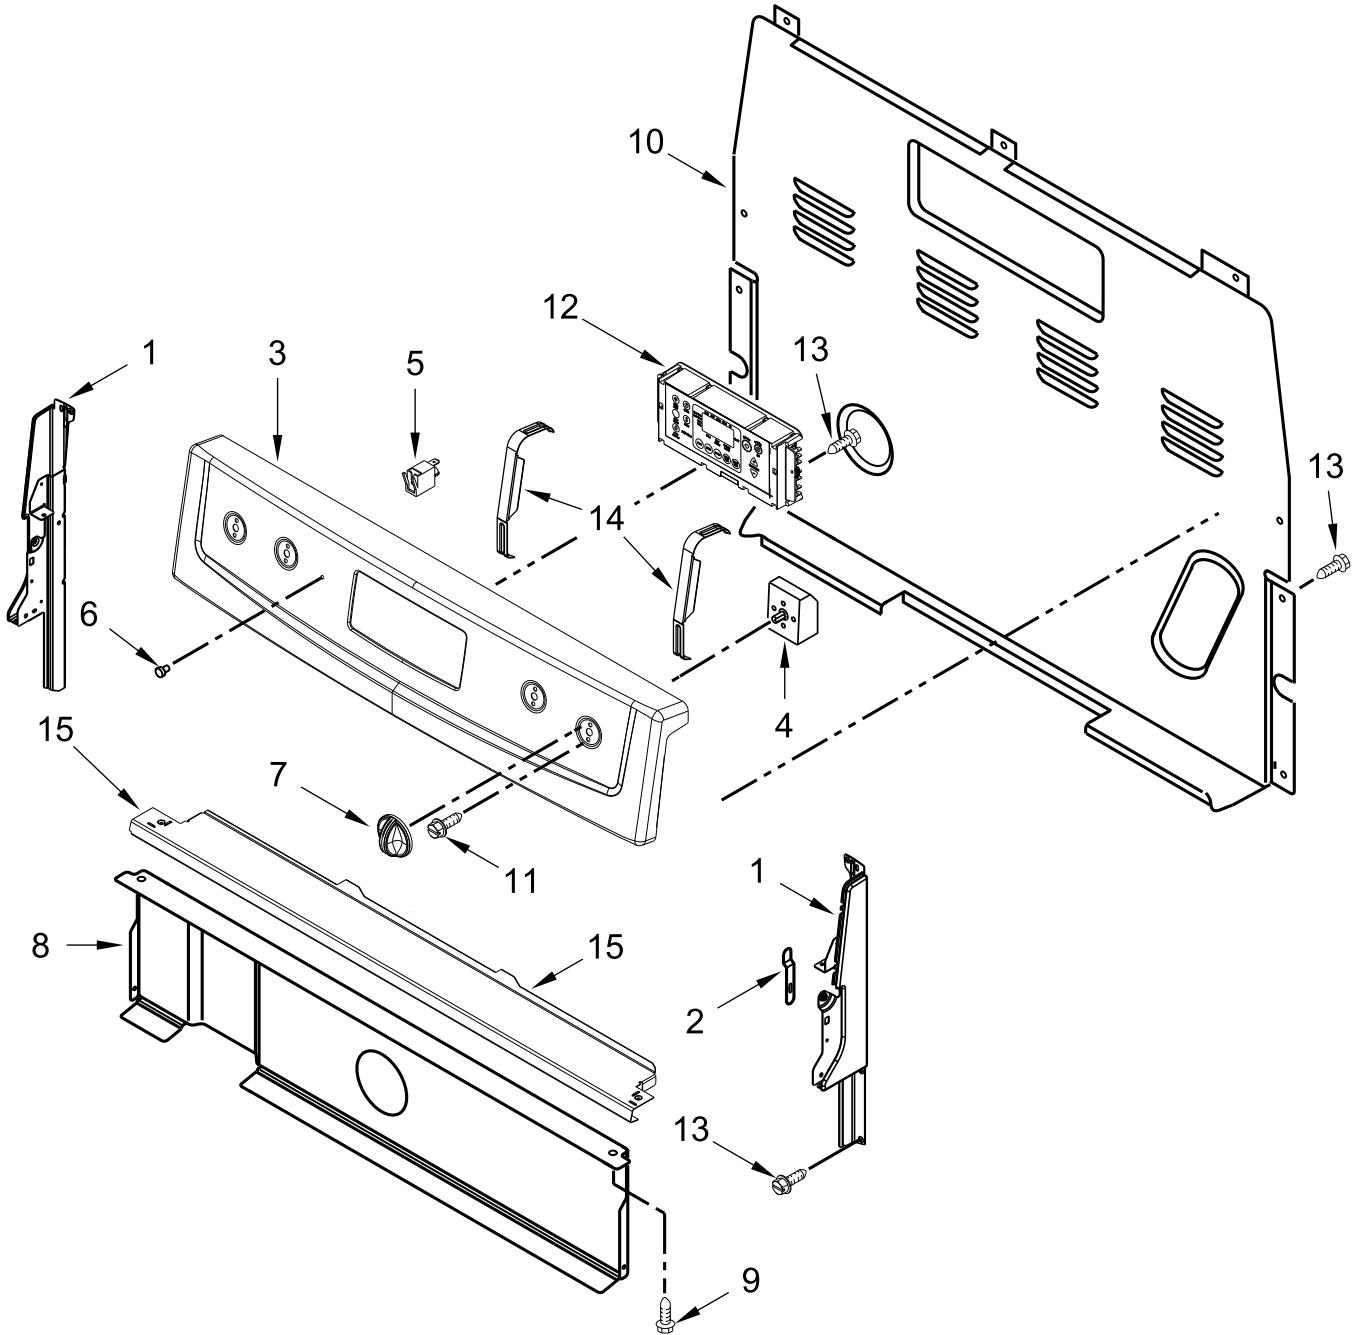

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	9	3196165	Screw
	W11130372	Black (Left)			(Left Front)	10	8272473	Cover, Upper Rear
	W11130379	Black (Right)		3148954	Switch, Infinite	11	3400882	Screw
	W11130371	White (Left)			(Right Front)	12		Control, Range
	W11130378	White (Right)		3148951	Switch, Infinite		W10887901	Black
2	3196200	Clip, Spring			(Left Rear & Right Rear)		W10887899	White
3		Panel, Backguard				13	3196178	Screw
	W11135549	Black	5	8523265	Light, Indicator (125V)	14	W10695491	Bracket, Control
	W11135550	White	6	3196068	Lens, Indicator	15	W10525121	Bracket, Console Mounting
			7		Knob, Infinite			
				W10676213	Black			
				W10676214	White			
			8	W10134247	Shield, Heat			


CHASSIS PARTS

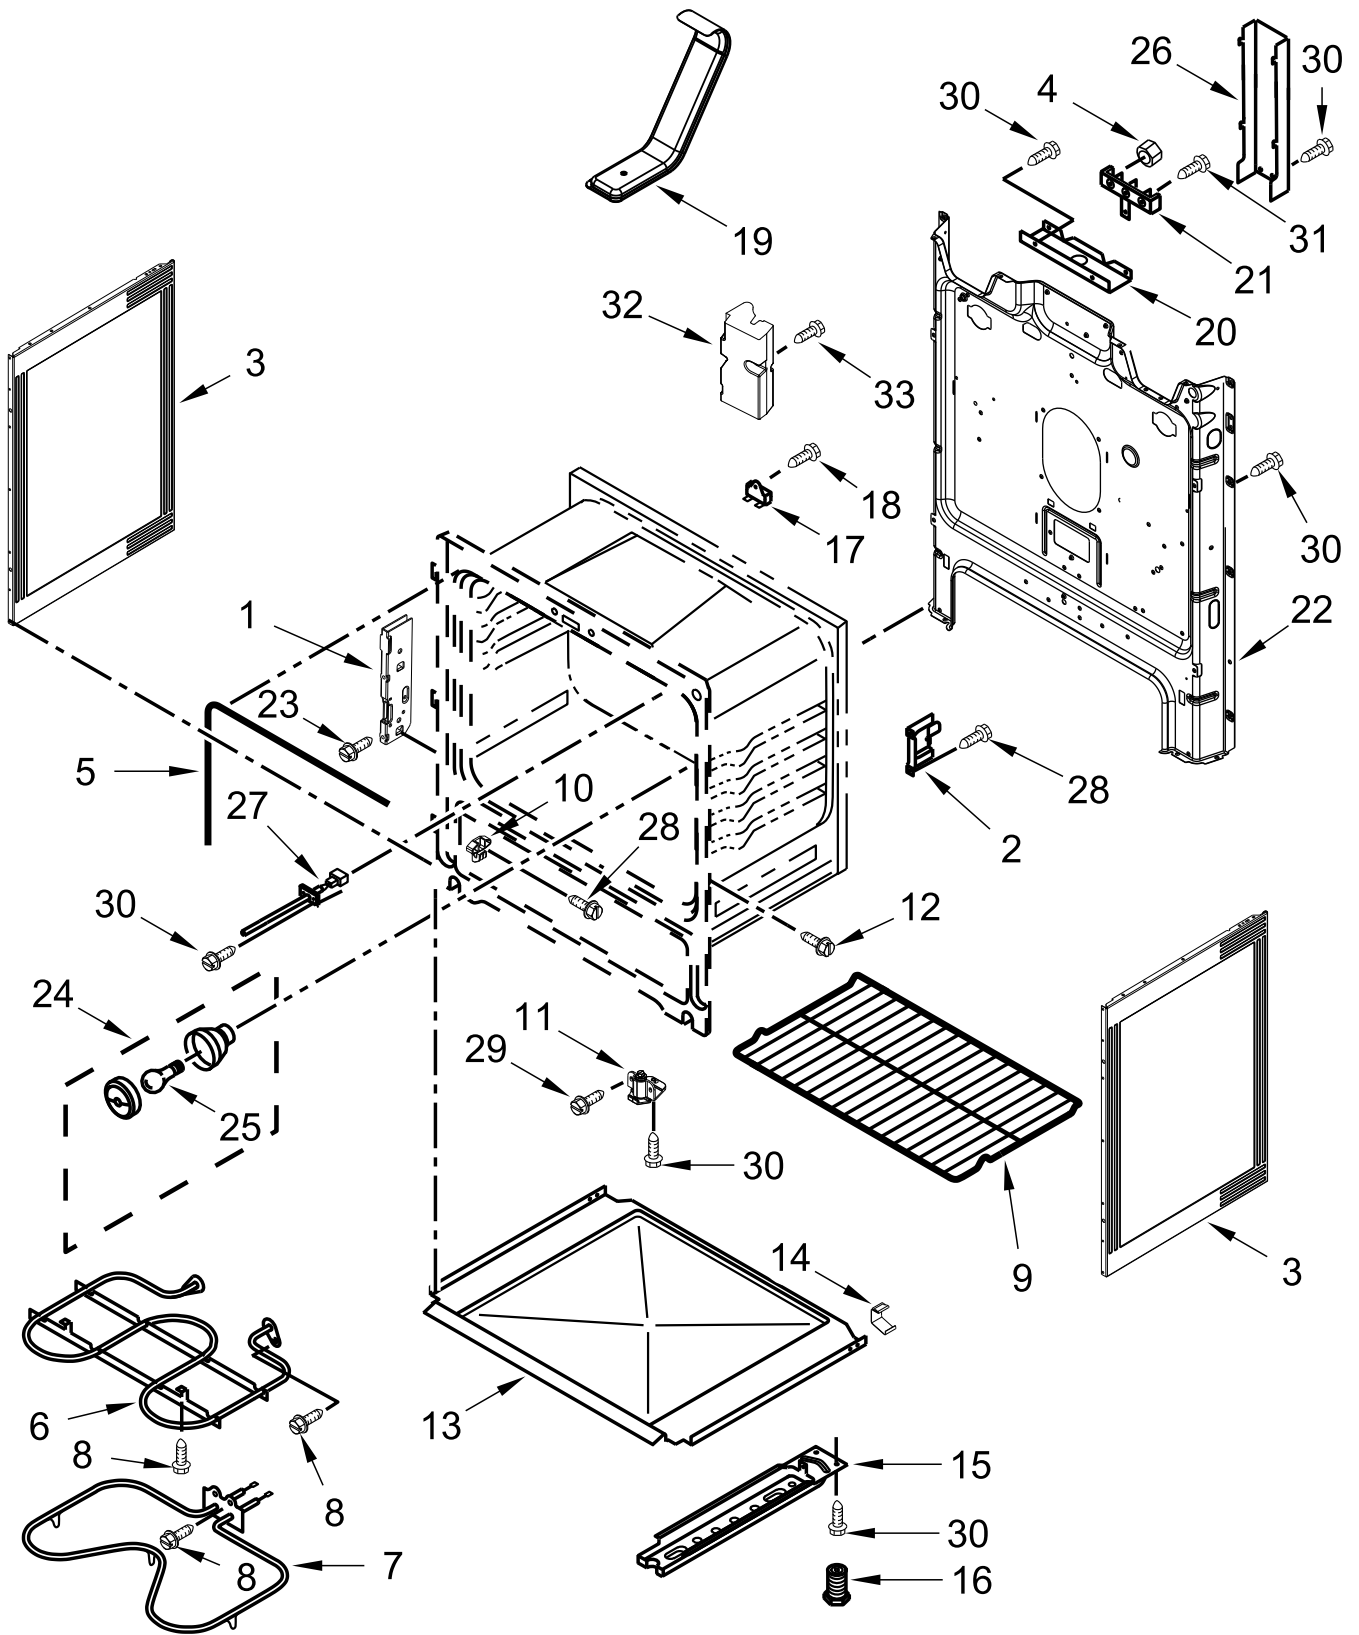

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	14	W10137382	Clip, Panel	26	W10326122	Cover, Terminal Block
2	W10404688	Clip, Oven Support	15	W10390008	Assembly, Base Rail (Left)	27	W10181986	Sensor, Oven
3		Panel, Side		W10390007	Assembly, Base Rail (Right)	28	3196169	Screw
	W10162245	Black				29	3196174	Screw
	W10575396	White				30	3196178	Screw
4	3400029	Nut	16	W10058460	Foot, Leveling	31	3400016	Screw
5	W10129032	Seal, Door	17	3196548	Fuse, Thermal	32	W10910404	Counterweight
6	W10308476	Element, Broil	18	3196172	Screw	33	W11034869	Screw
7	W11022836	Element, Bake	19	W10134285	Tube, Vent			FOLLOWING PARTS NOT ILLUSTRATED
8	3196154	Screw	20	3186034	Bracket, Service		8273263	Insulation, Wrap
9	W10268578	Rack, Oven	21	W10245259	Block, Terminal		8272611	Insulation, Back
10	W10674705	Glide, Drawer Front	22	W10289149	Back, Main		W10333344	Insulation, Flue
11	W10341186	Assembly, Front Foot	23	W10031780	Screw		W10281322	Kit, Bare Wire Adapter Block
12	W10067840	Screw	24	W11175594	Assembly, Light			
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts			


DRAWER PARTS

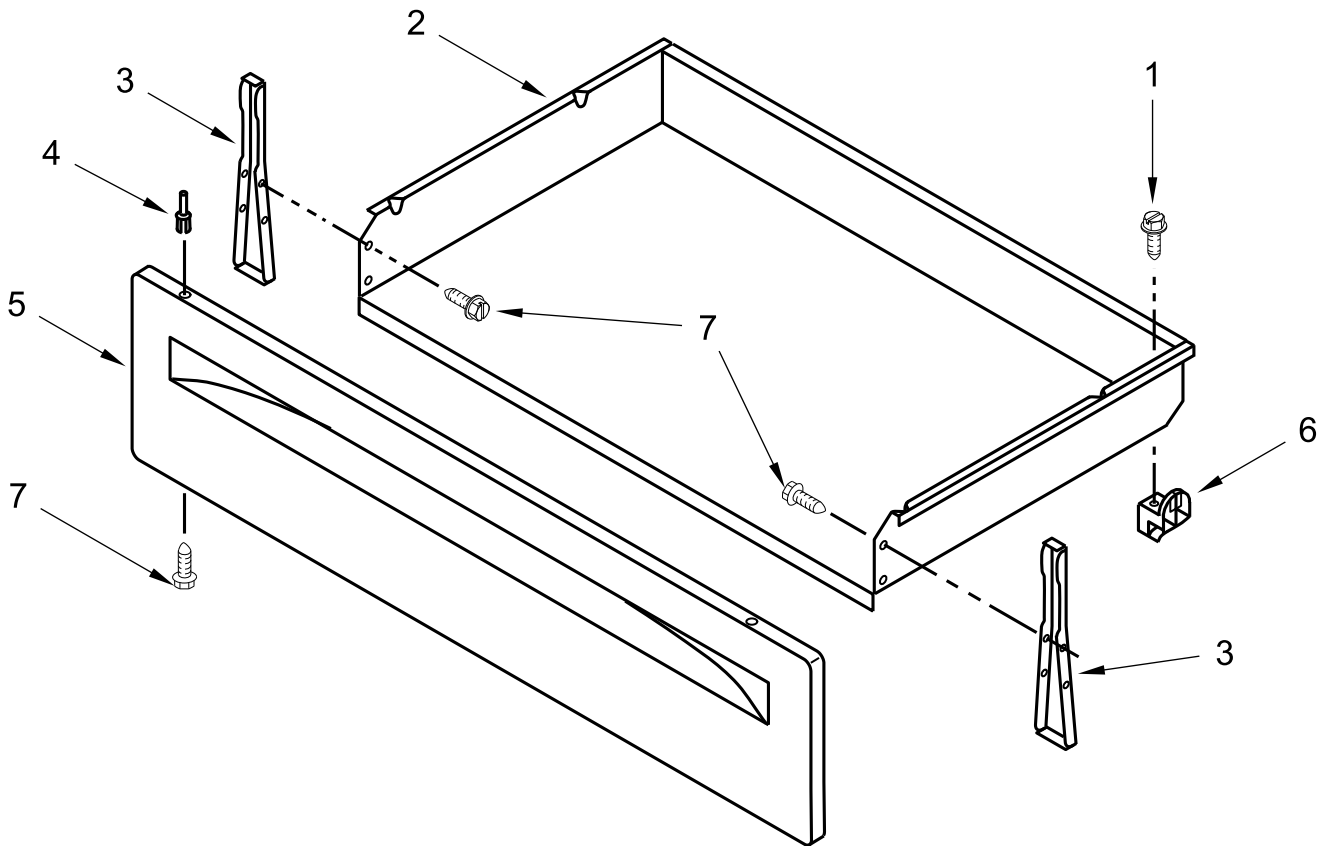

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196178	Screw	5		Panel, Drawer Front	6	W10674708	Glide, Drawer Rear
2	W10688022	Drawer, Storage		W11123900	Black	7	3196169	Screw
3	W10462912	Bracket, Mounting Drawer		W11123901	White			
4		Rivet, Push						
	3196813	Black						
	3196814	White						

DOOR PARTS

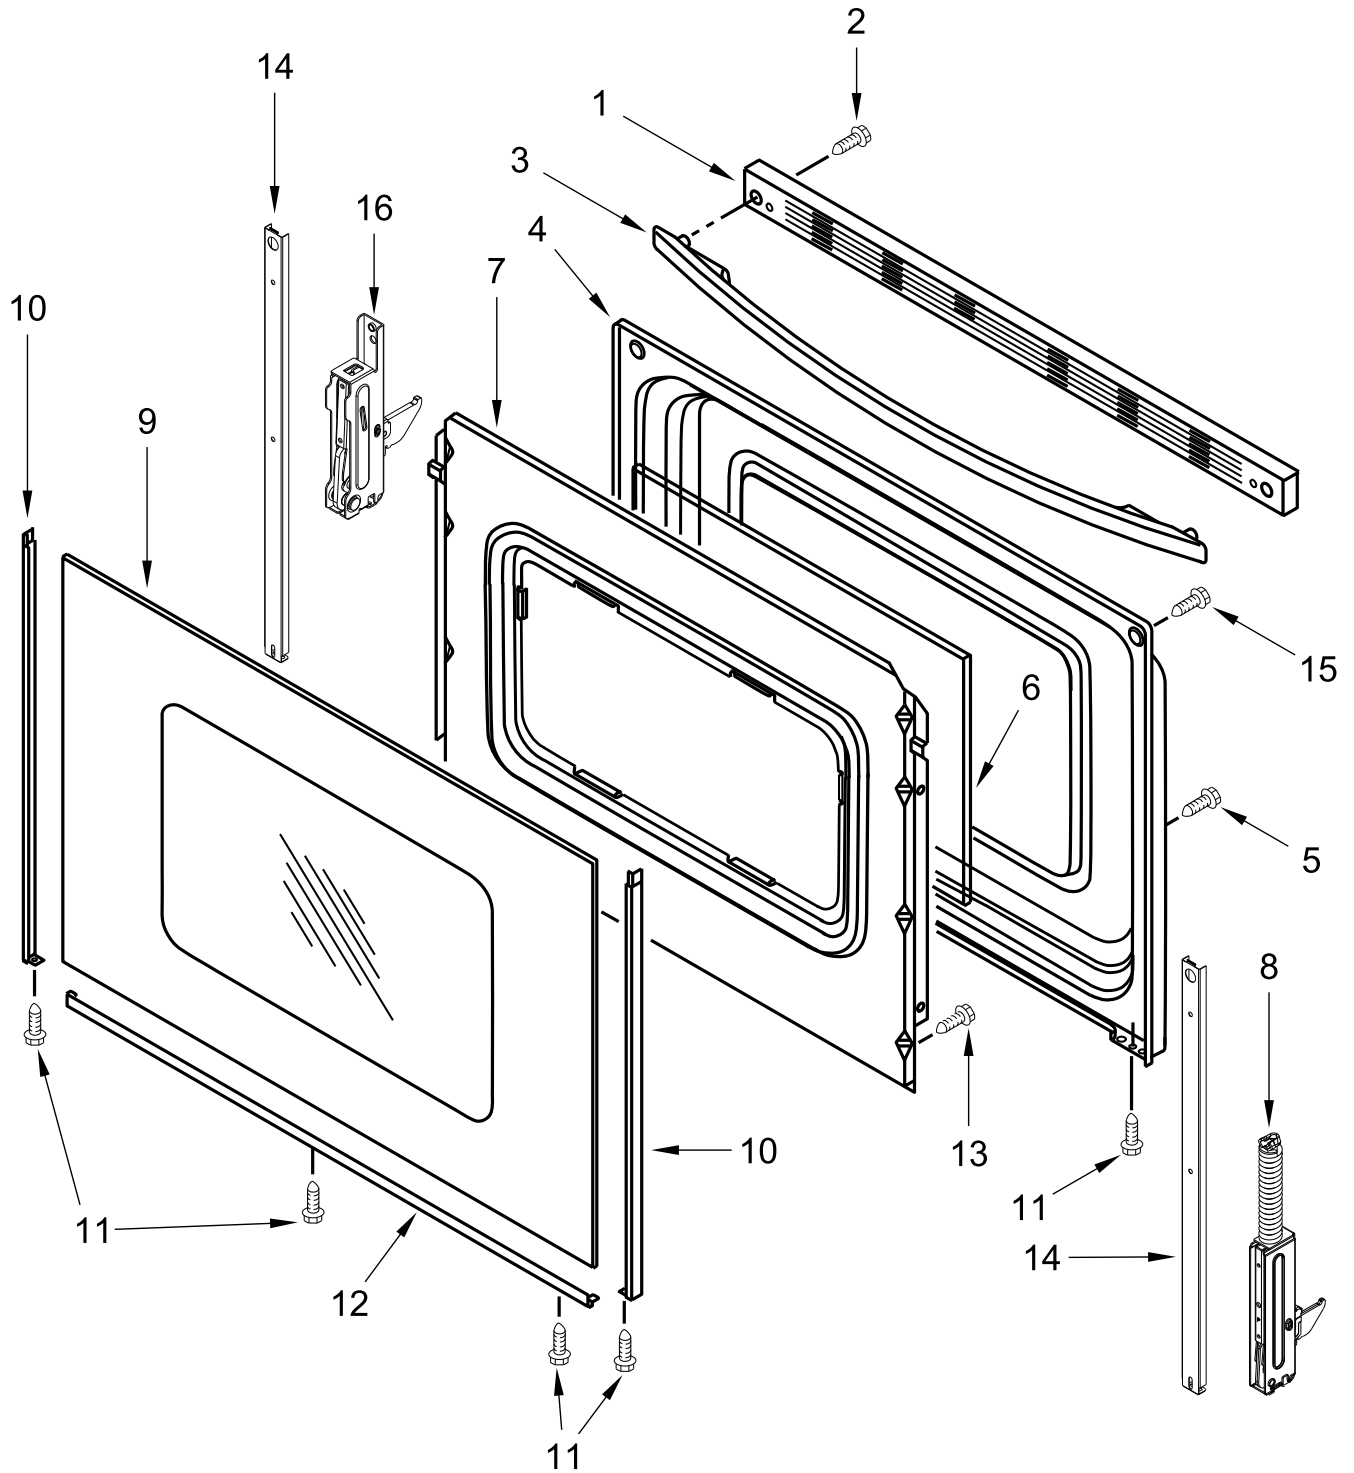

DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
	W10310920	White
2	W10465148	Screw
3		Handle, Door
	W10300490	Black
	W10300489	White
4	9761344	Liner, Door
5	W10031790	Screw
6	W10620754	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	9761505	Retainer, Insulation
8	W10299225	Hinge, Active
9		Glass, Outer
	W10409946	Black
	W10409945	White
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10327235	Screw
12		Trim, Lower
	8523177	Black
	8523175	White
13	W10031780	Screw
14	W10544179	Strap, Door
15	W10200660	Screw
16	W10299227	Hinge, Door (Passive)

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72107	Almond
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350956	Almond
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	978883	Almond

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	241430	Aluminum Foil
	3191048	Glass Cleaner
	4396923	Grid, Broiler Pan and