




## **30" FREESTANDING ELECTRIC RANGE**

### **MODELS:**

MER6600FB2 (Black)  
MER6600FW2 (White)


# COOKTOP PARTS

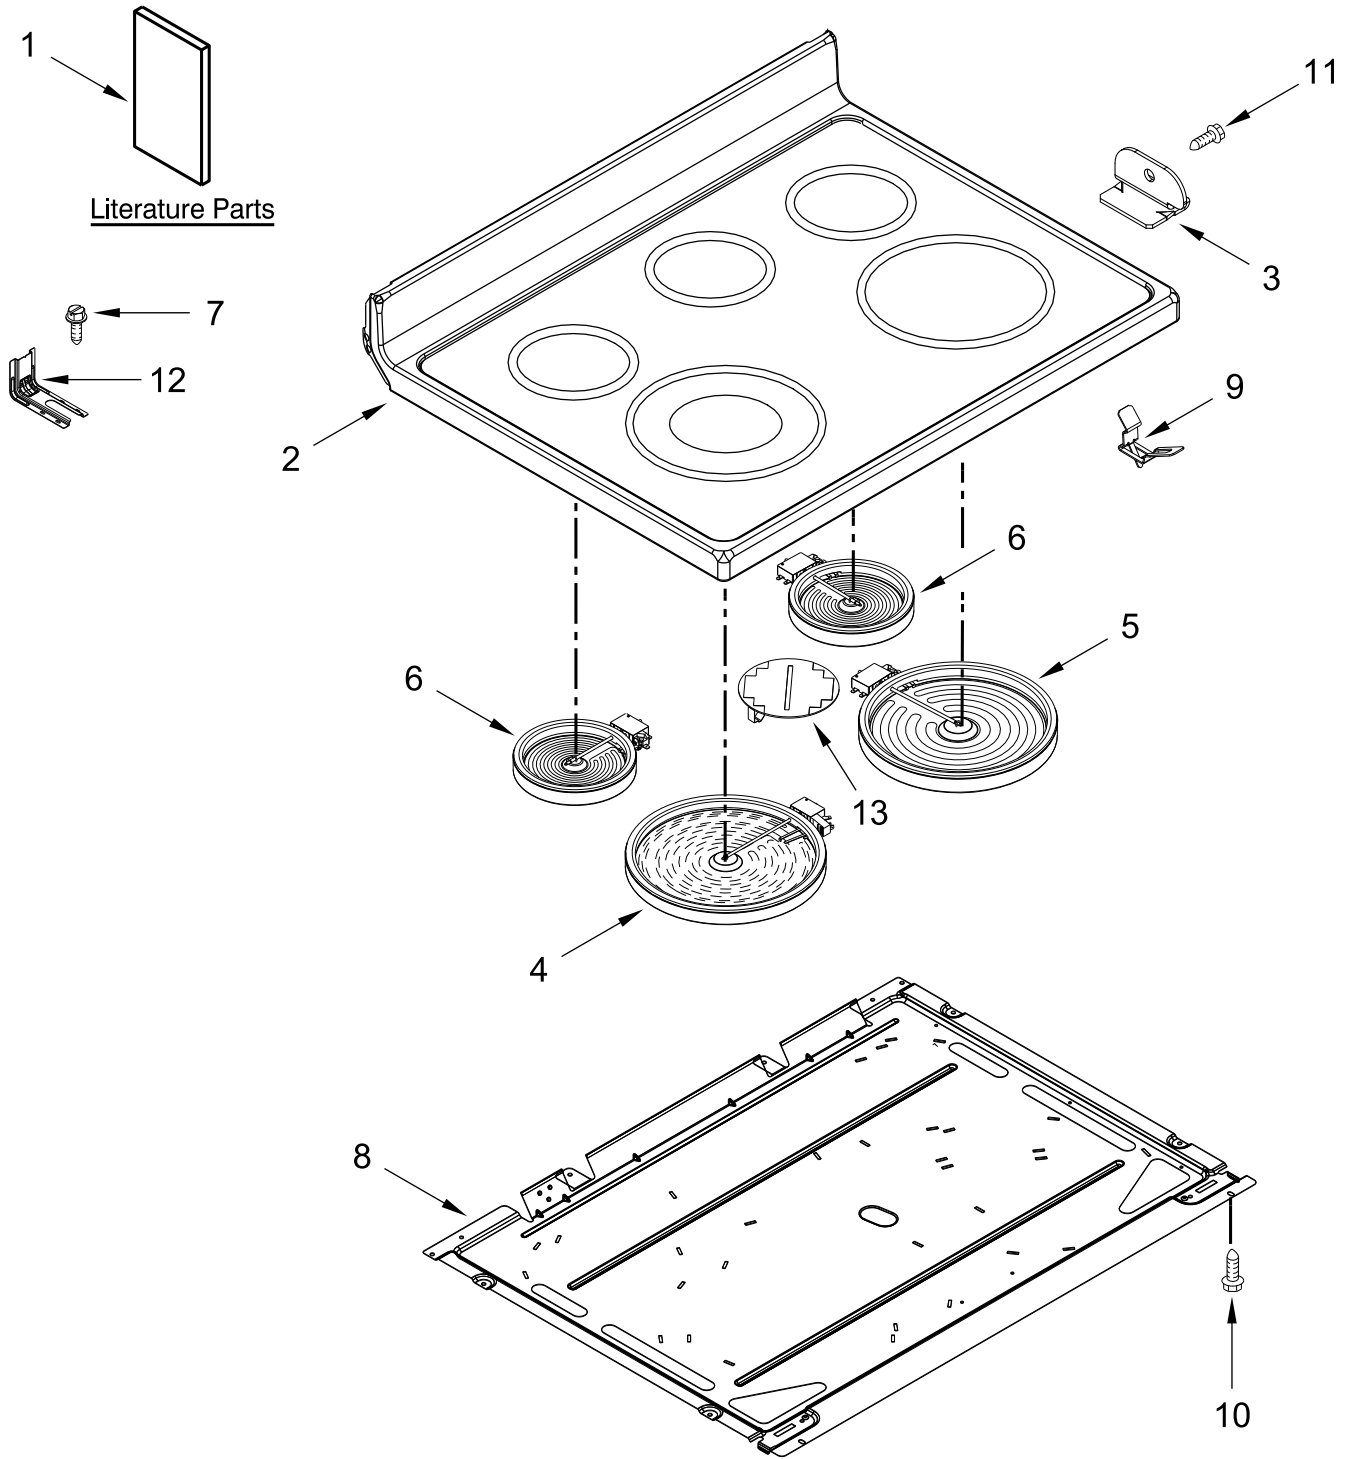

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10275048	Element (3000/1400W)	13	W10799048	Element, Warm Zone
	W11037227	Guide, Use and Care			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11047681	Instructions, Installation	5	8273992	Element (2500W)		W11134676	Harness, Main
	W10842032	Sheet, Tech			(Right Front)		W11134603	Harness, Cooktop (Left)
	W11032798	Wiring, Diagram	6	W10248261	Element (1200W)		W11134551	Harness, Cooktop (Right)
2		Cooktop			(Left Rear & Right Rear)		W11134592	Harness, Warm Zone
	W11022824	Black	7	7101P485-60	Screw, Anti-Tip Kit		W11172528	Harness, Hidden Bake
	W11022825	White	8	W10691223	Pan, Radiant Element		W10281322	Kit, Bare Wire Adapter Block
3	W10607641	Bracket, Cooktop (Left)	9	W10225448	Spring, Element		W10183541	Clip, Spring Steel
	W10607642	Bracket, Cooktop (Right)	10	3196165	Screw			
			11	3196178	Screw			
			12	W10306542	Bracket, Anti-Tip			


# CONTROL PANEL PARTS

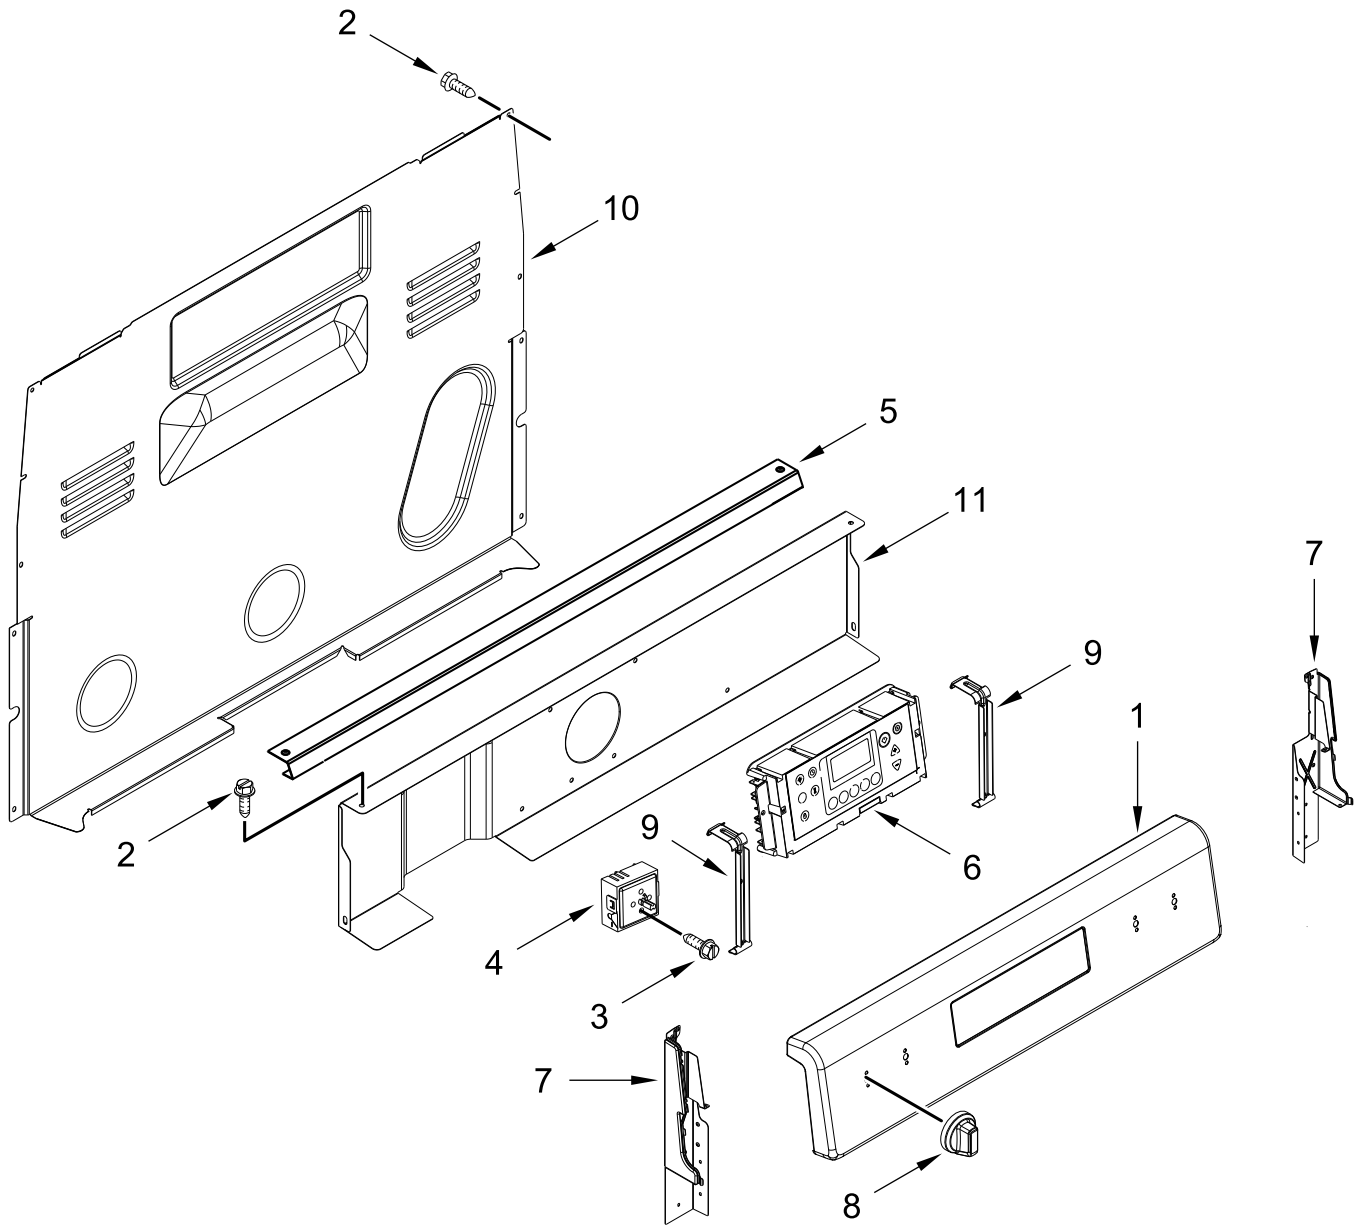

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	W10525121	Bracket, Console Mounting	8		Knob
	W10885609	Black					W10892251	Black
	W10885608	White	6		Board, Control		W10892250	White
2	3196178	Screw		W11204510	(Black)	9	W10695491	Bracket, Control
3	3400882	Screw		W11204509	(White)	10	8272473	Cover, Upper Rear
4	W10434452	Switch, Infinite (Dual)	7		Endpost, Console	11	W10134247	Shield, Heat
		(Left Front)		W11130372	Black (Left)			
	3148951	Switch, Infinite		W11130379	Black (Right)			
		(Left Rear & Right Rear)		W11130371	White (Left)			
	3148954	Switch, Infinite		W11130378	White (Right)			
		(Right Front)						


# CHASSIS PARTS

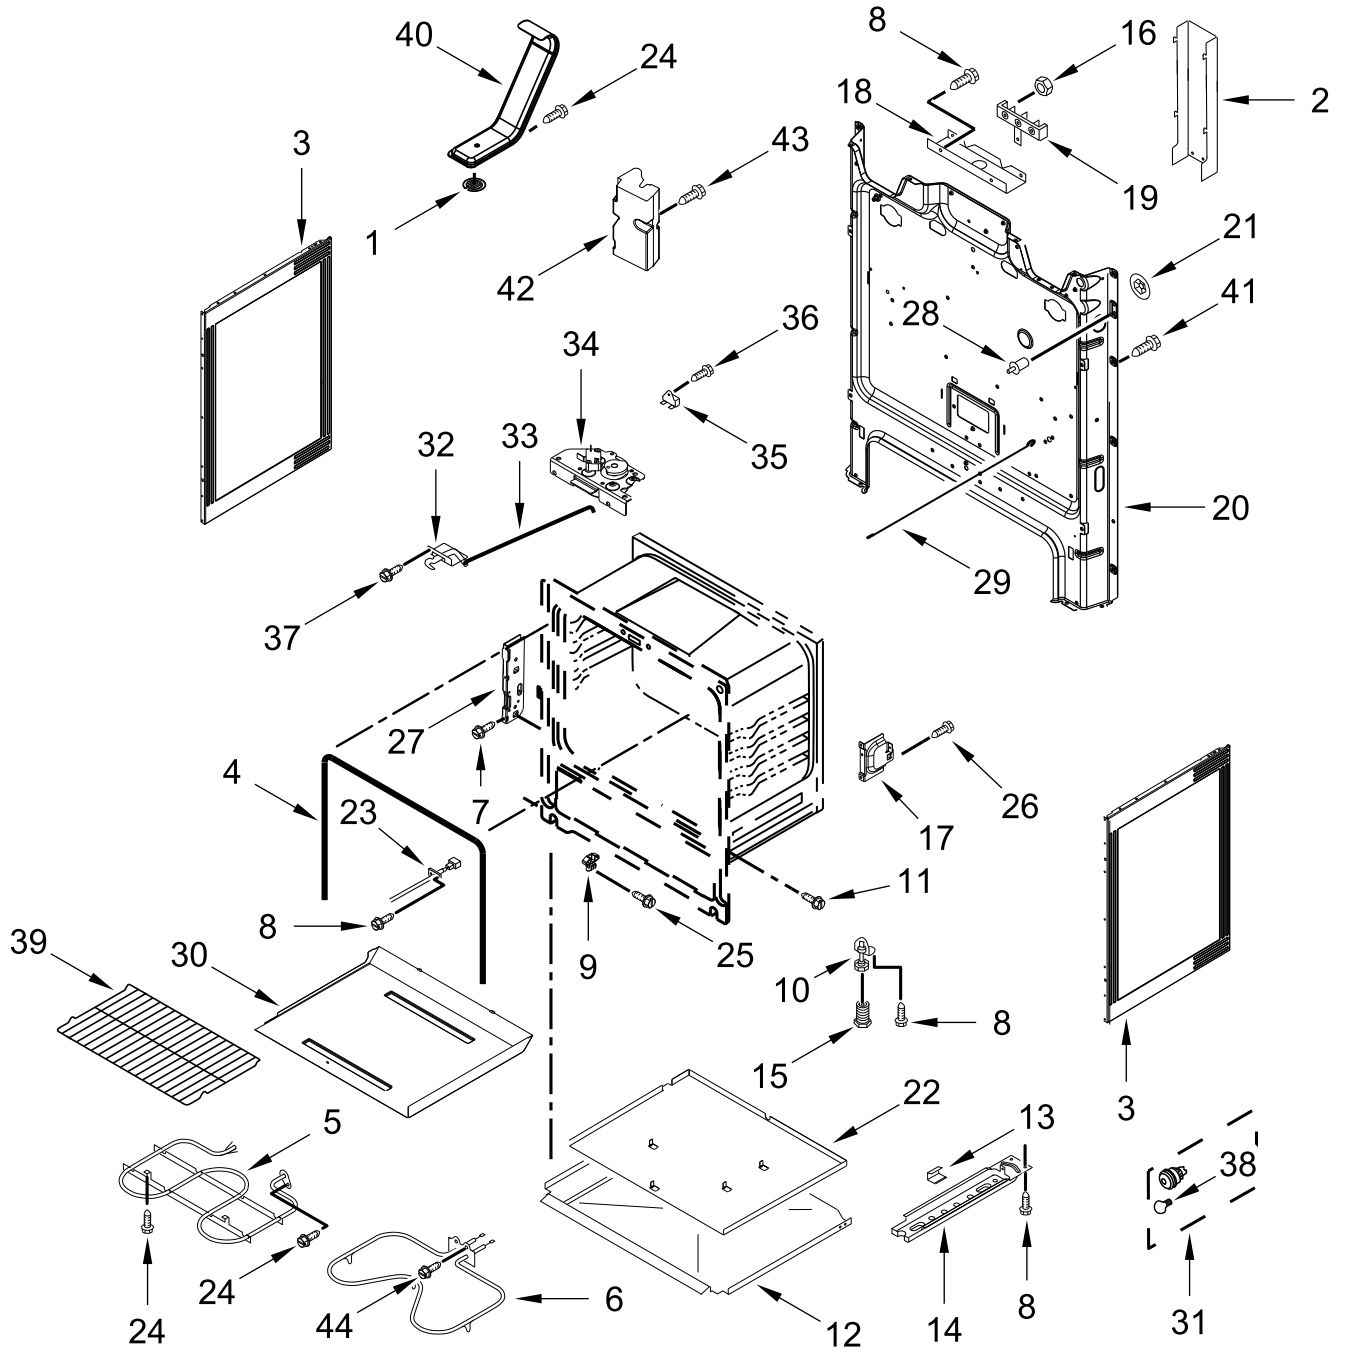

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	16	3400029	Nut	35	3196548	Fuse, Thermal
2	W10326122	Cover, Terminal Block	17	W10404688	Clip, Oven Support	36	3196172	Screw
3		Panel, Side	18	3186034	Bracket, Service	37	3196560	Screw
	W10162245	Black	19	W10245259	Block, Terminal	38	W10571723	Bulb, Halogen 40 Watts
	W10575396	White	20	W10289149	Back, Main	39	W10268578	Rack, Oven
4	W10658354	Seal, Door	21	3400968	Nut	40	W10134285	Tube, Vent
5	9757340	Element, Broil	22	W10134125	Shield, Heat	41	3400016	Screw
6	9755770	Element, Bake	23	W10181986	Sensor, Oven	42	W10910404	Counterweight
7	W10031780	Screw	24	3196154	Screw	43	W11034869	Screw
8	3196178	Screw	25	3400080	Screw	44	3196174	Screw
9	W10674705	Glide, Drawer Front	26	3196169	Screw			FOLLOWING PARTS NOT ILLUSTRATED
10	W10341186	Assembly, Front Foot	27	W10289077	Receiver, Hinge		3196520	Clip, Wire
11	W10067840	Screw	28	W10627802	Switch, Door		W10774939	Insulation, Wrap
12	W10134121	Tray, Insulation	29	9757239	Rod, Door Switch		W11127324	Insulation, Back
13	W10137382	Clip, Panel	30	W10183712	Tray, Hidden Bake		W10646923	Card, Insulator
14	W10390008	Assembly, Base Rail (Left)	31	W11175594	Assembly, Light		W10333344	Insulation, Flue
	W10390007	Assembly, Base Rail (Right)	32	9761013	Assembly, Door Latch (Front)			
			33	W10078380	Rod, Latch			
15	W10058460	Foot, Leveling	34	W10107820	Assembly, Door Latch (Rear)			

# DOOR PARTS

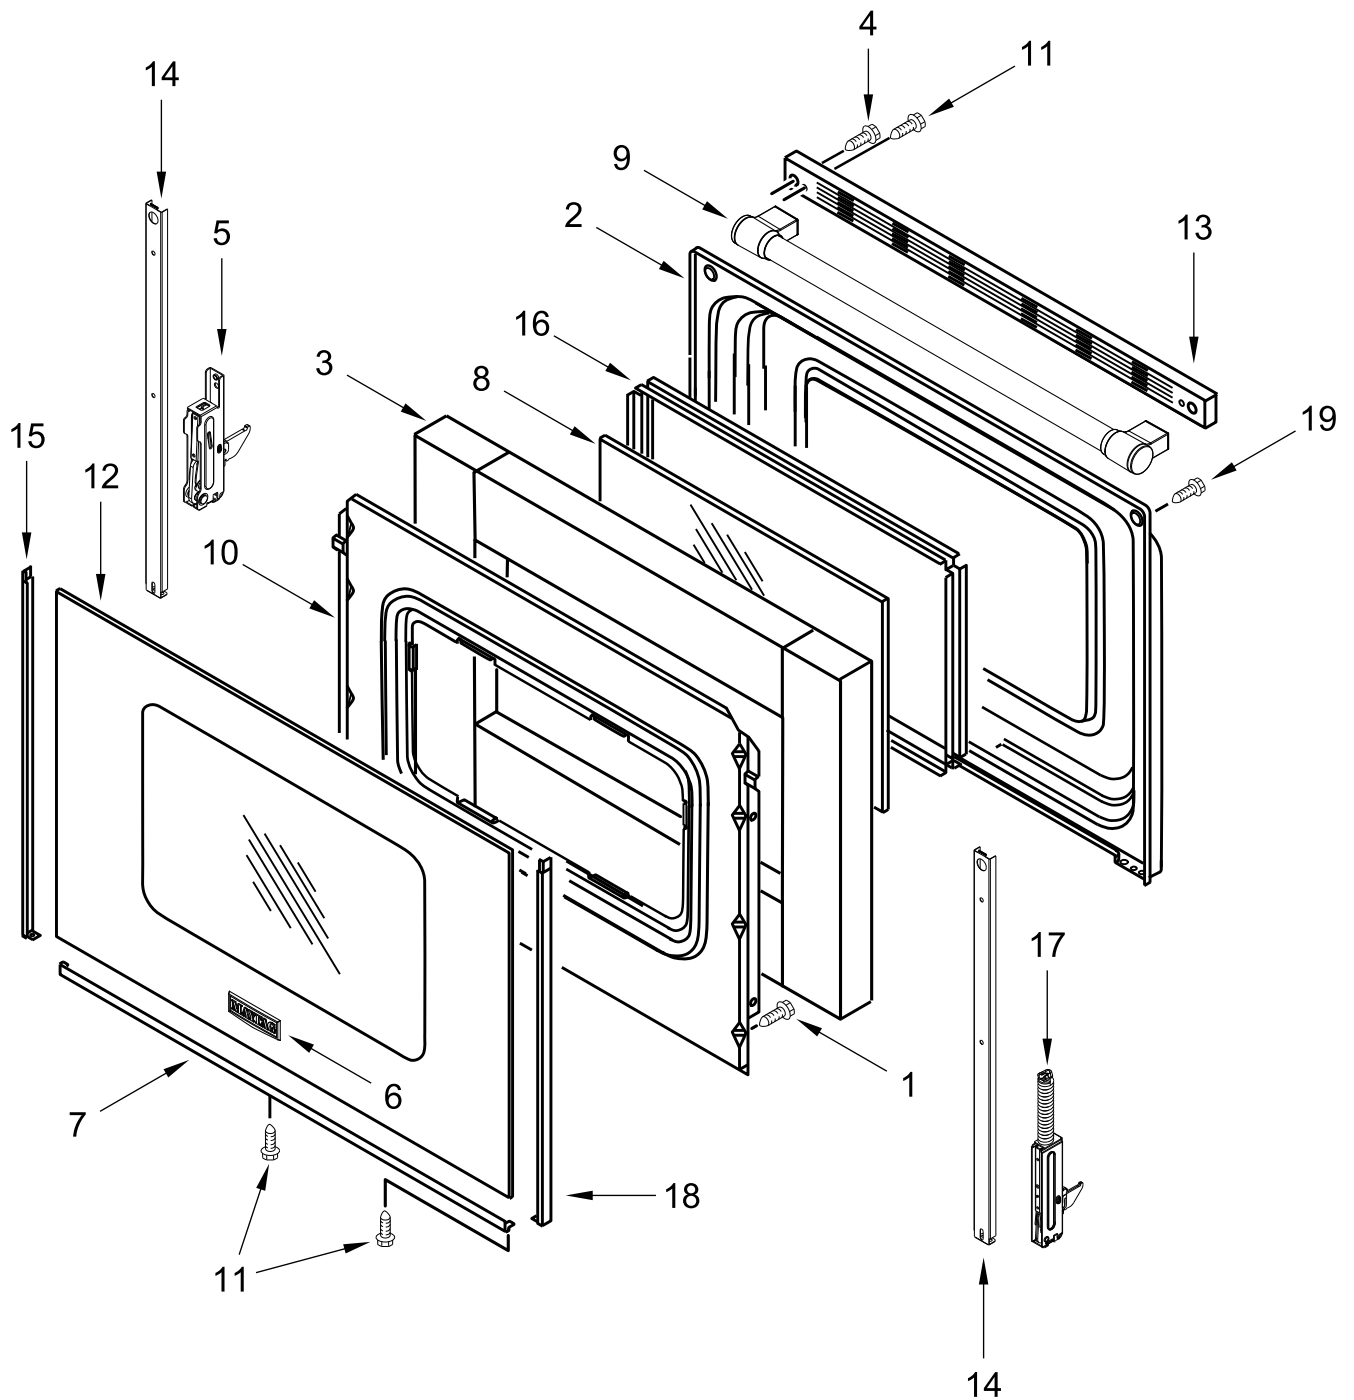




# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	10	9761357	Retainer, Insulation	17	W10299226	Hinge, Active
2	9761344	Liner, Door	11	W10480830	Screw	18		Trim, Door
3	W10278991	Insulation, Door Strip	12		Glass, Window		W10746435	Black (Right)
4	W10200660	Screw		W10884159	Black		8523166	White (Right)
5	W10299227	Hinge, Door (Passive)		W10409945	White	19	W10327235	Screw
6	W10612925	Badge	13		Trim, Oven Door Vent			
7		Trim, Lower Door		W10875233	Black			
	8523177	Black		W10875232	White			
	8523175	White	14	W10544179	Strap, Door			
8	9758162	Glass, Inner	15		Trim, Door			
9		Handle, Oven Door		W10746436	Black (Left)			
	W10889624	Black		8523172	White (Left)			
	W10889625	White	16	W10316950	Frame, Glass			

# DRAWER PARTS

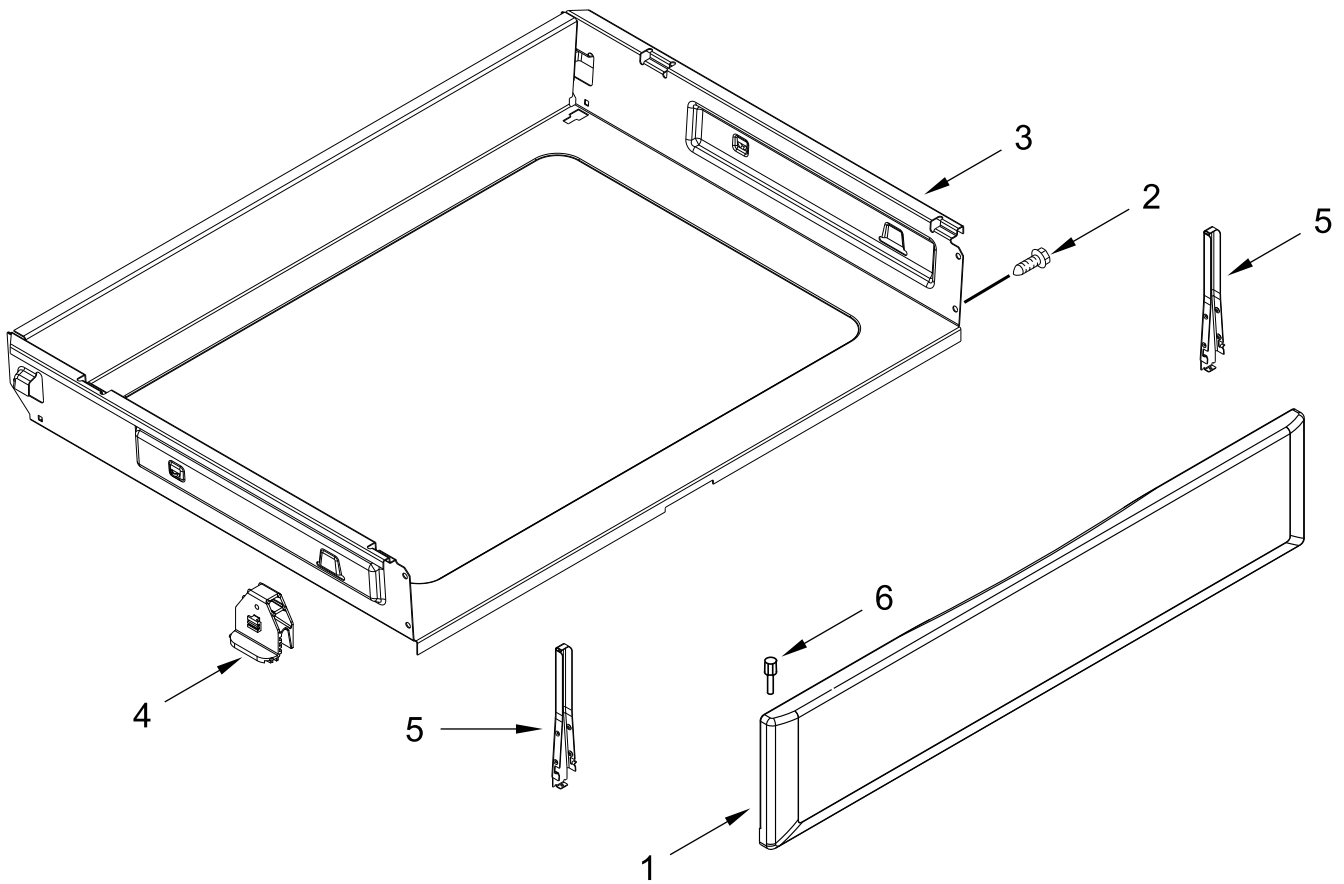

# DRAWER PARTS

Illus.  
No.    Part No.    Description

1                    Panel, Drawer  
    W11123900    Black  
    W11123901    White  
2      3196165    Screw

Illus.  
No.    Part No.    Description

3    W10688022    Drawer, Storage  
4    W10674708    Glide, Drawer Rear  
5    W10462912    Bracket, Mounting  
                    Drawer

Illus.  
No.    Part No.    Description

6                    Rivet, Push  
                    3196813    Black  
                    3196814    White

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10423113RPKit	Oven Cleaning
	WA906B	Scraper, Cooktop
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black