




30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE

MODELS:

WFE525S0HB1 (Black)
WFE525S0HW1 (White)
WFE525S0HT1 (Biscuit)


COOKTOP PARTS

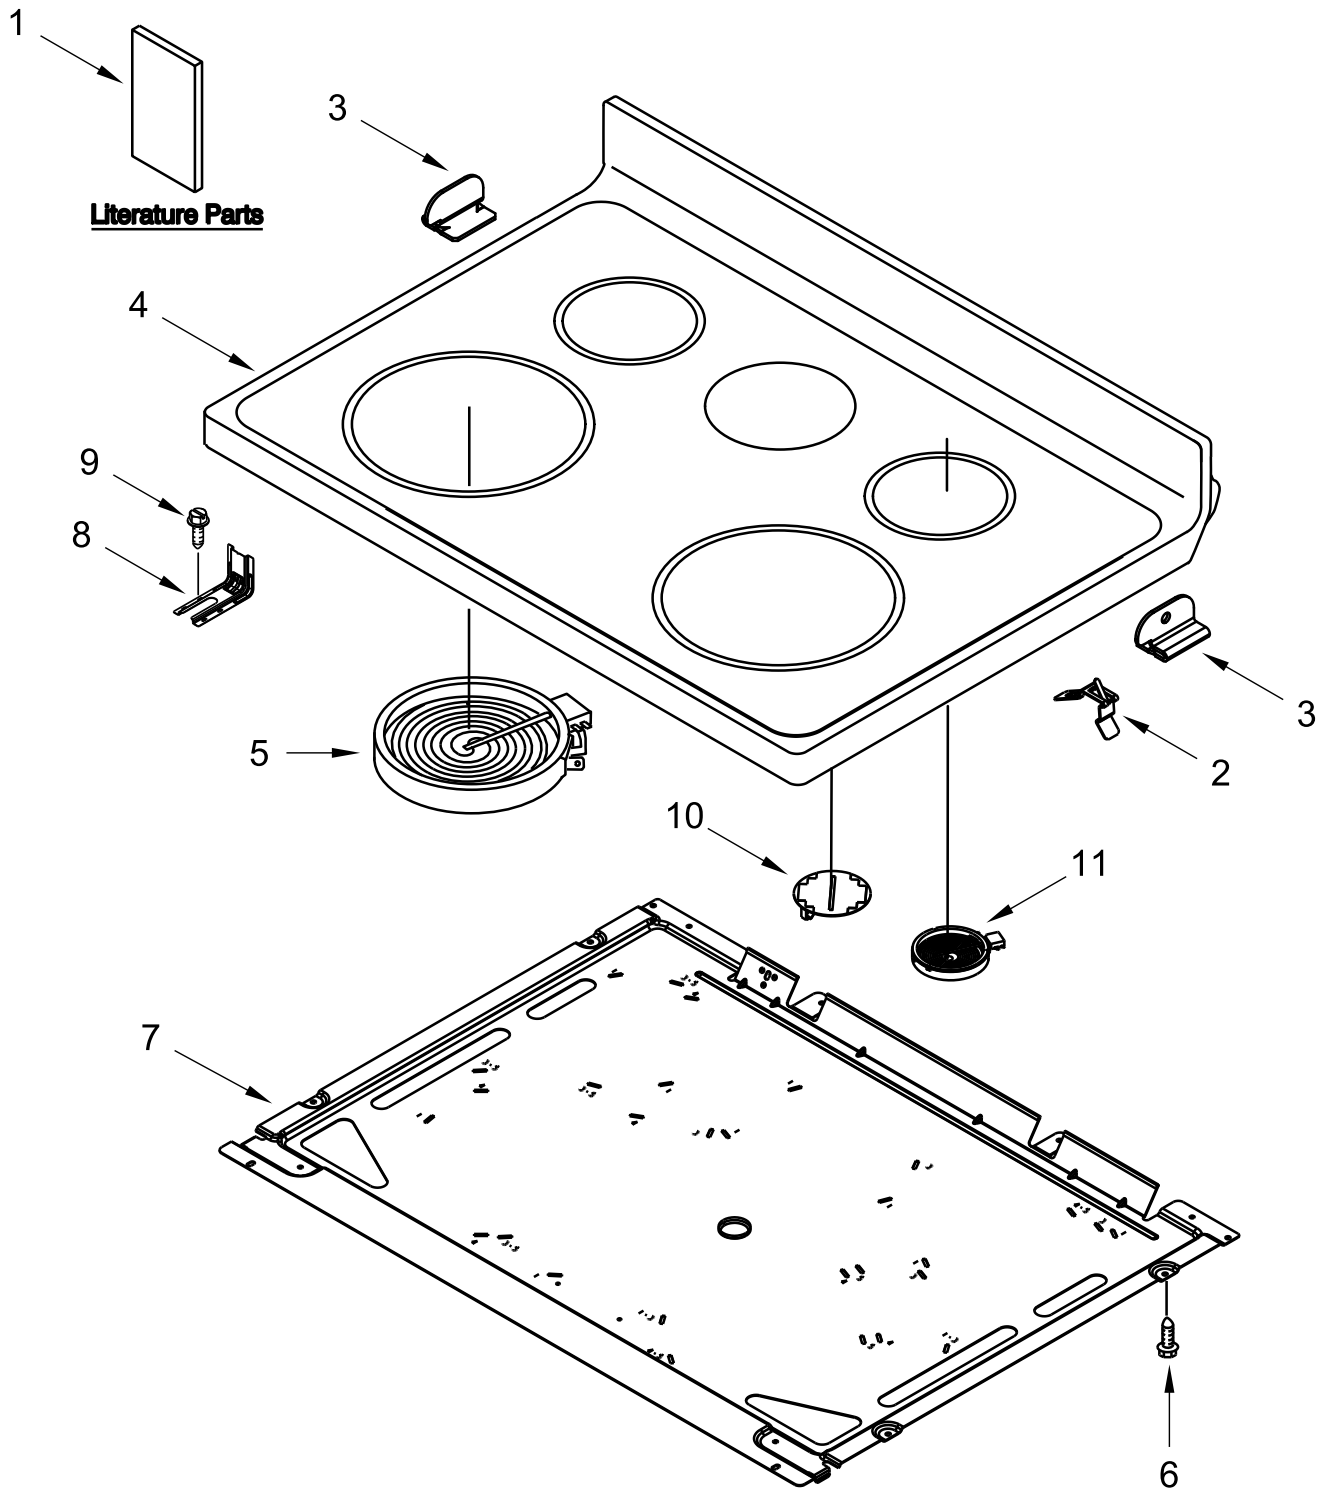

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	11	W10248261	Element (1200W) (Left Rear, Right Rear)
	W11157404	Instructions, Installation			(Left Front, Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11102909	Use and Care Guide	6	3196169	Screw	W11134844		Harness, Main
	W11102747	Sheet, Tech	7	W10691223	Pan, Radiant Element	3391018		Tie, Cable
	W11109898	Wiring Diagram	8	W10306542	Bracket, Anti-Tip	W11134845		Harness, Cooktop (Right)
2	W10225448	Spring, Element	9	7101P485-60	Screw, Anti-Tip Kit	W11134603		Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	10	W10799048	Element, Warm Zone (Center)	W11134592		Harness, Warm Zone
	W10607642	Bracket, Cooktop (Right)						
4		Cooktop						
	W11034833	Black						
	W11034831	White						
	W11034835	Biscuit						


CONTROL PANEL PARTS

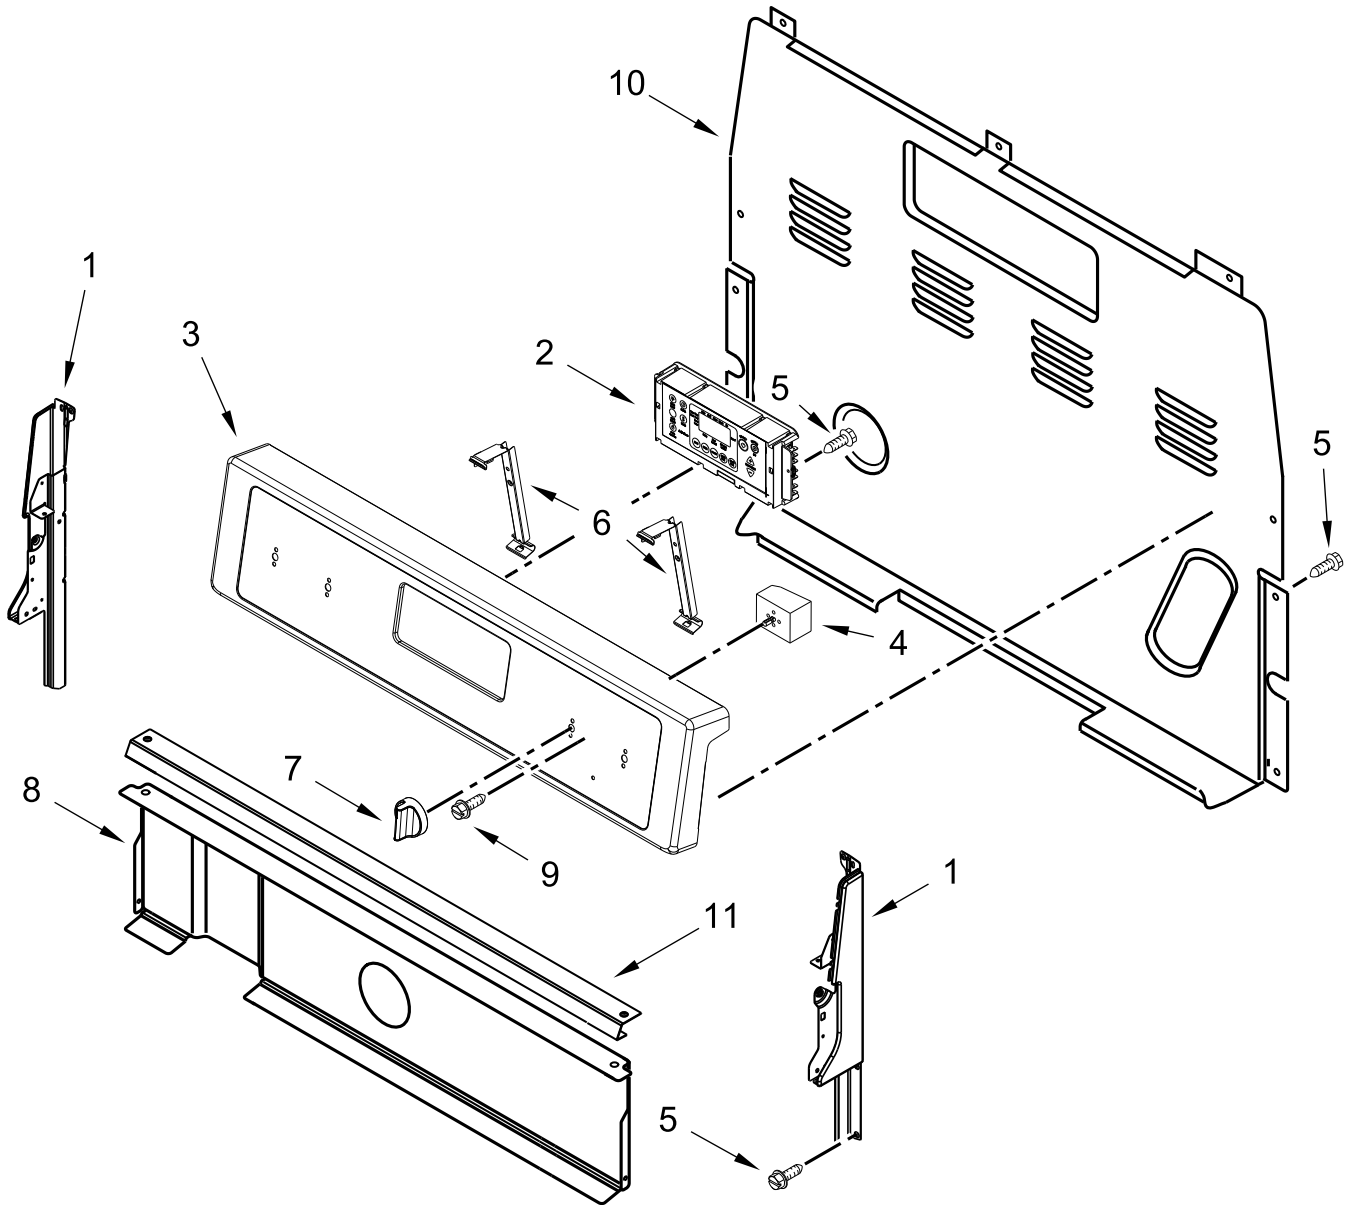

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	3		Console, Assembly	6	W10695491	Bracket, Control
	W11130372	Black (Left)		W11027378	Black	7		Knob
	W11130379	Black (Right)		W11027379	White		W11022718	Black
	W11130371	White (Left)		W11027380	Biscuit		W11022720	White
	W11130378	White (Right)	4	W10434452	Switch, Infinite (Dual)		W11022721	Biscuit
	W11130373	Biscuit (Left)			(Left Front, Right Front)	8	W10134247	Shield, Heat
	W11130380	Biscuit (Right)				9	3400882	Screw
2		Control, Electronic (LCX)		3148951	Switch, Infinite (Right Rear and Left Rear)	10	8272473	Cover, Upper Rear
	W11204519	Black				11	W10525121	Bracket, Console Mounting
	W11204520	White						
	W11204521	Biscuit	5	3196178	Screw			


CHASSIS PARTS

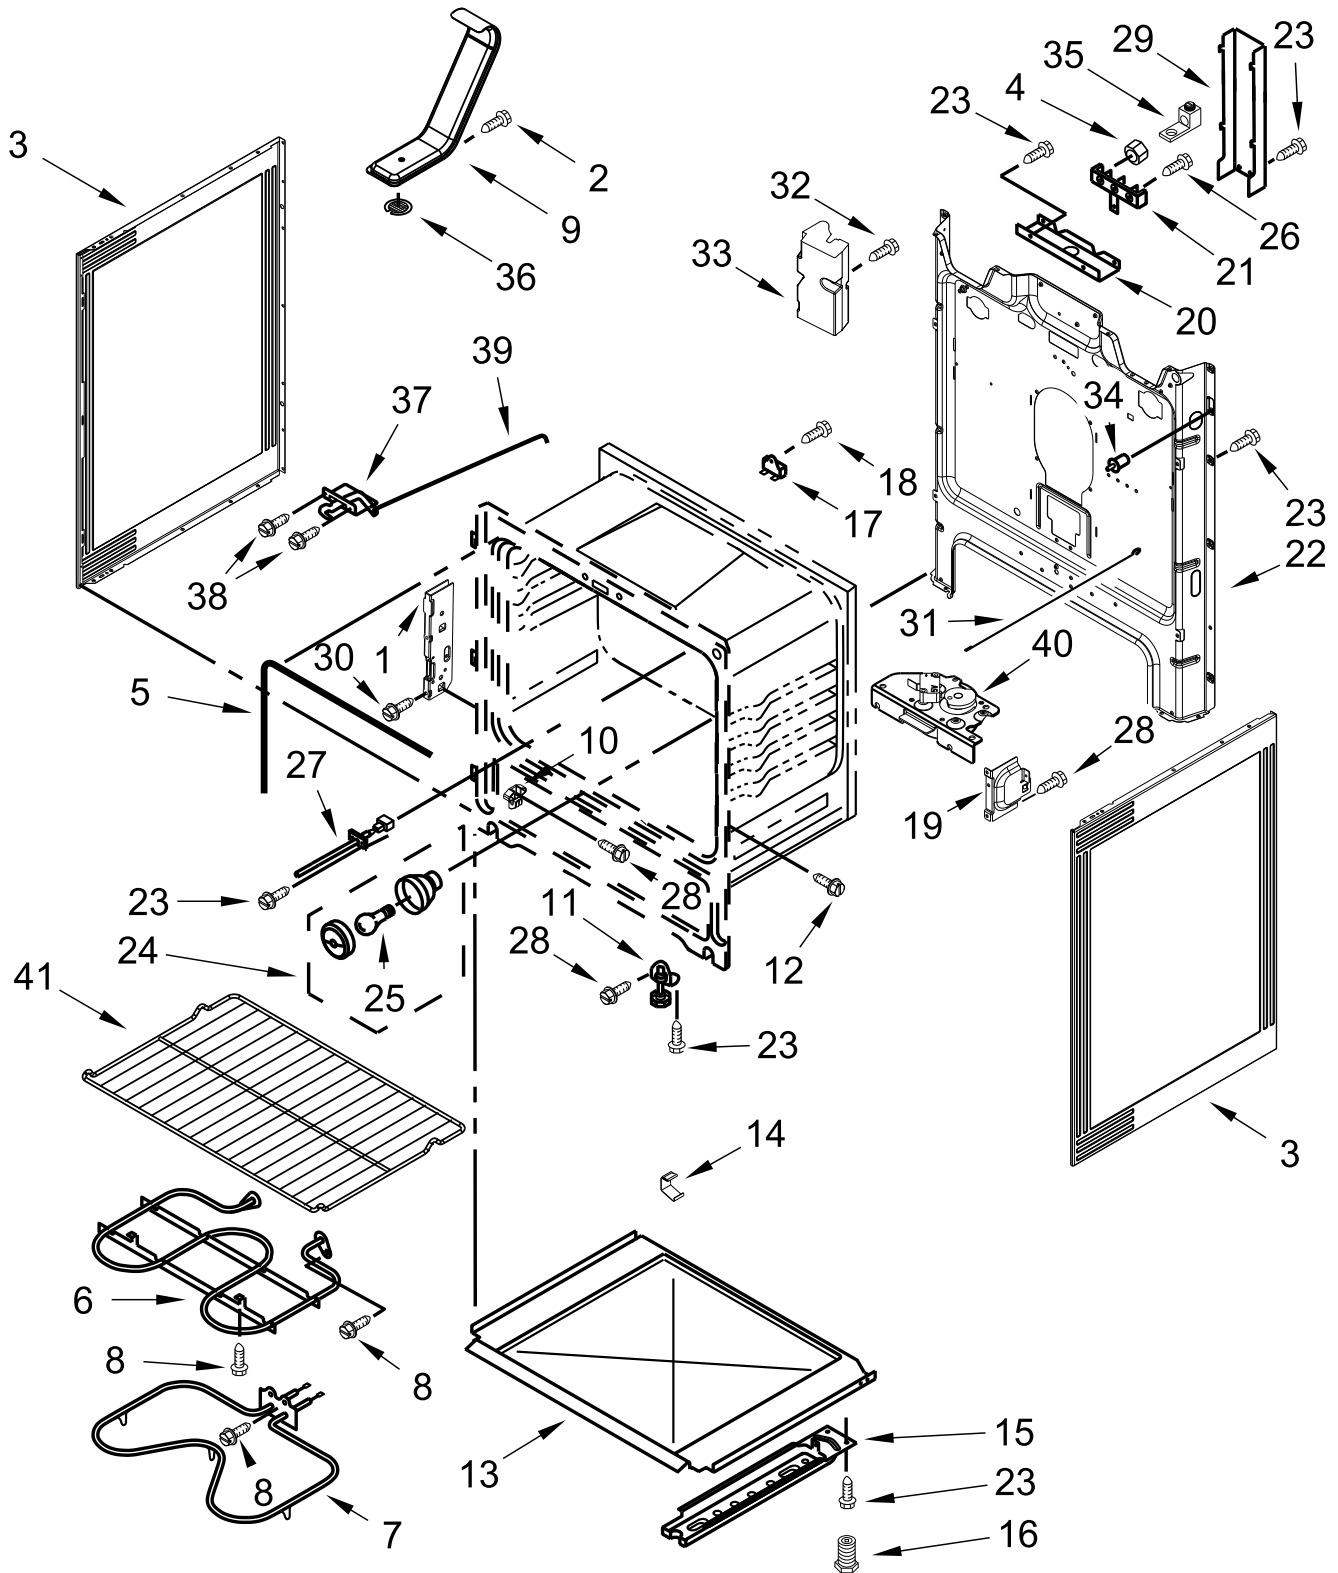

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	35	W10281322	Kit, Bare Wire Adapter Block
2	3196154	Screw	17	3196548	Fuse, Thermal	36	W11092984	Screen, Vent
3		Panel, Side	18	3196172	Screw	37	9761013	Assembly, Door Latch (Front)
	W10162245	Black	19	W10404688	Clip, Oven Support	38	3196560	Screw
	W10575396	White	20	3186034	Bracket, Service	39	W10078380	Rod, Latch
	W10162246	Biscuit	21	W10245259	Block, Terminal	40	W10107820	Assembly, Door Latch (Rear)
4	3400029	Nut	22		Back, Main (Not Serviced)	41	W10268578	Rack, Oven
5	W10658354	Seal, Door	23	3196178	Screw			FOLLOWING PARTS NOT ILLUSTRATED
6	9757340	Element, Broil	24	W11175594	Assembly, Light	W10774939		Insulation, Wrap
7	W11111743	Element, Bake	25	W10571723	Bulb, Halogen 40 Watts	W11127325		Insulation, Back
8	3196174	Screw	26	3400016	Screw	W10333344		Insulation, Flue
9	W10134285	Tube, Vent	27	W10181986	Sensor, Oven			
10	W10674705	Glide, Drawer Front	28	3196169	Screw			
11	W10341186	Assembly, Front Foot	29	W10326122	Cover, Terminal Block			
12	W10067840	Screw	30	W10031780	Screw			
13	8054068	Retainer, Insulation	31	9757239	Rod, Door Switch			
14	W10137382	Clip, Panel	32	W10910404	Counterweight			
15	W10390007	Assembly, Base Rail (Right)	33	W11034869	Screw			
	W10390008	Assembly, Base Rail (Left)	34	W10627802	Switch, Door			

DOOR PARTS

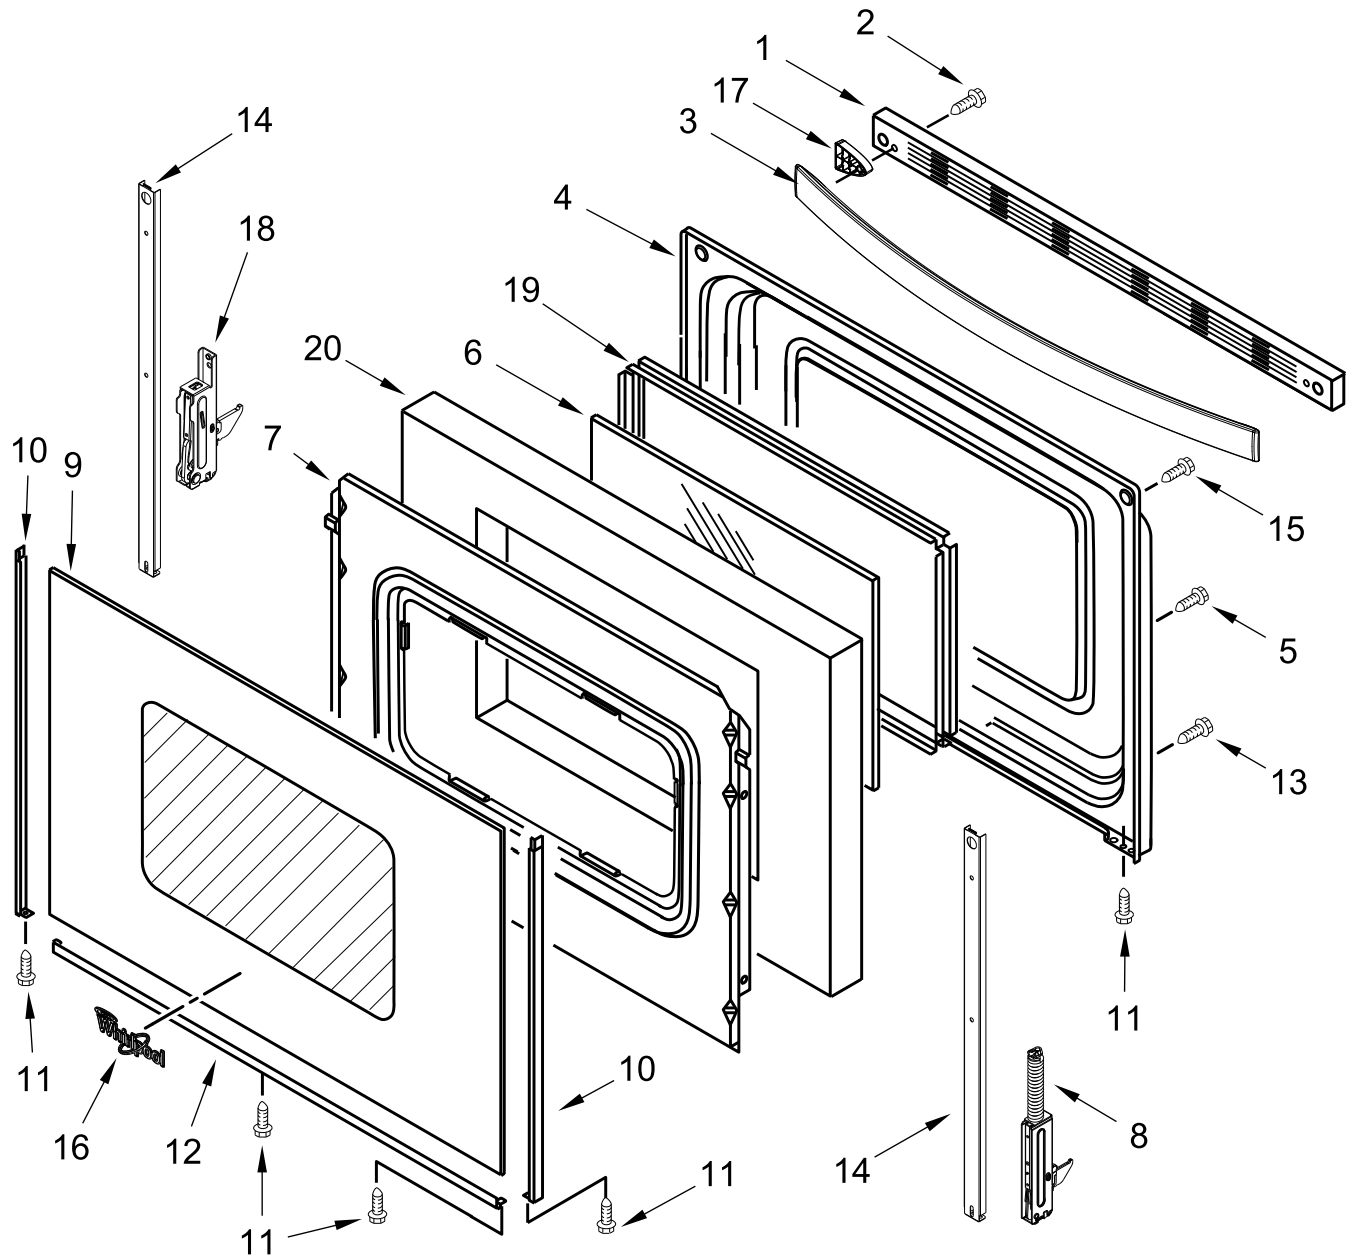


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
	W10310920	White
	W10310923	Biscuit
2	W10480830	Screw
3		Handle, Door
	W11022643	Black
	W11022644	White
	W11039124	Biscuit
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	9761357	Retainer, Insulation
8	W10299226	Hinge, Active

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9		Glass, Outer
	W10884159	Black
	W10409945	White
	W10409947	Biscuit
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)
	8523173	Biscuit (Left)
	8523167	Biscuit (Right)
11	W10327235	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12		Trim, Lower
	8523177	Black
	8523175	White
	8523178	Biscuit
13	W10031780	Screw
14	W10544179	Strap, Door
15	W10200660	Screw
16	W10884775	Nameplate
		Standoff, Handle
17	W11037027	Black
	W11037028	White
	W11039073	Biscuit
18	W10299227	Hinge, Door (Passive)
19	W10316950	Frame, Glass
20	W10278991	Insulation, Door Strip

DRAWER PARTS

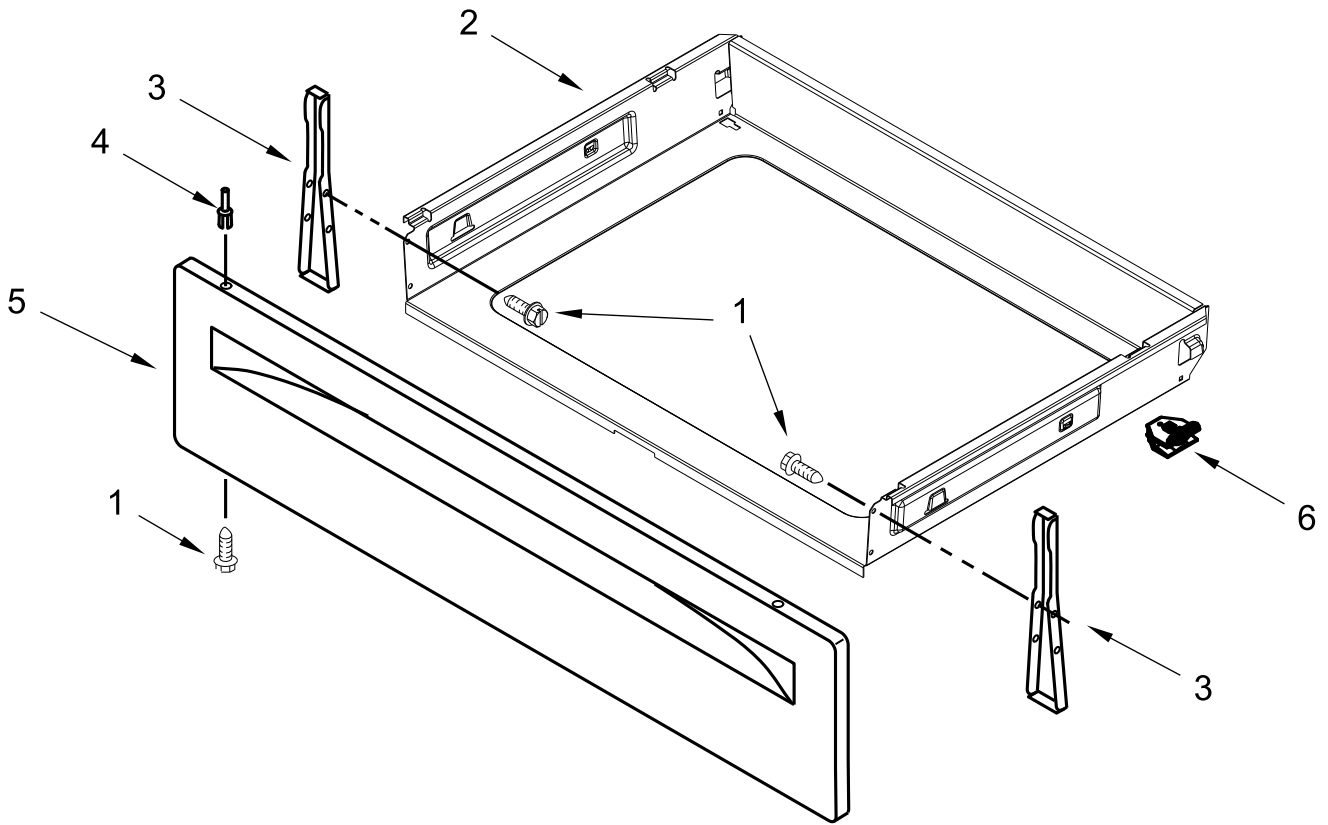

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw
2	W10688022	Drawer, Storage
3	W10462912	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Rivet, Push
	3196813	Black
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11123900	Black
	W11123901	White
	W11123902	Biscuit
6	W10674708	Glide, Drawer Rear

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W10275756	Cleaner, Granite
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting