



## **30" GAS FREESTANDING SELF CLEAN RANGE**


### **MODELS:**

WFG525S0HB1 (Black)

WFG525S0HW1 (White)

WFG525S0HT1 (Biscuit)


# COOKTOP PARTS

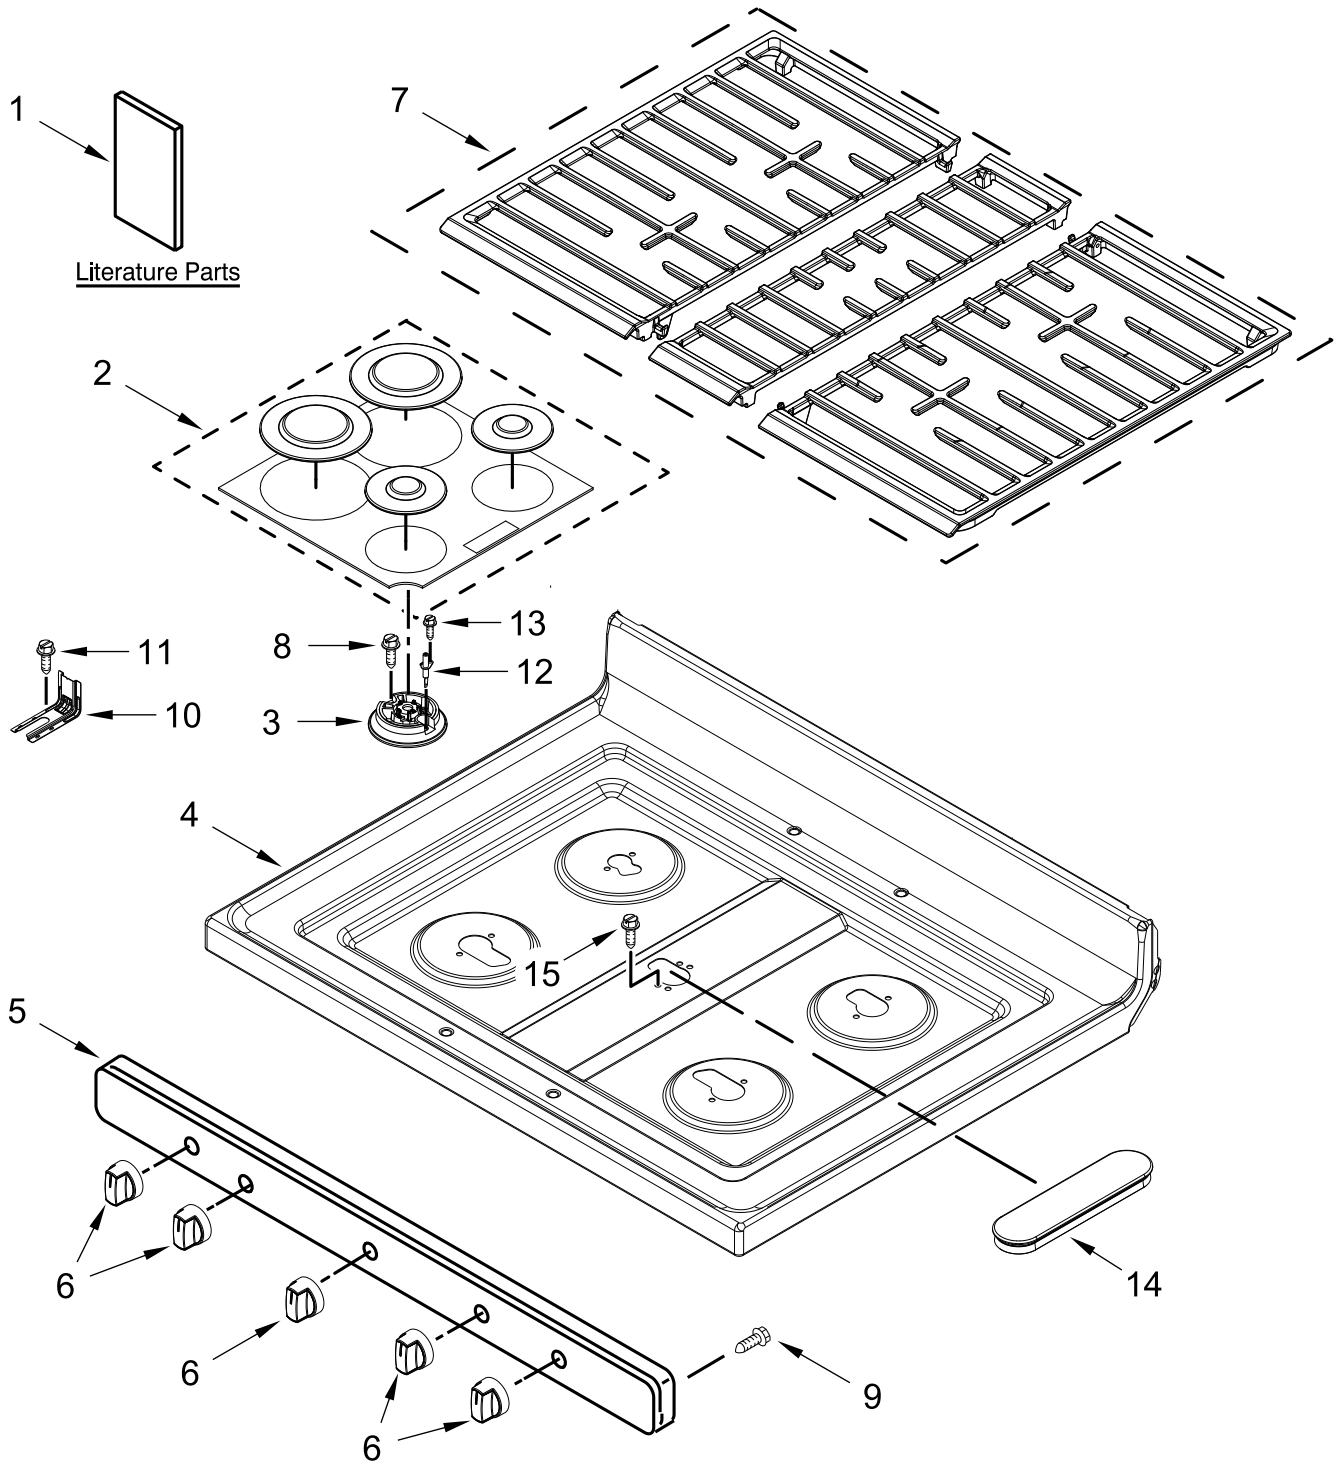

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Panel, Manifold	15	W10673618	Screw
	W11122558	Instructions, Installation		W11089578	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11102912	Guide, Use and Care		W11089577	White		W10842520	Harness, Main
	W11102748	Sheet, Tech (English)	6	W11089576	Biscuit		W10753750	Harness, Bake/Broil
	W11032799	Diagram, Wiring		W11023140	Black		W10809927	Harness, Cooktop
2		Kit, Burner Cap		W11023142	White		3196520	Clip, Wire
	W10850506	Black (Set of 4)	7	W11023143	Biscuit		W10334923	Clip, Gas Wiring
3	W10515455	Assembly, Burner (17.5K)			Kit, Grate		313438	Clip, Harness
		(Left Front & Right Front)	8	W11090908	Black		3196896	Clip, Wire
	W10515454	Assembly, Burner (9.5K)	9	3400701	Screw		3196173	Screw
		(Left Rear & Center)	10	3196557	Screw			(Grounding)
	W10515453	Assembly, Burner (6K)	11	W10306542	Bracket, Anti-Tip			
		(Right Rear)	12	7101P485-60	Screw, Anti-Tip Kit			
4		Cooktop		W11194809	Electrode			
	W10884167	Black			(Left Front, Left Rear, Right Front)			
	W10888303	White		W10515459	Electrode			
	W11182551	Biscuit			(Center)			
					(Right Rear)			
			13	8273062	Screw			
			14	W10298664	Spreader, Flame			


# CONTROL PANEL PARTS

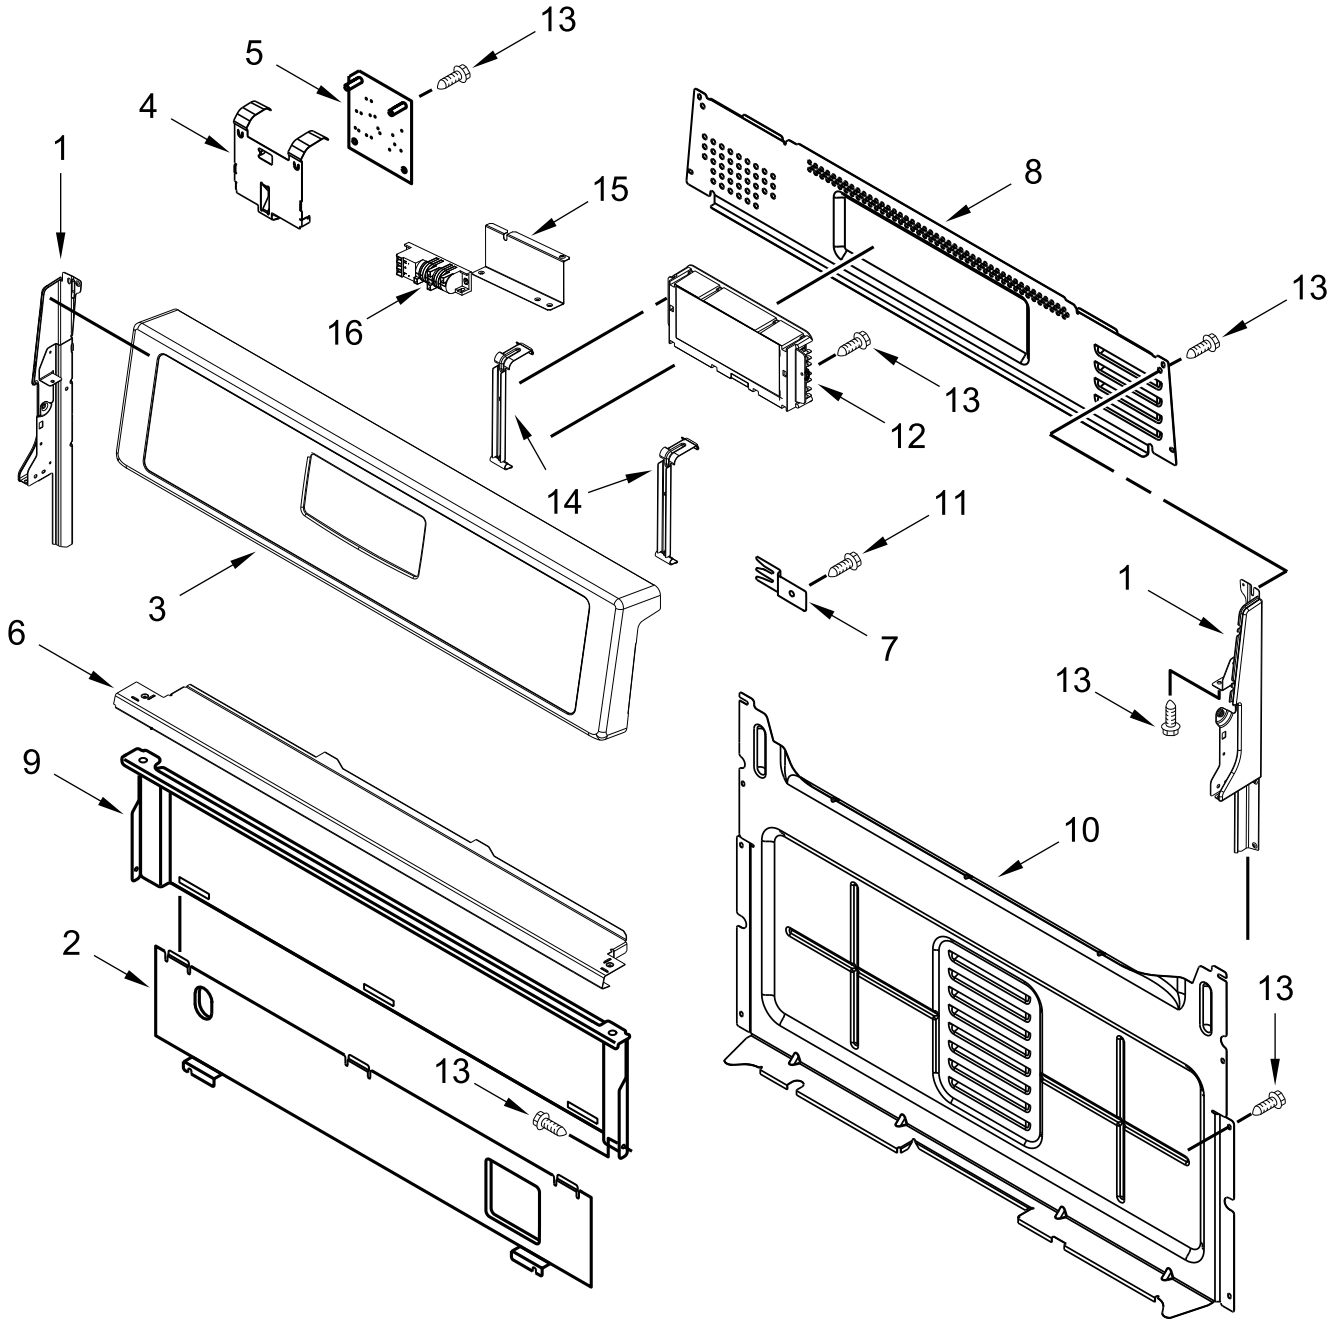

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10920631	Module, Spark DSI	12		Control, Electronic (LCX)
	W11130372	Black (Left)	6	W10516123	Bracket, Console Mounting		W11204525	Black
	W11130379	Black (Right)					W11204522	White
	W11130371	White (Left)	7	8523412	Bracket, Rear Cooktop		W11204523	Biscuit
	W11130378	White (Right)	8	W10198745	Cover, Upper	13	3196178	Screw
	W11130373	Biscuit (Left)	9	W10192841	Shield, Heat	14	W10695491	Bracket, Control
	W11130380	Biscuit (Right)	10	W10184370	Cover, Back	15	W10797001	Bracket, Ignitor
2	8053505	Shield, Heat	11	3196169	Screw	16	W10475149	Module, Spark (5+0)
3		Panel, Control						
	W10885611	Black						
	W10885610	White						
	W11027383	Biscuit						
4	W10762981	Bracket, Mounting						


# MANIFOLD PARTS

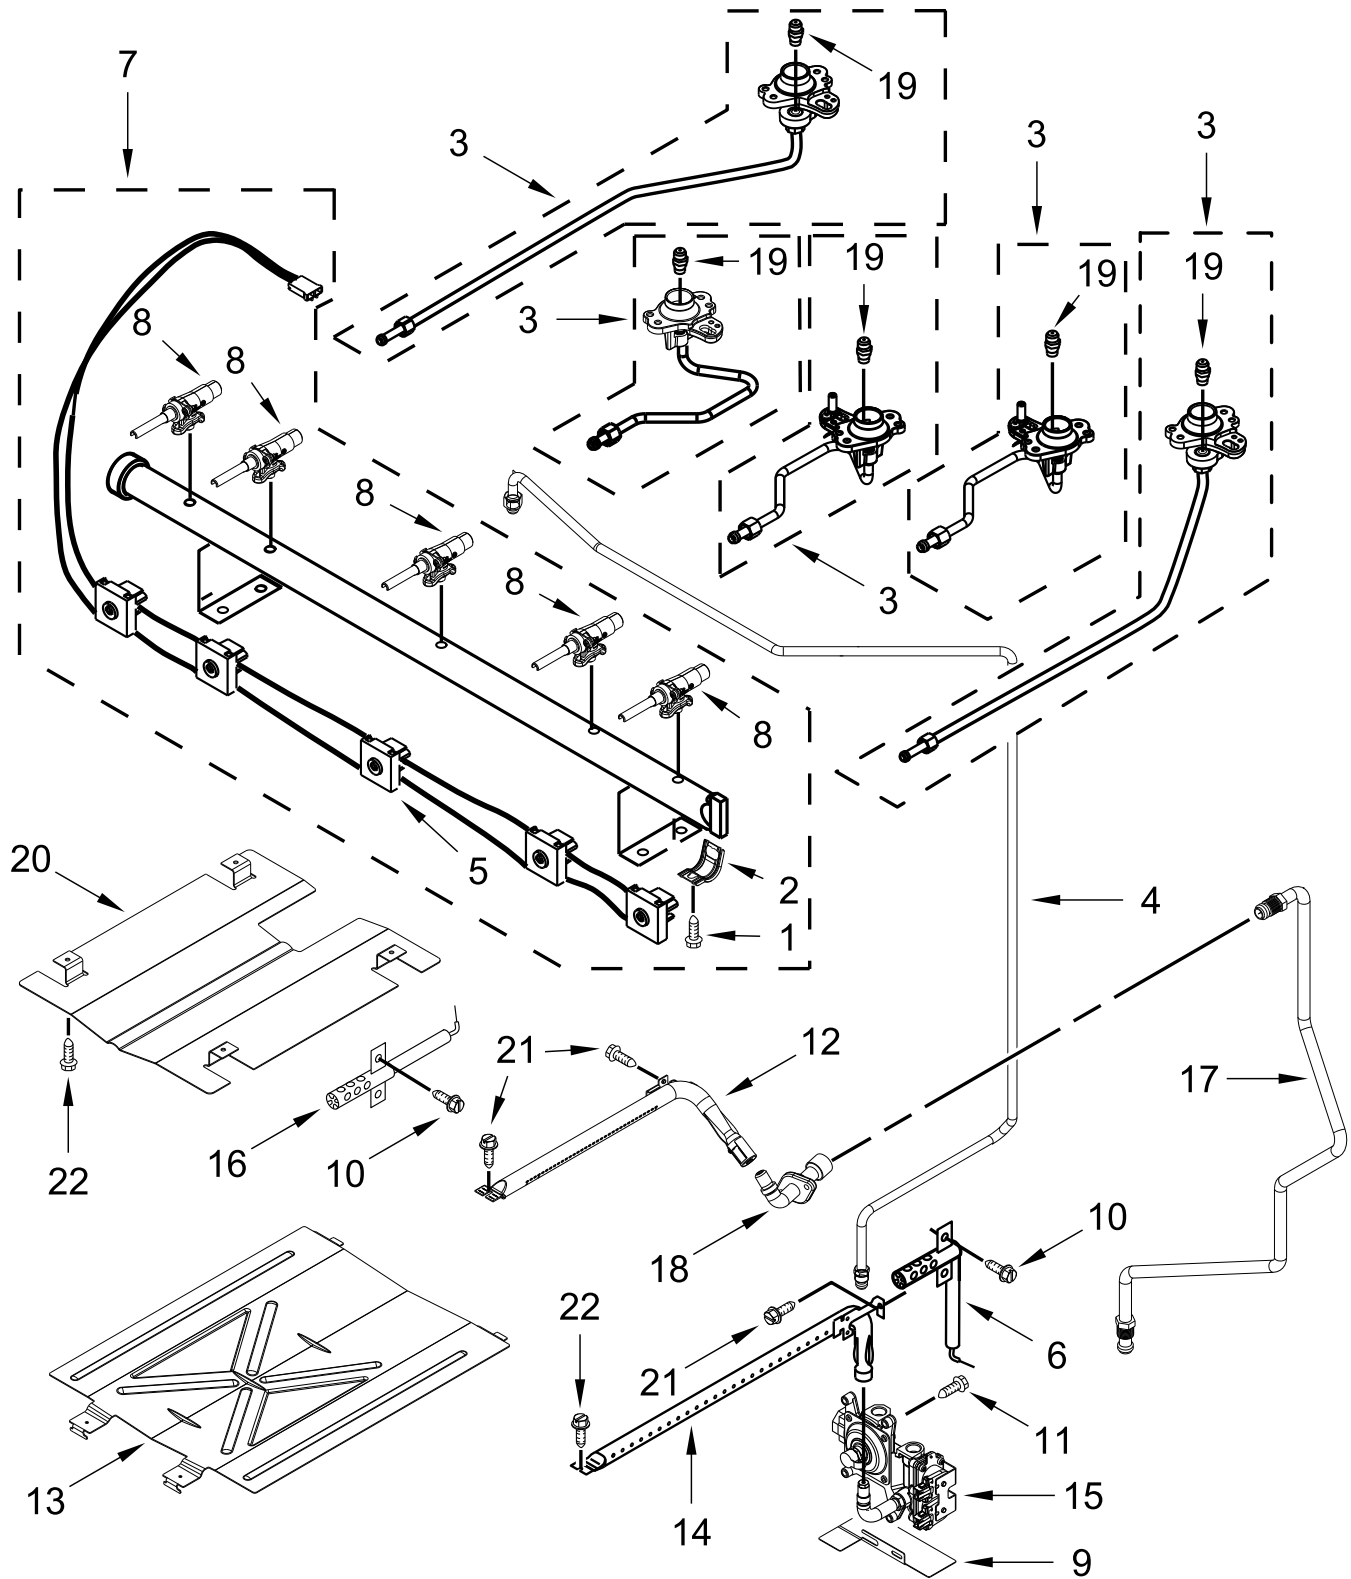

# MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	7	W10859728	Assembly, Manifold	19	W10347414	Orifice (15K) (Left Front & Right Front)
2	W10295996	Bracket, Saddle Valve	8	W10279615	Valve, Gas (Left Front & Right Front)		W10170508	Orifice, Natural (9.5K) (Left Rear)
3	W10473936	Assembly, Orifice Holder (15K) (Left Front)		W10279614	Valve, Gas (Left Rear)		W10170506	Orifice, Natural (5K) (Right Rear)
	W10473932	Assembly, Orifice Holder (9.5K) (Left Rear)		W10247744	Valve, Gas (Right Rear)		W10657947	Orifice (8K) (Center)
	W10474166	Assembly, Orifice Holder (15K) (Right Front)		W10850894	Valve, Gas (Center)	20	W10137062	Spreader, Flame (Broiler)
	W10474162	Assembly, Orifice Holder (5K) (Right Rear)	9	W10224921	Bracket, Aegis	21	3196265	Screw
	W10836764	Assembly, Orifice Holder (8K) (Center)	10	3196385	Screw	22	W10362924	Screw
4	W10215439	Tubing (Manifold to Regulator)	11	3400016	Screw			FOLLOWING PARTS NOT ILLUSTRATED
5	W10811691	Harness, Igniter (Includes Switches)	12	8054078	Burner, Broiler		W11087531	Kit, LP 5 Orifice Conversion
6	9758079	Electrode, Bake	13	W10184491	Spreader, Flame (Oven)		W10566537	Kit, LP Bake and Broil
			14	9758078	Burner, Bake		W10400495	Orifice, LP Bake
			15	W10602001	Regulator			
			16	W10333842	Electrode, Broil			
			17	W10420040	Tube, Broiler Supply			
			18	W10592836	Fitting, Broiler			


# CHASSIS PARTS

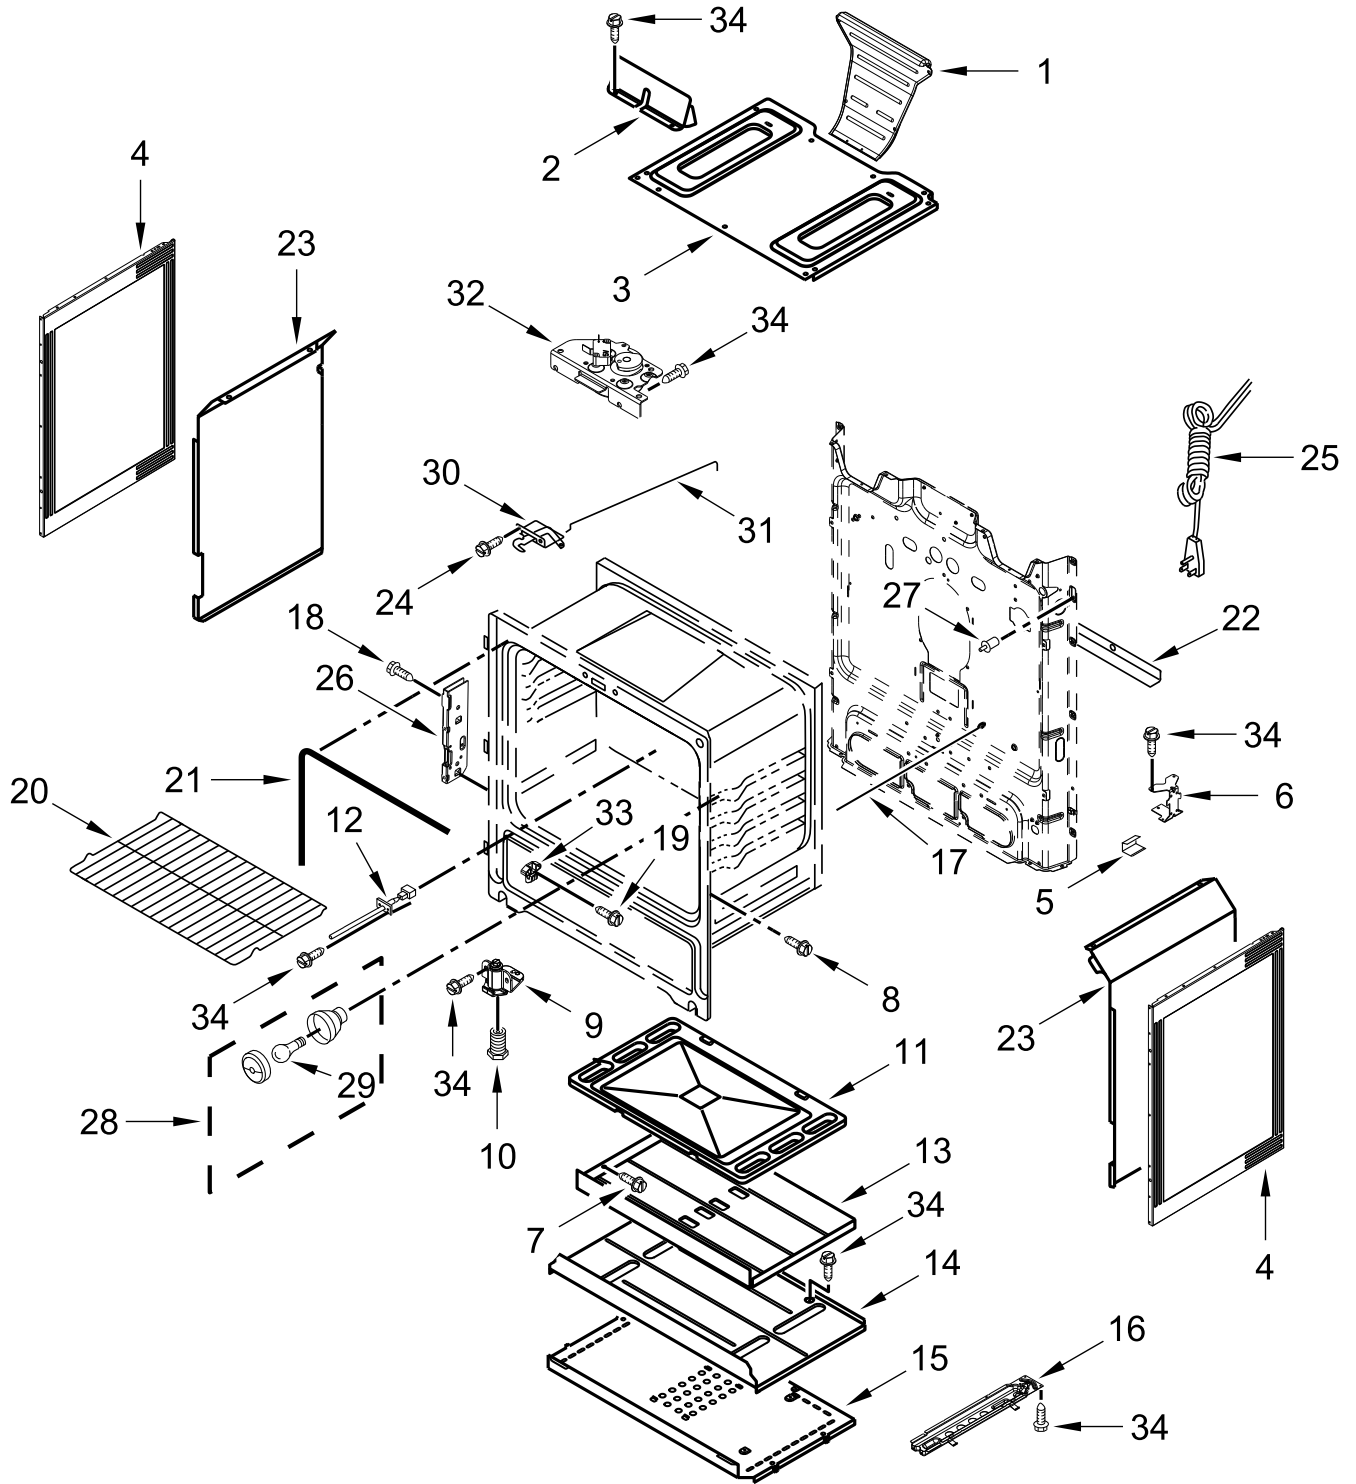

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10153186	Box, Flue	14	8053969	Shield, Heat	25	W10624590	Cord, Power
2	8272747	Shield, Flue	15	8053968	Shield, Lower	26	W10289077	Receiver, Hinge
3	8273036	Box-Burner, Gas Sealed	16	W10390008	Assembly, Base Rail (Left)	27	W10627802	Switch, Door
4		Panel, Side		W10390007	Assembly, Base Rail (Right)	28	W11175594	Assembly, Light
	W10162245	Black				29	W10571723	Bulb, Halogen 40 Watts
	W10575396	White	17	9757239	Rod, Door Switch	30	9761013	Assembly, Door Latch (Front)
	W10162246	Biscuit	18	W10031780	Screw	31	W10078370	Rod, Push Latch
5	W10137382	Clip, Panel	19	3400080	Screw	32	W10107820	Assembly, Door Latch (Rear)
6	8523249	Bracket, Manifold	20	W10268578	Rack, Oven	33	W10674705	Glide, Drawer Front
7	W10362924	Screw	21	W10658354	Seal, Door	34	3196178	Screw
8	3196560	Screw	22	W10435470	Brace, Main Back			FOLLOWING PARTS NOT ILLUSTRATED
9	W10341186	Assembly, Front Foot	23	9761449	Retainer, Insulation (Left)		8524099	Insulation, Wrap
10	W10058460	Foot, Leveling		9761448	Retainer, Insulation (Right)		W10180437	Insulation, Back
11	3195097	Bottom, Oven	24	3196560	Screw			
12	W10586204	Sensor						
13	8053967	Baffle, Burner Oven						


# DOOR PARTS

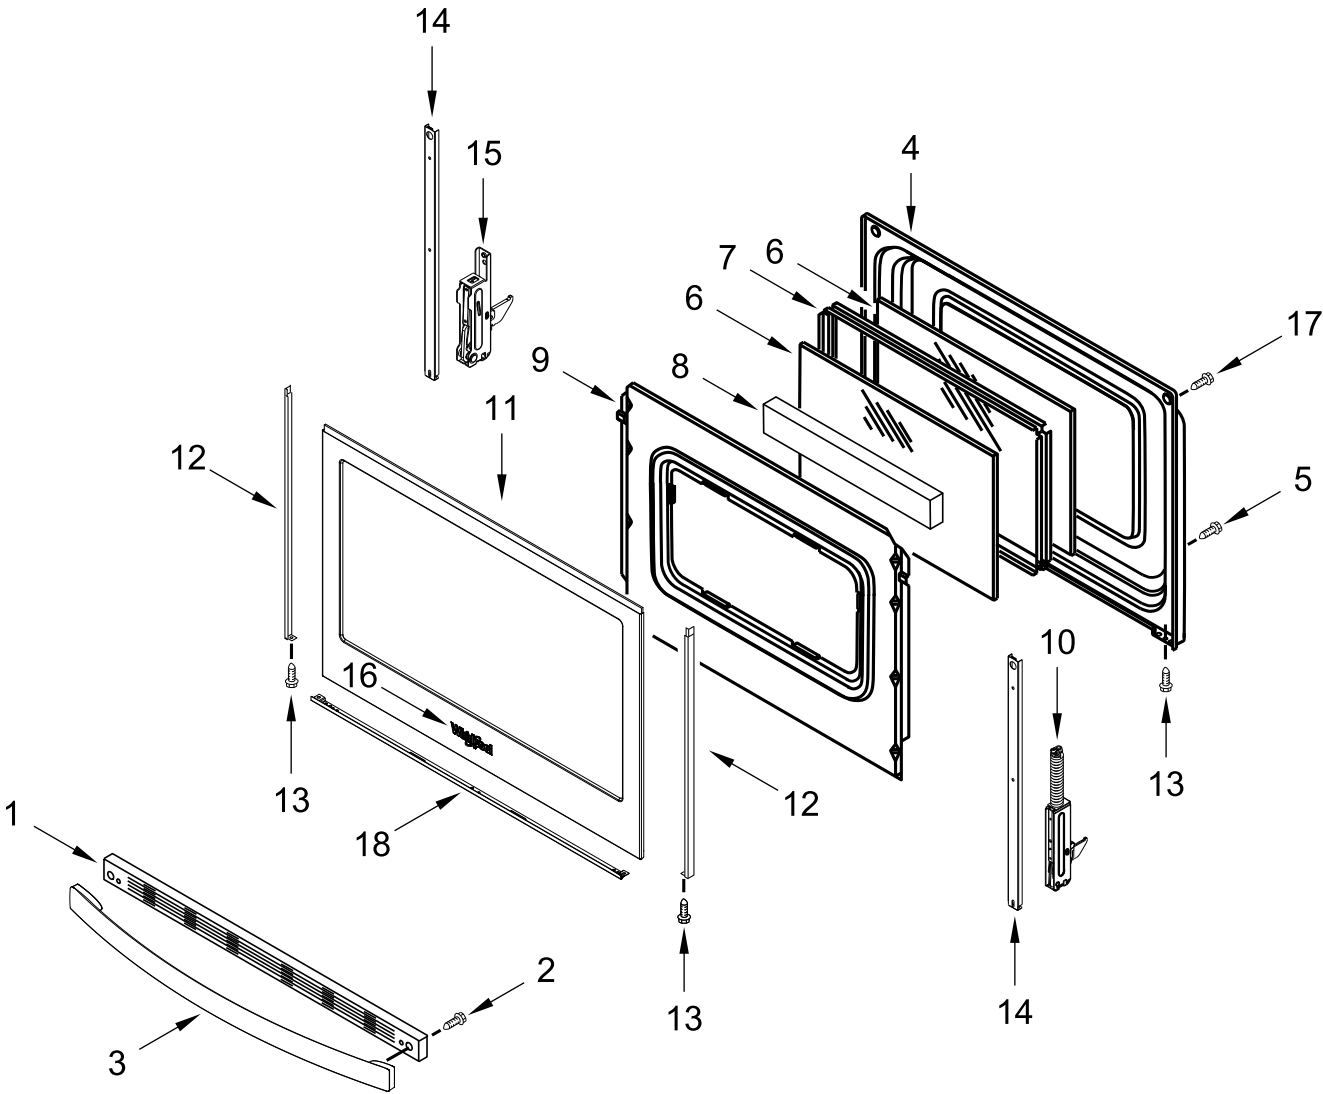

# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top	10	W10299226	Hinge, Active	17	W10200660	Screw
	W10310922	Black	11		Glass, Outer Door	18		Trim, Lower Door
	W10310920	White		W10884159	Black		8523177	Black
	W10310923	Biscuit		W10409945	White		8523175	White
2	W10480830	Screw		W10409947	Biscuit		8523178	Biscuit
3		Handle, Door (Includes Standoff)	12		Trim, Door			
	W11039068	Black		W10746436	Black (Left)			
	W11039067	White		W10746435	Black (Right)			
	W11039069	Biscuit		8523172	White (Left)			
4	9761344	Liner, Door		8523166	White (Right)			
5	W10031790	Screw		8523173	Biscuit (Left)			
6	W11044424	Glass, Inner		8523167	Biscuit (Right)			
7	W10316950	Frame, Glass	13	W10327235	Screw			
8	W10278991	Insulation, Door Strip	14	W10544179	Strap, Door			
9	9761357	Retainer, Insulation	15	W10299227	Hinge, Door (Passive)			
			16	W10884775	Nameplate			

# DRAWER PARTS

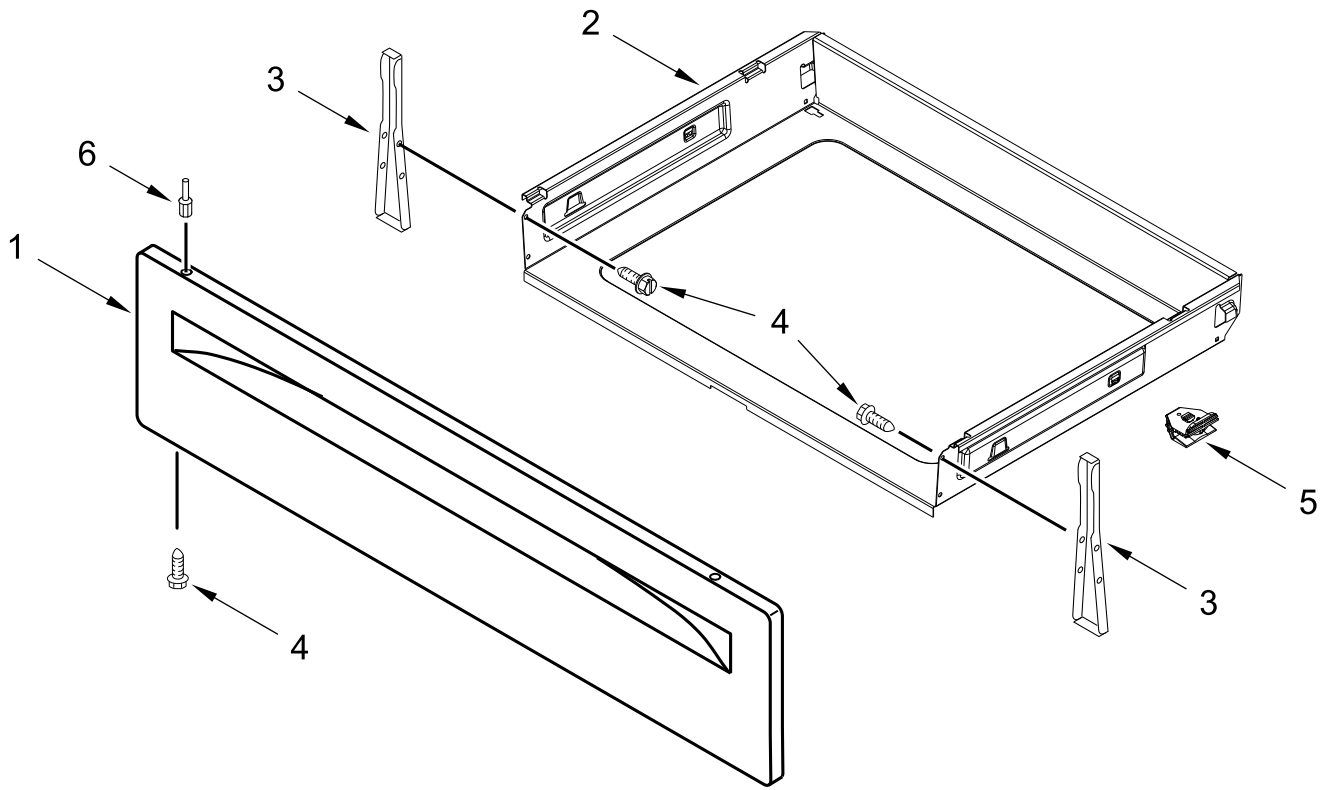

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462911	Bracket, Mounting	6		Rivet, Push
	W11123976	Black	4	3196169	Screw		3196813	Black
	W11123977	White	5	W10674708	Glide, Drawer Rear		3196814	White
	W11123978	Biscuit						
2	W10688022	Drawer, Storage						

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	4396927	Rack, Oven (Split)