




30" GAS SLIDE-IN SELF-CLEAN RANGE

MODELS:

WEG515S0FV2 (Black Stainless)


COOKTOP PARTS

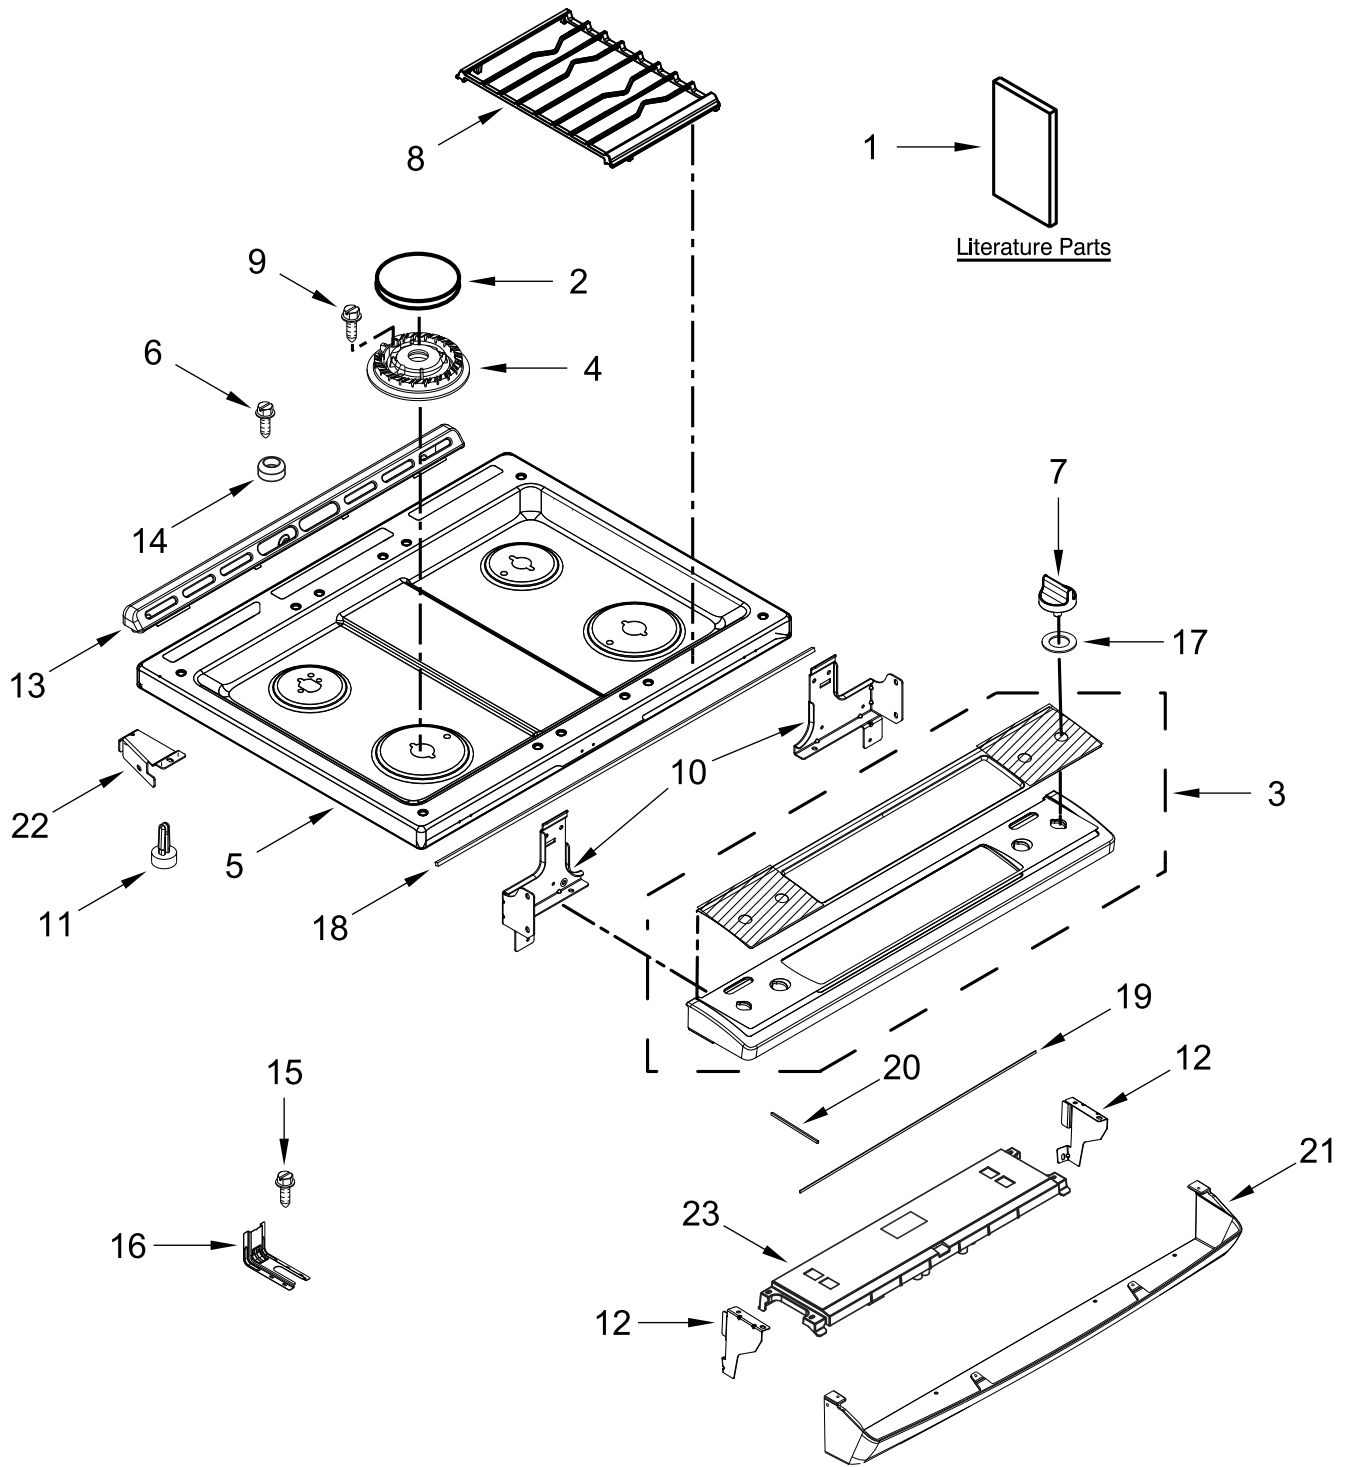

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Kit, Grate (Set of 2)	19	W10689101	Gasket, Console
	W11124015	Instructions, Installation		W10823483	Black	20	W10689102	Gasket, Console Short
	W11124019	Guide, Use and Care	9	3196173	Screw	21		Console, Lower Panel
	W10842031	Sheet, Tech	10	W10814303	Support, Cooktop (Left)		W10816943	Black
	W10850074	Diagram, Wiring		W10814304	Support, Cooktop (Right)	22	W10162253	Brace, Corner (Left)
2		Kit, Burner Cap (Set of 4)		W10814305	Bracket, Console (Center)		W10162252	Brace, Corner (Right)
	W10825883	Black				23	W11204499	Electronic, Control (LCX)
3		Console	11	8016P022-60	Glide, Main Top			FOLLOWING PARTS NOT ILLUSTRATED
	W10547076	Black	12	W10547960	Bracket, Console (Left)		W10800475	Harness, Main
4	W10732322	Spreader, Flame (Left Front & Right Front)		W10547961	Bracket, Console (Right)		W10800478	Harness, Bake/Broil
	W10732319	Spreader, Flame (Left Rear)	13		Trim, Vent		W10817974	Harness, Console
	W10732320	Spreader, Flame (Right Rear)		W10577781	Black		313438	Clip, Harness
5		Cooktop	14	W10854253	Bumper		3196520	Clip, Wire
	W10797930	Black	15	7101P485-60	Screw, Anti-Tip Kit		W10580229	Wire, Ground
6	3196169	Screw	16	W10606241	Bracket, Anti-Tip		7111P017-60	Clamp, Wire
7		Knob	17		Bushing			
	W10850031	Black		W10739036	Black			
			18	W10612719	Gasket, Console/ Cooktop			


MANIFOLD PARTS

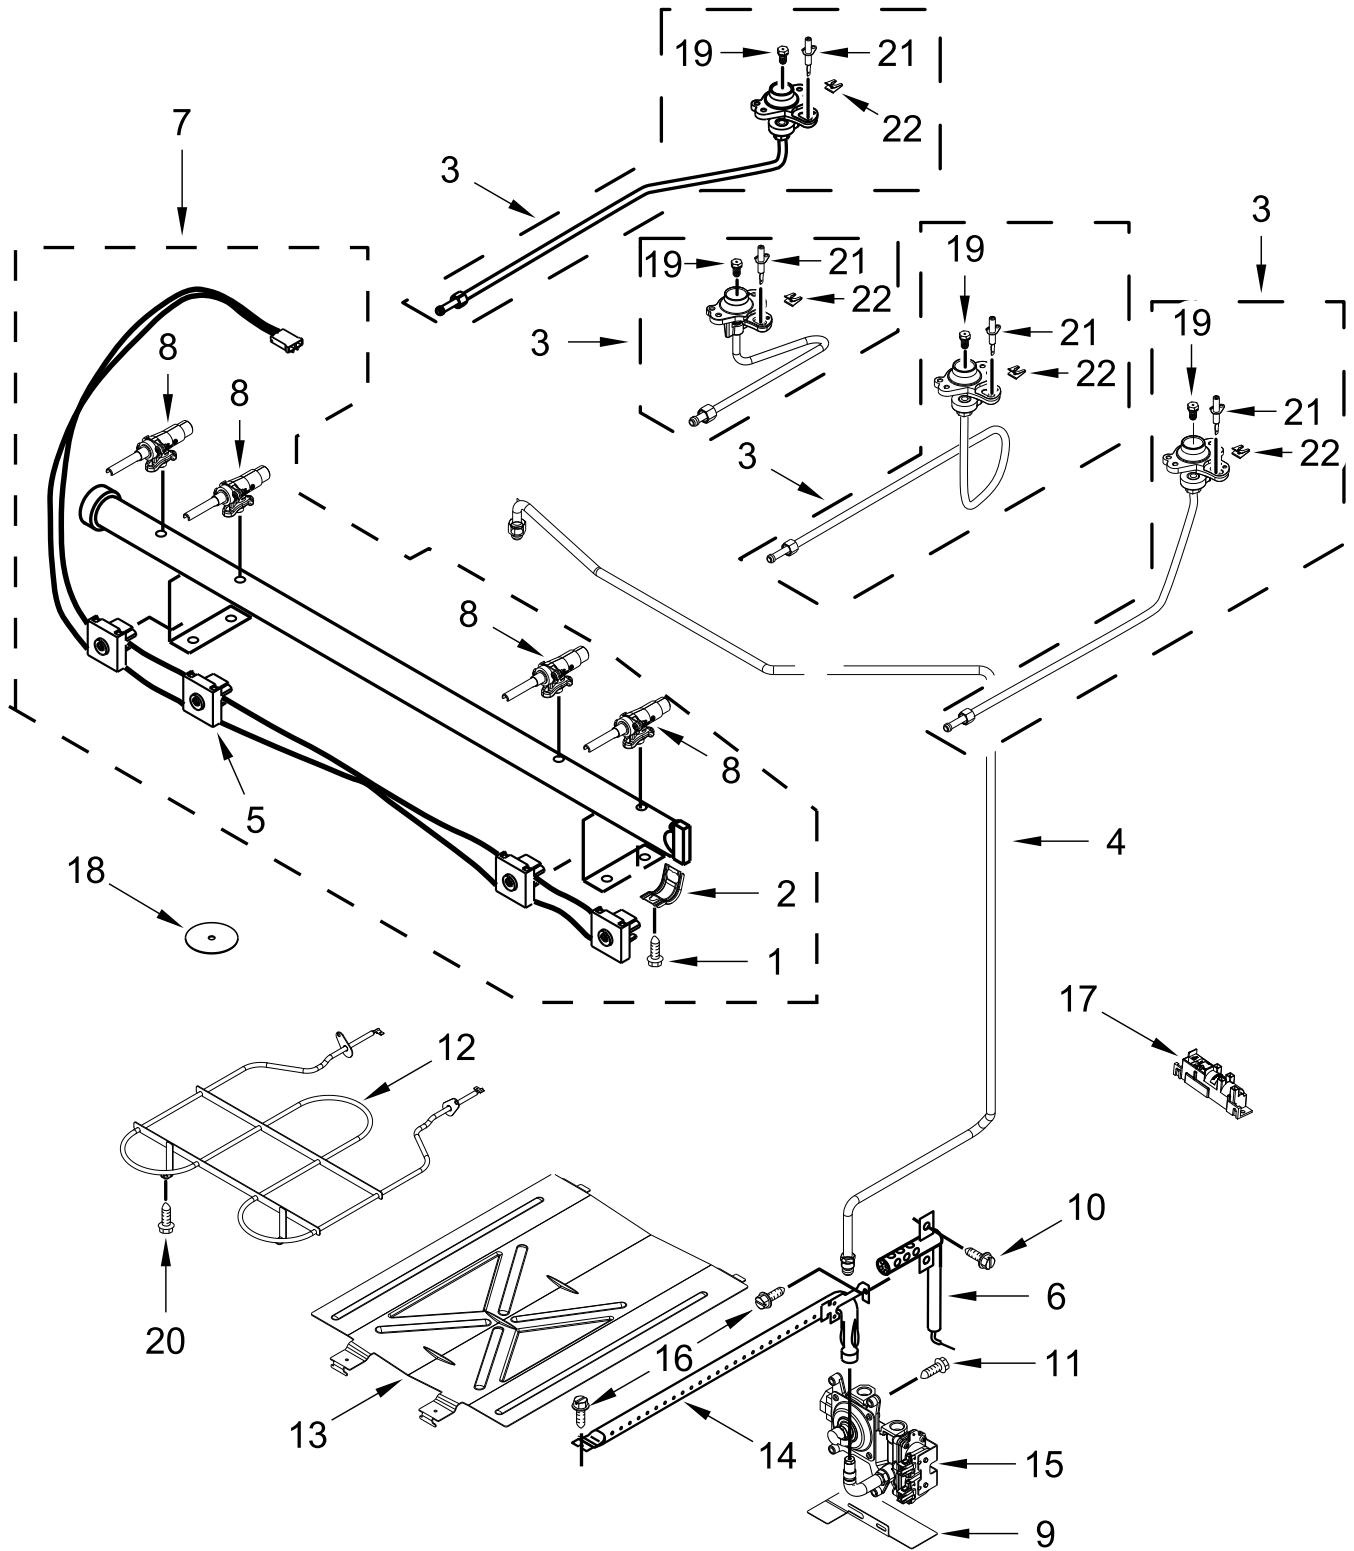

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246216	Screw	9	W10224921	Bracket, Aegis	21	W10669526	Electrode, Burner
2	W10295996	Bracket, Saddle Valve	10	3196385	Screw			(Left Front)
3	W10827780	Assembly, Orifice Holder (9.5K)	11	3400080	Screw	W10669525		Electrode, Burner
		(Left Rear)	12	W10714060	Element, Broiler			(Left Rear)
	W10827775	Assembly, Orifice Holder (15K)	13	W10184491	Spreader, Flame (Oven)	W10669524		Electrode, Burner
		(Left Front)	14	9758078	Burner, Bake			(Right Front)
	W10827777	Assembly, Orifice Holder (15K)	15	W10818355	Regulator	W10669523		Electrode, Burner
		(Right Front)	16	3196169	Screw			(Right Rear)
	W10827779	Assembly, Orifice Holder (5K)	17	W10110488	Module, Spark	22	W10827923	Spring, Electrode
		(Right Rear)	18	W10140571	Seal, Switch Shaft			FOLLOWING PARTS NOT ILLUSTRATED
	W10827779	Assembly, Orifice Holder (5K)	19	W10849717	Orifice	W10838118		Spuds, LP Gas
		(Right Rear)			(Left Front, Right Front)	W10838304		Orifice, LP Bake
4	W10804030	Tubing (Manifold to Regulator)		W10849714	Orifice	W10182767		Tie, Manifold Wire
					(Right Rear)			
5	W10834787	Harness, Switch		W10849719	Orifice			
6	9758079	Electrode, Bake			(Left Rear)			
7	W10902173	Assembly, Manifold	20	W10362924	Screw			
8	W10901556	Valve, Gas						
		(Left Rear)						
	W10901555	Valve, Gas						
		(Left Front & Right Front)						
	W10901554	Valve, Gas						
		(Right Rear)						


CHASSIS PARTS

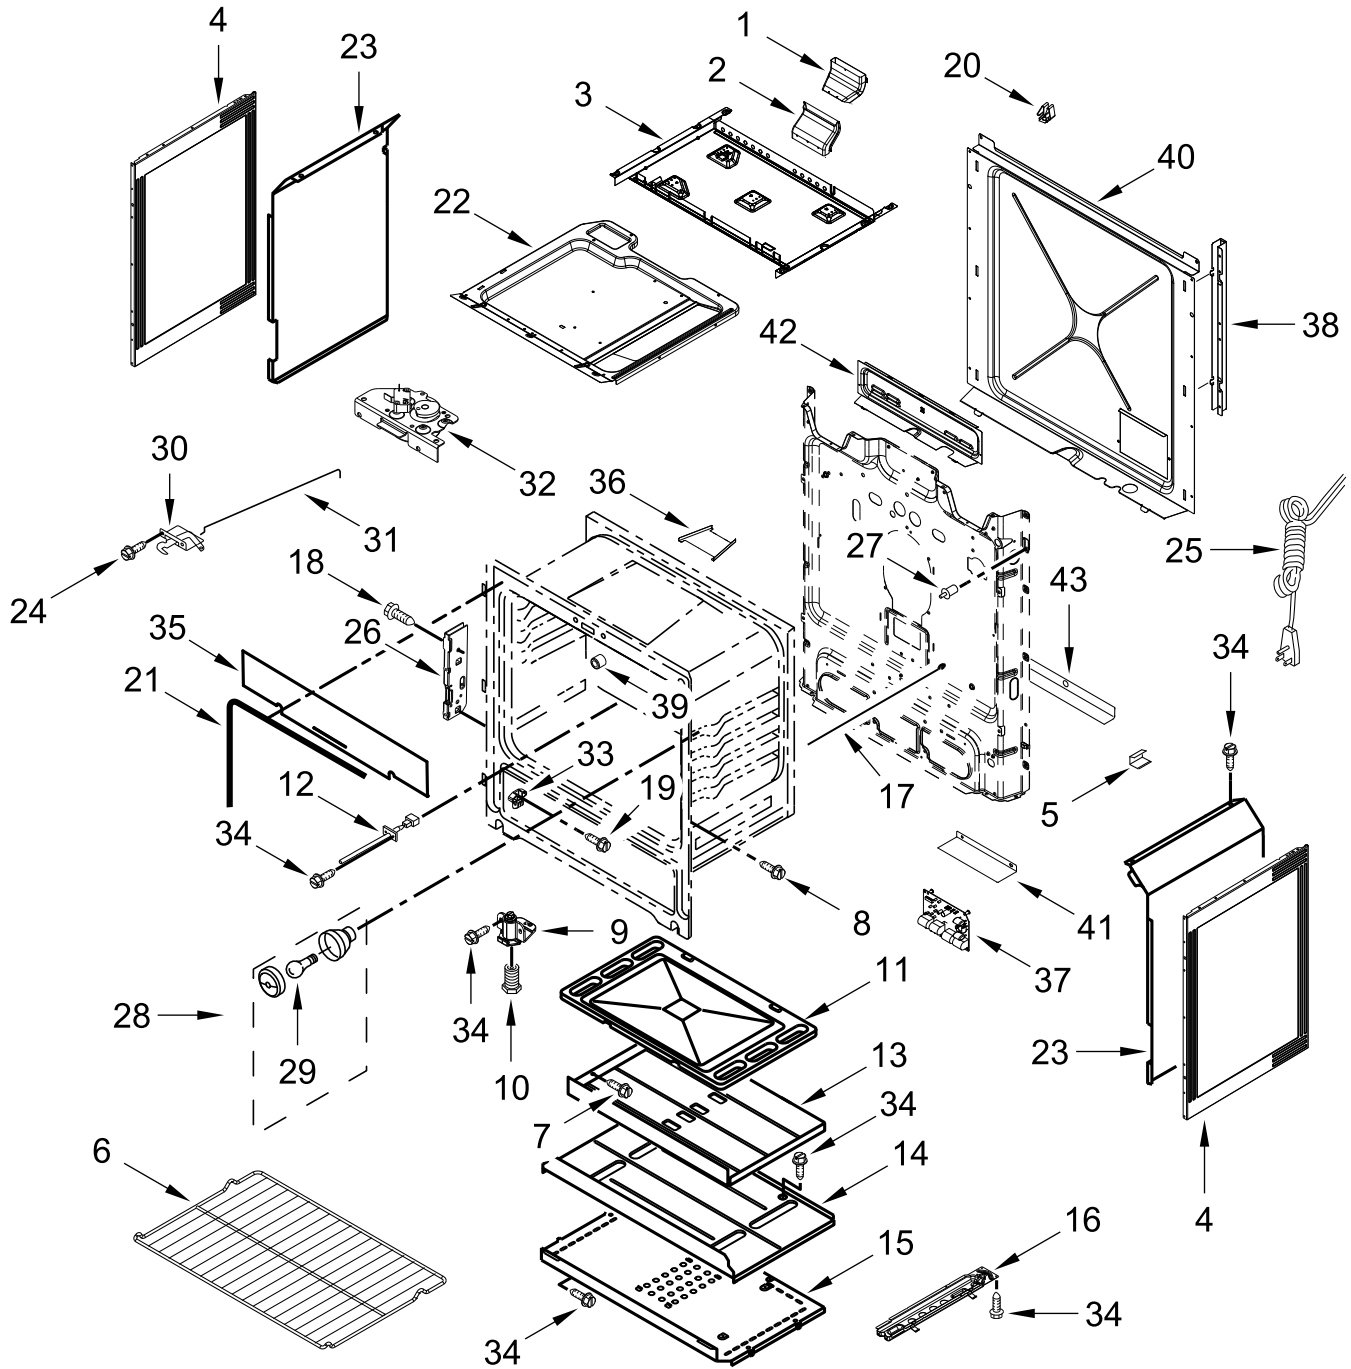

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10814257	Adapter, Flue Assembly	17	9757239	Rod, Door Switch	32	W10107820	Assembly, Door Latch (Rear)
2	W10614920	Assembly, Flue	18	W10031780	Screw	33	W10674705	Glide, Drawer Front
3	W10558276	Burner, Box Gas	19	W10379120	Screw	34	3196178	Screw
4		Panel, Side	20	W10866583	Clip-Panel, Ratcheting	35	W10848443	Chassis, Upper Insulation
	W10162245	Black	21	W10658354	Seal, Door	36	W10853400	Baffle, Upper Chassis
5	W10137382	Clip, Panel	22	W10814301	Chassis, Support Upper	37	W10818365	Module, Spark
6	W10268578	Rack, Oven	23	9761449	Retainer, Insulation (Left)	38	W10162241	Channel, Rear
7	3196169	Screw		9761448	Retainer, Insulation (Right)	39	9758701	Spacer, Door
8	W10067840	Screw	24	3196560	Screw	40	W10289172	Cover, Back
9	W10341186	Assembly, Front Foot	25	W10624590	Cord, Power	41	W11206138	Guard, Splash
10	W10058460	Foot, Leveling	26	W10289077	Receiver, Hinge	42	W10818356	Wire, Cover
11	3195097	Bottom, Oven	27	W10627802	Switch, Door	43	W10435470	Brace, Main Back
12	W10586204	Sensor	28	W10454648	Assembly, Light			FOLLOWING PARTS NOT ILLUSTRATED
13	8053967	Baffle, Burner Oven	29	7407P103-60	Bulb, Light	W10818362		Insulation, Wrap
14	8053969	Shield, Heat	30	9761013	Assembly, Door Latch (Front)	W10815344		Insulation, Back
15	8053968	Shield, Lower				3196896		Clip, Wire
16	W10390008	Assembly, Base Rail (Left)	31	W10078370	Rod, Push Latch			
	W10390007	Assembly, Base Rail (Right)						

DOOR PARTS

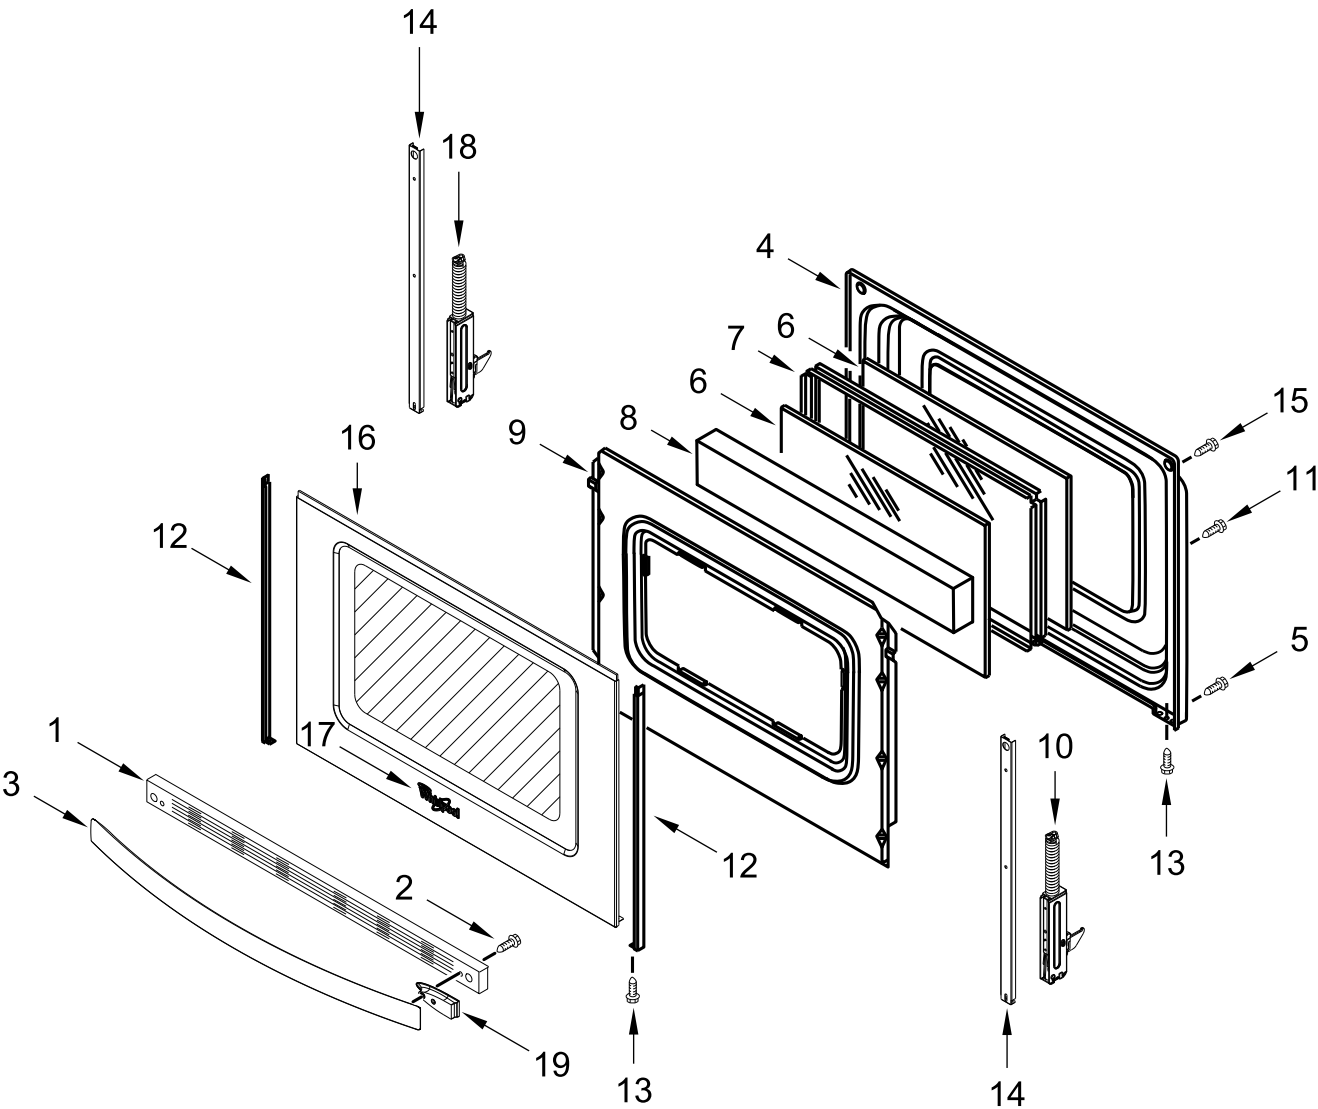


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10480830	Screw
3		Handle, Door
	W10903342	Black Stainless
4	9761344	Liner, Door
5	W10031780	Screw
6	9758162	Glass, Inner
7	W10316950	Frame, Glass

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10278991	Insulation, Door Strip
9	9761357	Retainer, Insulation
10	W10388635	Hinge, Door (Active)
11	W10031790	Screw
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
13	W10327235	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10544179	Strap, Door
15	W10200660	Screw
16		Assembly, Door Glass
	W11169660	Black Stainless
17	W10884775	Nameplate
18	W10440013	Hinge, Door (Active)
19		Standoff, Handle
	W11037027	Black

DRAWER PARTS

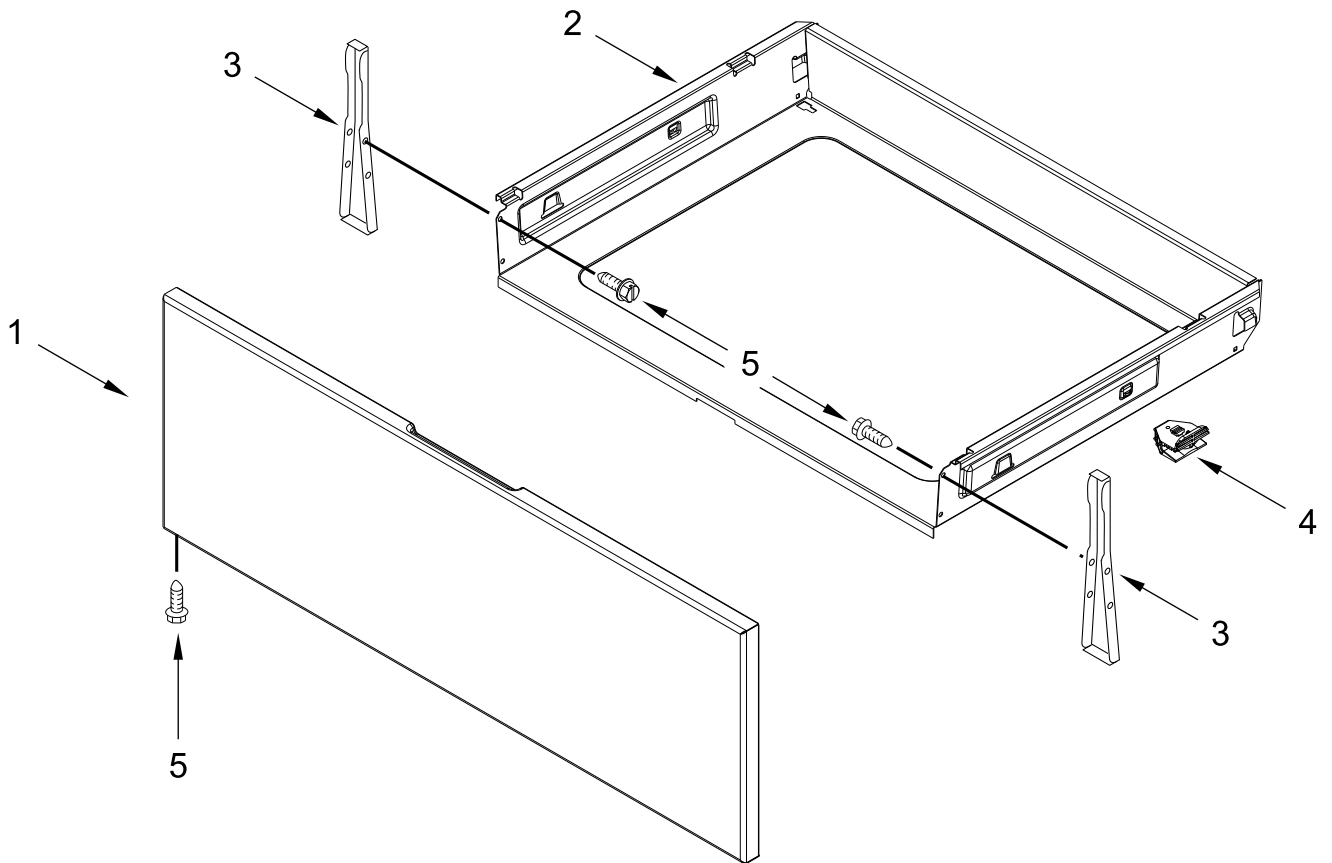

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W11045574	Black Stainless	3	W10462909	Bracket, Mounting	5	3196178	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10268578	Rack, Oven
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting