


KitchenAid®

27" BUILT-IN MICROWAVE




MODELS:

KMBP107EBS03 (Black Stainless)

OVEN PARTS

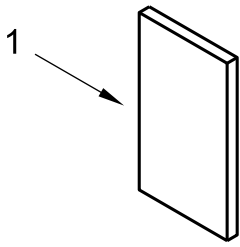


Literature Parts

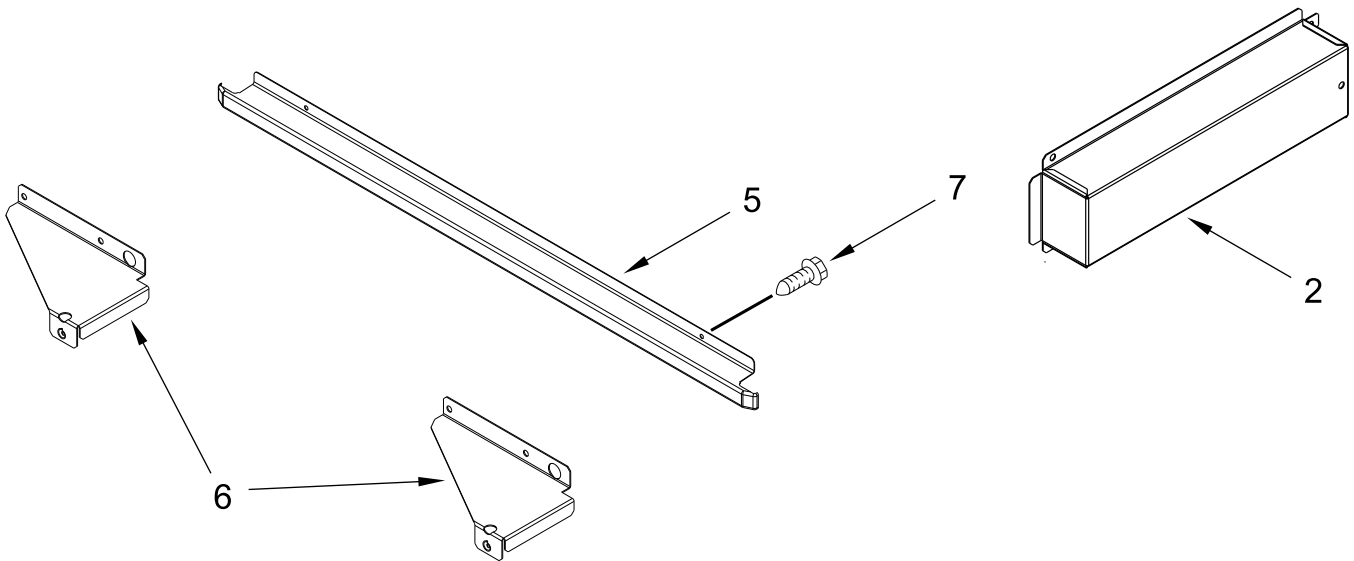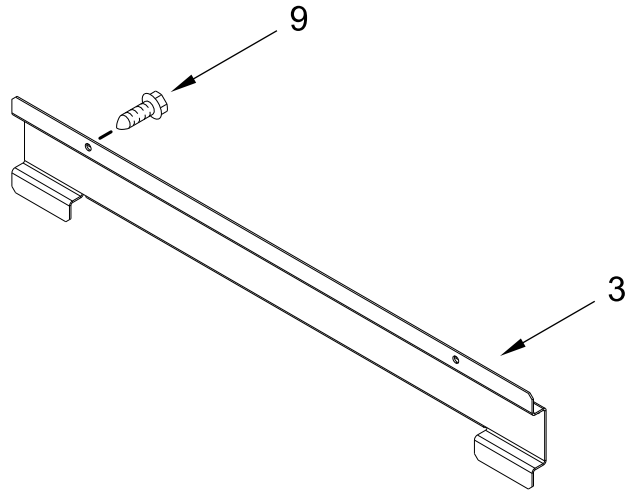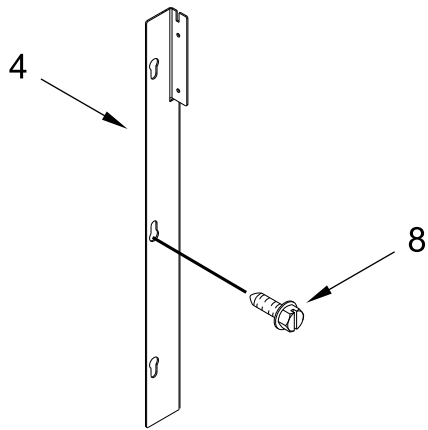

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P653-60	Screw	9	7101P426-60	Screw
	W10888963	Instructions, Installation						FOLLOWING PARTS NOT ILLUSTRATED
	W10643473	Guide, Use & Care (Microwave Oven)					W11356969	Harness, Interlock
	W10756613	Sheet, Tech					W11356954	Harness, Fan and Turntable
2	W10239155	Box, Conduit					W11356968	Harness, Inverter
3	W10420960	Support, Microwave Module					W11356977	Harness, Cable Tree Assembly
4	W10416256	Rail, Side (Left)					W11356986	Harness, Communication
	W10416255	Rail, Side (Right)					W11356987	Jumper Harness, Communication
5		Trim, Bottom					4450800	Screw, Grounding
	W10767440	Black					W10392129	Strap, Ground
6	W10239158	Bracket, Lower (Left)					W11356992	Conduit
	W10239159	Bracket, Lower (Right)					W10513362	Bag, Hardware
7	3400832	Screw (Black)						


CONTROL PANEL PARTS

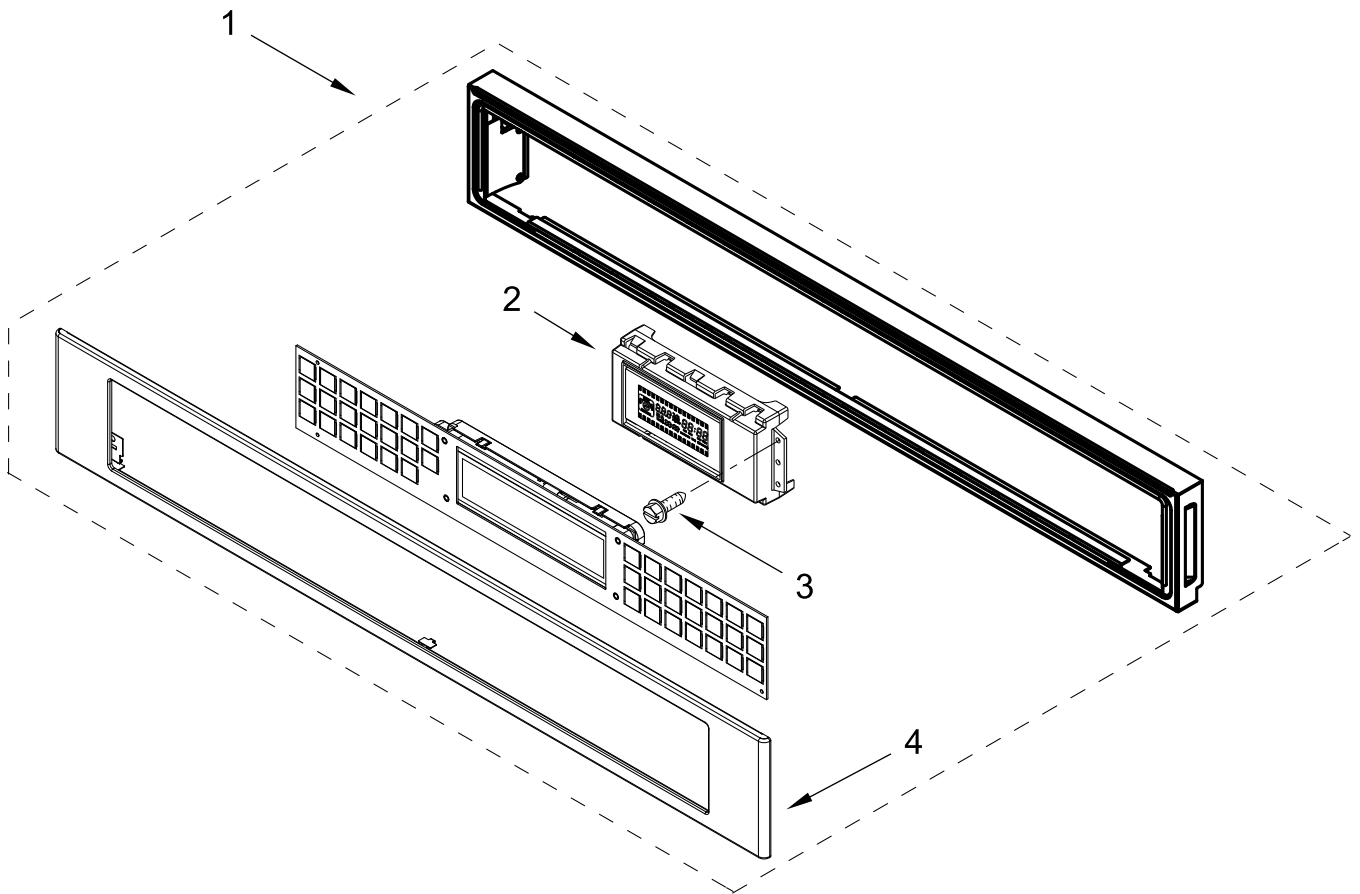

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Control Panel	2	W10624968	Interface, User	4		Skin, Control Panel
			3	3400832	Screw (Black)		W10861075	Black Stainless
	W10877121	Black Stainless						


MICROWAVE DOOR PARTS

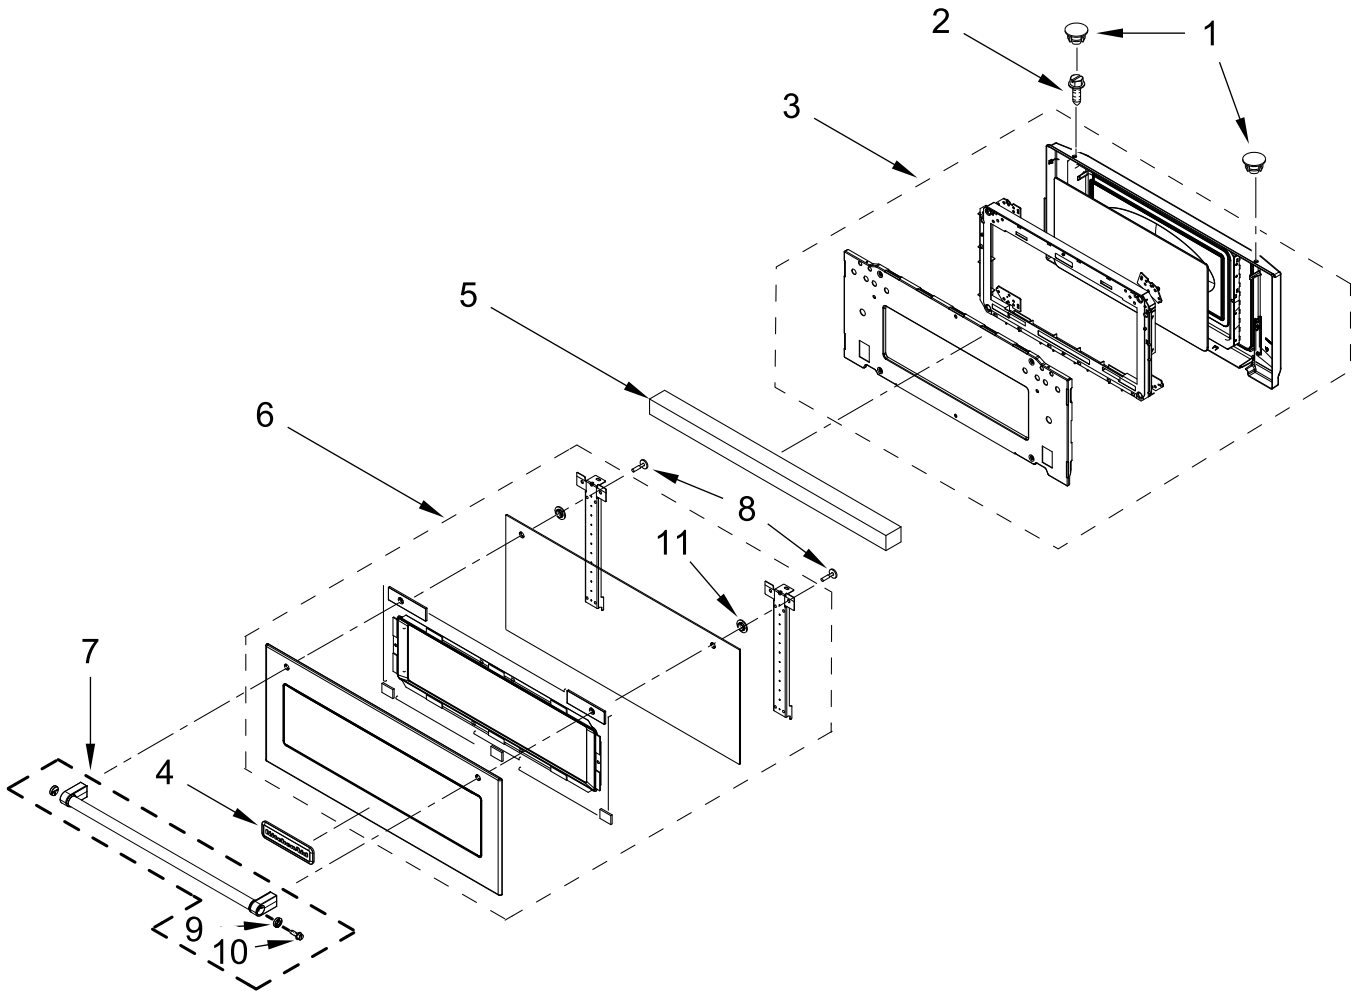

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6		Assembly, Outer Door	8	W10480830	Screw
2	7101P338-60	Screw		W10878438	Black Stainless	9	W10551026	Medallion, Handle
3	W10737653	Assembly, Inner Door	7		Assembly, Door Handle	10	W10656499	Screw
4	W10518672	Badge		W10640874	Stainless	11	W10319024	Washer, Door
5	W10359769	Foam, Door Handle						


CABINET AND STIRRER PARTS

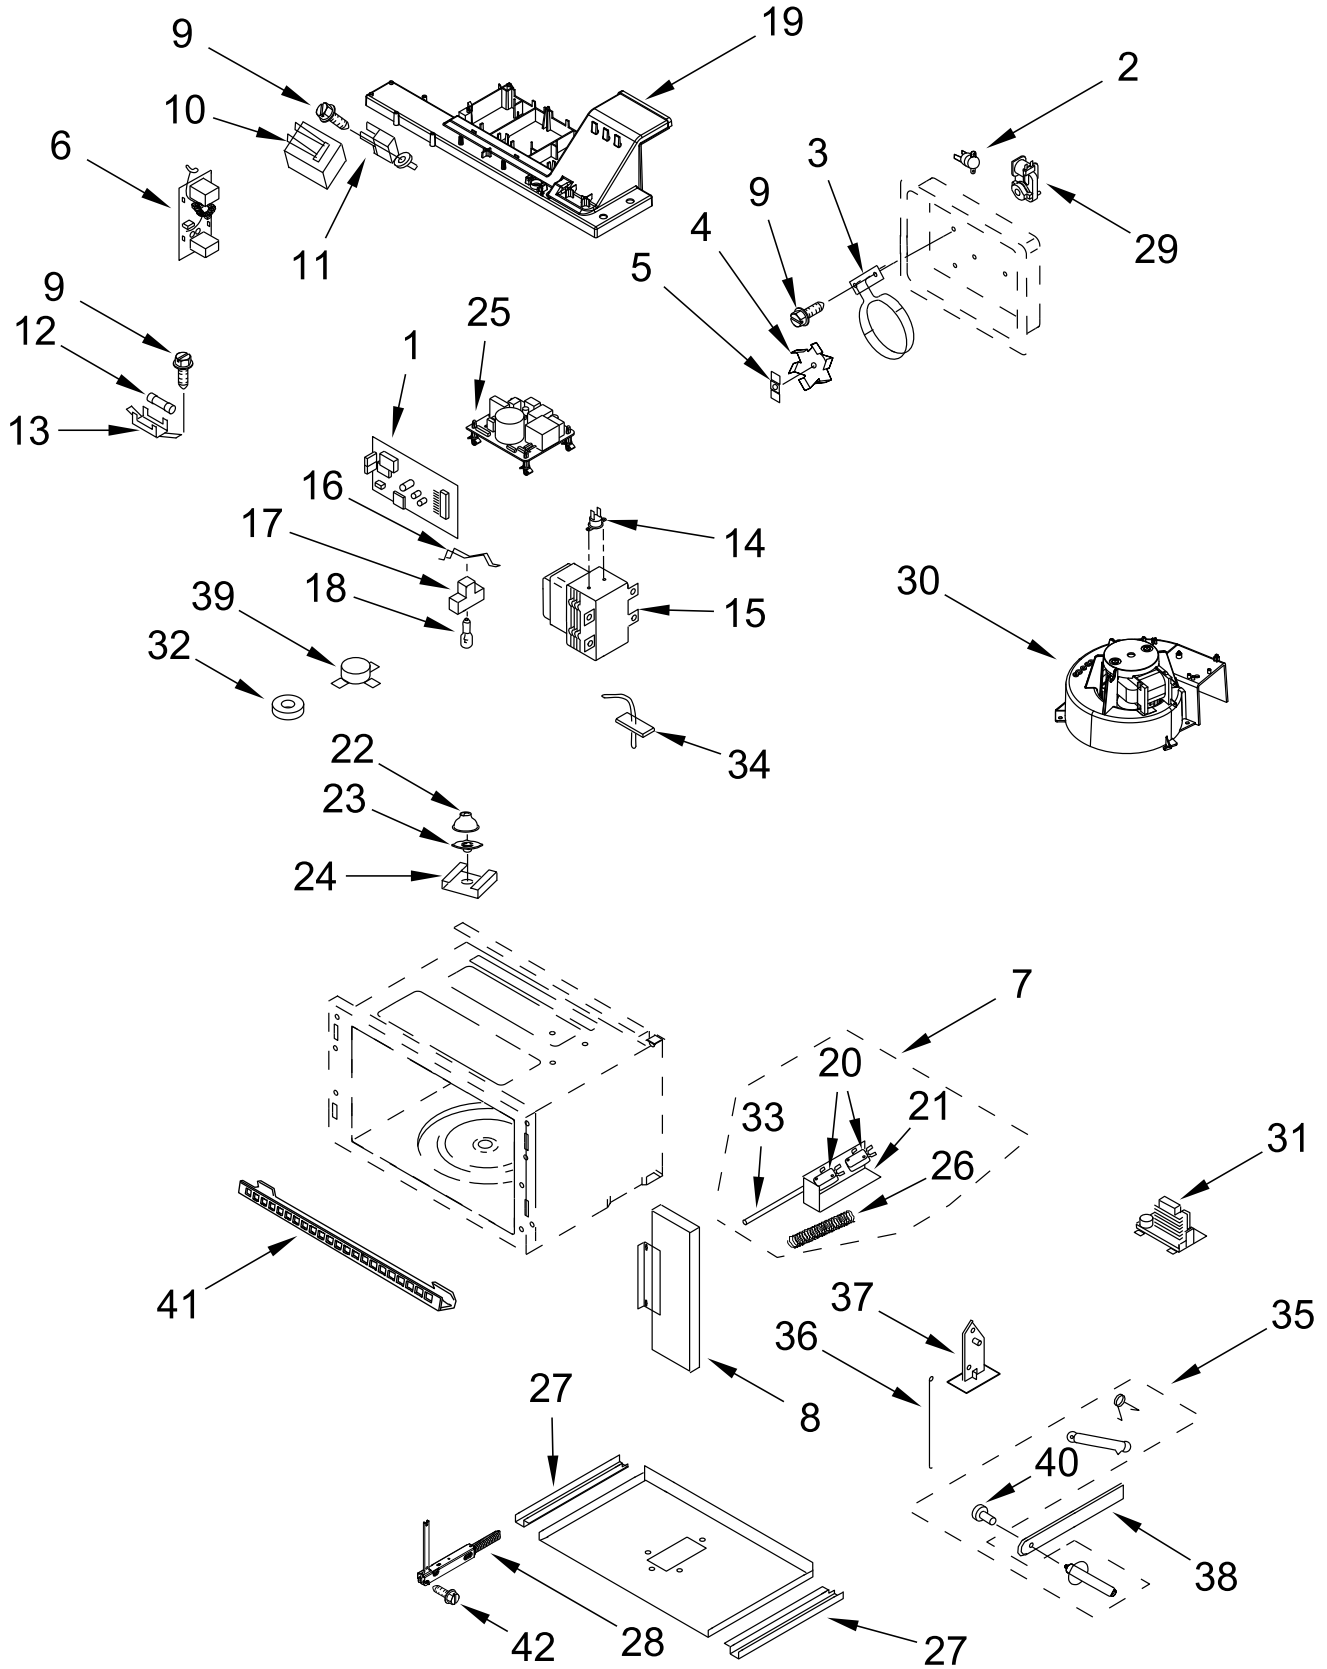

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11289998	Manager, Appliance	13	4375231	Block, Fuse	29	461967848251	Motor, Convection Fan
2	423107845441	Sensor, Convection	14	461967846741	Thermostat, Magnetron	30	W11131760	Assembly, Cooling Fan
3	461967848711	Heater, Convection Element	15	W11226473	Magnetron	31	W11237240	Inverter
4	461967001792	Fan, Convection	16	W10465869	Spring, Lamp	32	W10769147	Sealing, Lamp
5	W10120233	Nut, Speed	17	W10490593	Holder, Lamp	33	461967750464	Rod, Push
6	W10692851	Filter, Noise	18	W10795595	Lamp, Halogen	34	241960100002	Sensor, Temperature
7	W10358241	Assembly, Interlock Switch	19	461967754821	Duct, Magnetron	35	W10128850	Assembly, Sliding Arm
8	461967017511	Trim, Side (Left)	20	461967848881	Switch	36	461967570351	Spring, Torsion
	W11044584	Trim, Side (Right)	21	W10876593	Holder, Switch	37	461967750494	Support
9	461967825321	Screw	22	423107022541	Reflector	38	461967750483	Arm, Sliding
10	461967848621	Transformer, Light (20V)	23	423107720491	Lens, Lamp	39	W10460457	Sensor, Humidity
11	461967842541	Thermoactuator	24	461967010591	Clip, Spring	40	461967510191	Bushing
12	241908600053	Fuse	25	W10260060	Board, Power Supply	41	461968973251	Vent, Top
			26	423107570871	Spring, Release Rod	42	461967825781	Screw (Shoulder)
			27	461967008461	Support, Bottom			
			28	461968979601	Hinge, Door			

INTERNAL MICROWAVE PARTS

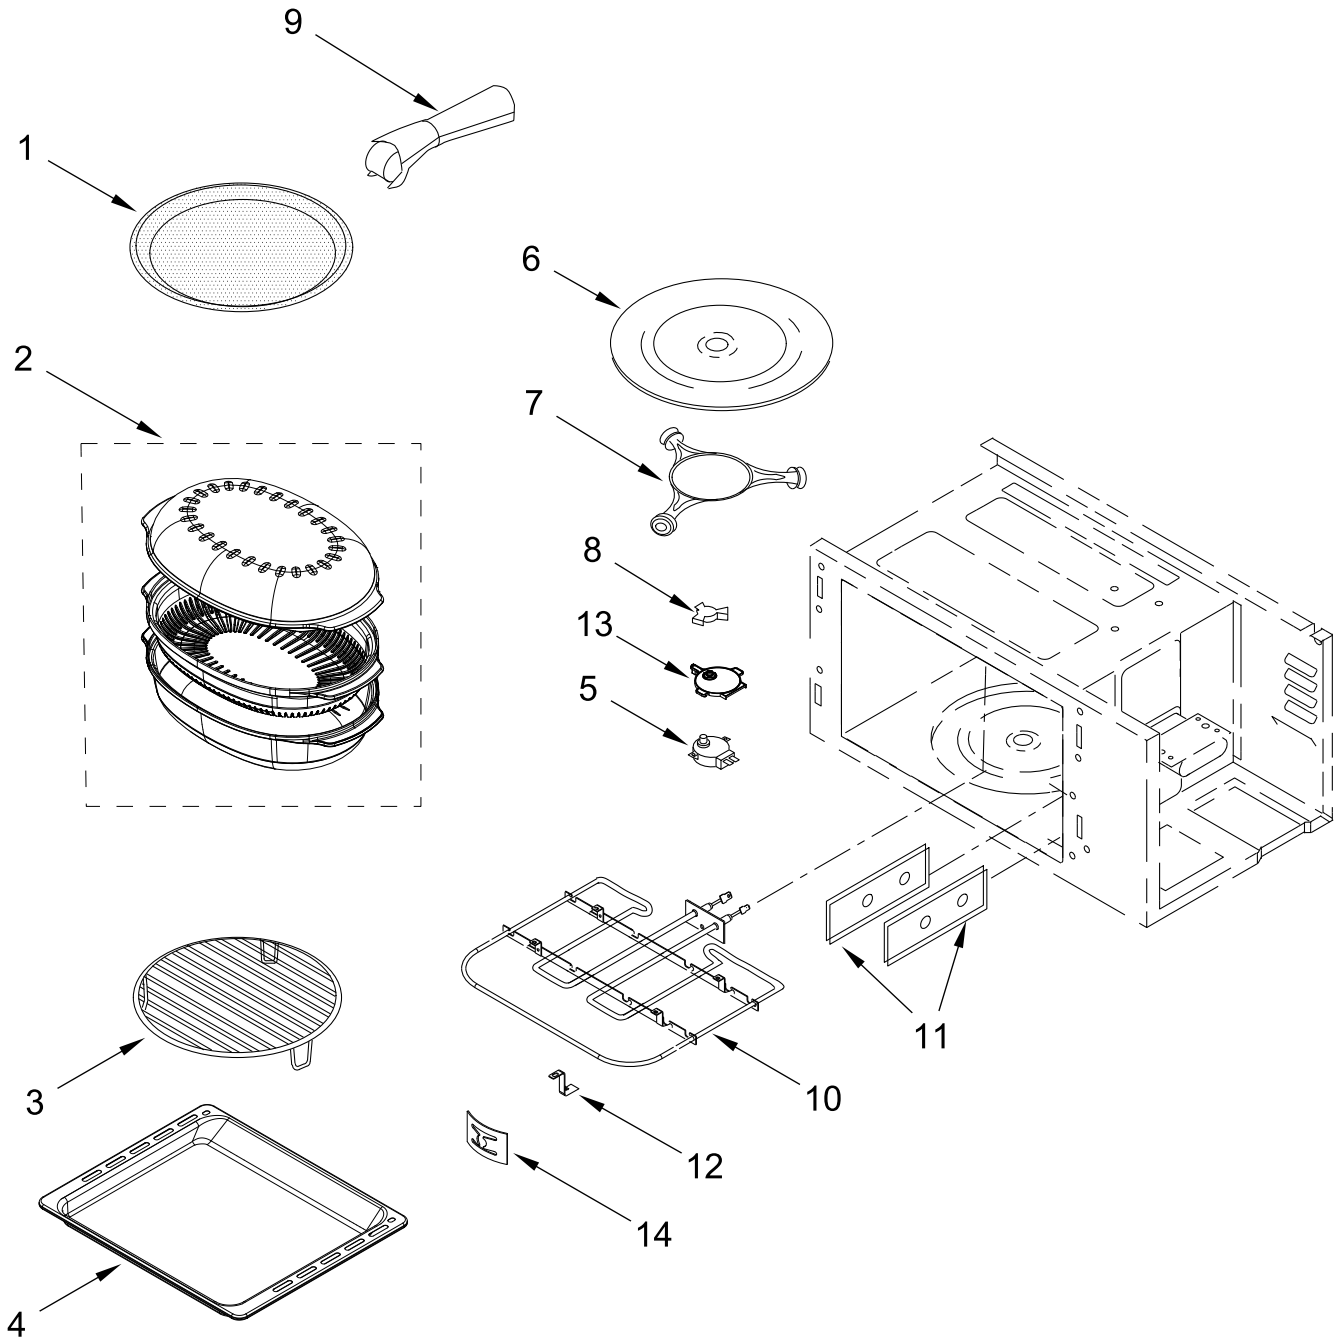

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp	7	W10367316	Ring, Turntable	13	461967753742	Adapter, Turntable Motor
2	W10796139	Steamer	8	W10545578	Drive, Turntable	14	252262898008	Support, Spring Lock Grill
3	W10748279	Rack, Low Convection	9	461968929542	Handle, Pan			
4	W10750839	Plate, Baking	10	W10387651	Element, Grill			
5	461967848971	Motor, Turntable	11	461967451001	Plate, Cover			
6	461967721091	Turntable	12	461967753871	Support, Element			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	261869	Cord Brown
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic