


KitchenAid®

30" 4 BURNER GAS COMMERCIAL COOKTOP

MODELS:

KCGC500JSS00 (Stainless)

BURNER BOX PARTS

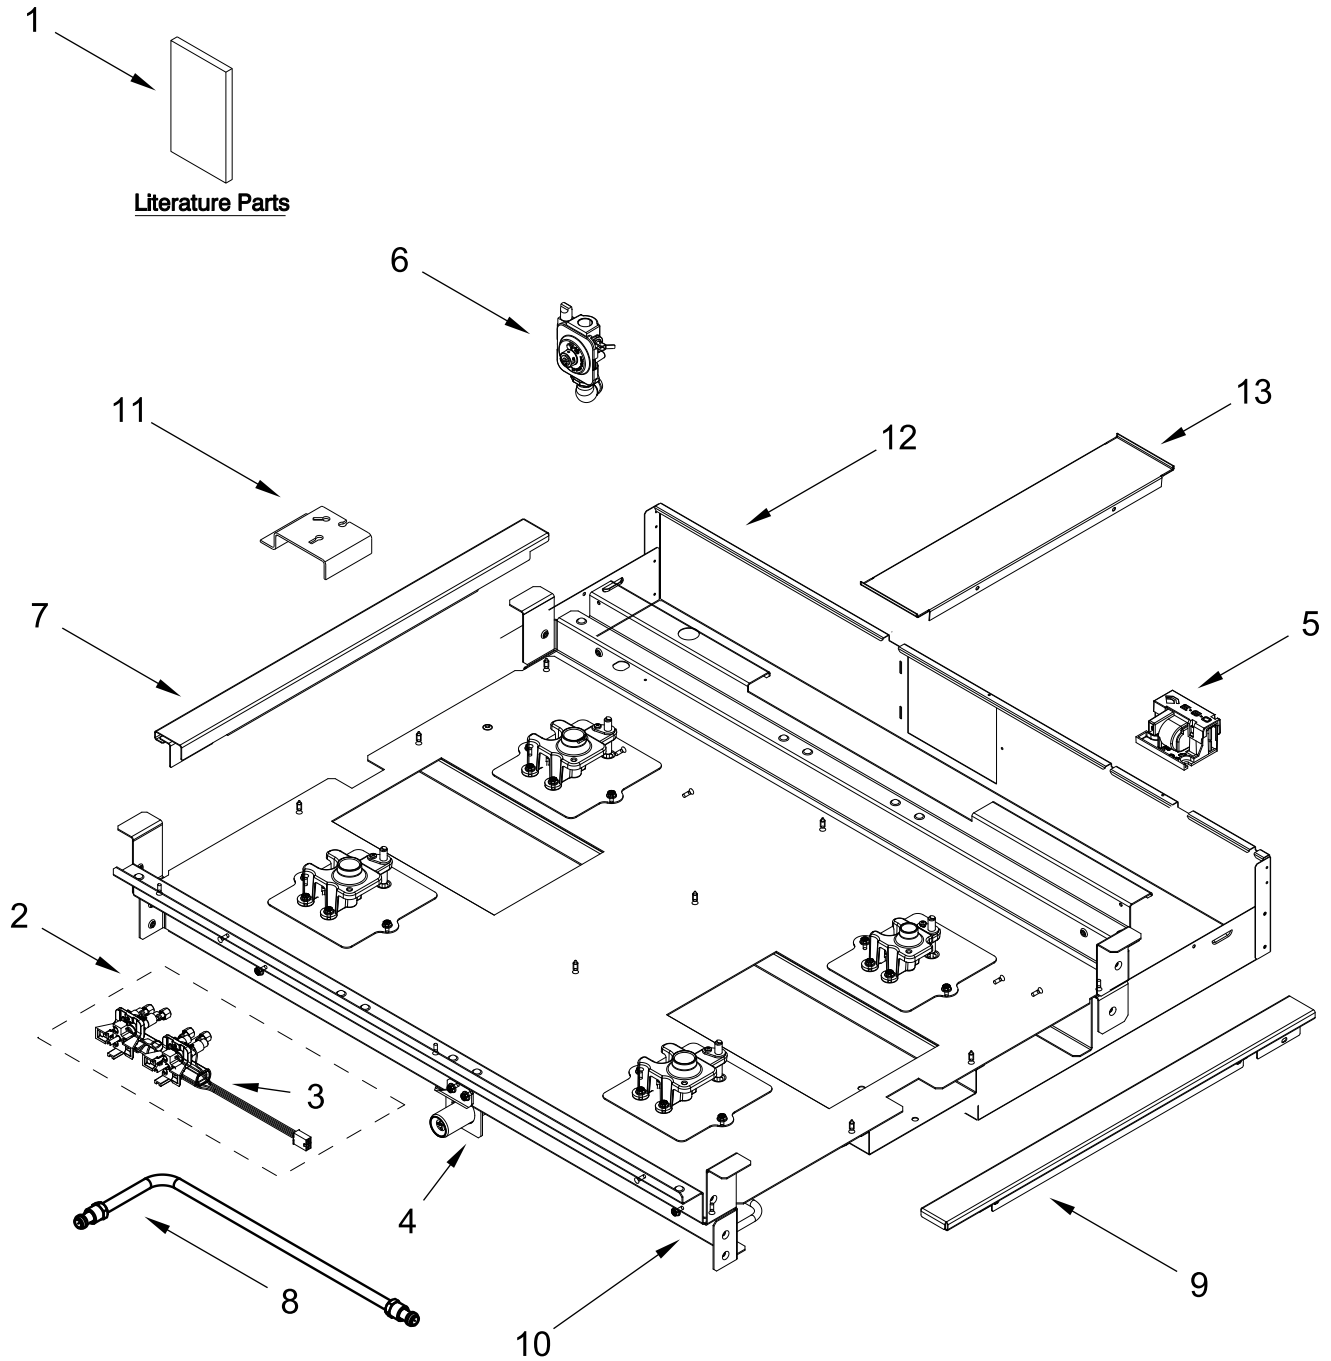

BURNER BOX PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	12		Box, Burner (Not Serviced)
	W11179810	Guide, Use & Care	4	W11121199	Bracket, Manifold	13	W11121361	Filler, Cooktop
	W11179813	Instructions, Installation	5	W11121317	Module, Spark			FOLLOWING PARTS NOT ILLUSTRATED
	W11202391	Diagram, Wiring (Cooktop)	6	W10449140	Regulator, Pressure			
	W11202295	Sheet, Tech	7	W11047750	Main Trim, Left		W11200328	Harness, Cooktop
2	W10892994	Assembly, Valve Manifold	8	W10892070	Tube, Manifold Supply (Left)		W11038934	Harness, Jumper
		(Left Front and Left Rear)		W10892072	Tube, Manifold Supply (Right)		W10624584	Cord, Power
	W10892997	Assembly, Valve Manifold	9	W11047752	Main Trim, Right		W11238042	Kit, LP Conversion
		(Right Front and Right Rear)	10		Assembly, Burner Box (Not Serviced)			
			11	8285790	Bracket, Mounting Orifice			

COOKTOP AND BURNER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10878401	Panel, Console	4	W11238758	Igniter (Left Front, Right Front)	14	W10891746	Spreader, Flame (High) (Left Front, Right Front)
2	W10892771	Assembly, Orifice Holder (Left Front and Right Front)		W10892340	Igniter (Left Rear, Right Rear)		W10891974	Spreader, Flame (Low) (Left Rear)
	W10892484	Assembly, Orifice Holder (Left Rear)	5	W11291183	Burner, Grate (With Wok Ring)		W10891978	Spreader, Flame (AUX) (Right Rear)
	W10892767	Assembly, Orifice Holder (Right Rear)	6	W11291179	Burner, Grate	15	7101P426-60	Screw
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	7	W11323261	Screw (8-18 X 1") (Left Front, Right Front)	16		Panel, Cooktop
	W10892419	Orifice, Main (15K) (Left Rear)		W11323309	Screw (8-18 X 1/2") (Left Rear, Right Rear)		W11038235	Black (Left)
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	8		Knob, Single Burner		W11038245	Black (Right) Trim, T-Strip
	W10892438	Orifice, Simmer (5K) (Right Rear)		W10912166	Stainless Knob, Dual Burner	17	W10271524	Black
			9	W10883172	Stainless	18	W11291178	Kit, Grate Filler
			10	W11355759	Trim, Island	19	W10919387	Screw
			11	W10883433	Bezel (Rear Burners)	20	7101P338-60	Screw
			12	W10881642	Bezel (Front Burners)	21	W10518672	Badge
			13		Cap, Burner	22	W11042504	Bumper, Grate
				W11121389	Black (Set Of 4)			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude