




**30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE
Fingerprint Resistant**

MODELS:

WFE525S0JZ0 (Stainless)

WFE525S0JV0 (Black Stainless)


COOKTOP PARTS

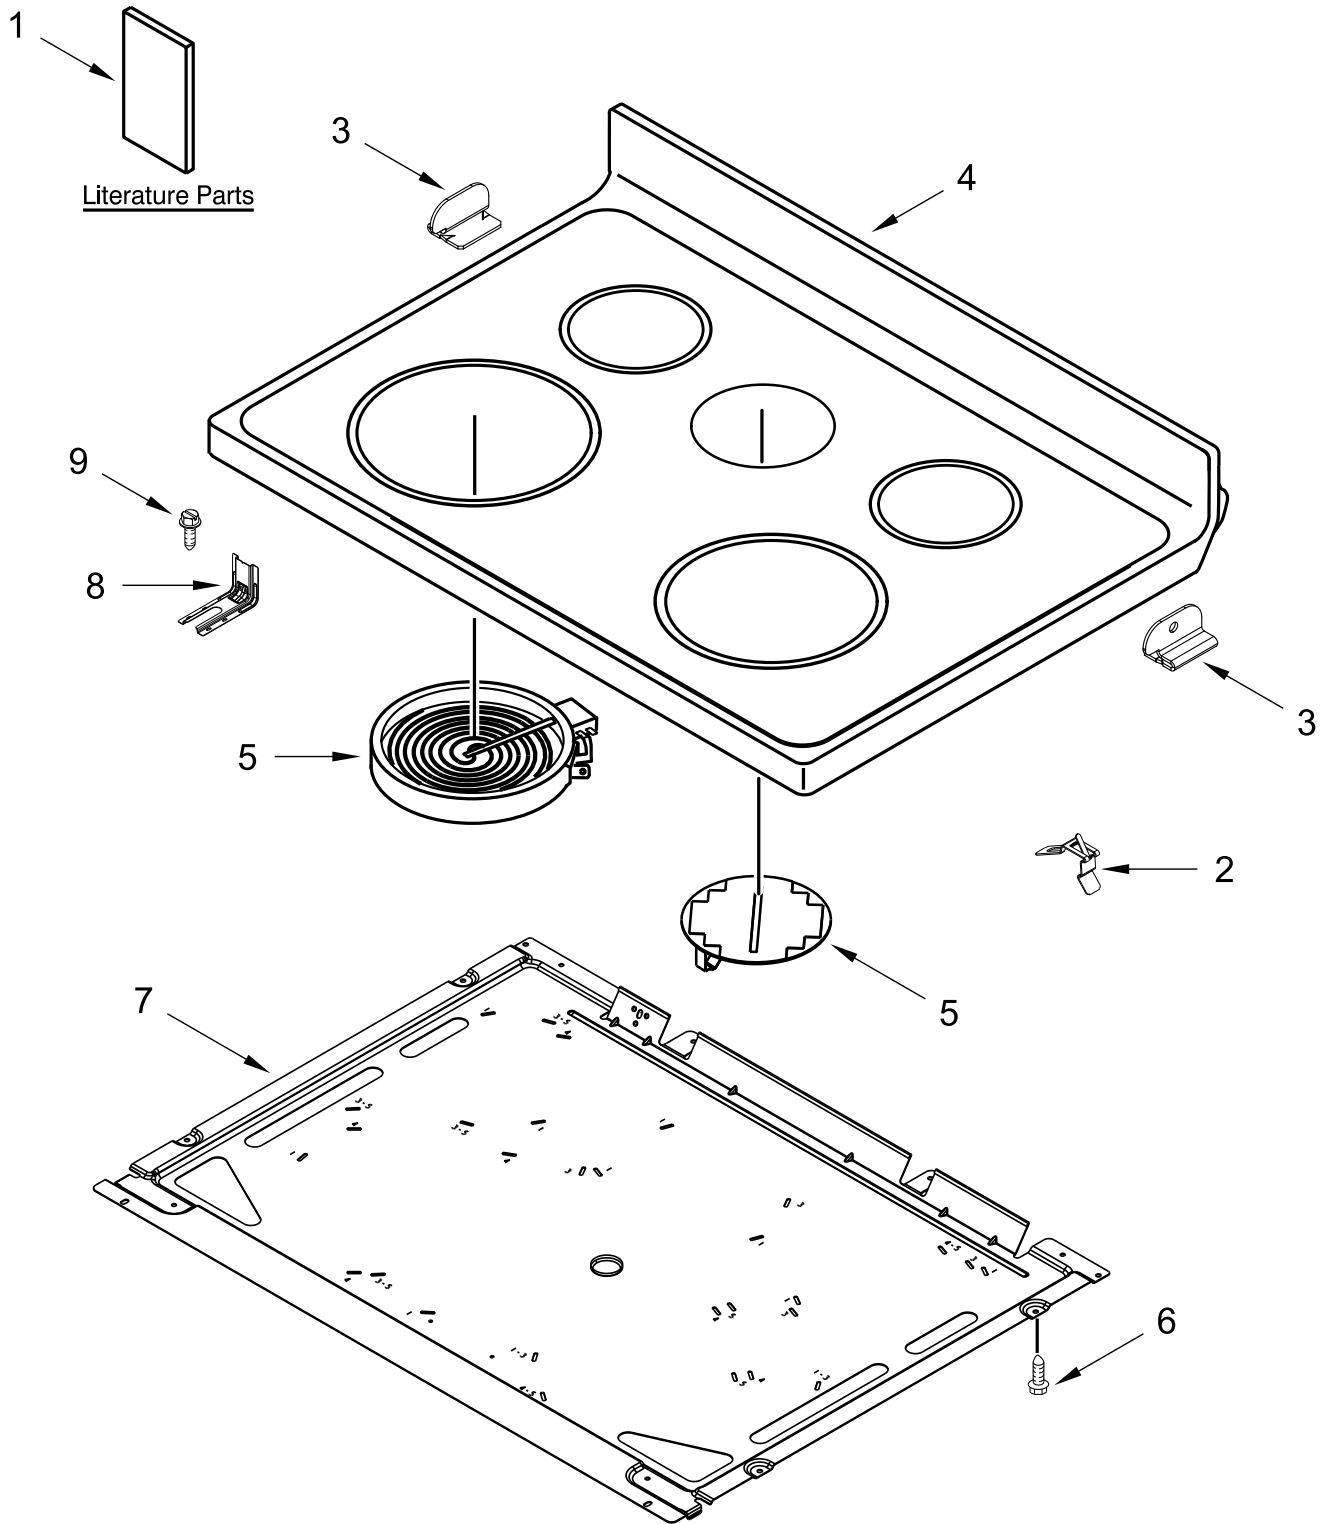

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	9	7101P485-60	Screw, Anti-Tip Kit
	W11333088	Instructions, Installation			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11333073	Use and Care Guide		W10248261	Element (1200W)		W11344556	Harness, Main
	W11351201	Sheet, Tech			(Left Rear, Right Rear)		W11134603	Harness, Cooktop (Left)
	W11351207	Diagram, Wiring		8273992	Element (2500W)		W11134551	Harness, Cooktop (Right)
2	W10225448	Spring, Element		W10799048	Element, Warm Zone		W11134592	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)			(Center)			
	W10607642	Bracket, Cooktop (Right)	6	3196169	Screw			
4		Cooktop	7	W10691223	Pan, Radiant Element			
	W11034825	Black	8	W10306542	Bracket, Anti-Tip			


CONTROL PANEL PARTS

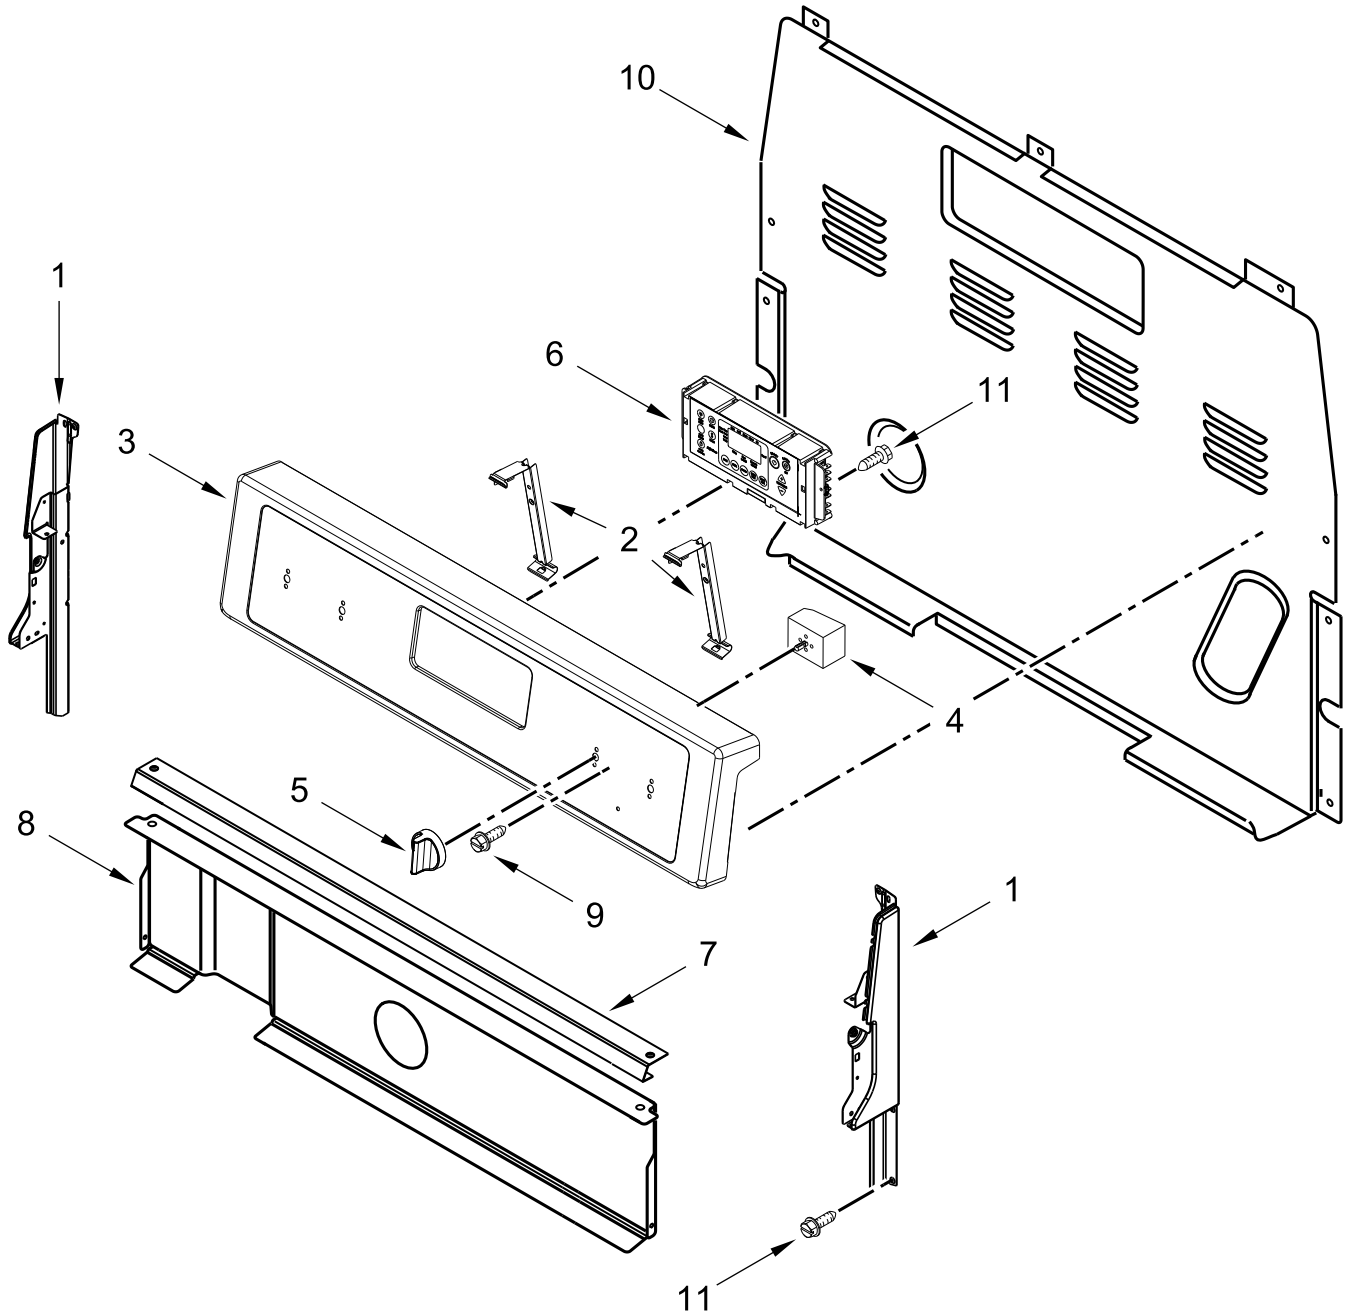

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11204519	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	7	W10525121	Bracket, Console Mounting
2	W10695491	Bracket, Control			(Right Rear and Left Rear)			
3		Console, Assembly		3148954	Switch, Infinite (Orange)	8	W10134247	Shield, Heat
	W11027373	Stainless			(Right Front)	9	3400882	Screw
	W11344485	Black Stainless			Knob	10	8272473	Cover, Upper Rear
			5			11	3196178	Screw
				W11022717	Stainless			
				W11027166	Black Stainless			


CHASSIS PARTS

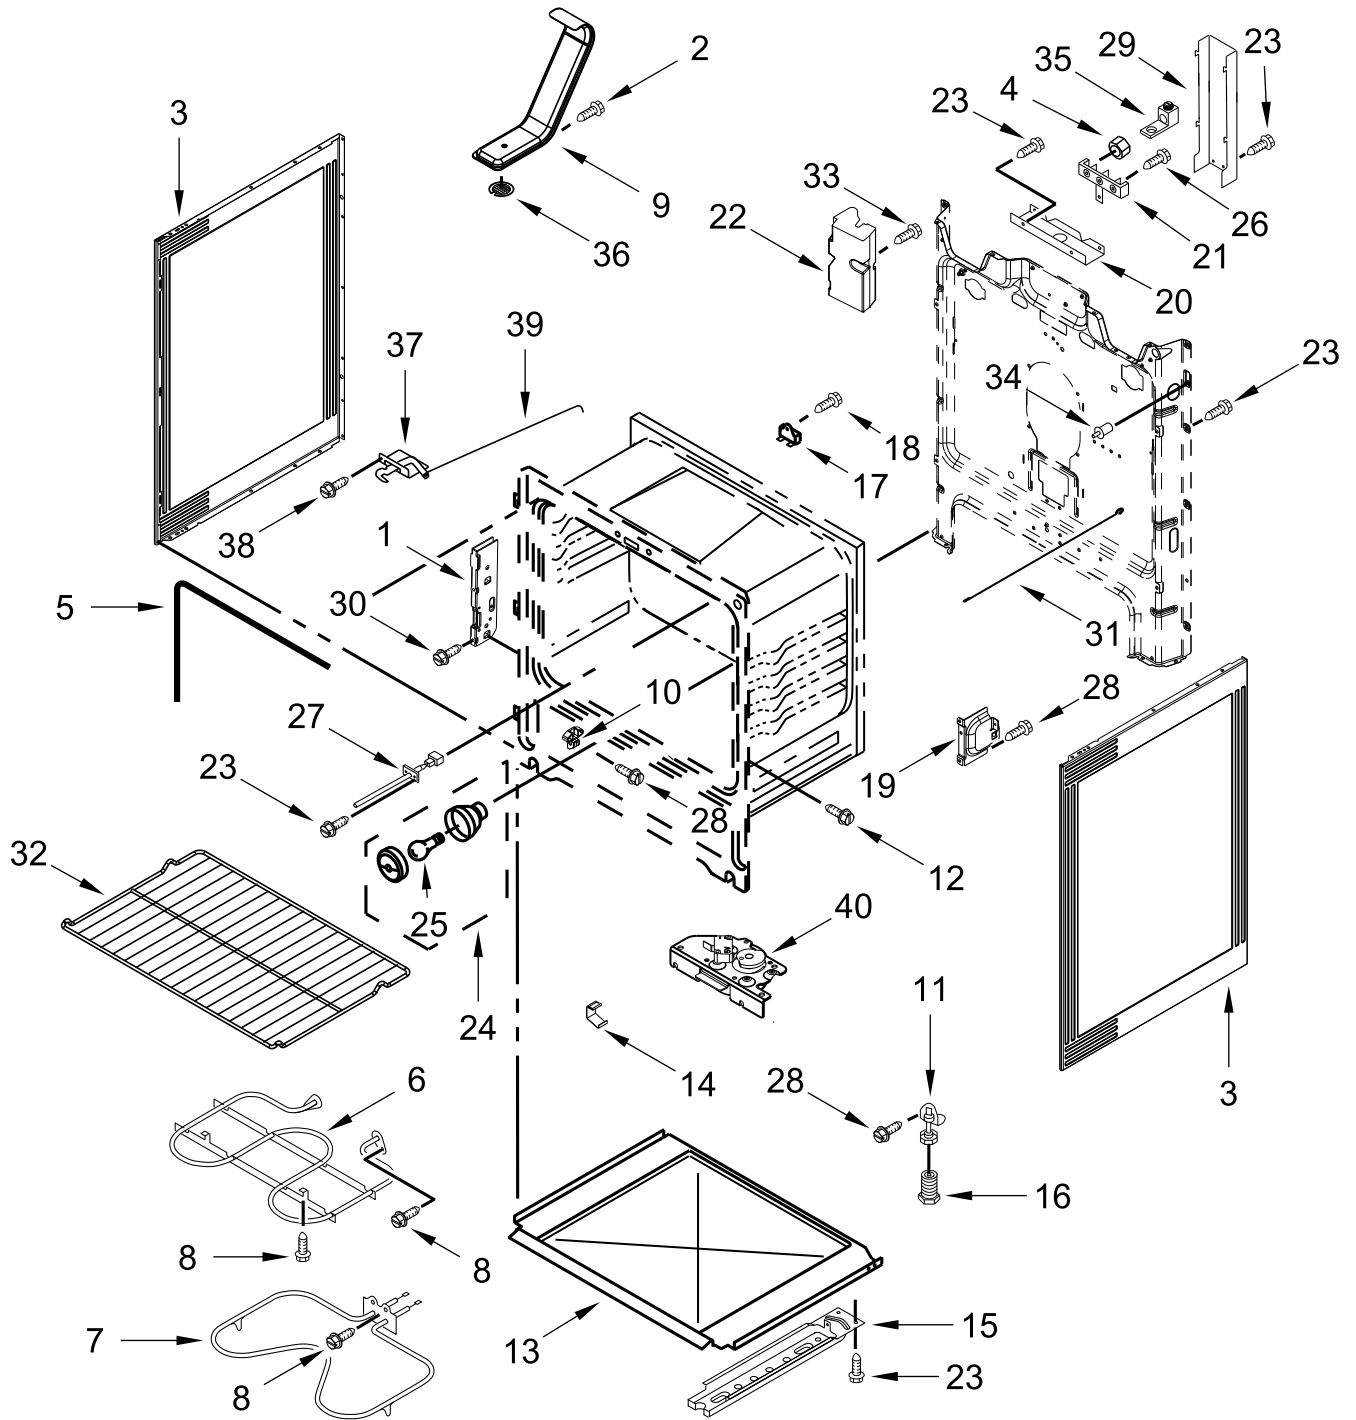

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	34	W10627802	Switch, Door
2	3196154	Screw	17	3196548	Fuse, Thermal	35	W10281322	Kit, Bare Wire Adapter Block
3		Panel, Side	18	3196172	Screw	36	W11092984	Screen, Vent
	W10162245	Black	19	W10404688	Clip, Oven Support	37	9761013	Assembly, Door Latch (Front)
4	3400029	Nut	20	3186034	Bracket, Service	38	3196560	Screw
5	W10658354	Seal, Door	21	W10245259	Block, Terminal	39	W10078380	Rod, Latch
6	9757340	Element, Broil	22	W10910404	Counterweight	40	W10107820	Assembly, Door Latch (Rear)
7	W11111743	Element, Bake	23	3196178	Screw			
8	3196174	Screw	24	W11175594	Assembly, Light			
9	W10134285	Tube, Vent	25	W10571723	Bulb, Halogen 40 Watts			
10	W10674705	Glide, Drawer Front						FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Assembly, Front Foot	26	3400016	Screw		W10774939	Insulation, Wrap
12	W10067840	Screw	27	W10181986	Sensor, Oven		W11127325	Insulation, Back
13	8054068	Retainer, Insulation	28	3196169	Screw		W10333344	Insulation, Flue
14	W10137382	Clip, Panel	29	W10326122	Cover, Terminal Block			
15	W10390008	Assembly, Base Rail (Left)	30	W10031780	Screw			
	W10390007	Assembly, Base Rail (Right)	31	9757239	Rod, Door Switch			
			32	W10268578	Rack, Oven			
			33	W11034869	Screw			

DOOR PARTS

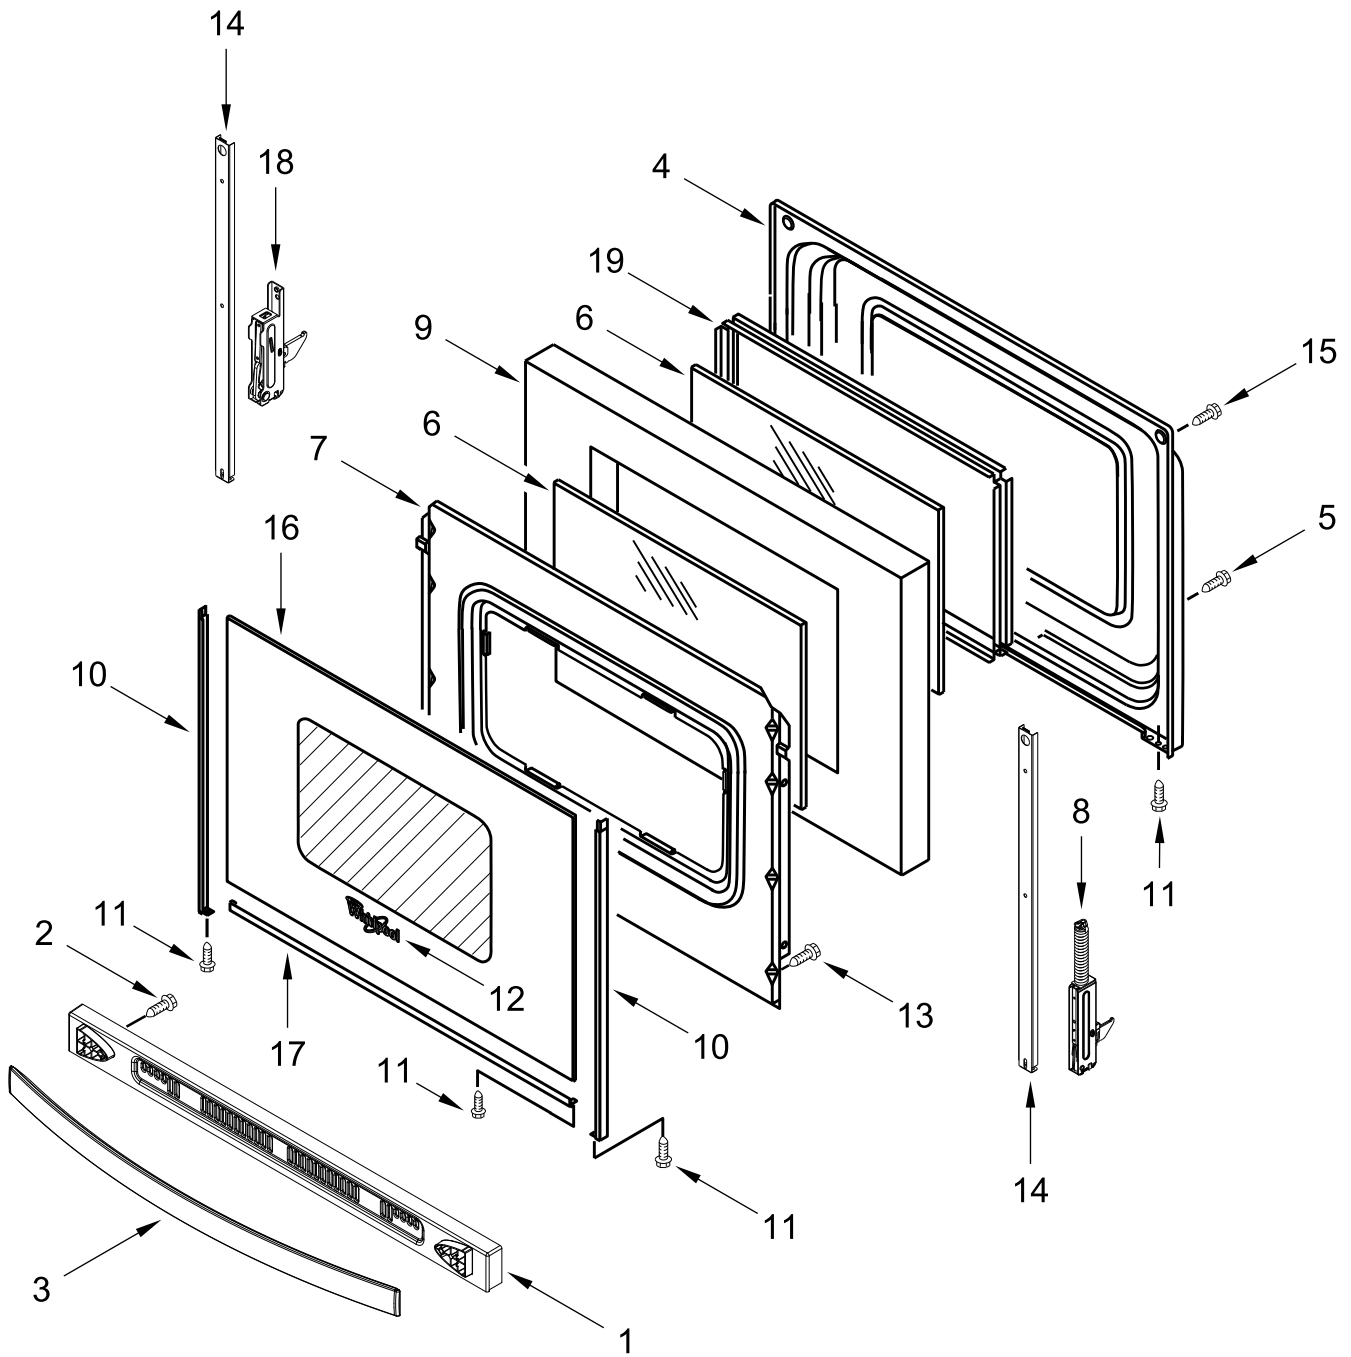


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top (Includes Standoff)
	W11241393	Stainless
	W11241394	Black Stainless
2	W10480830	Screw
3		Handle, Door
	W11249084	Stainless
	W11249083	Black Stainless
4	9761344	Liner, Door
5	W10031790	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6	9758162	Glass, Inner
7	9761357	Retainer, Insulation
8	W10299224	Hinge, Active (With Spring)
9	W10278991	Insulation, Door Strip
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw
12	W10884775	Nameplate

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10031780	Screw
14	W10544179	Strap, Door
15	W10200660	Screw
16		Glass Assembly, Outer Door
	W10884159	Black
17		Trim, Lower
	8523177	Black
18	W10299227	Hinge, Door (Passive)
19	W10316950	Frame, Glass

DRAWER PARTS

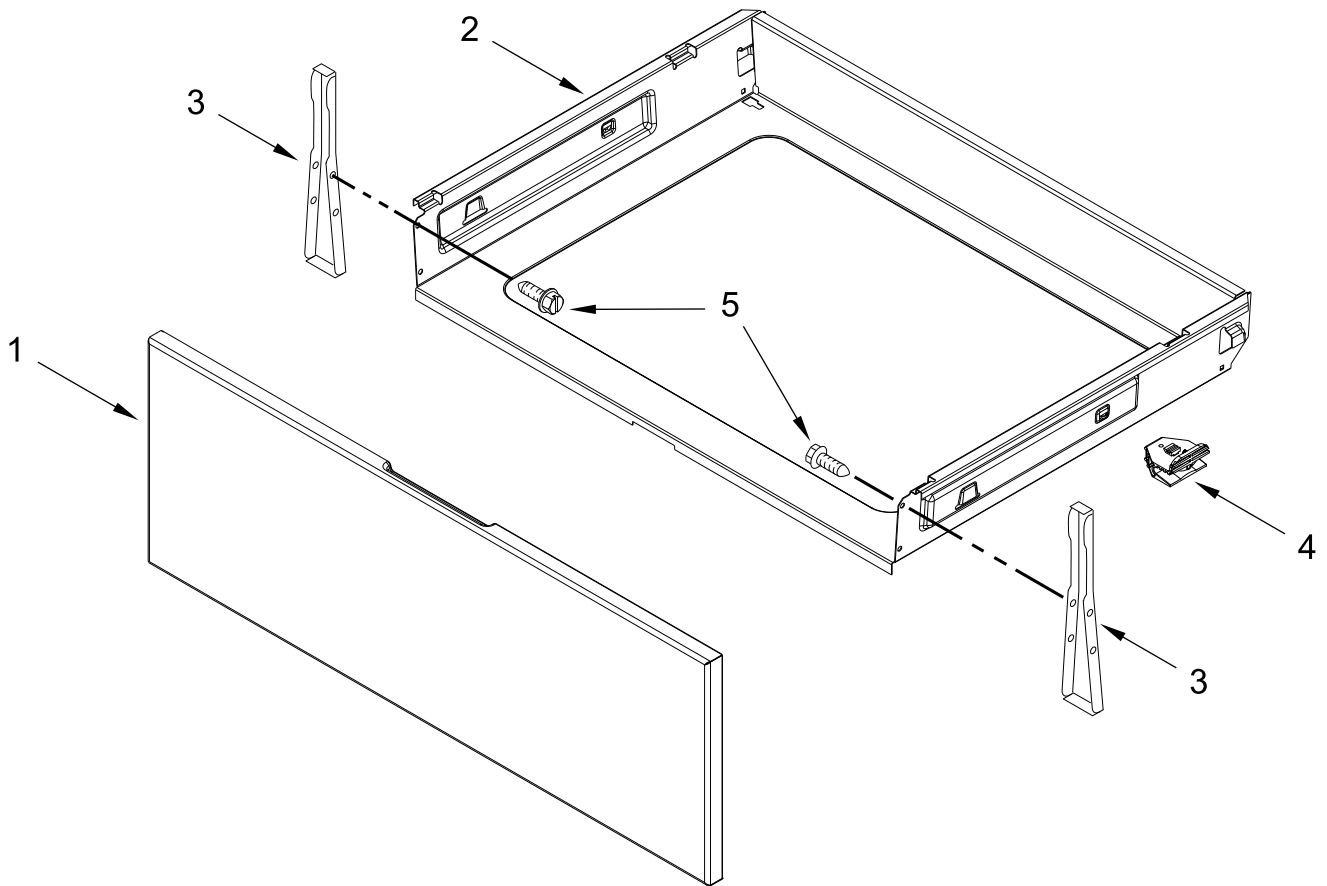

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W10861542	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw
	W11045573	Black Stainless						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting