




30" FREESTANDING ELECTRIC RANGE

MODELS:

WFE505W0HB2 (Black)
WFE505W0HW2 (White)


COOKTOP PARTS

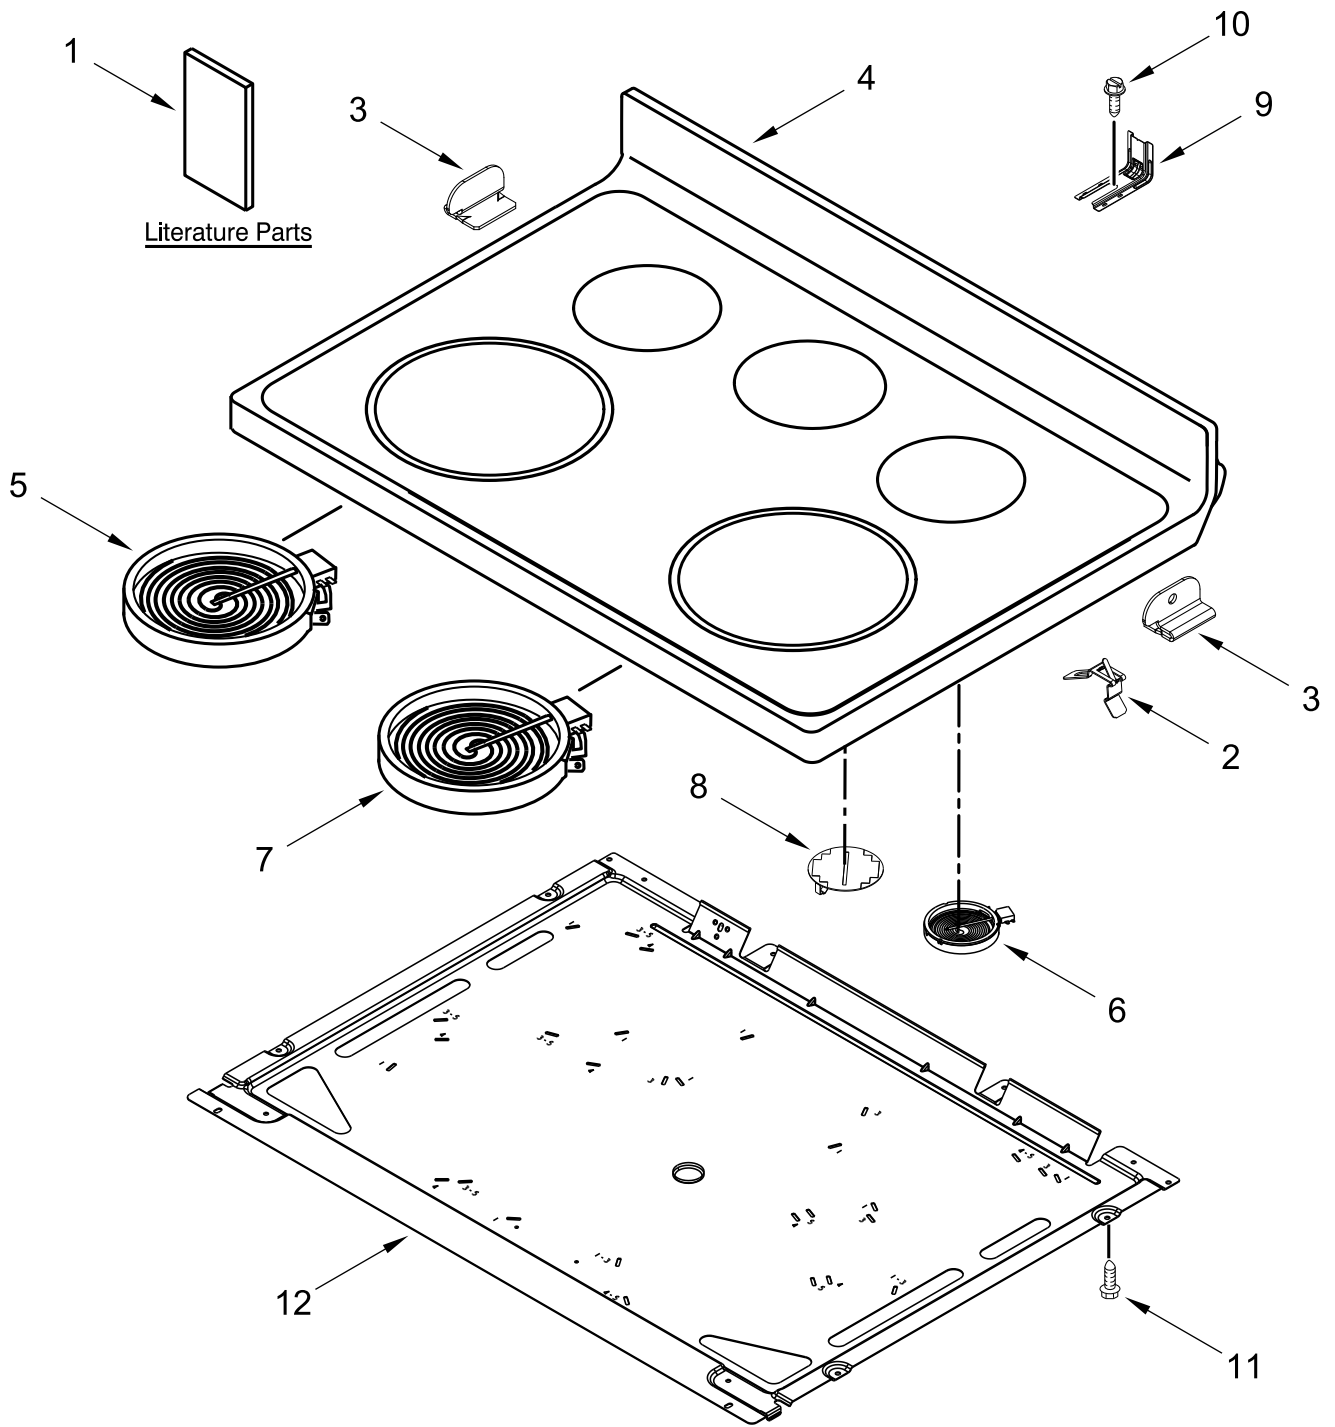

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	12	W10691223	Pan, Radiant Element
	W11333124	Guide, Use and Care			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11333088	Instructions, Installation	6	W10248261	Element (1200W)		W11134842	Harness, Main
	W11357669	Diagram, Wiring			(Left Rear and Right Rear)		W11134592	Harness, Warm Zone
	W11351201	Sheet, Tech	7	8273992	Element (2500W)		W11134551	Harness, Cooktop (Right)
2	W10225448	Spring, Element			(Right Front)		W11134603	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	8	W10799048	Element, Warm Zone (Center)			
	W10607642	Bracket, Cooktop (Right)	9	W10306542	Bracket, Anti-Tip			
4		Cooktop	10	7101P485-60	Screw, Anti-Tip Kit			
	W11034825	Black	11	3196169	Screw			
	W11034824	White						


CONTROL PANEL PARTS

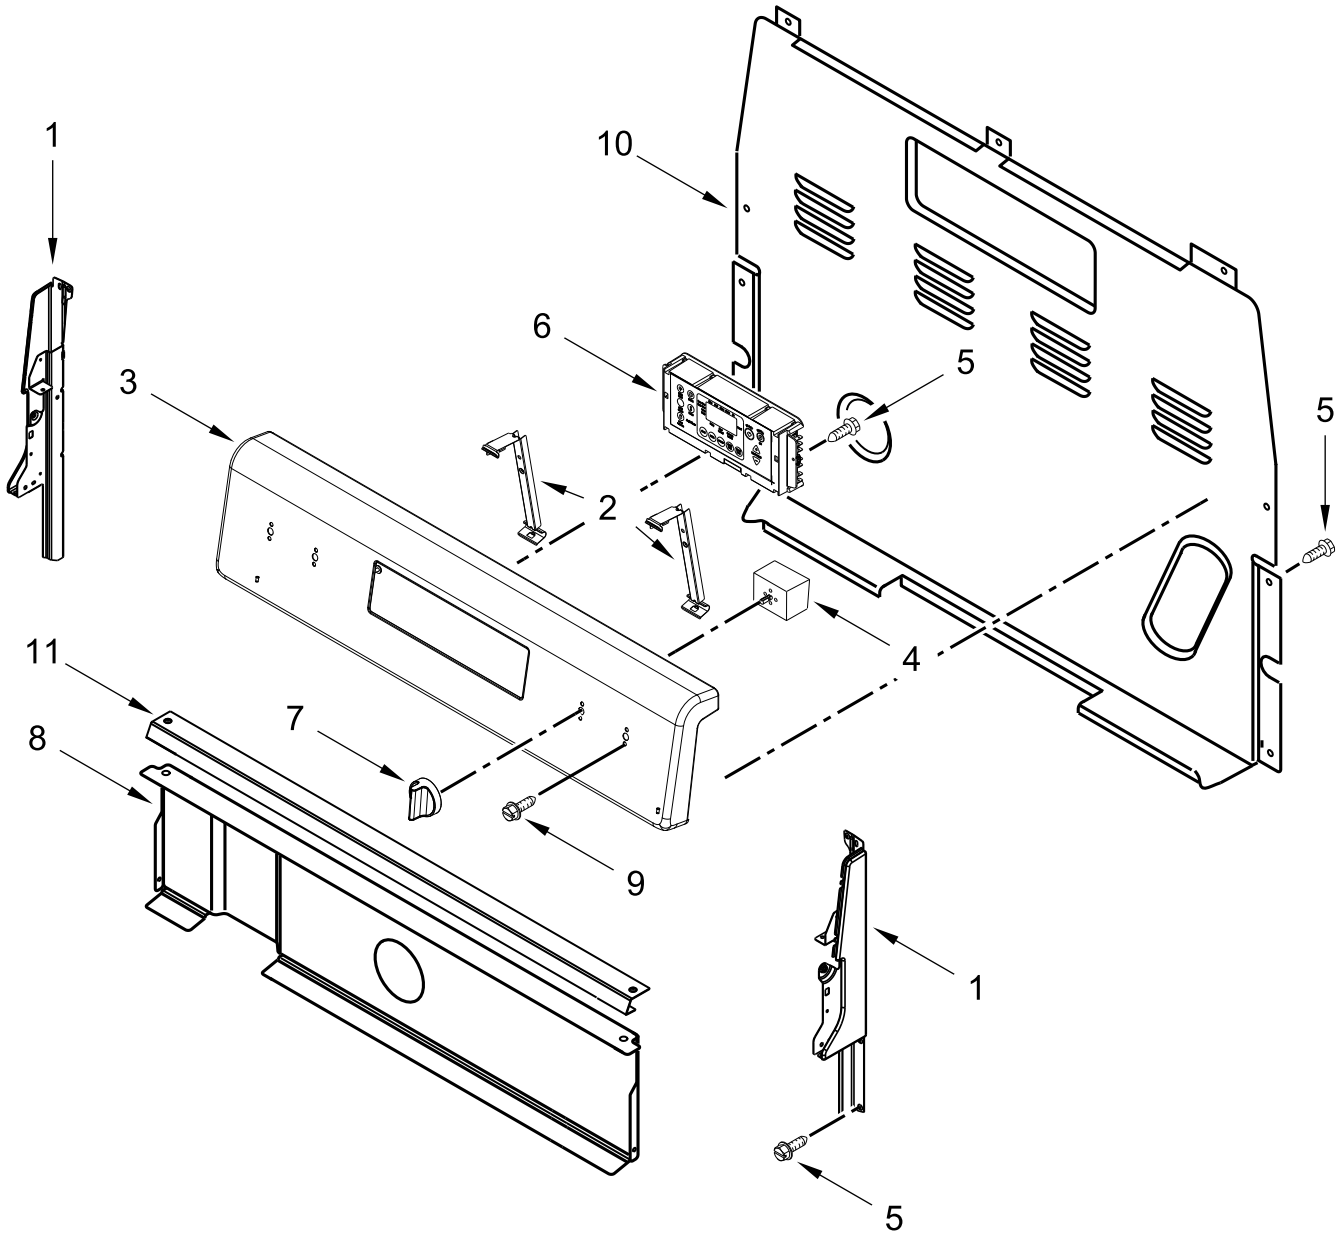

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11204517	Black
	W11130379	Black (Right)		3148951	Switch, Infinite		W11204518	White
	W11130371	White (Left)			(Left Rear and Right	7		Knob
	W11130378	White (Right)			Rear)		W11022718	Black
2	W10695491	Bracket, Control		3148954	Switch, Infinite		W11022720	White
3		Console, Assembly			(Orange)	8	W10134247	Shield, Heat
	W11027374	Black			(Right Front)	9	3400882	Screw
	W11027375	White	5	3196169	Screw	10	8272473	Cover, Upper Rear
						11	W10525121	Bracket, Console Mounting


CHASSIS PARTS

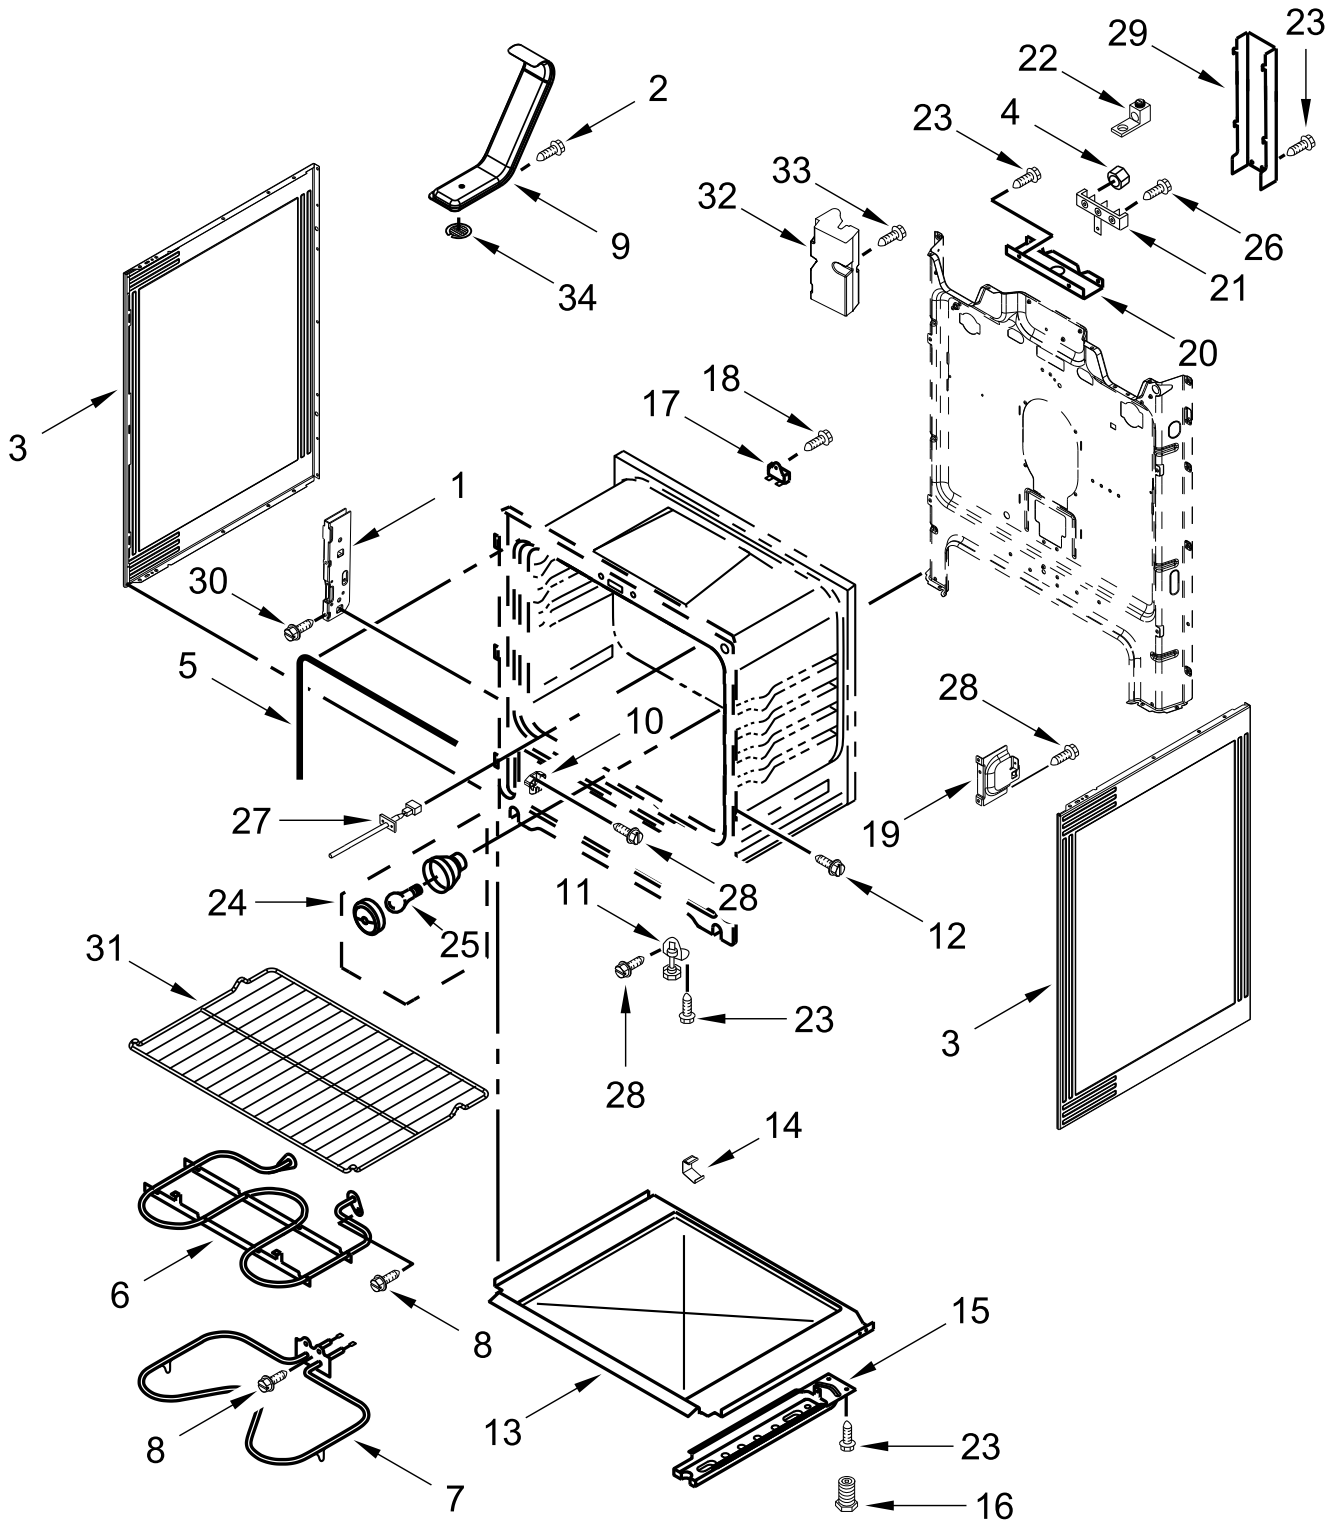

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390007	Assembly, Base Rail (Right)	27	W10181986	Sensor, Oven
2	W10362924	Screw				28	3196169	Screw
3		Panel, Side		W10390008	Assembly, Base Rail (Left)	29	W10326122	Cover, Terminal Block
	W10162245	Black				30	W10031780	Screw
	W10575396	White	16	W10058460	Foot, Leveling	31	W10268578	Rack, Oven
4	3400029	Nut	17	3196548	Fuse, Thermal	32	W10910404	Counterweight
5	W10129032	Seal, Door	18	3196172	Screw	33	W11034869	Screw
6	9757340	Element, Broil	19	W10404688	Clip, Oven Support	34	9761301	Screen, Vent
7	W11111743	Element, Bake	20	3186034	Bracket, Service			FOLLOWING PARTS NOT ILLUSTRATED
8	3196154	Screw	21	W10245259	Block, Terminal		8273263	Insulation, Wrap
9	W10134285	Tube, Vent	22	W10281322	Kit, Bare Wire Adapter Block		8272611	Insulation, Back
10	W10674705	Glide, Drawer Front					W10333344	Insulation, Flue
11	W10341186	Assembly, Front Foot	23	3196178	Screw			
12	W10067840	Screw	24	W11175594	Assembly, Light			
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts			
14	W10137382	Clip, Panel	26	3400016	Screw			


DOOR PARTS

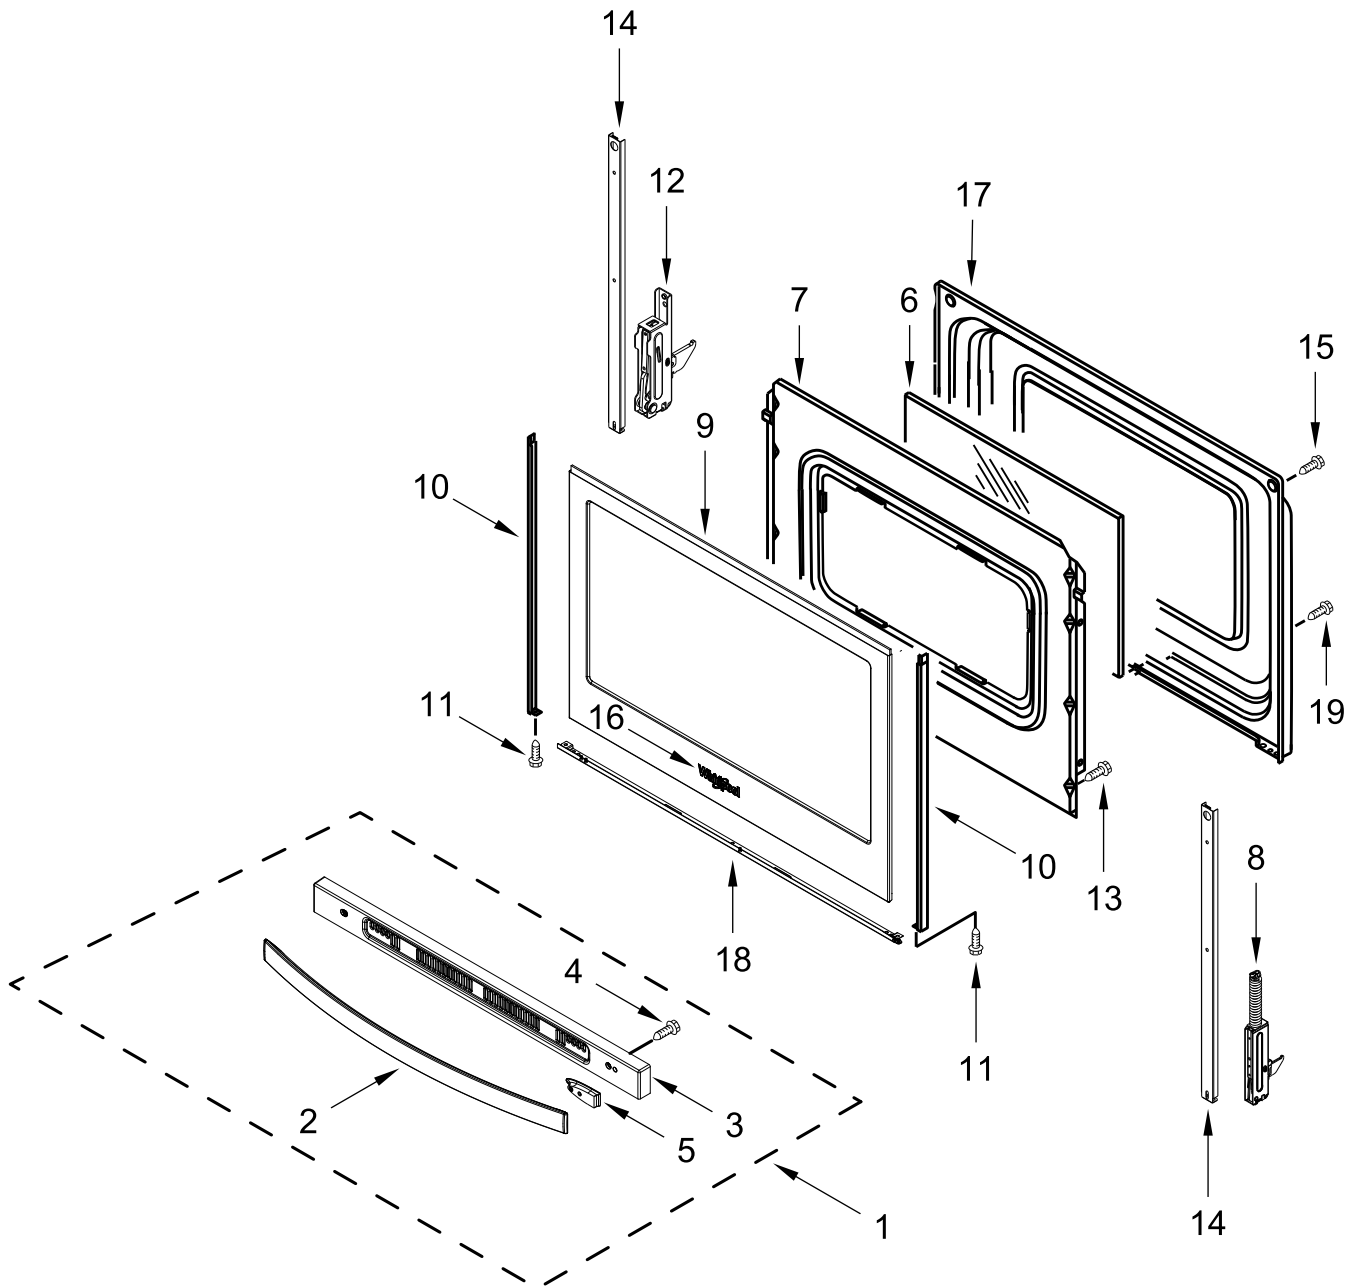

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	7	9761505	Retainer, Insulation	15	W10200660	Screw
	W11039085	Black	8	W10299225	Hinge, Active	16	W10884775	Nameplate
	W11039084	White	9		Glass Assembly, Outer Door	17	9761344	Liner, Door
2		Door Handle		W10884159	Black	18		Trim, Lower Door
	W11022643	Black		W10409945	White		8523177	Black
	W11022644	White	10		Trim, Side		8523175	White
3		Trim, Vent		W10746436	Black (Left)	19	W10031790	Screw
	W10310922	Black		W10746435	Black (Right)			
	W10310920	White		8523172	White (Left)			
4	W10480830	Screw		8523166	White (Right)			
5		Standoff (Not Serviced, Order Handle and Vent Assembly)	11	W10327235	Screw			
			12	W10299227	Hinge, Door (Passive)			
			13	W10031780	Screw			
6	W11367326	Glass, Inner	14	W10544179	Strap, Door			

DRAWER PARTS

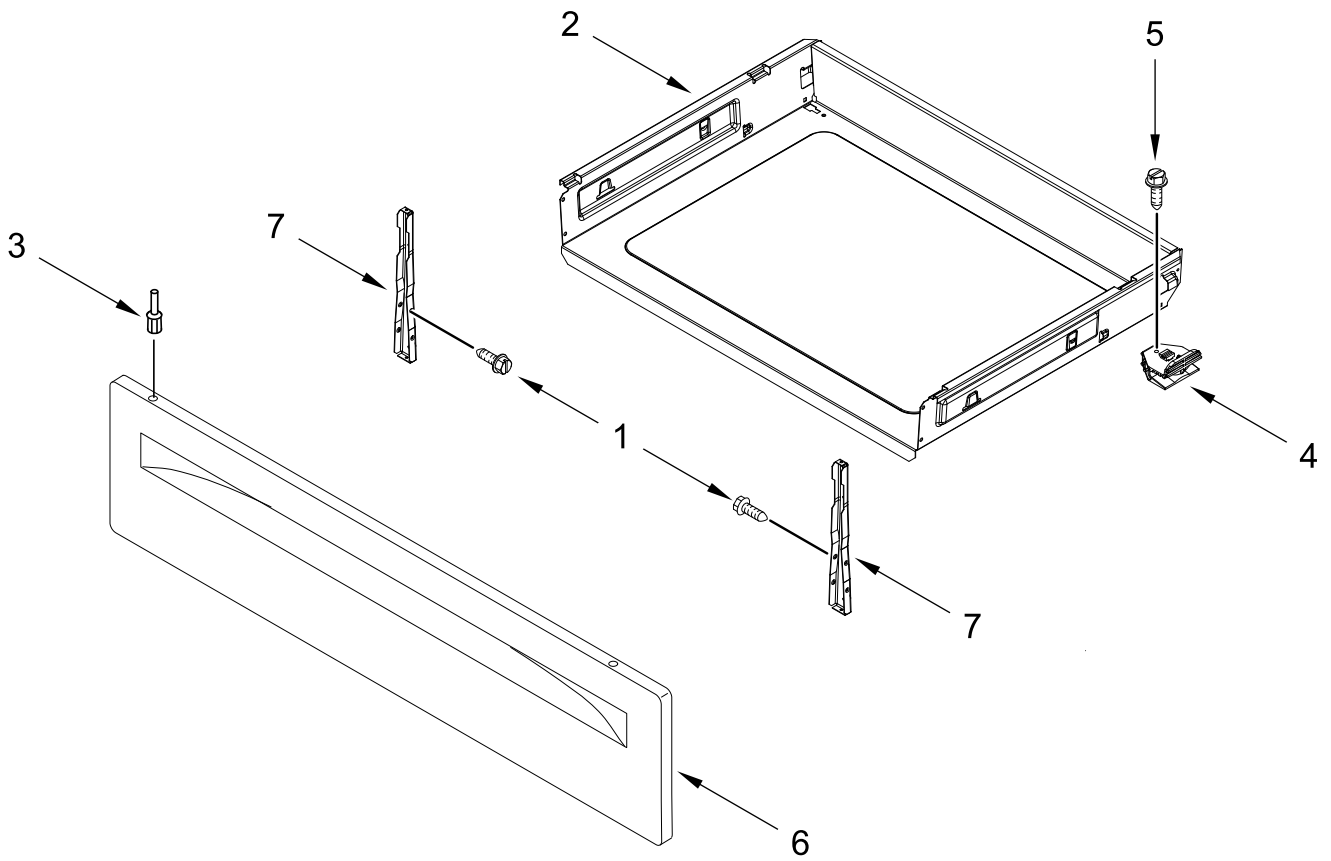

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw
2	W10688022	Drawer, Storage
3		Rivet, Push
	3196813	Black
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	3196165	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Panel, Drawer Front
	W11123900	Black
	W11123901	White
7	W10462912	Bracket, Mounting Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting