




**30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE**

**MODELS:**

WFE535S0LS0 (Stainless)


# COOKTOP PARTS

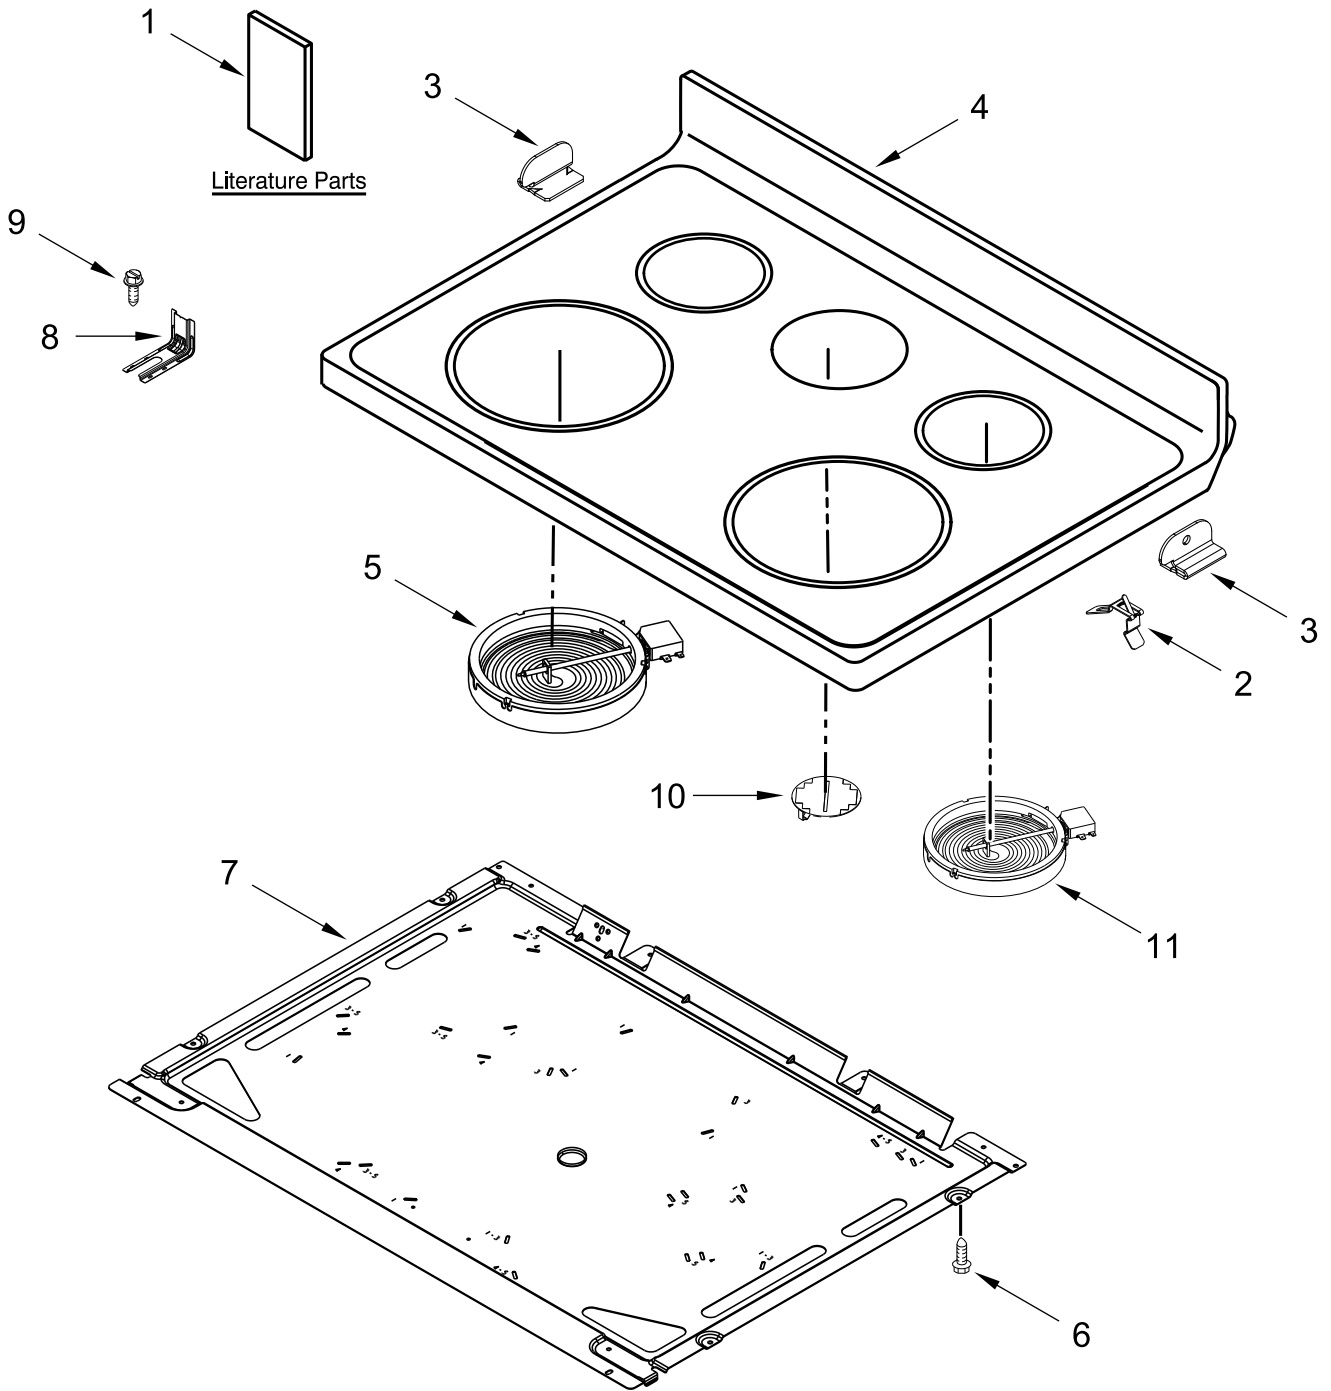

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	3196169	Screw	11	W10248261	Element (1200W)
	W11443024	Owners Manual	7	W10691223	Pan, Radiant Element			(Left Rear, Right Rear)
	W11530281	Quick Start Guide	8	W11379945	Bracket, Anti-Tip			FOLLOWING PARTS NOT ILLUSTRATED
	W11401734	Tech Sheet	9	7101P485-60	Screw, Anti-Tip Kit		W11452630	Harness, Main
2	W10225448	Spring, Element	10	W10799048	Element, Warm Zone		W11134845	Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)			(Center)		W11134603	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)					W11134592	Harness, Warm Zone
4		Cooktop					W11172528	Harness, Hidden Bake
	W11034833	Black					W10183541	Clip, Spring Steel
5	W10275048	Element (3000/1400W)					3196520	Clip, Wire
		(Left Front & Right Front)						


# CONTROL PANEL PARTS

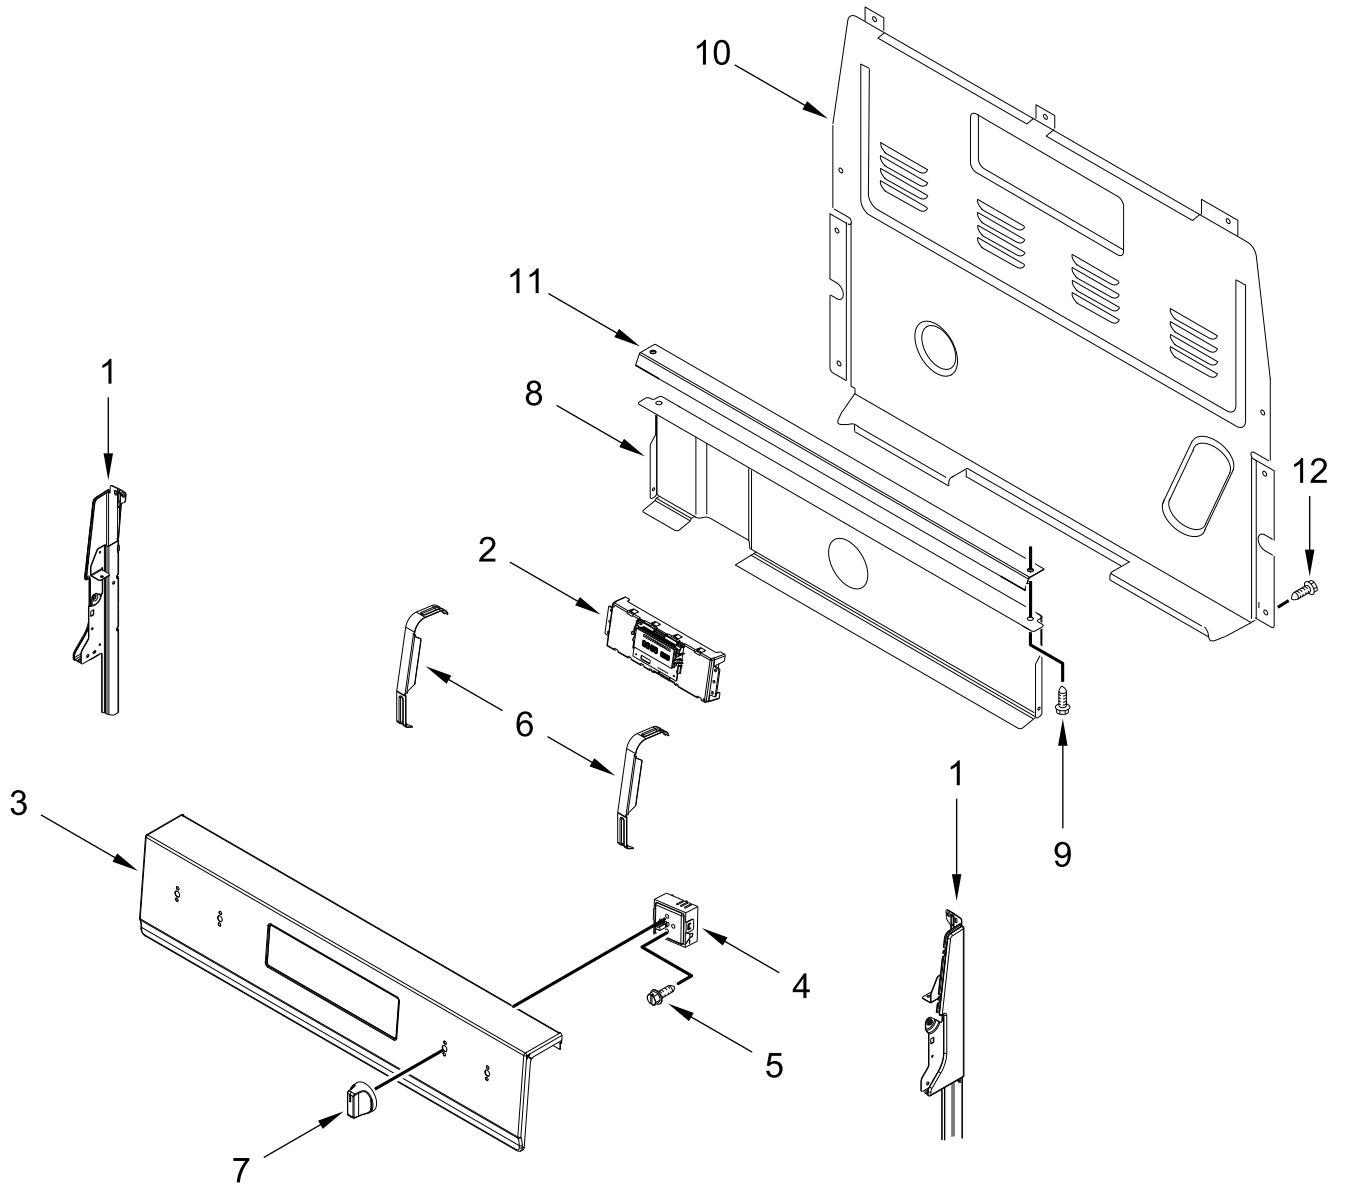

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W11130372	Black (Left)			(Left Front and Right Front)		W11022717	Stainless
	W11130379	Black (Right)				8	W10134247	Shield, Heat
2		Control, Electronic (LCX)		3148951	Switch, Infinite	9	3400882	Screw
	W11527158	Black			(Right Rear and Left Rear)	10	8272473	Cover, Upper Rear
3		Console, Assembly	5	3196178	Screw	11	W10525121	Bracket, Console Mounting
	W11027376	Stainless	6	W10695491	Bracket, Control	12	3196169	Screw


# CHASSIS PARTS

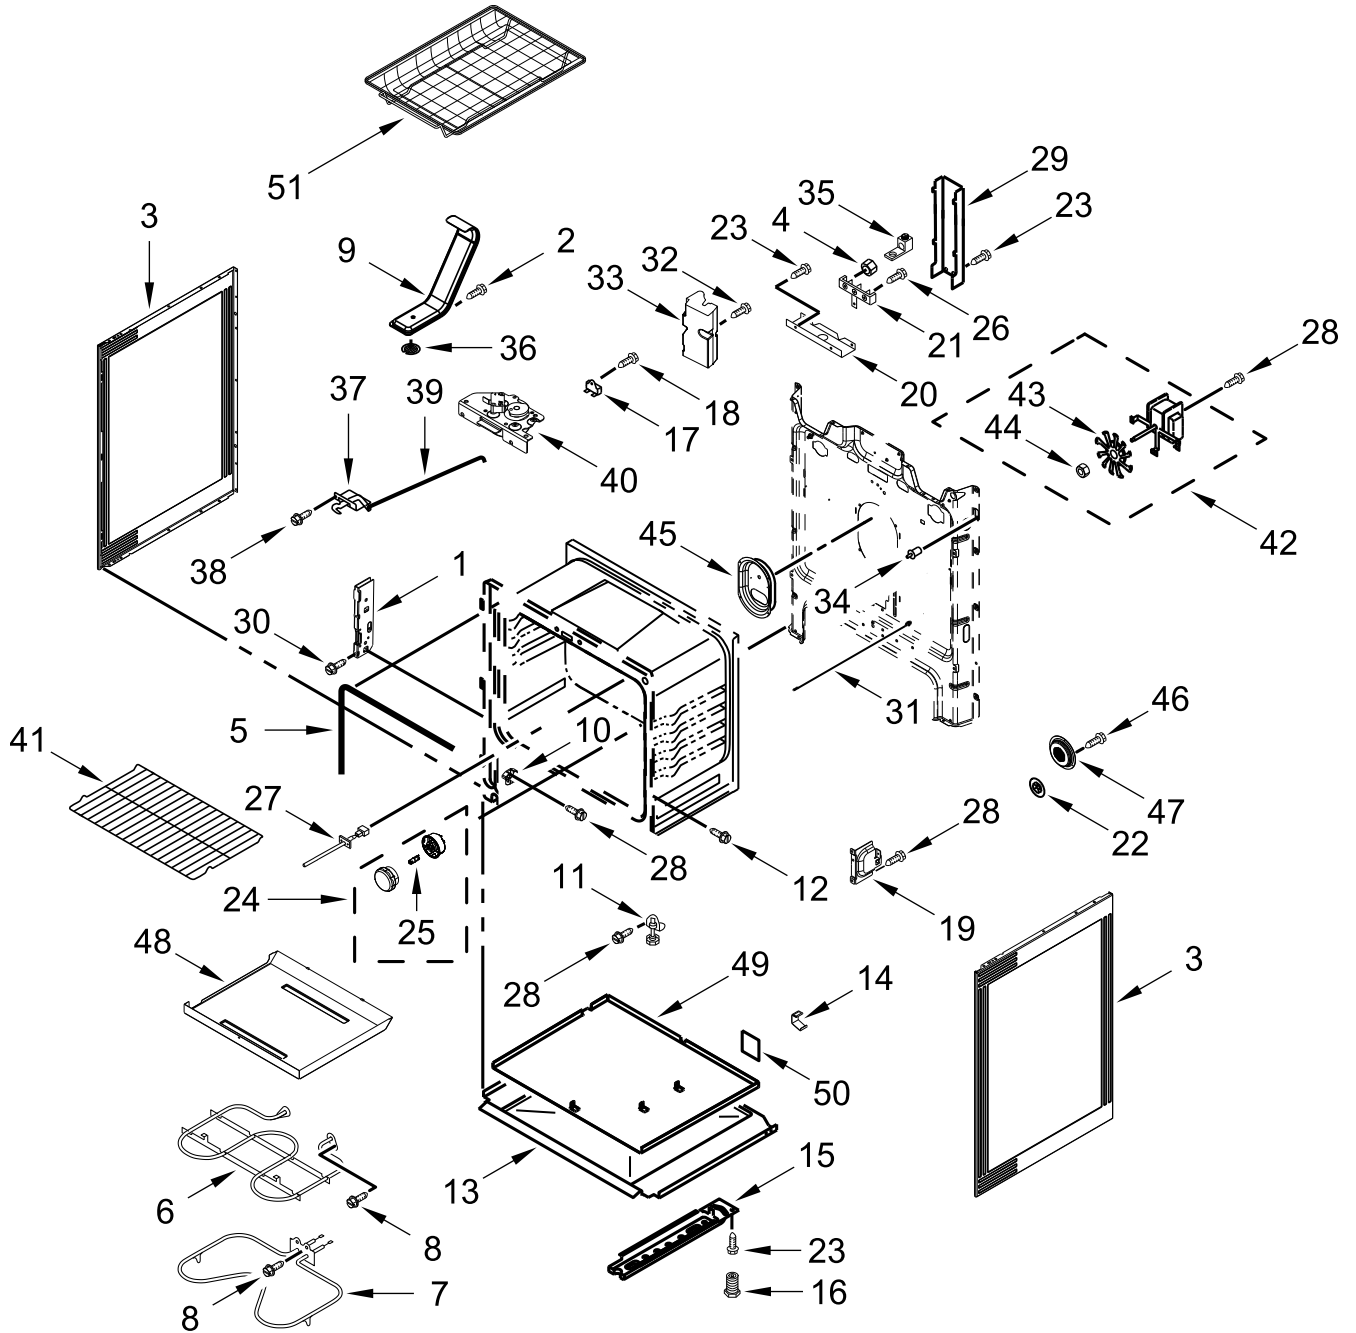

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	19	W10404688	Clip, Oven Support	38	3196560	Screw
2	3196154	Screw	20	3186034	Bracket, Service	39	W10078380	Rod, Latch
3		Panel, Side	21	W10245259	Block, Terminal	40	W10107820	Rear Door Latch Assembly
	W10162245	Black	22	3400968	Nut	41	W11173792	Rack, Oven
4	3400029	Nut	23	3196178	Screw	42	W11190726	Fan, Convection
5	W11491751	Seal, Door	24	W11430367	Light Assembly	43	W10116351	Blade, Fan
6	9757340	Element, Broil	25	W10571723	Bulb, Halogen 40 Watts	44	W10213748	Nut
7	9755770	Element, Bake	26	3400016	Screw	45	W10134126	Bracket, Fan
8	3196174	Screw	27	W10181986	Sensor, Oven	46	4449809	Screw
9	W10134285	Tube, Vent	28	3196169	Screw	47	W10134124	Cover, Conv Fan
10	W10674705	Glide, Drawer Front	29	W10326122	Cover, Terminal Block	48	W10183712	Tray, Hidden Bake
11	W10341186	Front Foot Assembly	30	W10031780	Screw	49	W10134125	Shield, Heat
12	W10067840	Screw	31	W11370462	Rod, Door Switch	50	W10646923	Card, Insulator
13	W10134121	Tray, Insulation	32	W11034869	Screw	51	W11526015	Basket, Air Fry
14	W10137382	Clip, Panel	33	W10910404	Counterweight			FOLLOWING PARTS NOT ILLUSTRATED
15	W10390007	Base Rail Assembly (Right)	34	W10627802	Switch, Door			
	W10390008	Base Rail Assembly (Left)	35	W10281322	Kit, Bare Wire Adapter Block	W10774939		Insulation, Wrap
16	W10058460	Foot, Leveling	36	W11092984	Screen, Vent	W11127324		Insulation, Back
17	3196548	Fuse, Thermal	37	9761013	Front Door Latch Assembly	W10333344		Insulation, Flue
18	3196172	Screw						

# DOOR PARTS

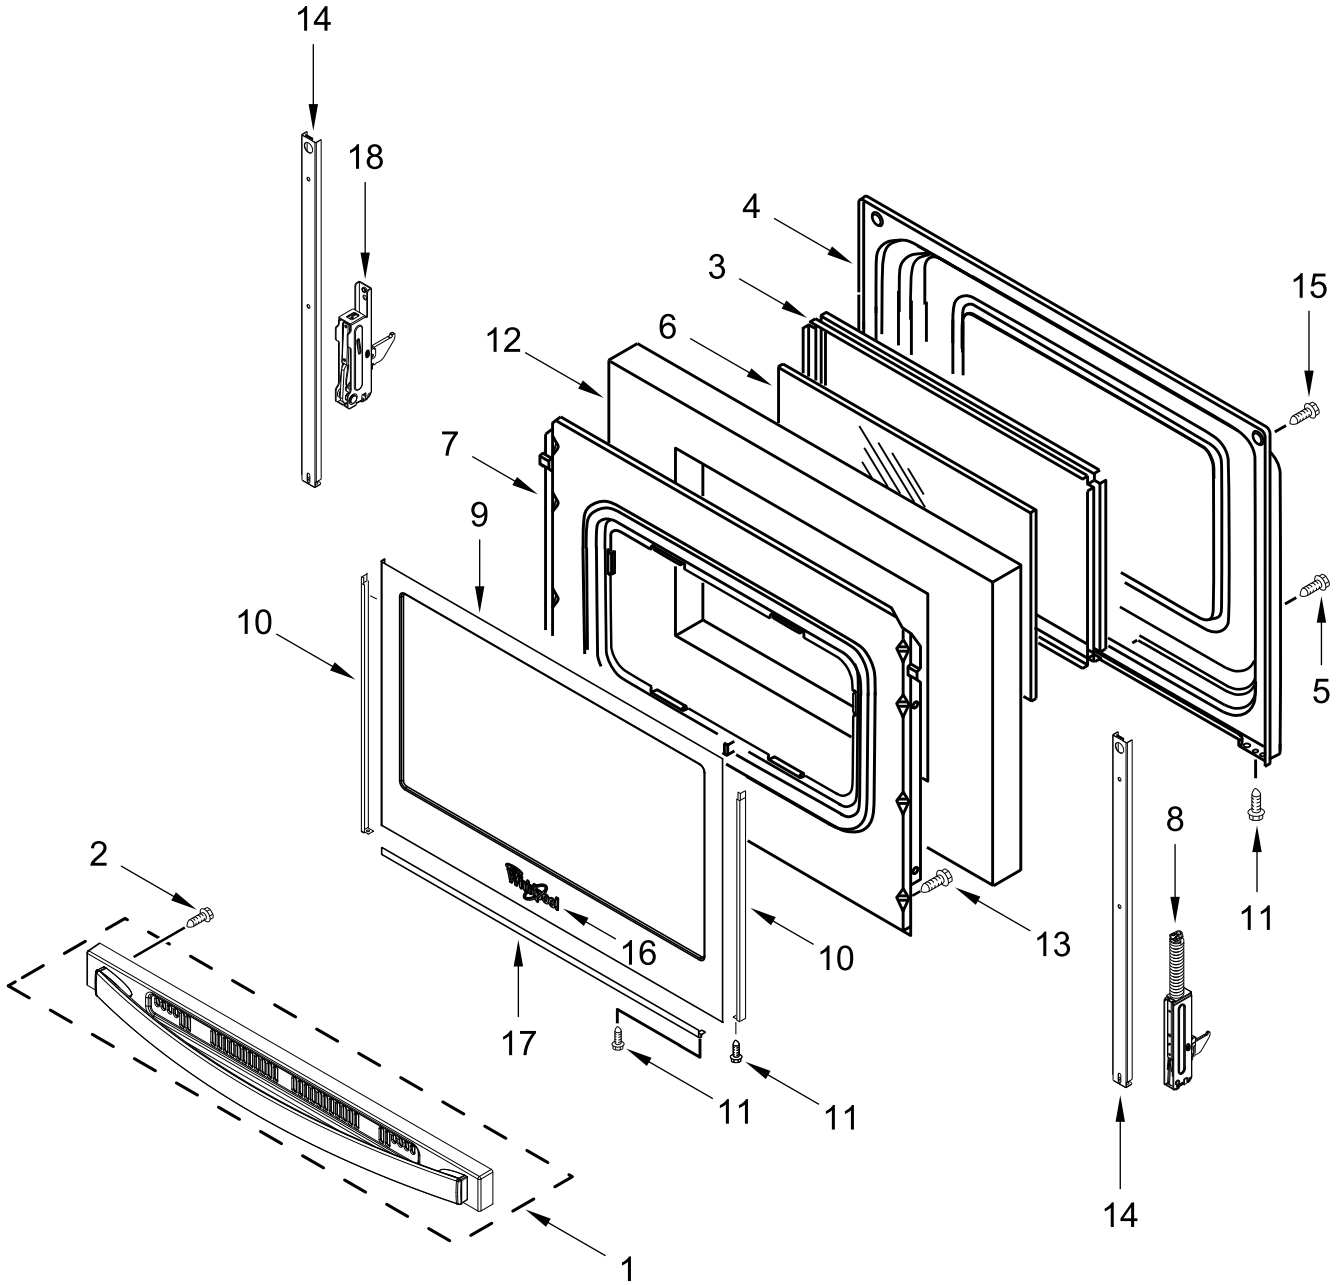




# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	8	W10299224	Hinge, Active (With Spring)	12	W10278991	Insulation, Door Strip
	W11242950	Stainless	9		Glass Assembly, Outer Door	13	W10031780	Screw
2	W10480830	Screw		W10884159	Black	14	W11379944	Strap, Door
3	W10316950	Frame, Glass	10		Trim, Side	15	W10200660	Screw
4	9761344	Liner, Door		W10746436	Black (Left)	16	W10884775	Badge
5	W10031790	Screw		W10746435	Black (Right)	17	8523177	Black
6	9758162	Glass, Inner	11	W10327235	Screw	18	W10299227	Hinge, Door (Passive)
7	9761357	Retainer, Insulation						

# DRAWER PARTS

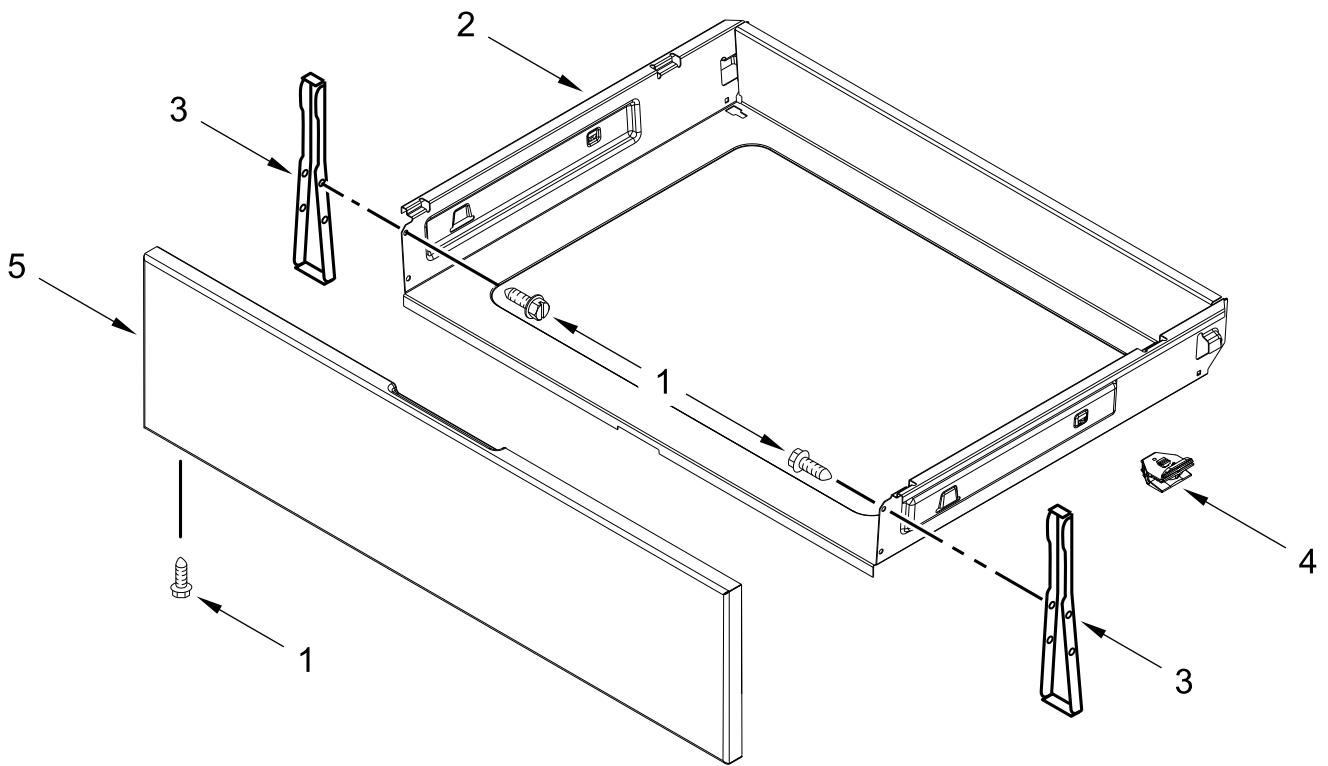

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10462910	Bracket, Mounting Drawer
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W10330070	Stainless

# OPTIONAL PARTS

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting