




**30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE
(Fingerprint Resistant)**

MODELS:

WFE550S0LZ2 (Stainless)

WFE550S0LV2 (Black Stainless)


COOKTOP PARTS

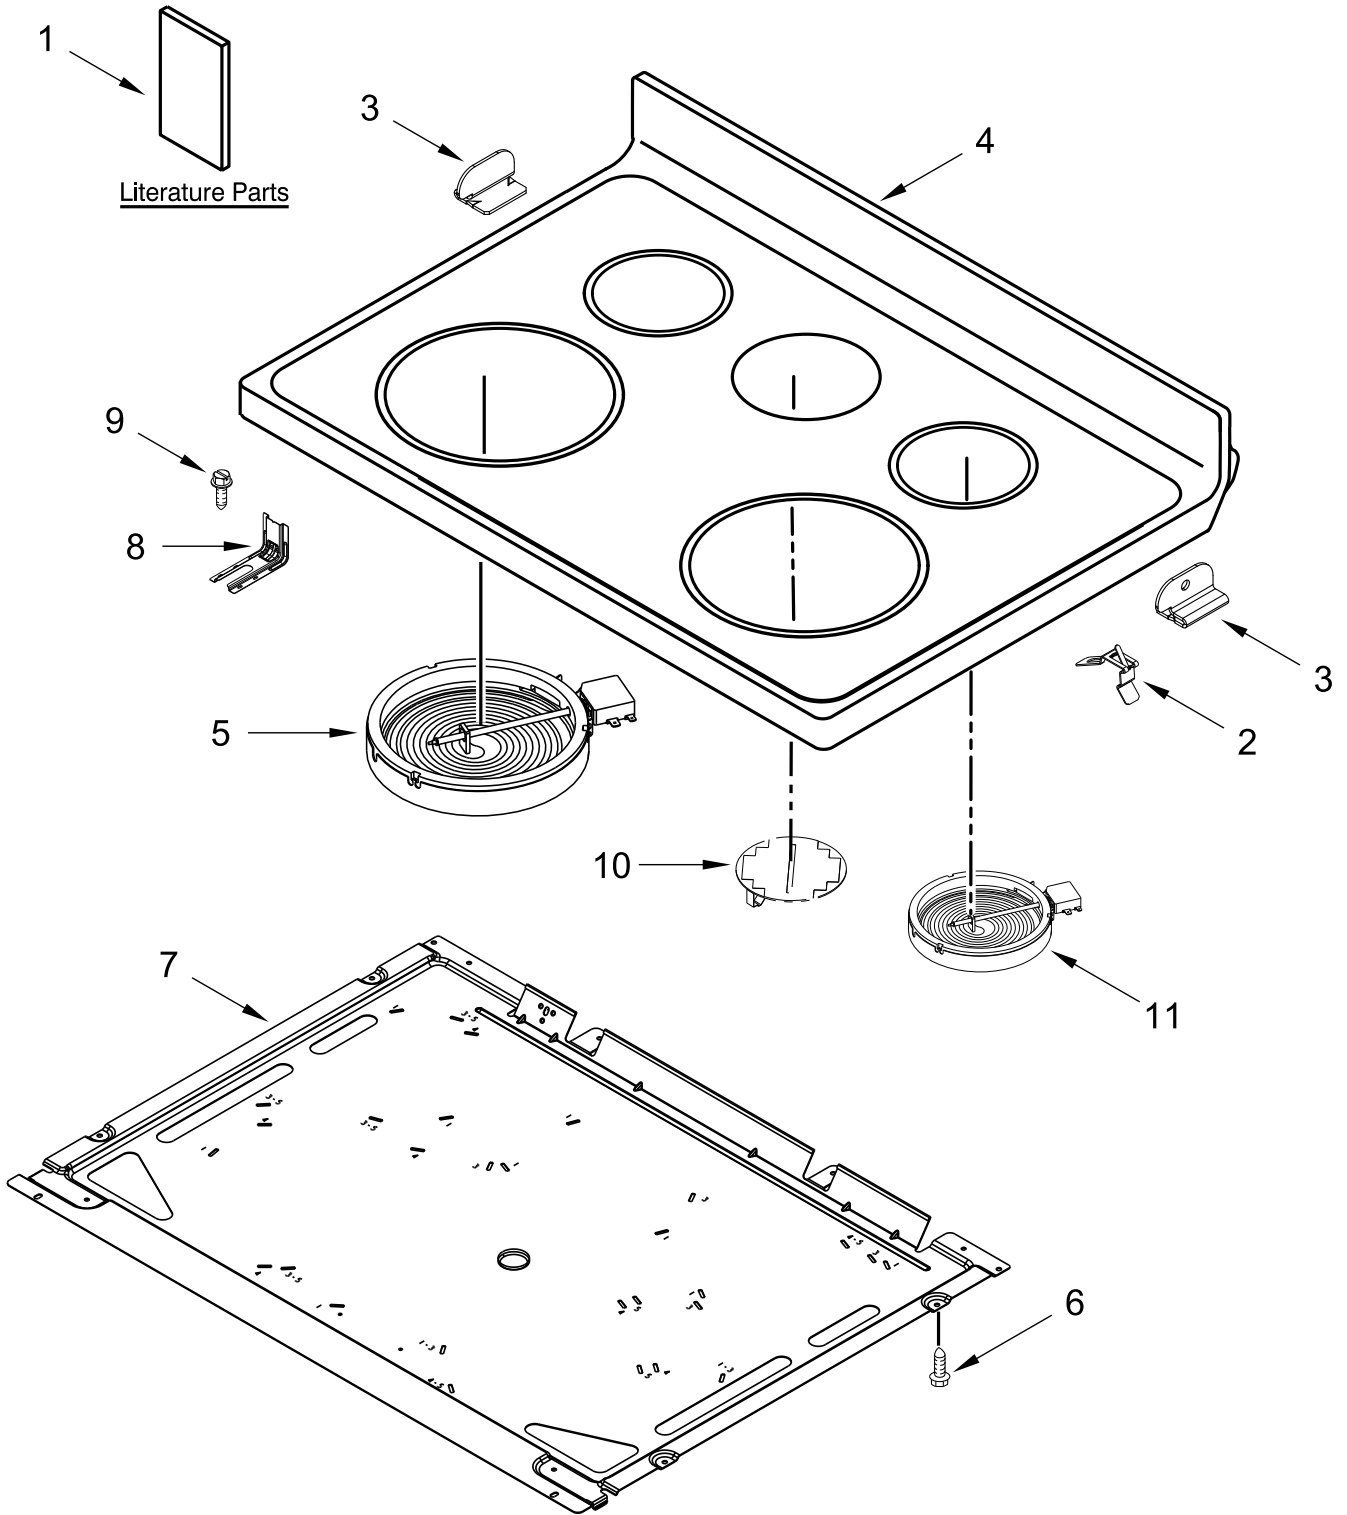

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	3196169	Screw	11	W10248261	Element (1200W)
	W11443025	Owners Manual	7	W10691223	Pan, Radiant Element			(Left Rear, Right Rear)
	W11524742	Quick Start Guide	8	W11379945	Bracket, Anti-Tip			FOLLOWING PARTS NOT ILLUSTRATED
	W11523158	Tech Sheet	9	7101P485-60	Screw, Anti-Tip Kit		W11452630	Harness, Main
2	W10225448	Spring, Element	10	W10799048	Element, Warm Zone		W11134592	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)			(Center)		W11134603	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)					W11134845	Harness, Cooktop (Right)
4		Cooktop					W11172528	Harness, Hidden Bake
	W11034836	Black					W10183541	Clip, Spring Steel
5	W10711900	Element (3000W) (Left Front)					3196520	Clip, Wire
	W10275048	Element (3000/1400W) (Right Front)						


CONTROL PANEL PARTS

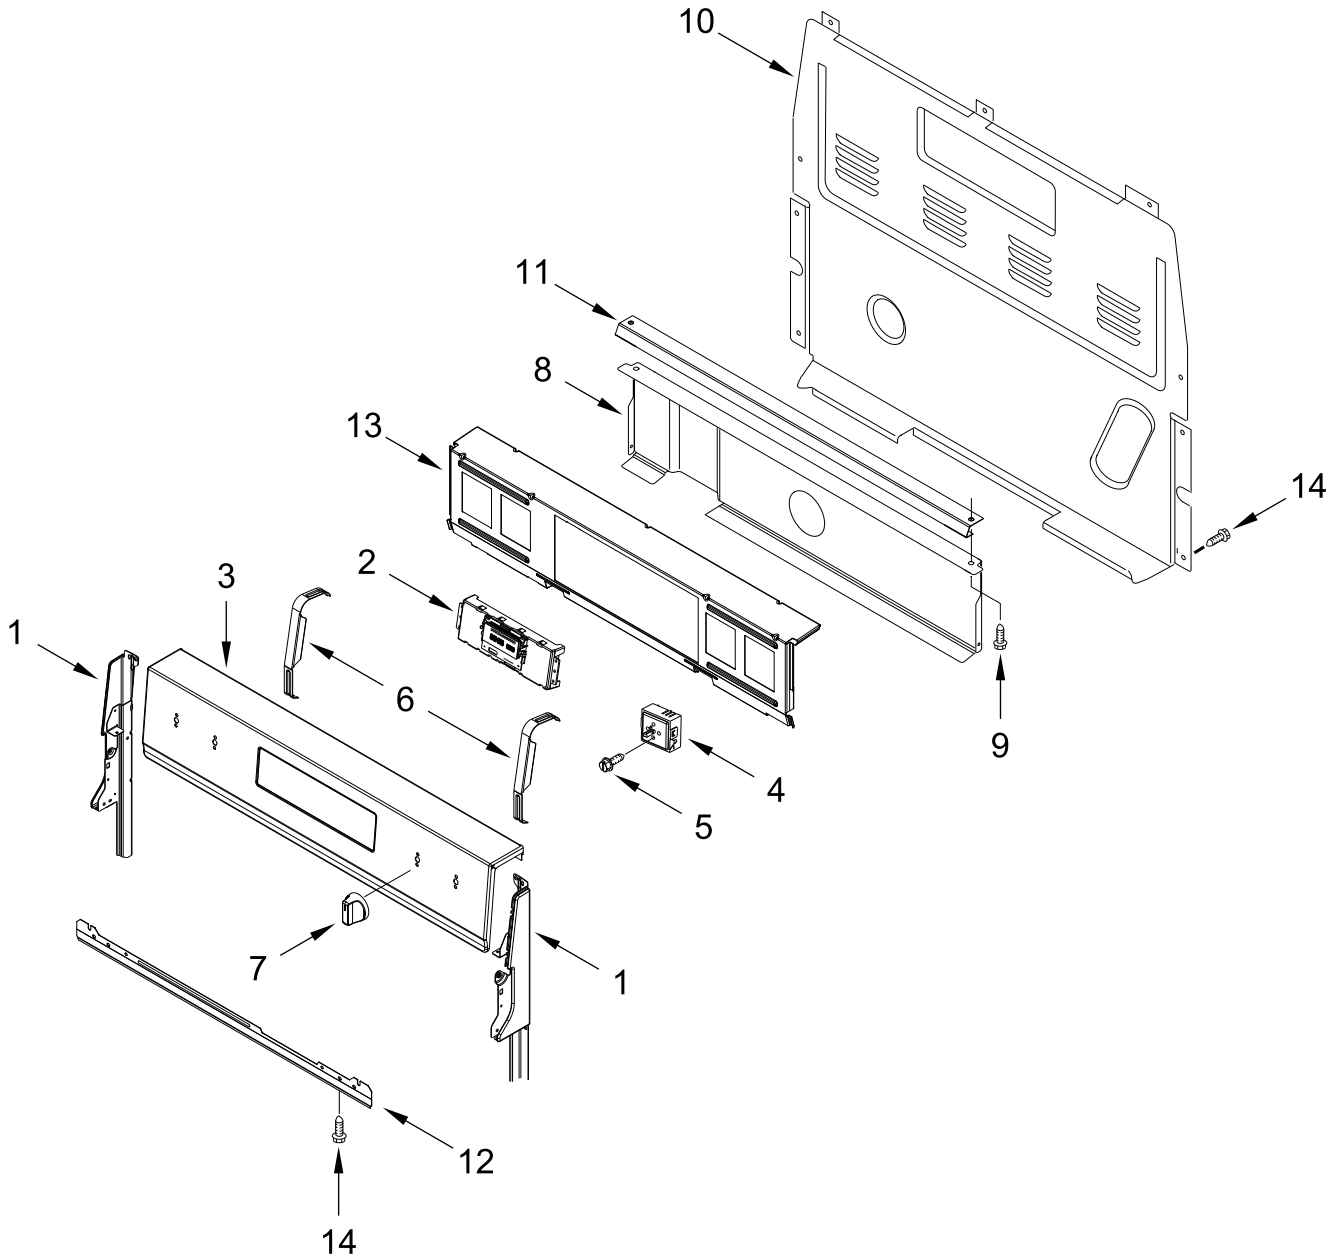

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	8	W10134247	Shield, Heat
	W11213290	Black (Left)			(Left Front and Right Front)	9	3400882	Screw
	W11213292	Black (Right)				10	8272473	Cover, Upper Rear
2		Control, Electronic (LCX)		3148951	Switch, Infinite (Right Rear and Left Rear)	11	W10525121	Bracket, Console Mounting
	W11527158	Black				12		Bracket, Eye Brow
3		Panel, Console	5	3196178	Screw		W11051312	Black
	W11089993	Stainless	6	W10856361	Bracket, Control	13	W10901802	Panel, Backer
	W11089994	Black Stainless	7		Knob	14	3196169	Screw
				W11022717	Stainless			
				W11027166	Black Stainless			


CHASSIS PARTS

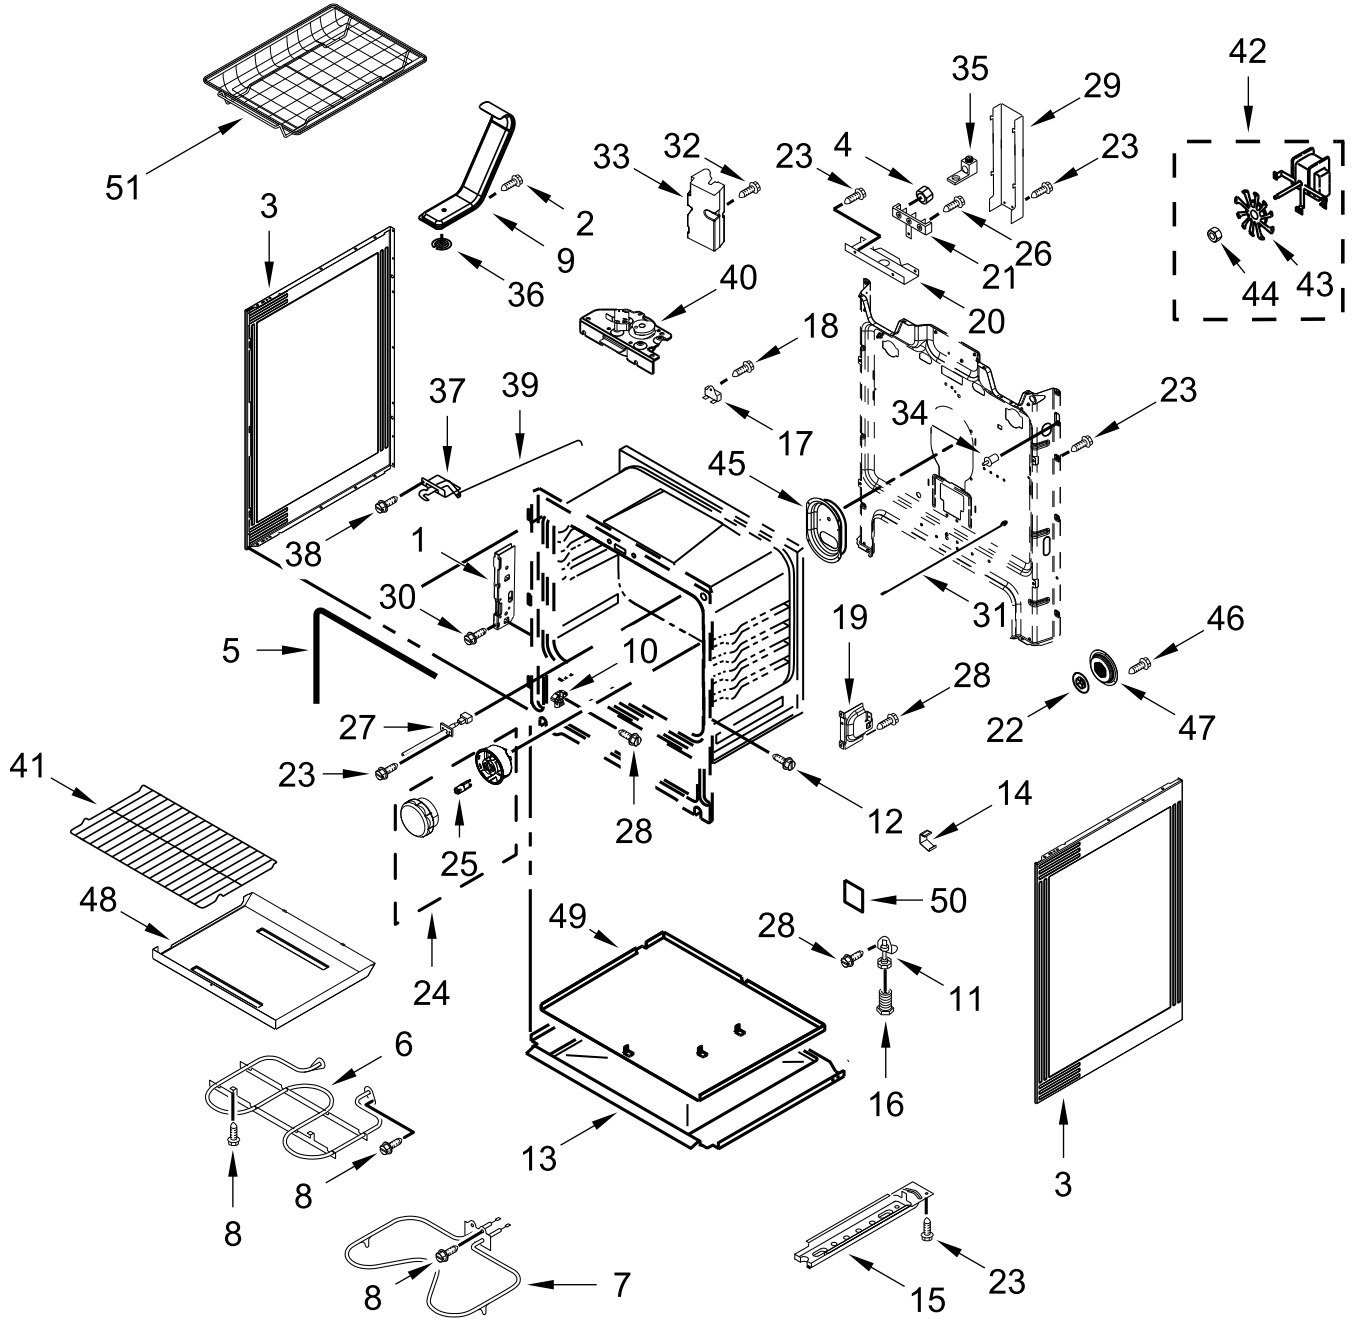

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	19	W10404688	Clip, Oven Support	38	3196560	Screw
2	3196154	Screw	20	3186034	Bracket, Service	39	W10078380	Rod, Latch
3		Panel, Side	21	W10245259	Block, Terminal	40	W10107820	Rear Door Latch Assembly
	W10162245	Black	22	3400968	Nut	41	W11173792	Rack, Oven
4	3400029	Nut	23	3196178	Screw	42	W11403617	Fan, Convection
5	W11491751	Seal, Door	24	W11544377	Light Assembly	43	W11425715	Blade, Fan
6	9757340	Element, Broil	25	W10571723	Bulb, Halogen 40 Watts	44	W11433702	Nut
7	9755770	Element, Bake	26	3400016	Screw	45	W10134126	Bracket, Fan
8	3196174	Screw	27	W10181986	Sensor, Oven	46	4449809	Screw
9	W10134285	Tube, Vent	28	3196169	Screw	47	W10134124	Cover, Conv Fan
10	W10674705	Glide, Drawer Front	29	W10326122	Cover, Terminal Block	48	W10183712	Tray, Hidden Bake
11	W10341186	Front Foot Assembly	30	W10031780	Screw	49	W10134125	Shield, Heat
12	W10067840	Screw	31	W11370462	Rod, Door Switch	50	W10646923	Card, Insulator
13	W10134121	Tray, Insulation	32	W11034869	Screw	51	W11526015	Basket, Air Fry
14	W10137382	Clip, Panel	33	W10910404	Counterweight			FOLLOWING PARTS NOT ILLUSTRATED
15	W10390008	Base Rail Assembly (Left)	34	W10627802	Switch, Door			
	W10390007	Base Rail Assembly (Right)	35	W10281322	Kit, Bare Wire Adapter Block	W10774939		Insulation, Wrap
16	W10058460	Foot, Leveling	36	W11092984	Screen, Vent	W11127324		Insulation, Back
17	3196548	Fuse, Thermal	37	9761013	Front Door Latch Assembly	W10333344		Insulation, Flue
18	3196172	Screw						

DOOR PARTS

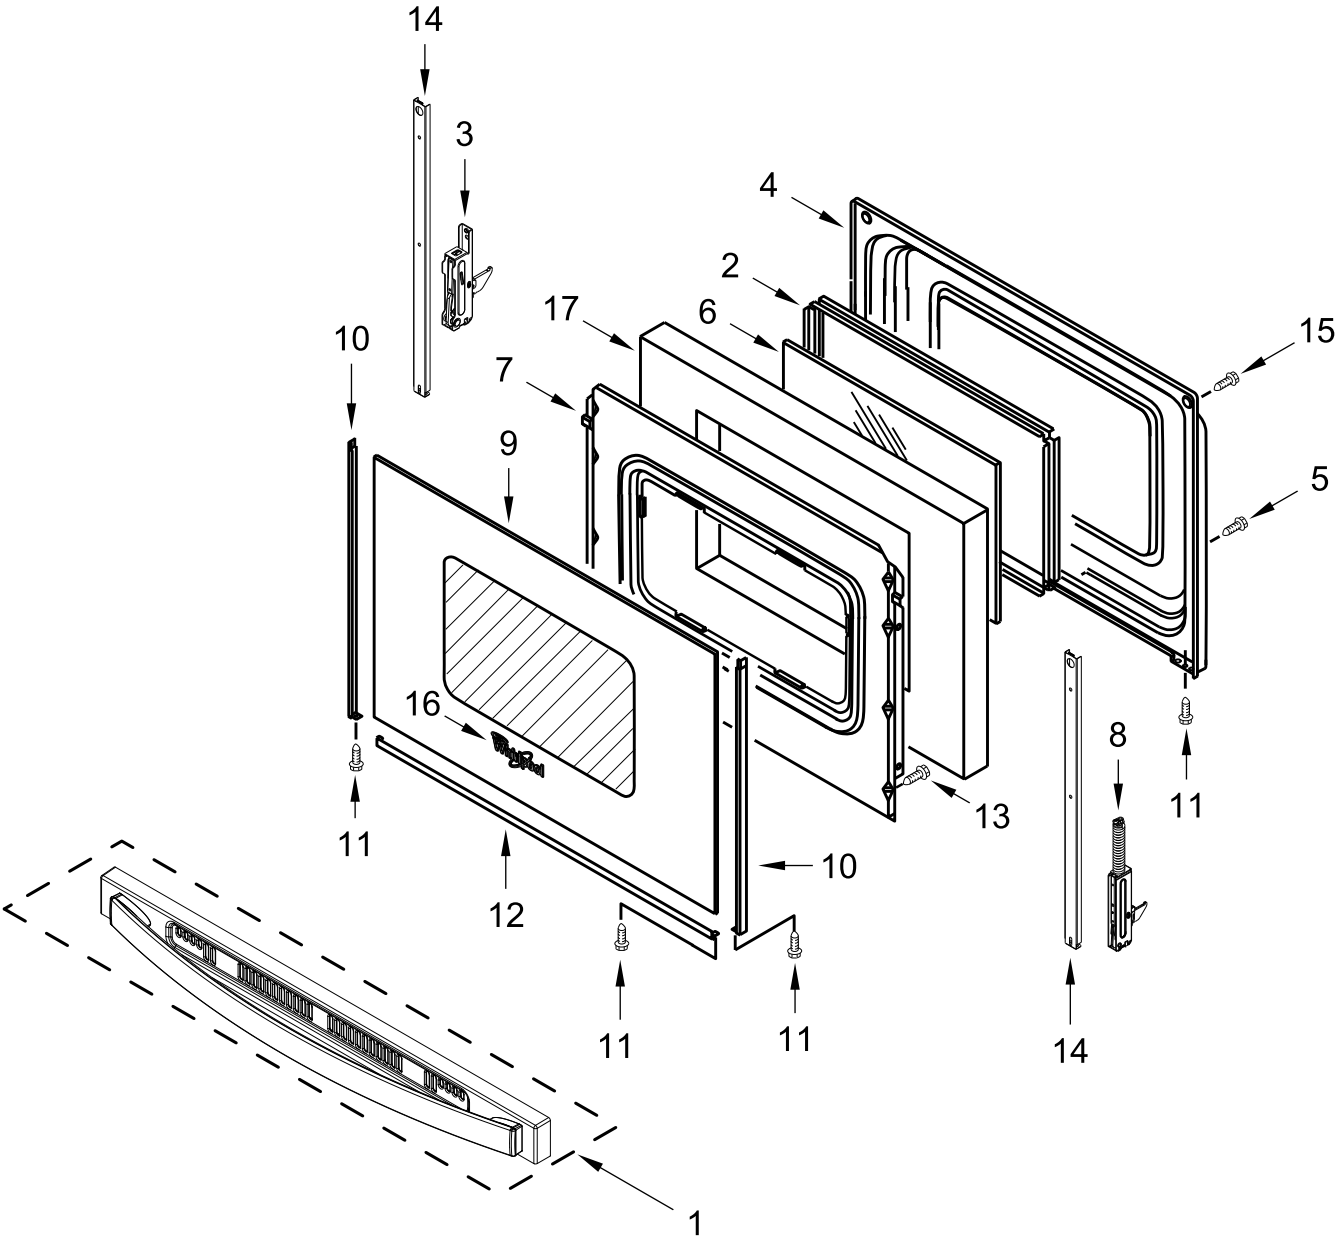


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11242950	Stainless
	W11242951	Black Stainless
2	W10316950	Frame, Glass
3	W10299227	Hinge, Door (Passive)
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	9761357	Retainer, Insulation
8	W10299224	Hinge, Active (With Spring)
9		Glass Assembly, Outer Door
	W10884159	Black
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10327235	Screw
12		Trim, Lower
	W11444043	Black
13	W10031780	Screw
14	W11379944	Strap, Door
15	W10200660	Screw
16	W10884775	Badge
17	W10278991	Insulation, Door Strip

DRAWER PARTS

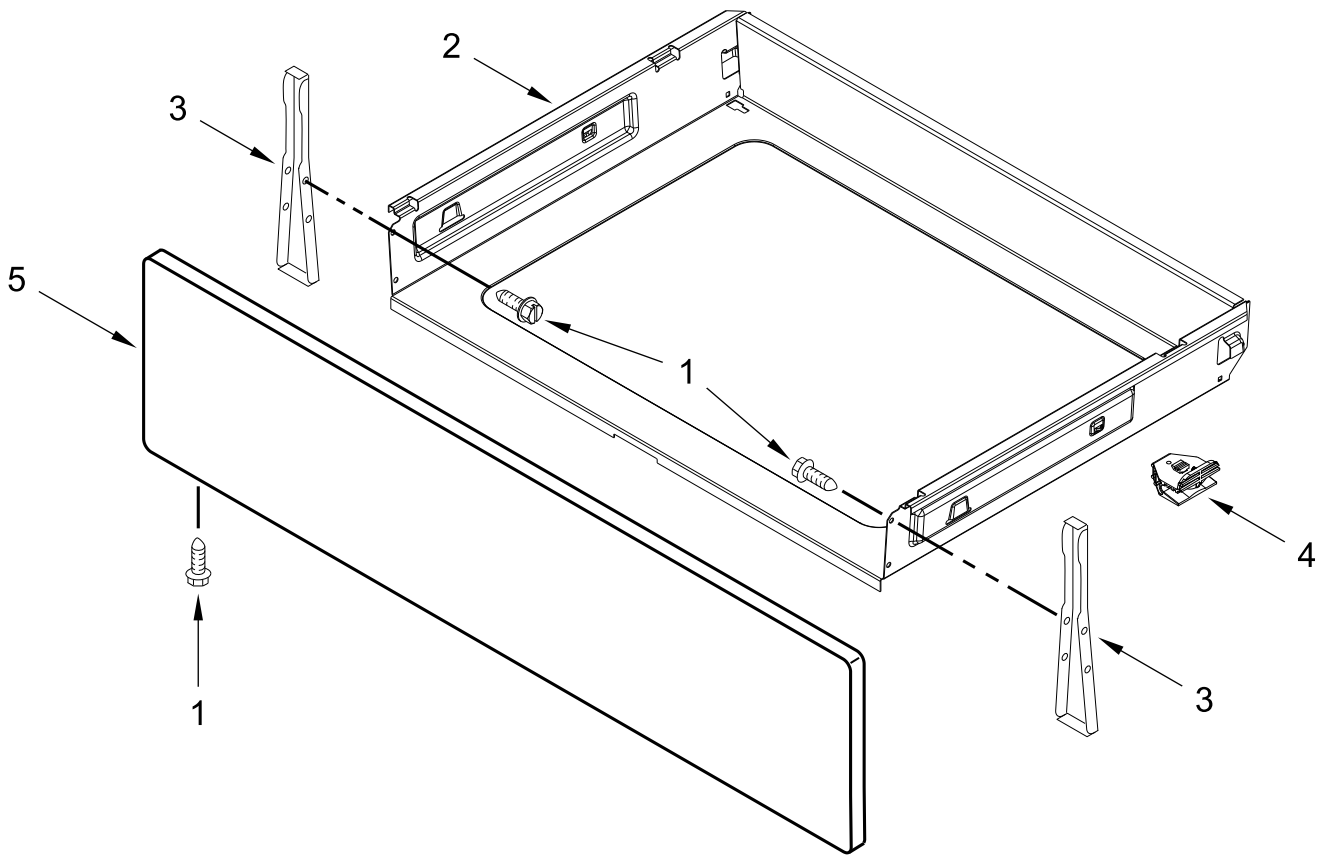

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage
3	W10462910	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11449698	Stainless
	W11449766	Black Stainless

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting