

KitchenAid®

 
MICROWAVE

MODELS:









KMBP100ESS20 (Stainless)

KMBP100EBS20 (Black Stainless)

OVEN PARTS

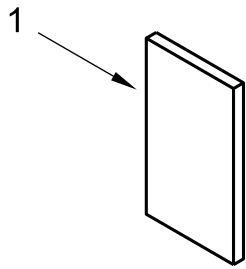


Literature Parts

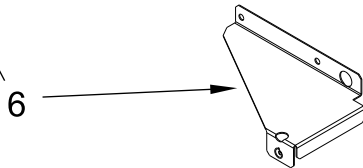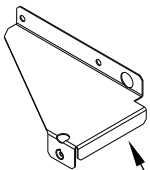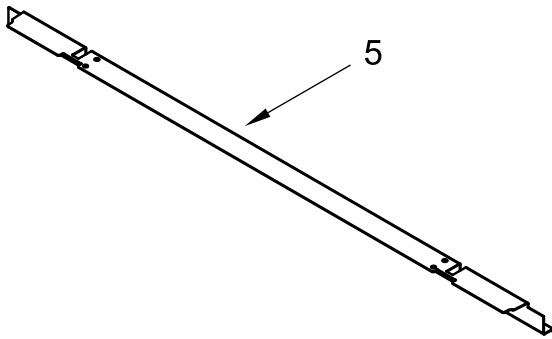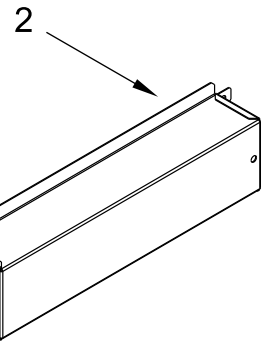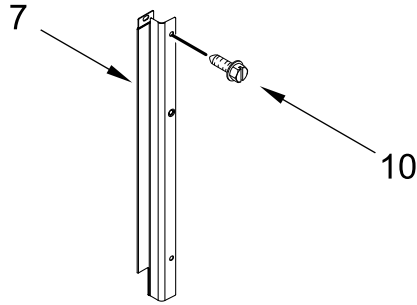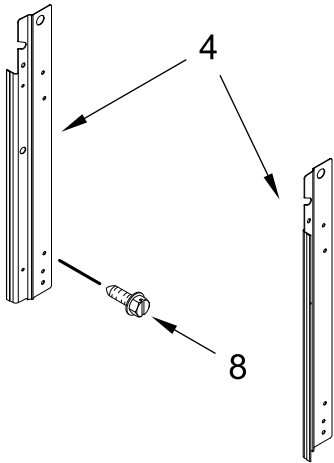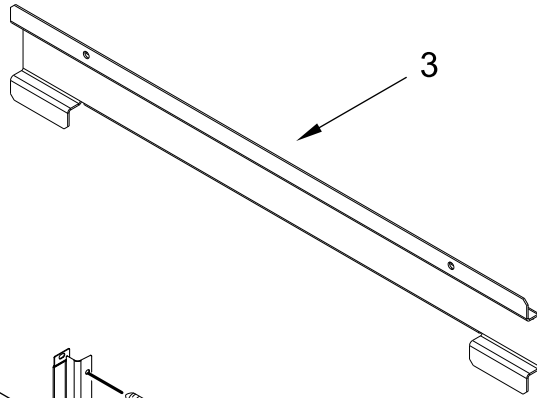        

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10239156	Bracket, Lower (Left)	10	W11404000	Screw
	W11382174	Owner's Manual		W10239157	Bracket, Lower (Right)			FOLLOWING PARTS NOT ILLUSTRATED
	W11340506	Quick Start Guide	7	W11239807	Trim, Bended Side (Left)		W11454022	Harness, Fan and Turntable
	W11382176	Tech Sheet		W11239805	Trim, Bended Side (Right)		W11539494	Harness, Inverter
2	W10239155	Box, Conduit	8	7101P653-60	Screw		W11356986	Harness, Communication
3	W10420960	Support, Microwave Module	9	7101P426-60	Screw		W11539527	Jumper Harness, Communication
4	W11235470	Rail, Side (Left)					W11394925	Bag, Hardware
	W11235471	Rail, Side (Right)					W11226264	Strap, Ground
5		Trim, Bottom					W11356992	Conduit
	W11312201	Black						

 
CONTROL PANEL PARTS

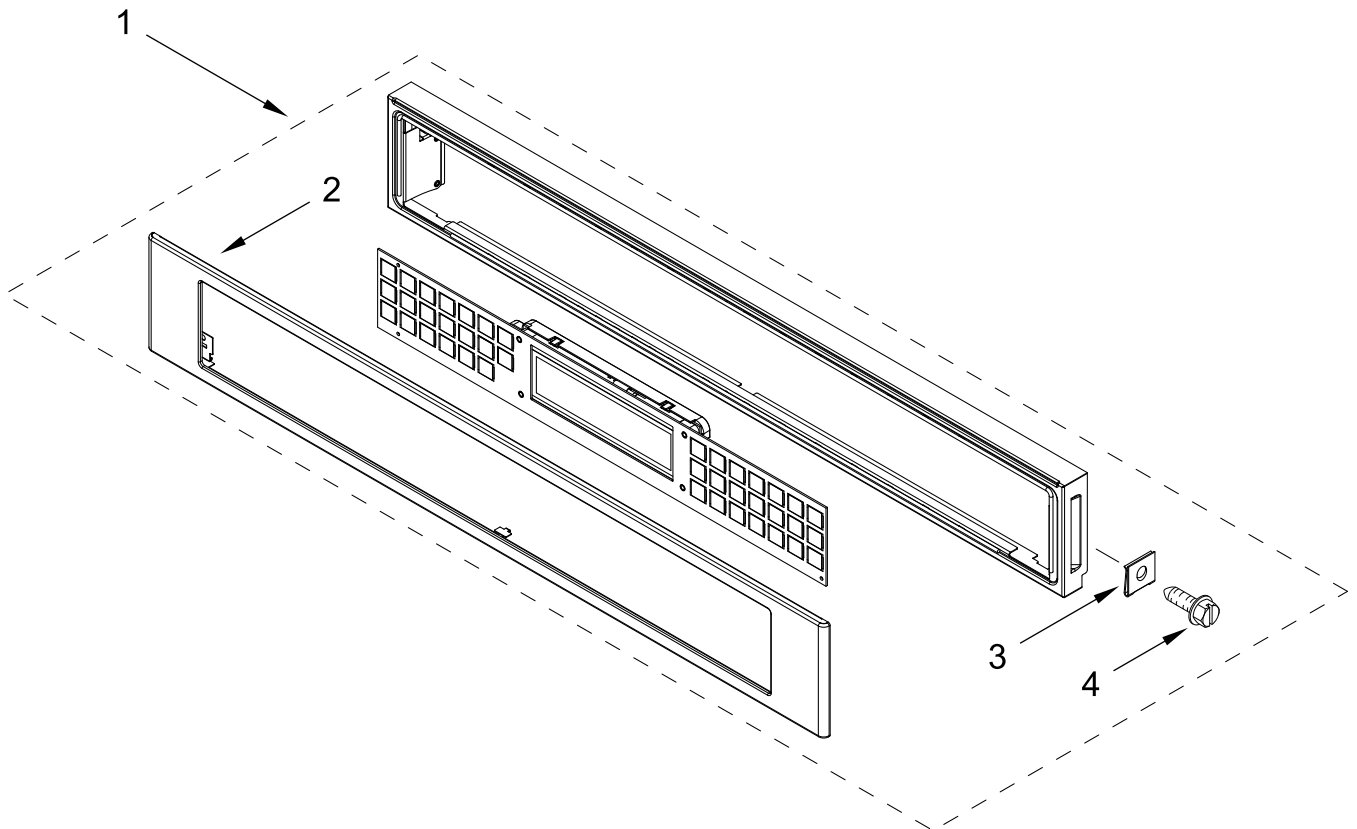

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Control Panel	2		Skin, Control Panel	3	4450118	Nut
	W11304131	Stainless		W10588740	Stainless	4	W11339492	Screw (Black)
	W11304141	Black Stainless		W10776407	Black Stainless			

 
MICROWAVE DOOR PARTS

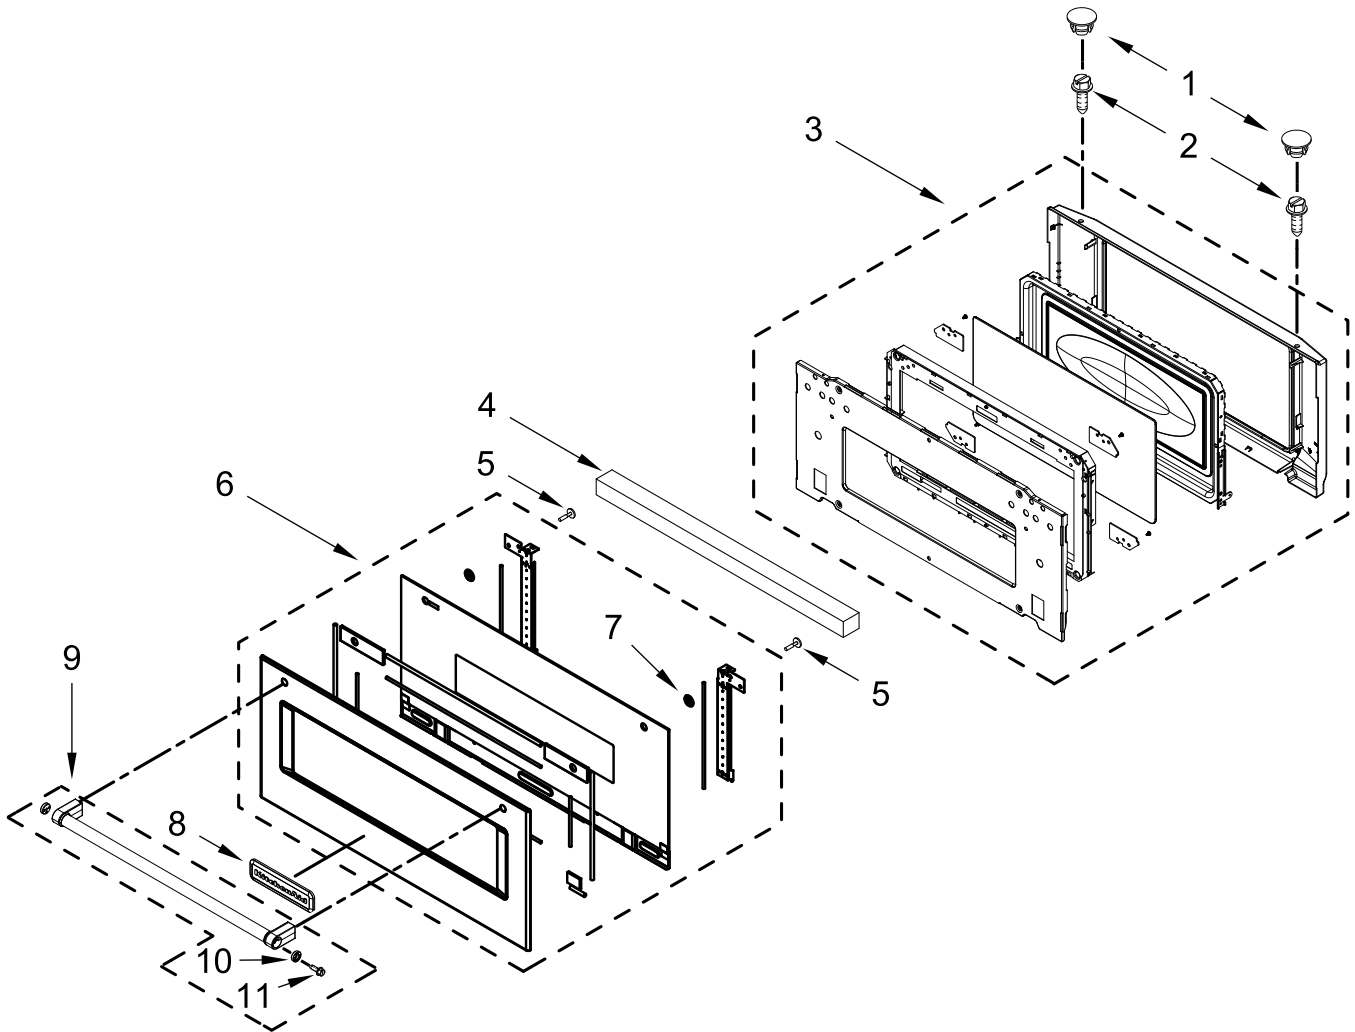

MICROWAVE DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6		Assembly, Outer Door	9		Assembly, Door Handle
2	7101P338-60	Screw		W11300490	Stainless			
3	W11328745	Inner Door Assembly		W11300496	Black Stainless		W11241572	Stainless
4	W10359769	Foam, Door Handle	7	W10319024	Washer, Door	10	W10551026	Medallion, Handle
5	W11317731	Screw (Black)	8	W10518672	Badge	11	W10656499	Screw

 
CABINET AND STIRRER PARTS

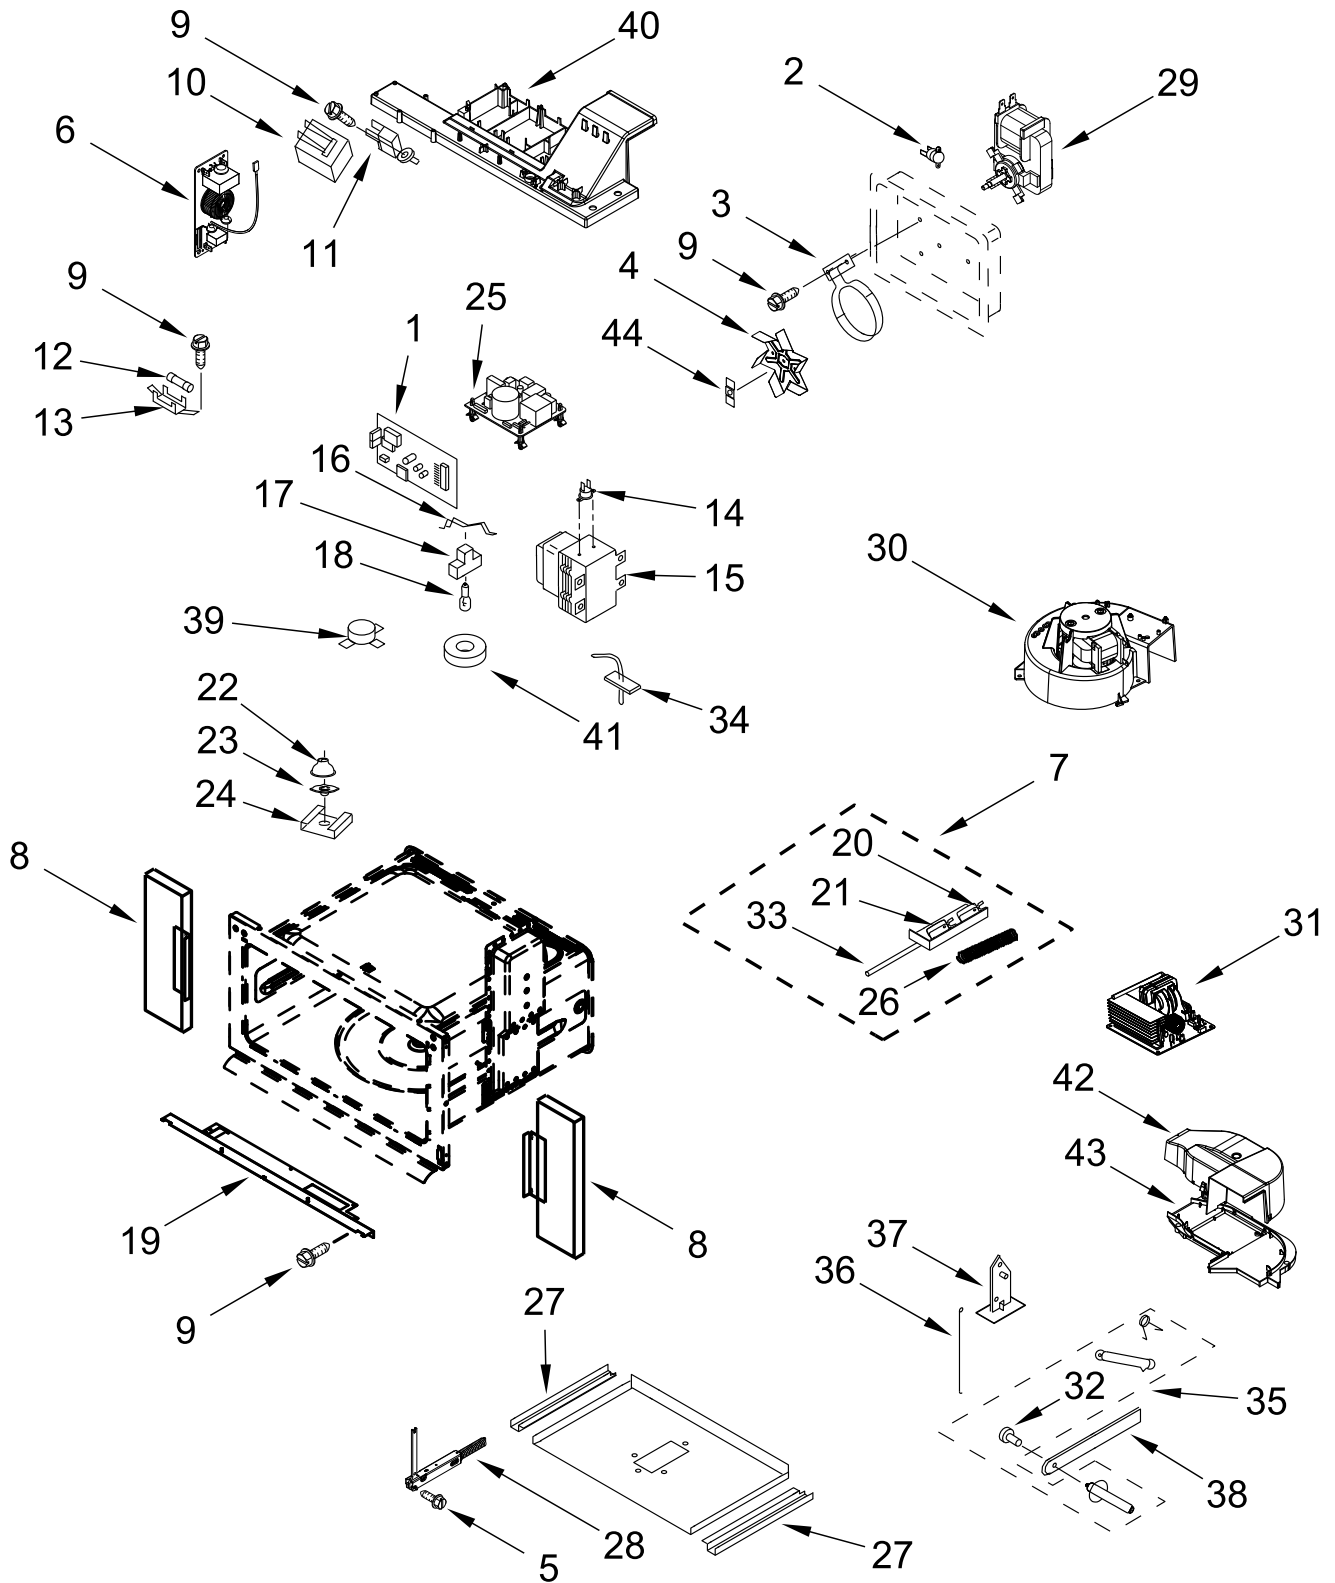

CABINET AND STIRRER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11289998	Manager, Appliance	15	W11504545	Magnetron	33	461967750464	Rod, Push
2	423107845441	Sensor, Convection	16	W10465869	Spring, Lamp	34	241960100002	Sensor, Temperature
3	461967848711	Heater, Convection Element	17	W10490593	Holder, Lamp	35	W10128850	Assembly, Sliding Arm
4	W11453899	Blade, Fan	18	W10795595	Lamp, Halogen	36	461967570351	Spring, Torsion
5	461967825781	Screw (Shoulder)	19	W11334716	Vent, Top Microwave	37	461967750494	Support
6	W11505129	Filter, Noise	20	461967848881	Switch	38	W11213889	Arm, Sliding
7	W11555168	Harness, Interlock	21	W10876593	Holder, Switch	39	W10460457	Sensor, Humidity
8	461967017491	Trim, Side (Left)	22	423107022541	Reflector	40	461967754821	Duct, Magnetron
	461967017481	Trim, Side (Right)	23	423107720491	Lens, Lamp	41	W10769147	Sealing, Lamp
9	461967825321	Screw	24	W11440819	Clip, Spring	42	W11591019	Housing, Upper Inverter
10	461967848621	Transformer, Light (20V)	25	W10260060	Board, Power Supply	43	W11591018	Housing, Lower Inverter
11	461967842541	Thermoactuator	26	423107570871	Spring, Release Rod	44	W10120233	Nut, Speed
12	241908600053	Fuse	27	461967008461	Support, Bottom			
13	4375231	Block, Fuse	28	W11319465	Hinge, Door			
14	461967846741	Thermostat, Magnetron	29	W11233698	Motor, Convection Fan			
			30	W11131760	Cooling Fan Assembly			
			31	W11504539	Inverter			
			32	461967510191	Bushing			

 INTERNAL MICROWAVE PARTS

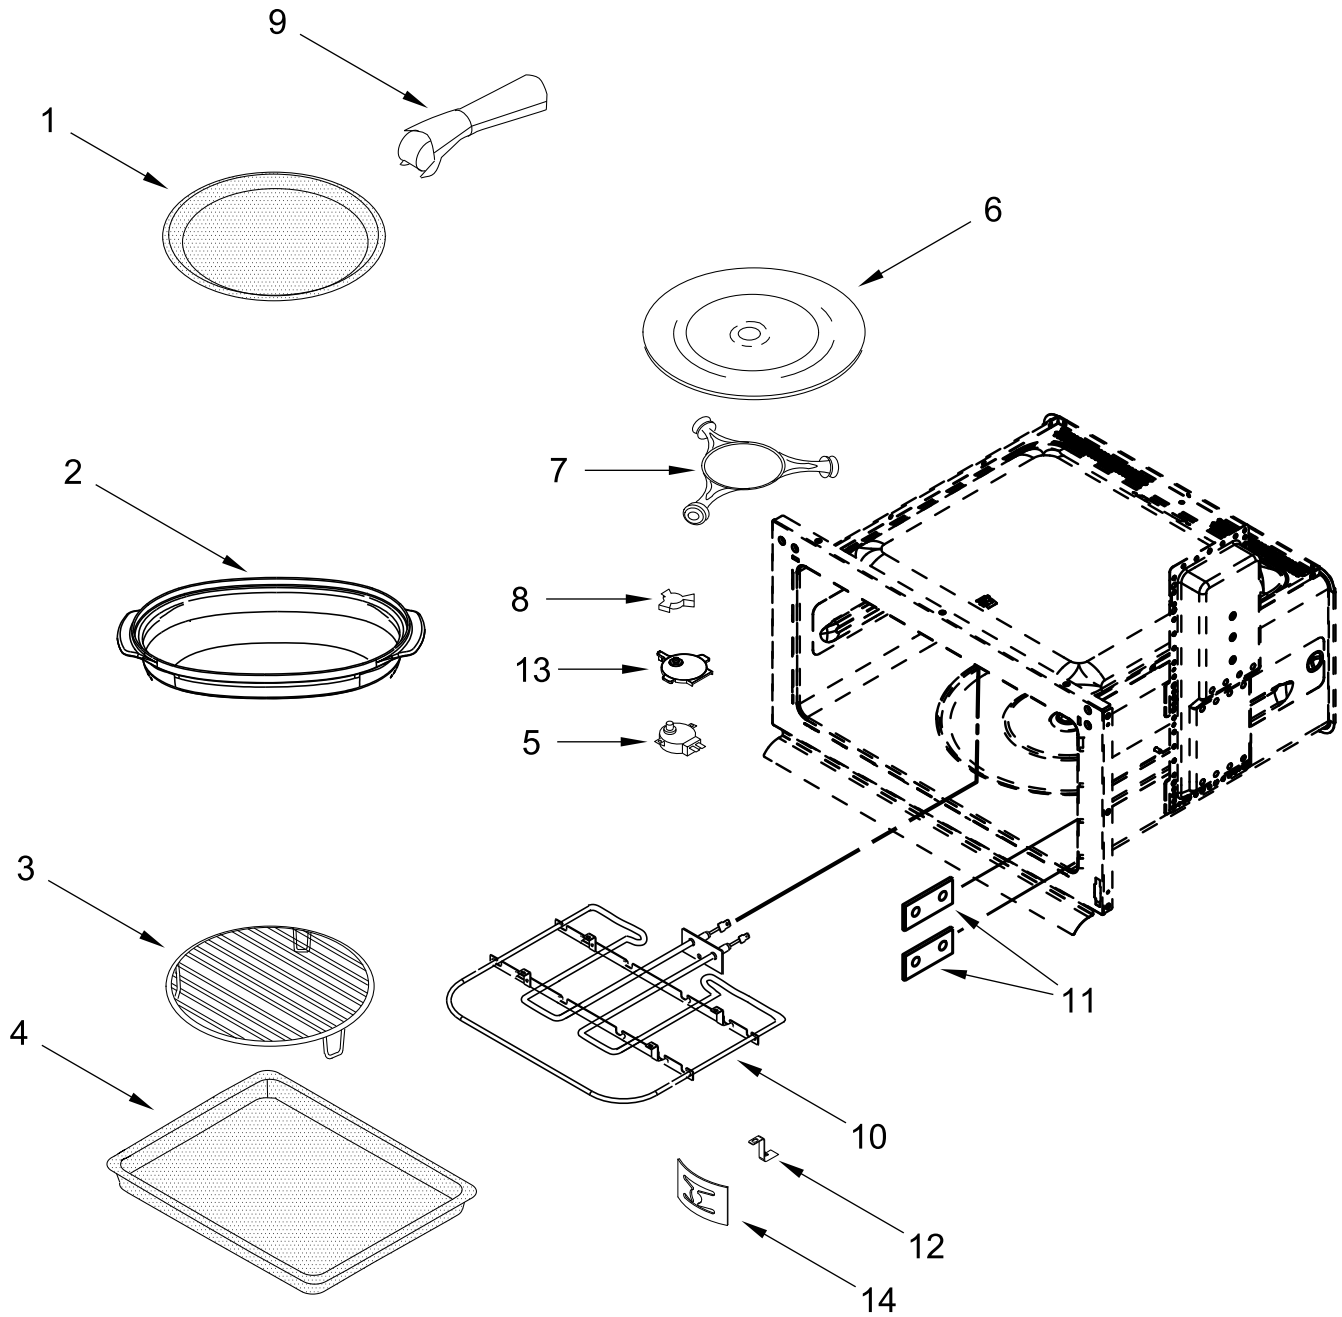

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp	7	W10367316	Ring, Turntable	13	461967753742	Adapter, Turntable Motor
2	W10796139	Steamer	8	W10545578	Drive, Turntable	14	252262898008	Support, Spring Lock Grill
3	W10748279	Rack, Low Convection	9	461968929542	Handle, Pan			
4	W10750839	Plate, Baking	10	W10387651	Element, Grill			
5	461967848971	Motor, Turntable	11	461967451001	Plate, Cover			
6	W11340343	Turntable	12	461967753871	Support, Element			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	261869	Cord Brown
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	W11042467	Spray, Stainless Steel Cleaning
		Medallion, Handle
	W10846205	Chrome
	W10846206	Black
	W10846207	Red
	W10660052	Container, Microwave Steaming
	W10187336A	Crisping Tray with Handle
	W10752697	30 In Vent Trim Kit
	W10842586	SPACER