


KitchenAid®

GAS RANGE
Includes Griddle

MODELS:

KFGC558JSS05 (Stainless)


BURNER BOX AND GRIDDLE PARTS

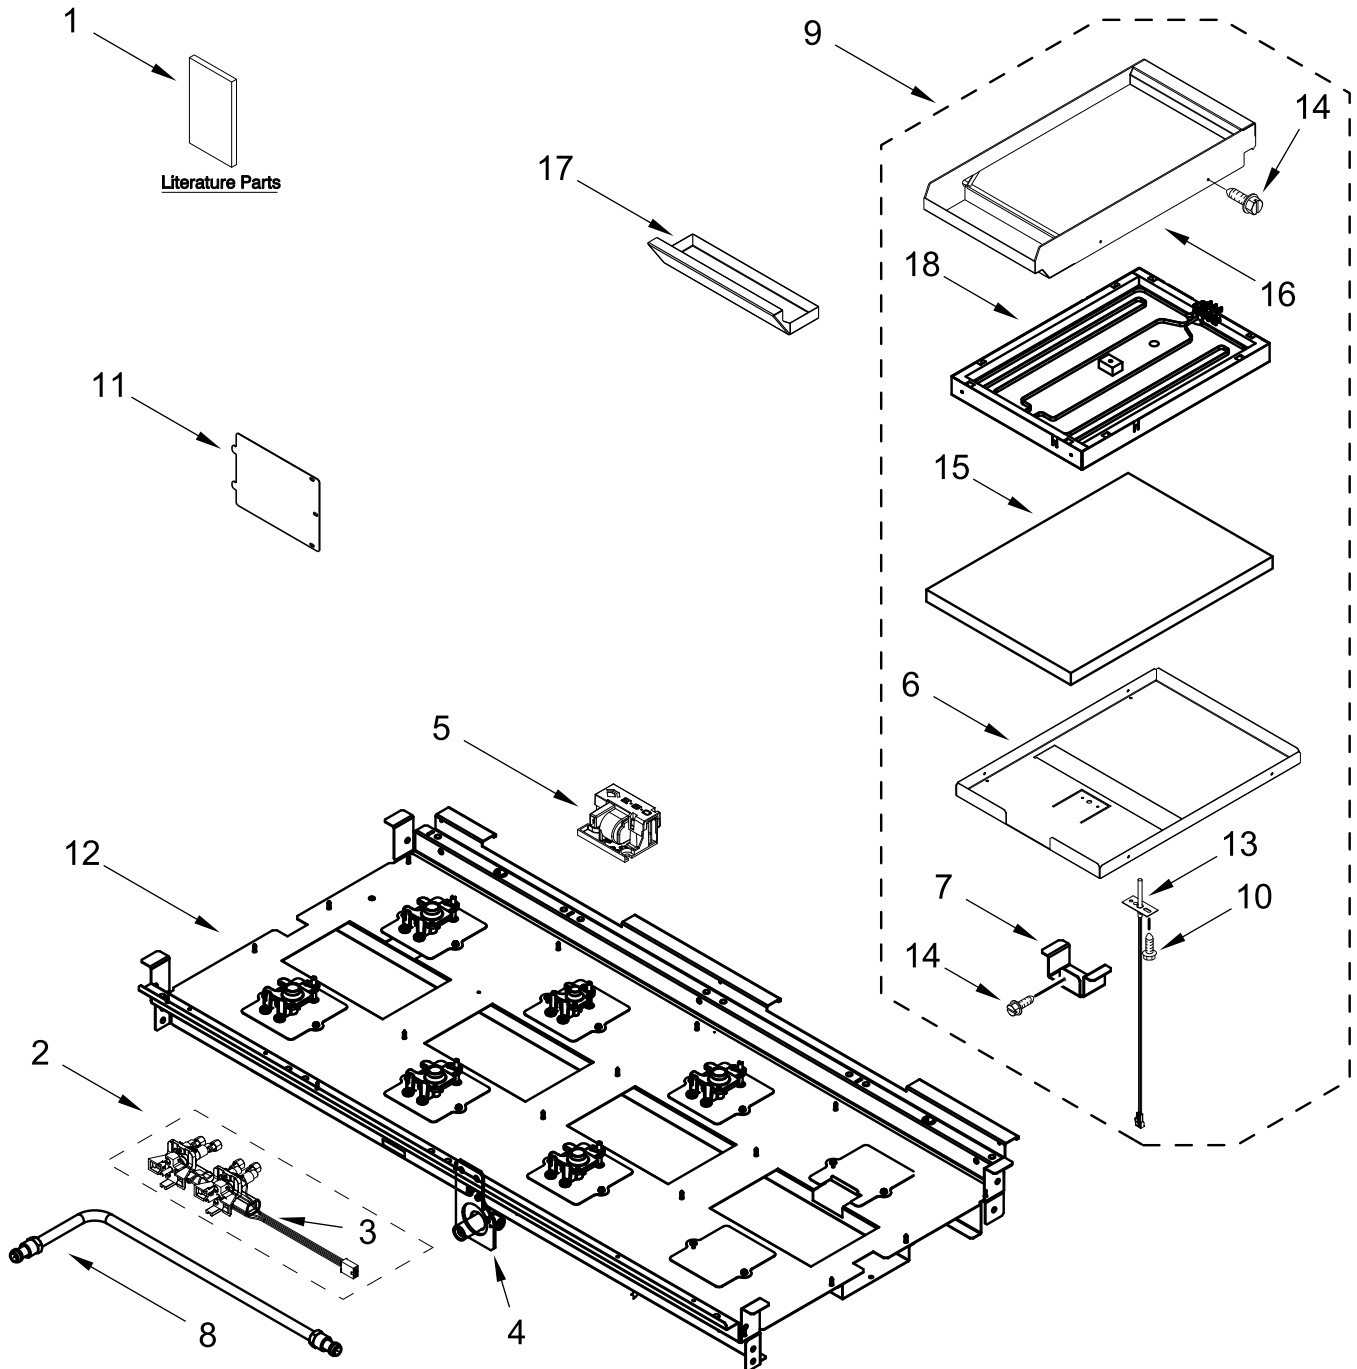

BURNER BOX AND GRIDDLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11330430	Tray, Griddle Insulation	18	W10891698	Element, Griddle
	W11508863	Use & Care Guide						FOLLOWING PARTS NOT ILLUSTRATED
	W11508887	Installation Instructions	7	W11121384	Bracket, Griddle-RTD			
	W11184759	Guide, Internet Connectivity	8	W10892809	Tube, Manifold Supply (Left)		W11448064	Harness, Main (48")
	W11364680	Guide, Quick Start		W10892804	Tube, Manifold Supply (Left Center)		W10903727	Harness, Griddle
	W11575704	Wiring Diagram (Cooktop)		W10892805	Tube, Manifold Supply (Right Center)		W11200329	Harness, Cooktop
	W11565468	Tech Sheet					W10780278	Harness, Door Lock
2	W11183720	Assembly, Valve Manifold (Left Front And Left Rear)	9	W11505236	Griddle Module Assembly		W11200318	Harness, Communication
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	10	3196160	Screw		W11242785	Harness, WIFI
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	11	W10115843	Cover, Ignition		313438	Clip, Harness
			12		Box, Burner (Not Serviced)		W10624584	Cord, Power
			13	W10891584	Sensor, Griddle		4450800	Screw, Grounding
			14	W10162096	Screw		W10253333	Bracket, Anti-Tip
			15	W11121383	Insulation, Griddle		7101P485-60	Screw, Anti-Tip Kit
			16	W11360151	Module, Griddle		W11238042	Kit, LP Conversion
			17	W10276497	Tray, Griddle Drip		W11311196	Ignitor Wire, Wire-Electrode Bake
3	W10903728	Switch, Harness					W11311197	Ignitor Wire, Wire-Electrode Broil
4	W11121194	Bracket, Manifold						
5	W11121317	Module, Spark						


COOKTOP, BURNER AND GRATE PARTS

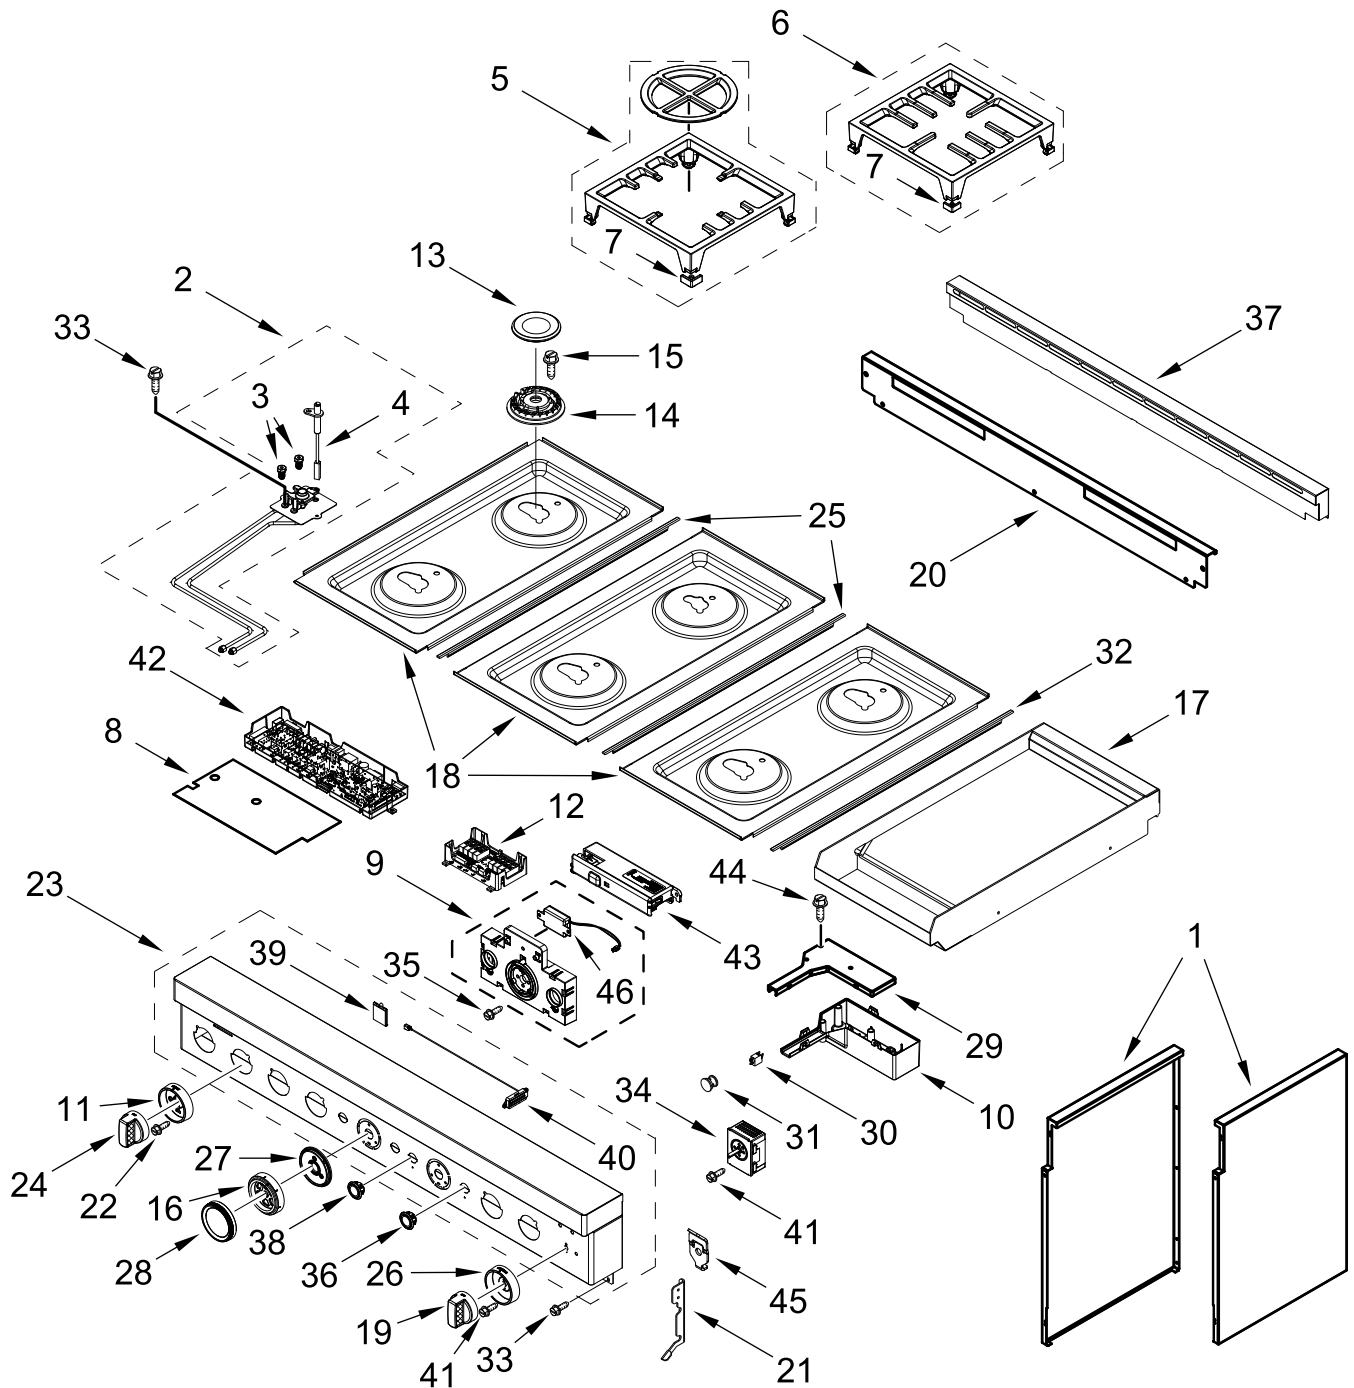

COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	9	W11436336	User Interface	24		Knob, Burner
	W11111428	Panel, Cabinet Side (Right)	10	W11205795	Cover, WIFI Outer	W10912166		Stainless (Left Rear, Left Center Front, Right Center Rear)
2	W10892793	Assembly, Orifice Holder (Left Front)		W10881642	Bezel (Front Burners)			
	W10892492	Assembly, Orifice Holder (Left Rear)		W10883433	Bezel (Rear Burners)	W10883172		Stainless (Left Front, Left Center Rear, Right Center Front)
	W11159461	Assembly, Orifice Holder (Left Center Front)	12	W10871065	Manager, Appliance (Expansion)			
	W10892808	Assembly, Orifice Holder (Left Center Rear)	13		Cap, Burner	25		Trim, T-Strip
	W10892505	Assembly, Orifice Holder (Right Center Front)		W11121390	Black (Includes 6)	W10271524		Black
	W10892446	Assembly, Orifice Holder (Right Center Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)	26	W10886700	Bezel, Griddle
	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)		W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)	27	W11500871	Stainless
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)		W10891978	Spreader, Flame (AUX) (Left Center Rear)	28		Knob, Oven Temperature
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Center Front)	15	W11323261	Screw (8-18 X 1")	W11500869		Stainless (For 18" Oven)
	W10892438	Orifice, Simmer (5K) (Left Center Rear)		W11323309	Screw (8-18 X 1/2")	W11500868		Stainless (For 30" Oven)
4	W11238757	Igniter (Left Front, Right Center Front)	16		Knob, Oven Mode	29	W11205794	Cover, WIFI Inner
	W11114379	Igniter (Left Rear)		W11500864	Stainless (For 18" Oven)	30	W10116114	Light, Indicator Housing
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)		W11500865	Stainless (For 30" Oven)	31	W10294500	Lens, Indicator Light
	W11291183	Burner, Grate (With Wok Ring)	17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)	32	W10291193	Trim, L-Strip
	W11291179	Burner, Grate	18		Panel, Cooktop	33	7101P426-60	Screw
	W11042504	Bumper, Grate		W11038235	Black (Left)	34	W11033497	Control, Griddle
	W11281269	Barrier, Appliance Manager		W11038257	Black (Left Center)	35	3400814	Screw
				W11038243	Black (Right Center)	36	W11241510	Button Assembly, Oven Start
			19		Knob, Griddle	37	W11476244	Island Trim
				W10912167	Stainless	38	W11241511	Button Assembly, Oven Light
			20	W10323252	Trim, Island Insert	39	W10896366	Assembly, Light Pipe
			21	W10130760	Bracket, Moving Console (Left)	40	W11130078	Antenna, WIFI
				W10130759	Bracket, Moving Console (Right)	41	7101P309-60	Screw
			22	W11328357	Screw	42	W11543346	Manager, Powermax Appliance
			23	W10877951	Panel, Control	43	W11110768	Assembly, WIFI Module
						44	7101P624-60	Screw
						45	W11036559	Spring Clip, Range
						46	W10568405	Assembly, Speaker


48" CHASSIS PARTS

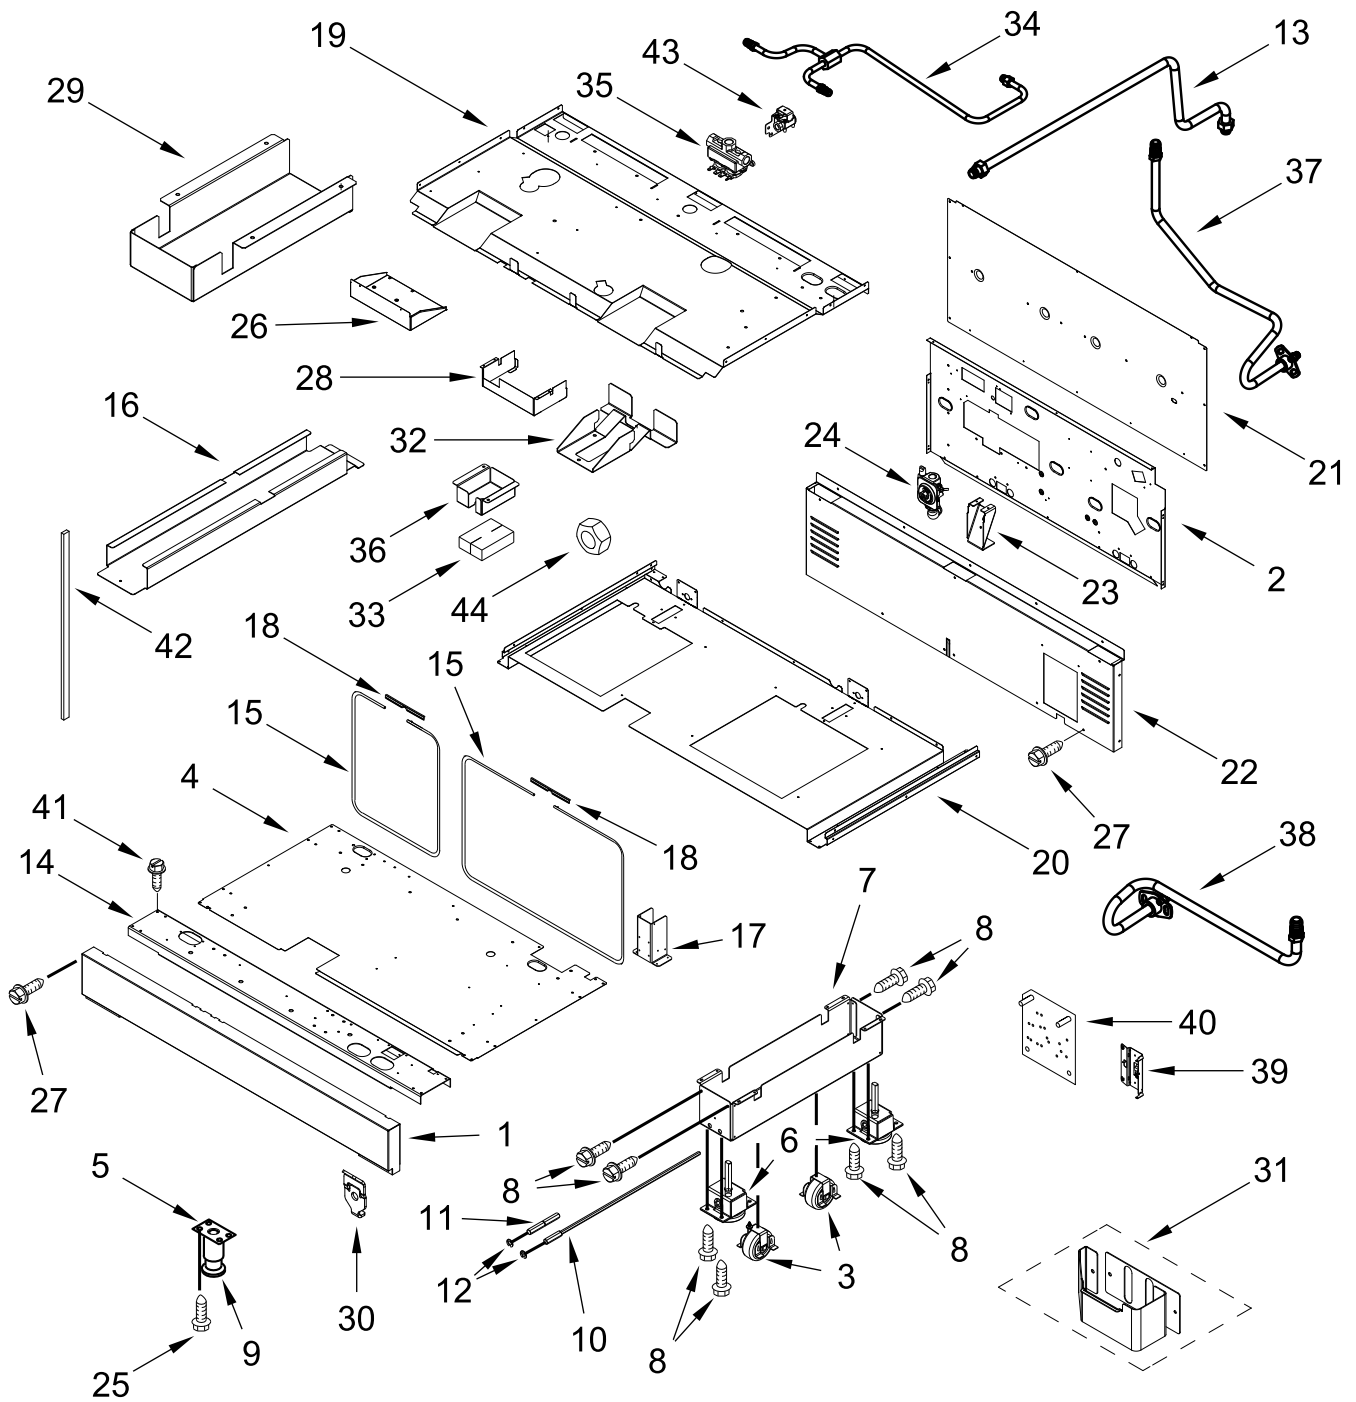

48" CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394802	Kickplate	16	W11050145	Duct-Chassis, Rear	30	W11036559	Spring Clip, Range
2	W11324987	Back, Chassis	17	W10115819	Column, Central	31	W11199181	Cover, Foot (Left)
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
4	W11110260	Duct, Bottom (48")	19	W11324984	Top, Chassis	32	W11190223	Bracket, Bake Alignment
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10311009	Insulation, Broil Cover
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W11112366	Tube, Valve (Double)
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145680	Valve, Dual
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10310985	Cover, Broil
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W11109238	Tube, Broil
10	W10115869	Shaft, Long	25	3400518	Screw	38	W11106980	Tube, Bake
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager	39	W10145362	Bracket-Board, DSI
12	489504	E-Ring	27	7101P426-60	Screw	40	W10511278	Module, Spark DSI
13	W11181648	Tube, Pressure Regulator	28	W11369237	Cabinet, Appliance Manager	41	3196560	Screw
14	W11369238	Support, Channel	29	W11368831	Channel, Wire	42	W10919715	Gasket
15	W11115328	Gasket, Oven (30")				43	W10311268	Valve, Single
	W11115326	Gasket, Oven (18")				44	112432	Nut, Hex


30" OVEN PARTS

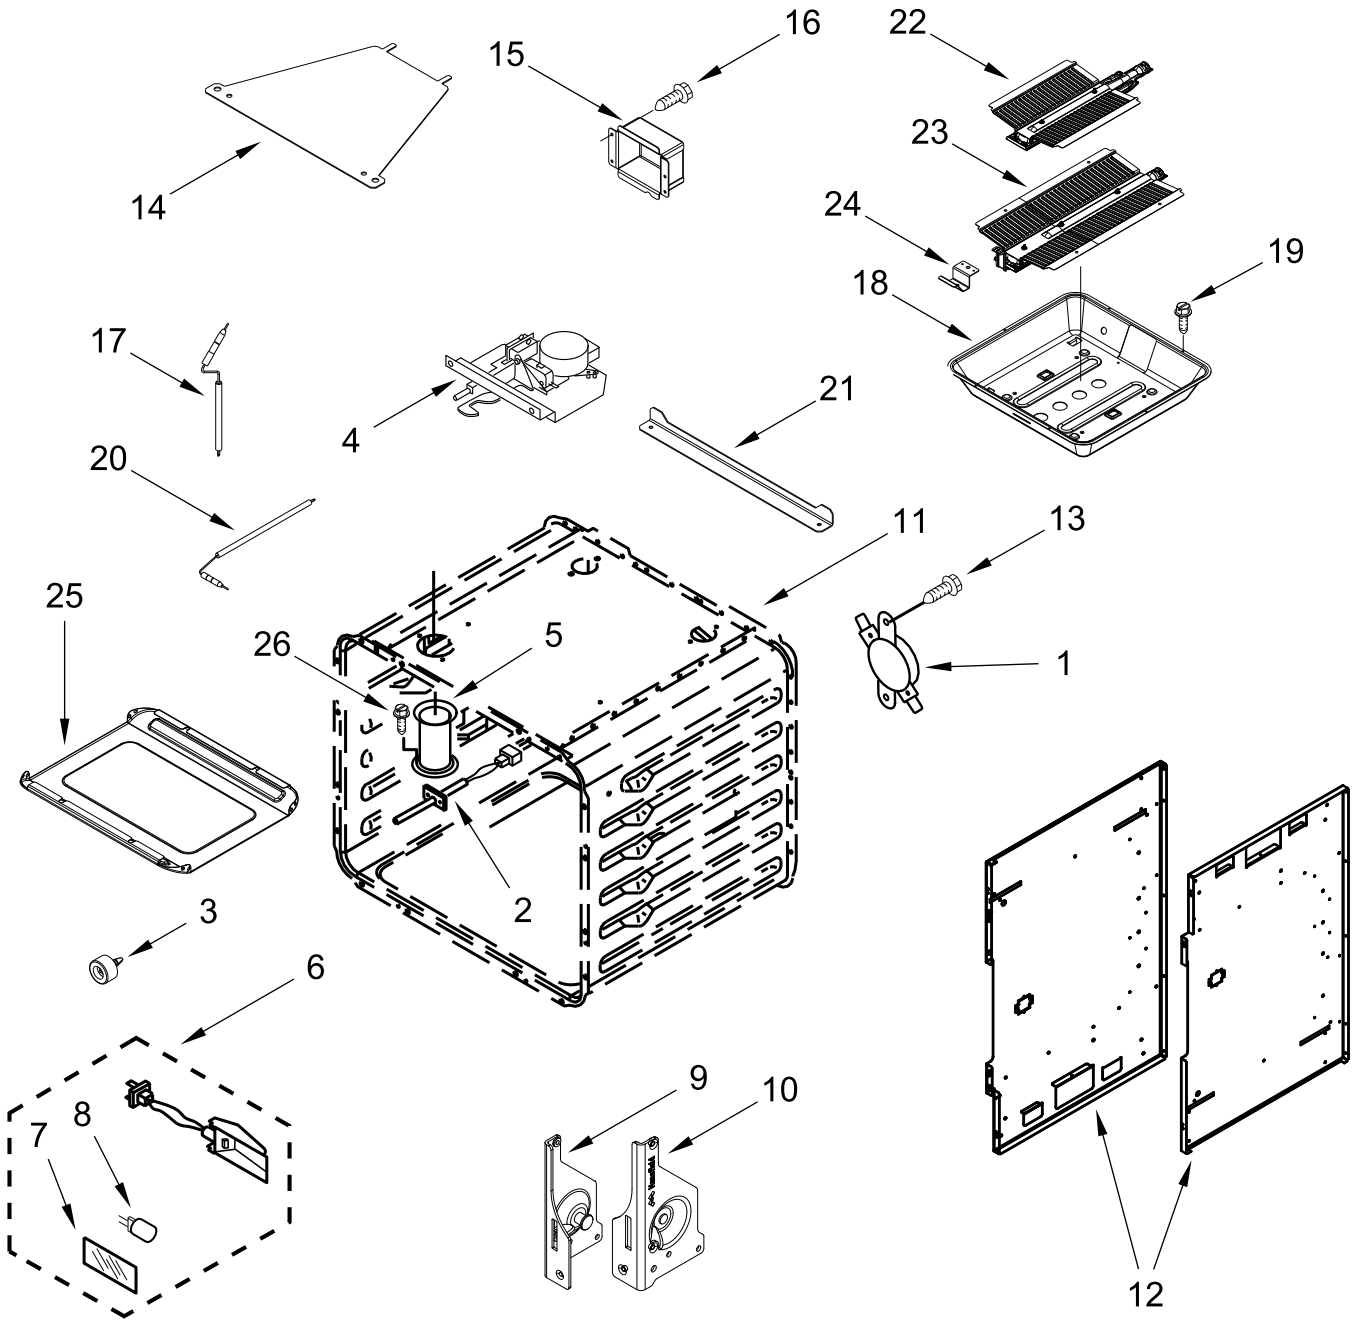

30" OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	23	W10311335	Burner, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	24	W10308040	Bracket, Bake Burner
3	W10351278	Bumper & Screw	13	7101P426-60	Screw	25	W10496809	Pan, Oven Bottom
4	W10830016	Latch, Motorized	14	W10160858	Cover, Latch	26	3196176	Screw
5	W10145743	Tube, Vent	15	W10308051	Box, Broil			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	16	7101P434-60	Screw	W10282810		Insulation, Wrap, 30"
7	W10169756	Lens, Light	17	W11182863	Electrode, Broil	W11109145		Insulation, Back, 30"
8	W10169757	Bulb, Light	18	W10145744	Support, Bake Pan	W10299354		Insulation, Bottom
9	W11096294	Receiver, Hinge (Left)	19	12992902	Screw	3400968		Nut
10	W11096293	Receiver, Hinge (Right)	20	W11205400	Electrode, Bake			
11		Liner, Oven (Not Serviced)	21	W10317437	Bracket, Broil Standoff			
			22	W10878504	Burner, Bake			


18" OVEN PARTS

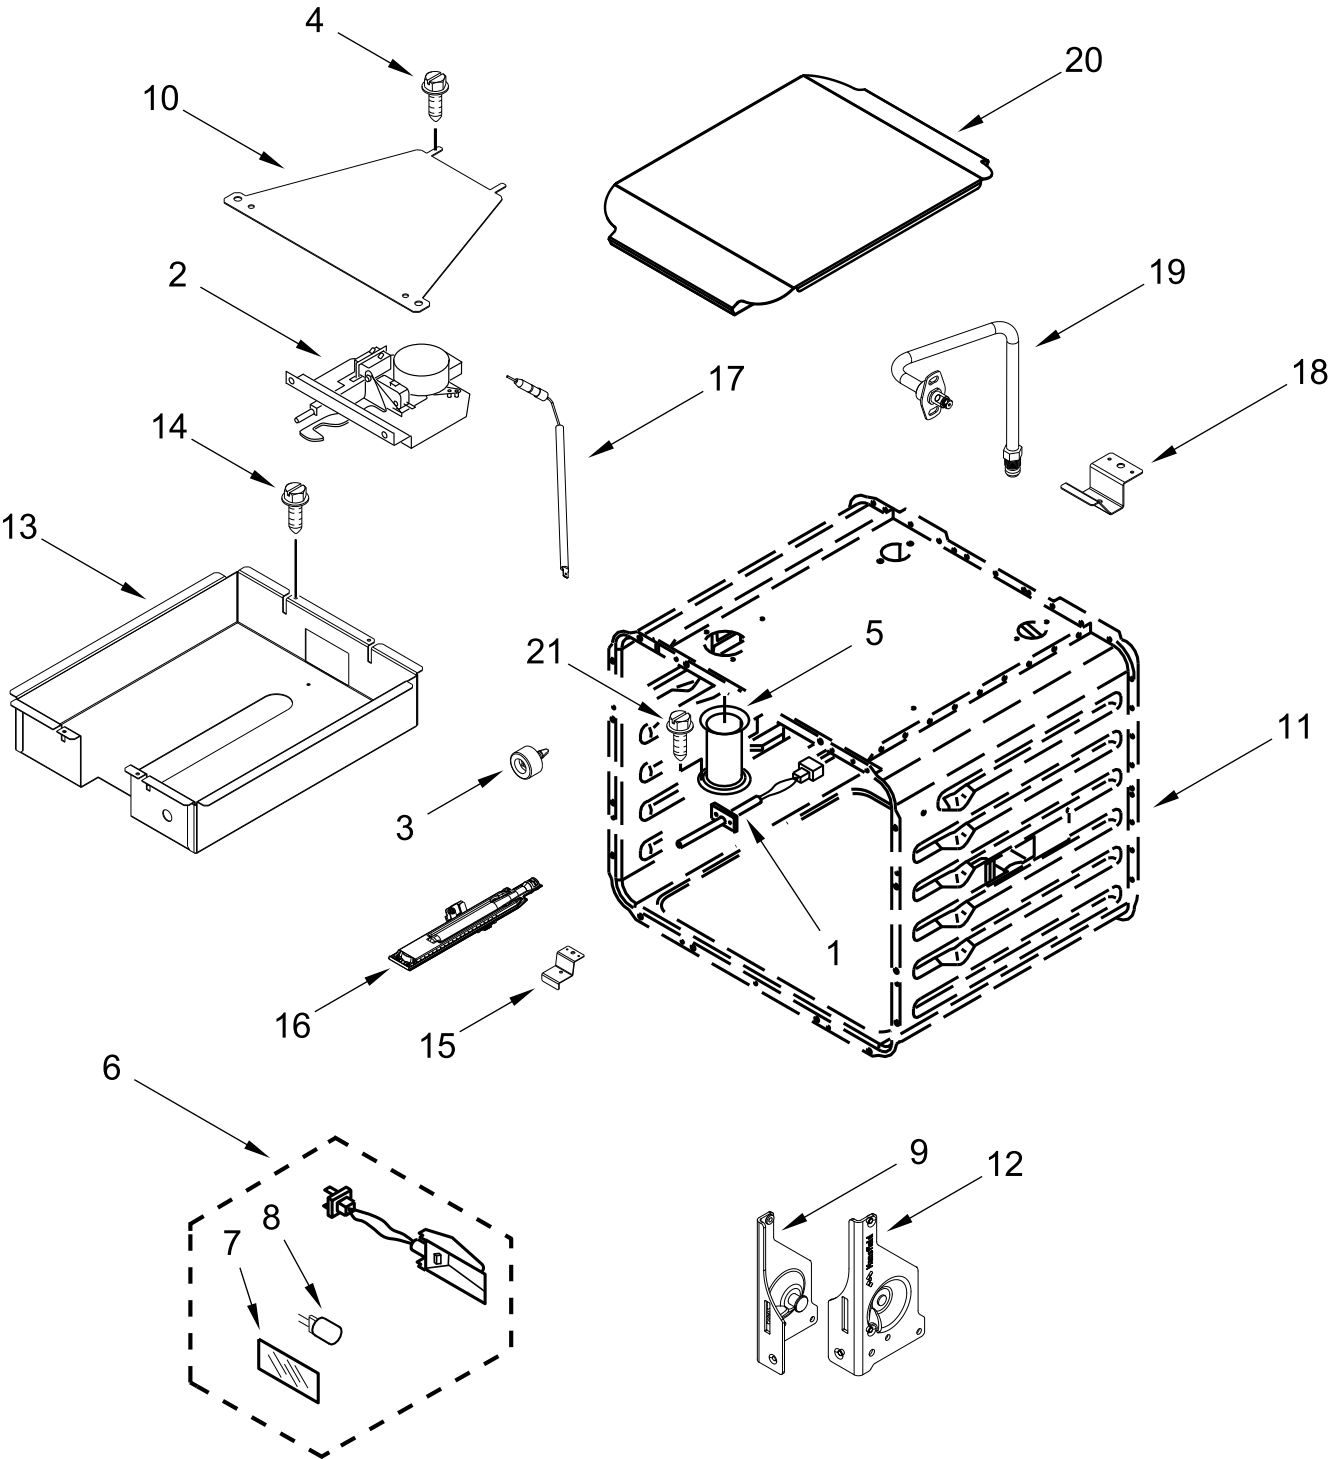

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	11		Liner, Oven (Not Serviced)	18	W10308040	Bracket, Bake Burner
2	W10830016	Latch, Motorized				19	W10145706	Tube, Bake
3	W10351278	Bumper & Screw	12	W11096293	Receiver, Hinge (Right)	20	W11211936	Cover, Bake
4	7101P426-60	Screw				21	3196176	Screw
5	W10145743	Tube, Vent	13	W10145651	Support, Bake Pan			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	14	12992902	Screw		W10282820	Insulation, Wrap, 18"
7	W10169756	Lens, Light	15	W10308041	Bracket, Bake Burner 18" Cavity		W10299353	Insulation, Back, 18"
8	W10169757	Bulb, Light					W10299355	Insulation, Bottom
9	W11096294	Receiver, Hinge (Left)	16	W10878505	Burner, Bake W/O Spreader		3400968	Nut
10	W10160858	Cover, Latch	17	W11205400	Electrode, Bake			


VENTING PARTS

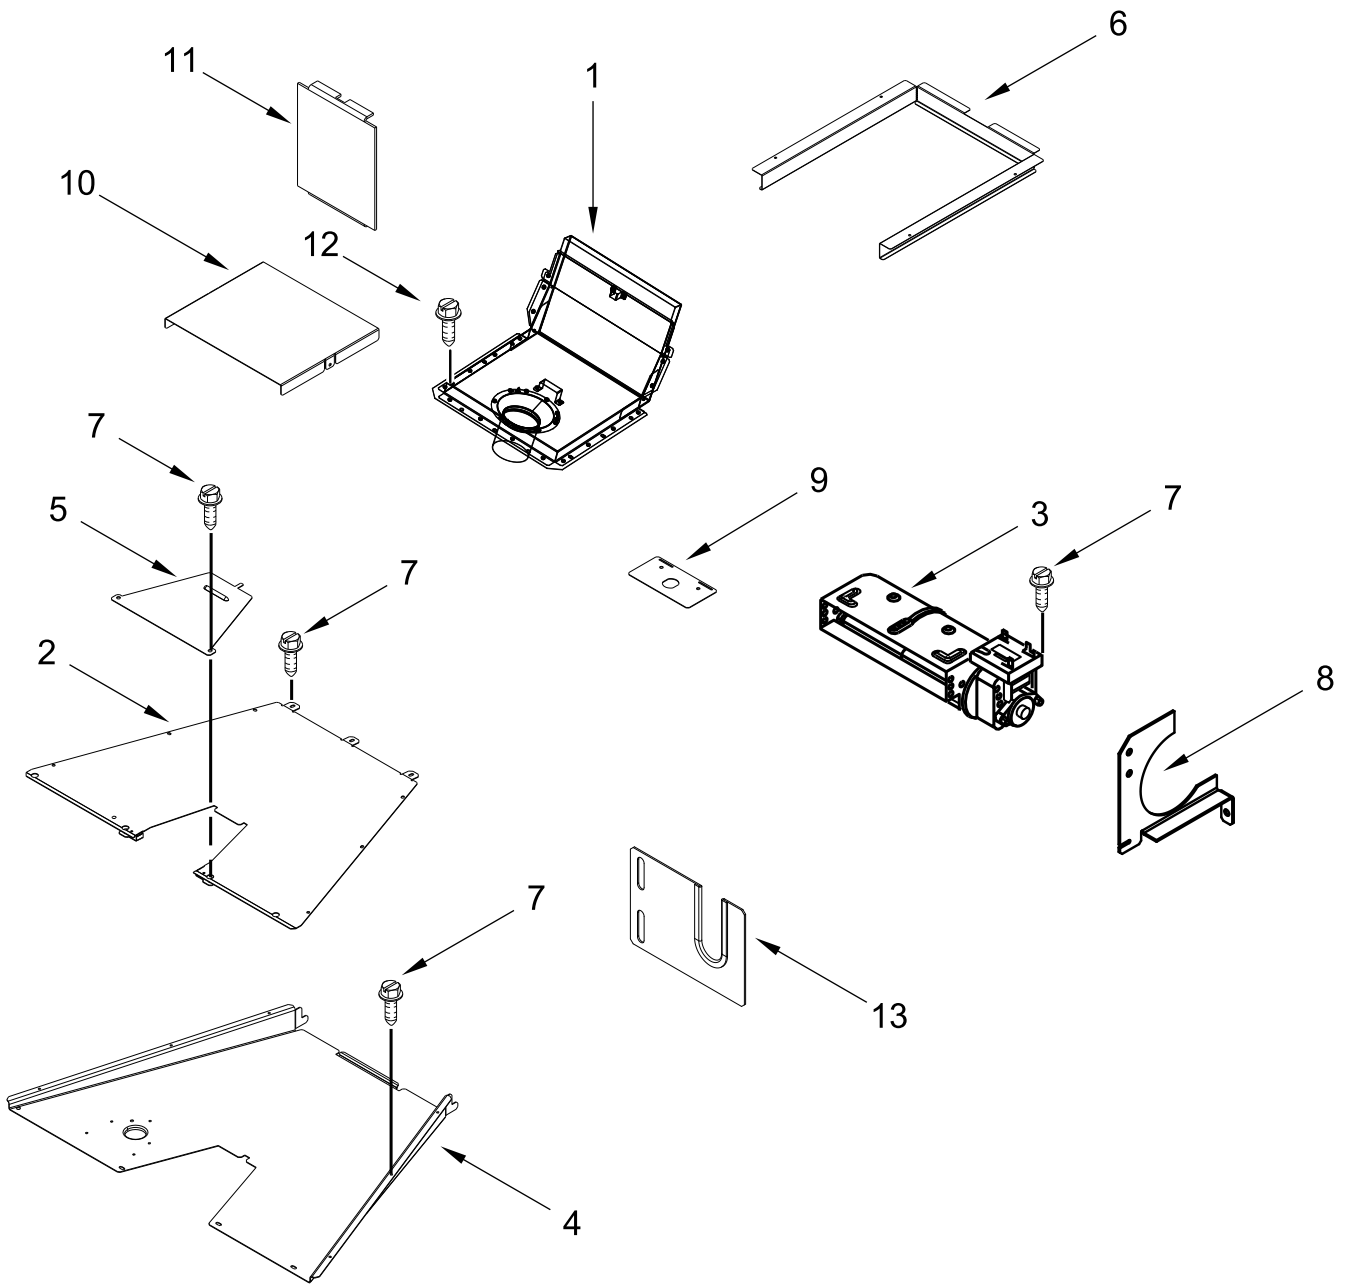

VENTING PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount
	W11476247	Vent, Chimney Box (18")		W11113377	Vent, Cooling Bottom (18")	9	W10115855	Holder, Strain Relief
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10246086	Retainer, Insulation
	W11113379	Vent, Cooling Top (18")	6	W10145363	Duct, Primary Air (30")	11	W10246087	Insulation, Chimney
3	W11200129	Blower		W10145364	Duct, Primary Air (18")	12	3400805	Screw (Zinc)
			7	7101P426-60	Screw	13	W11106956	Cover, Channel


30" OVEN DOOR PARTS

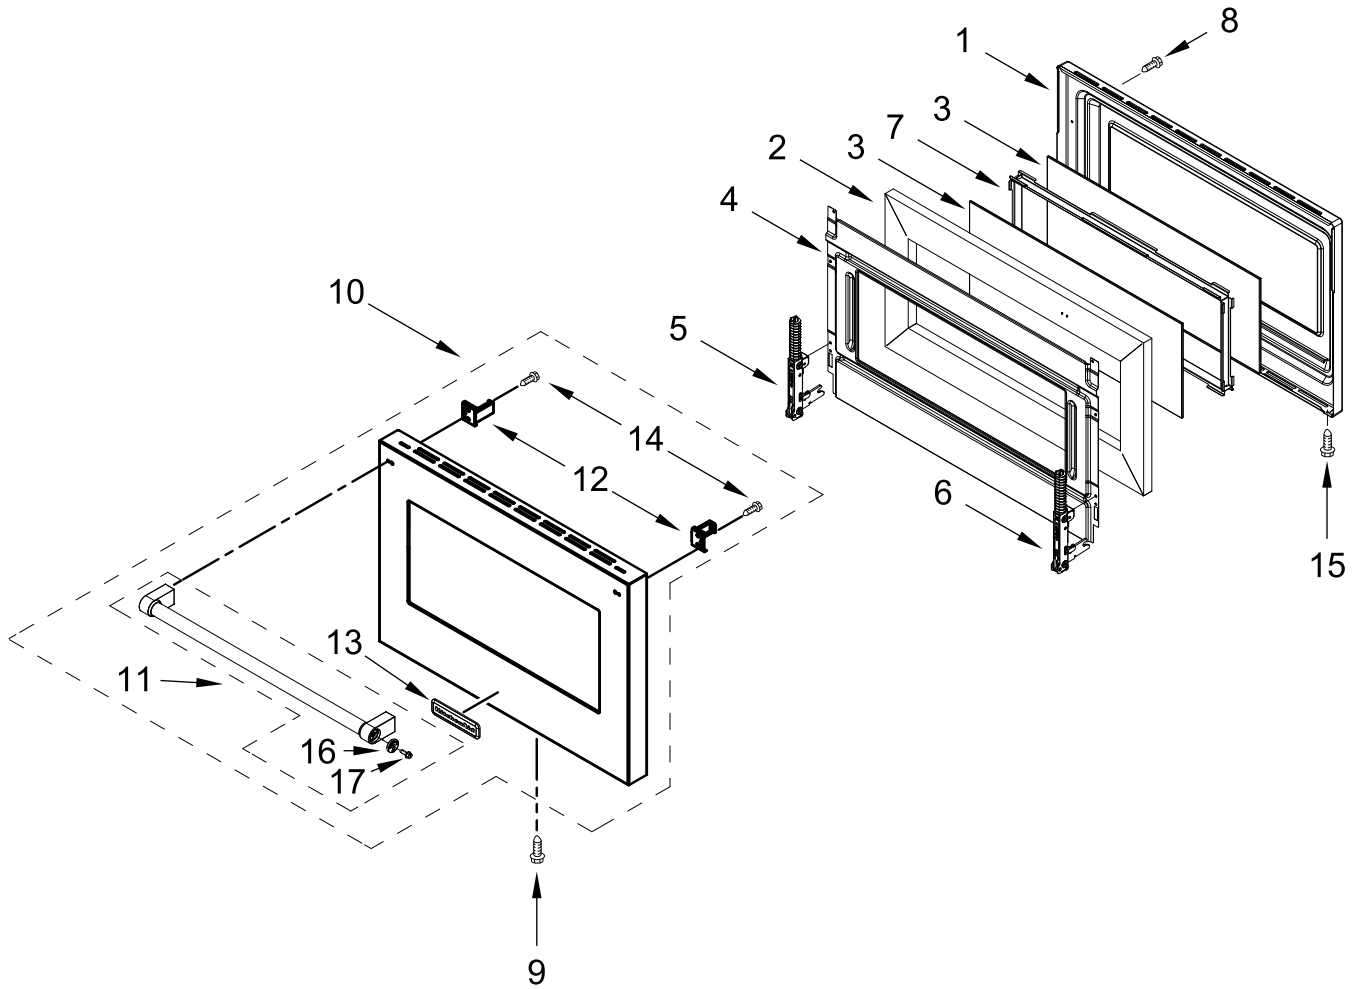

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10162096	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11389294	Assembly, Outer Door (Includes Handle)	15	W10607120	Screw
5	W11390105	Hinge, Door (Left)	11	W11362707	Handle Assembly, Door	16	W11361073	Medallion, Handle
6	W11390124	Hinge, Dual (Right)				17	W10656499	Screw


18" OVEN DOOR PARTS

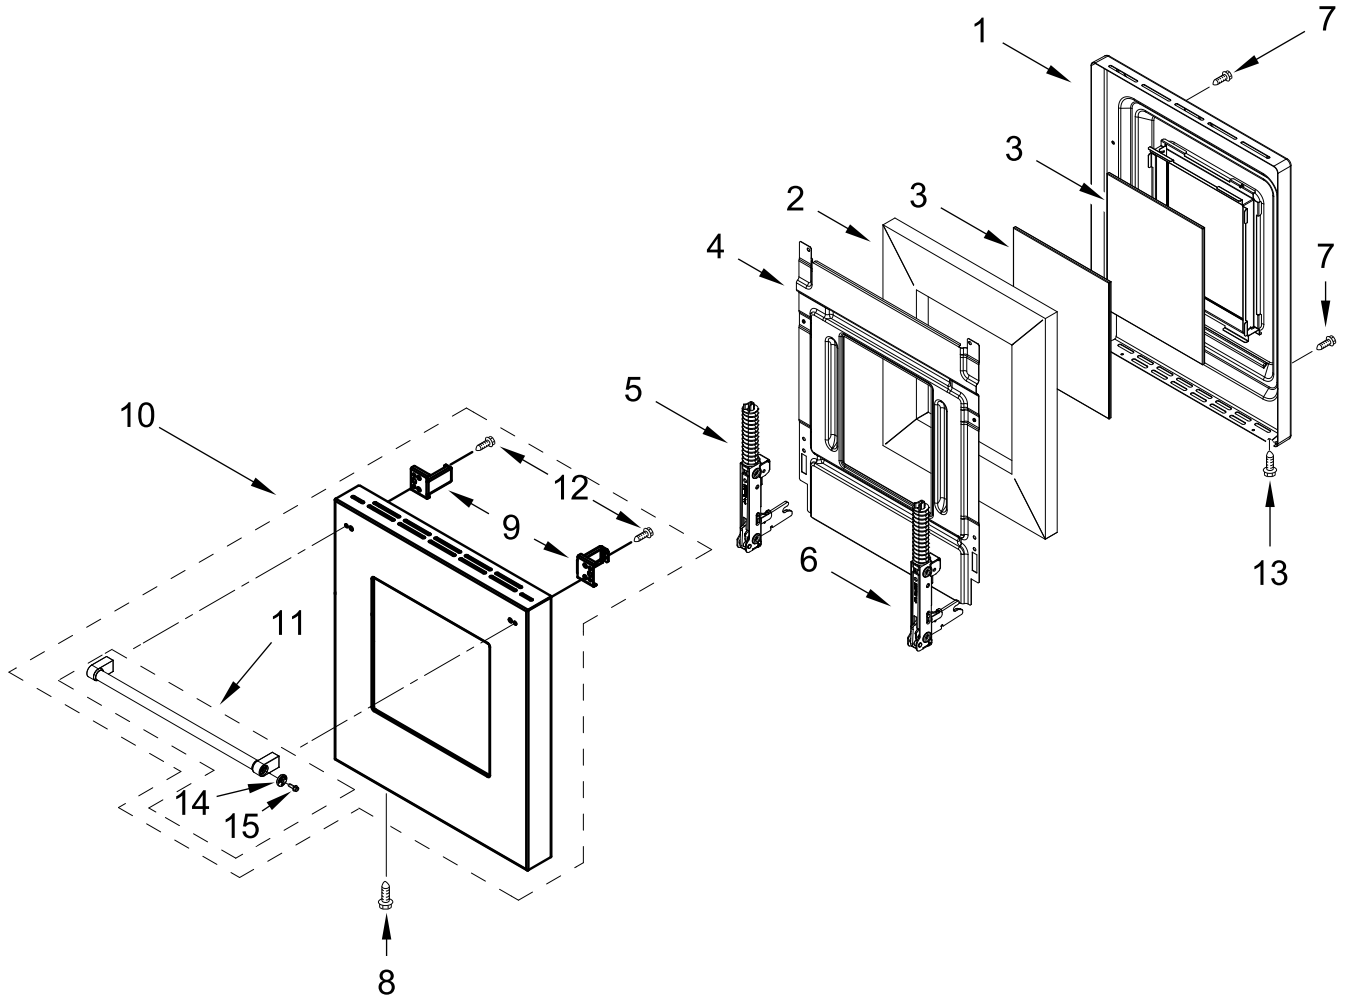

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	8	W10162096	Screw	14	W11361073	Medallion, Handle
2	W10884821	Insulation, Door	9	W11197830	Bracket, Handle	15	W10656499	Screw
3	W11036789	Glass, Inner	10	W11389269	Assembly, Outer Door (Includes Handle)			
4	W11194818	Retainer, Glass	11	W11362704	Handle Assembly, Door			
5	W11390106	Hinge, Door (Left)	12	W10276043	Screw			
6	W11390125	Hinge, Door (Right)	13	W10607120	Screw			
7	W10898280	Screw						


30" INTERNAL OVEN PARTS

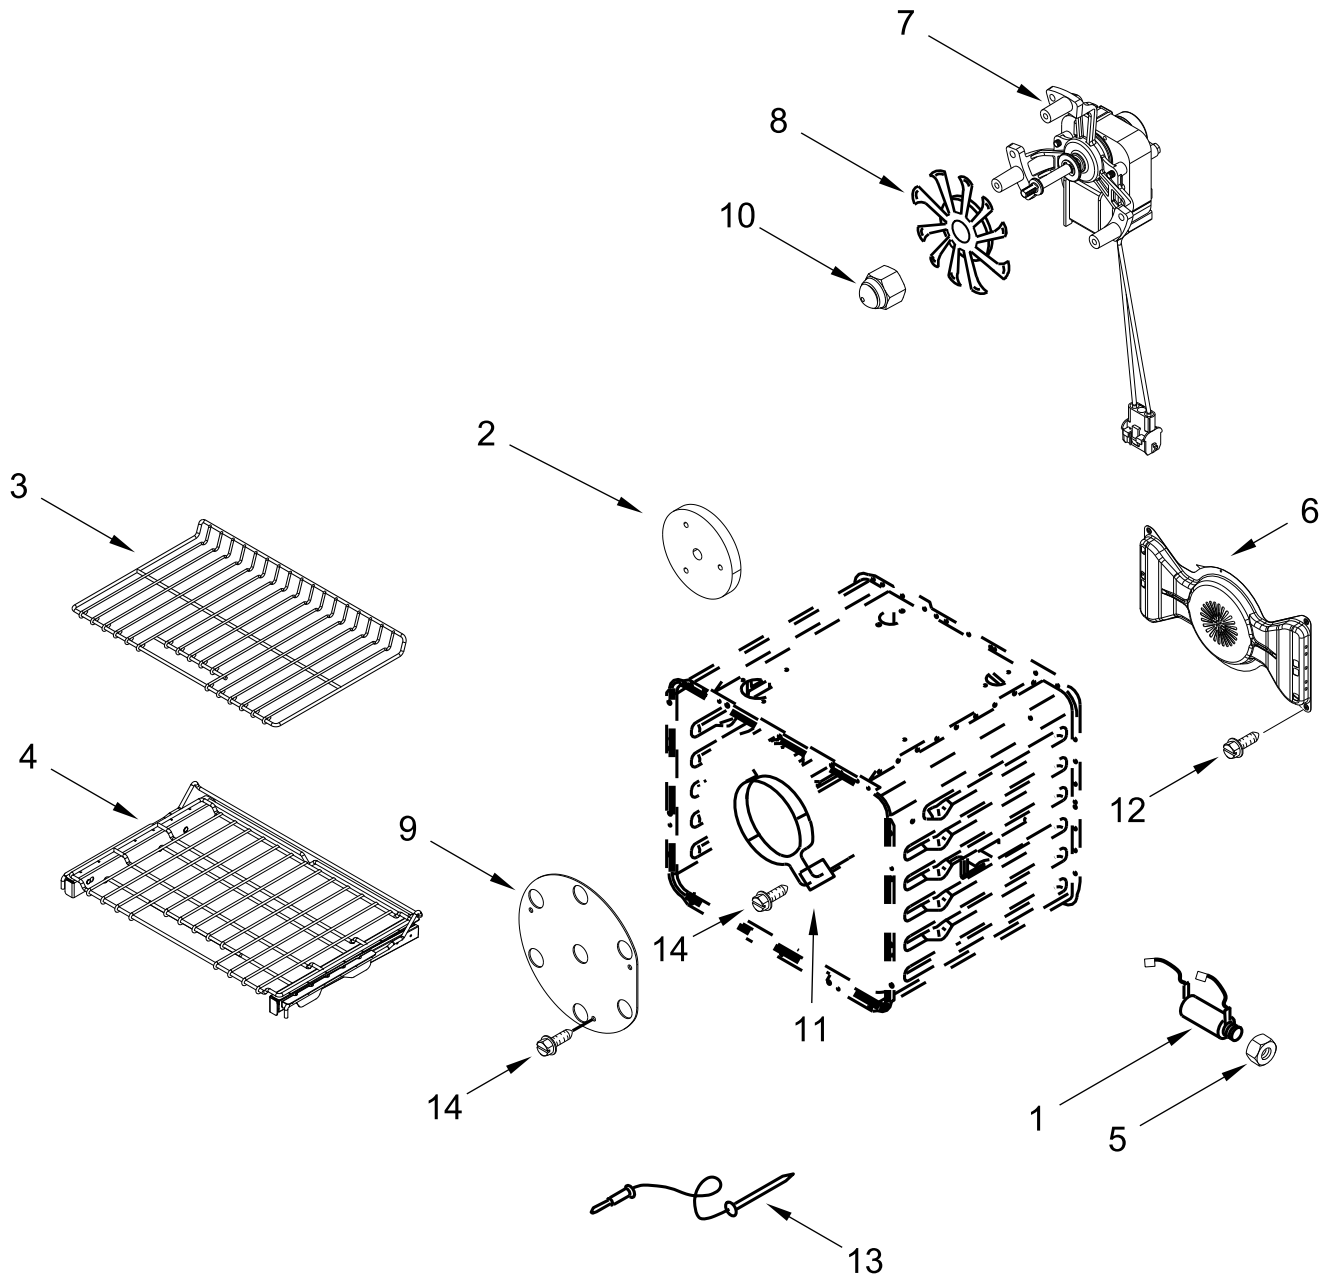

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	4449154	Screw
3	W10570887	Rack, Oven	9	W10261523	Plate, Fan			
4	W11496977	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)			
5	W11033111	Nut, Locking	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	W10739592	Screw			

18" INTERNAL OVEN PARTS

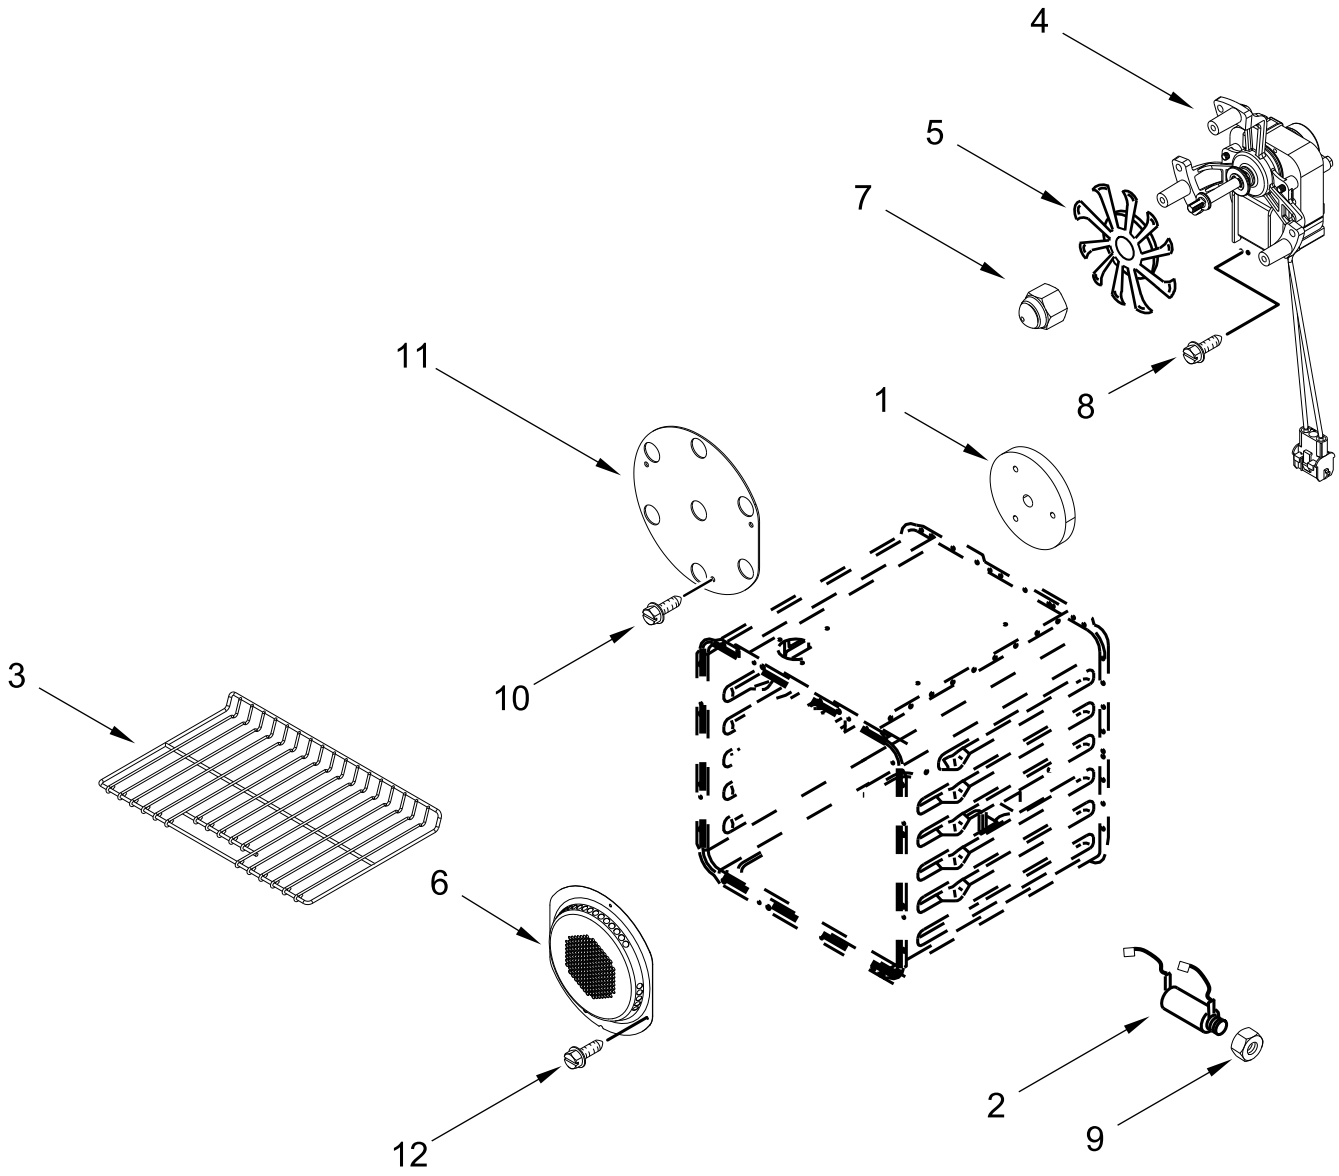

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W10631503	Blade, Fan	10	W10720084	Screw
2	9755543	Jack, Meat Probe	6	W11211948	Cover, Fan	11	W10261523	Plate, Fan
3	W10570879	Rack, Oven (18")	7	W10631504	Nut, Acorn (LH)	12	W10739592	Screw
4	W10631506	Motor, Convection	8	4449154	Screw			
			9	W11033111	Nut, Locking			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	W11042467	Spray, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	30-48KITRC	Gas Range Connector Kit
		Backsplash
	W10285449	48" With Shelf
	4396096RB	Griddle
	4396923	Broiler Pan and Grid