




## **30" GAS FREESTANDING RANGE**

### **MODELS:**

WFG505M0MB0 (Black)  
WFG505M0MW0 (White)


# COOKTOP PARTS

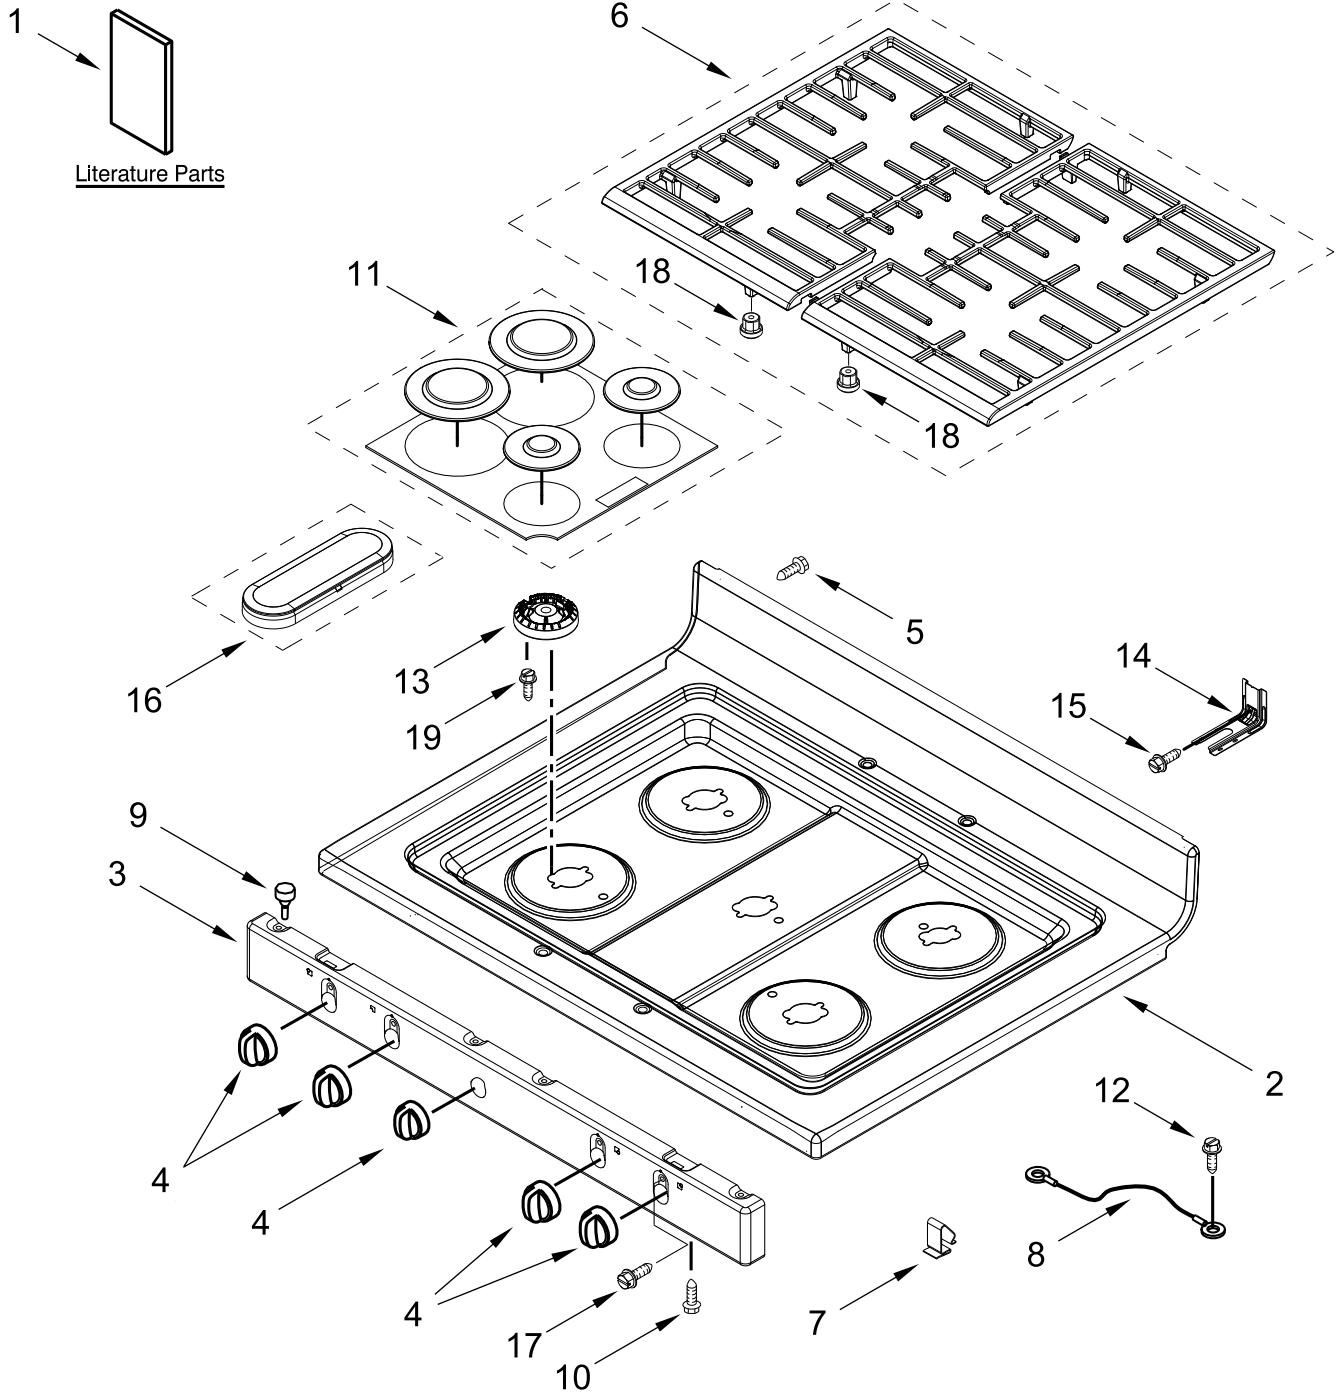

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	6610473	Wire, Ground	17	98005658	Screw (Stainless)
	W11508820	Instructions, Installation	9	98013389	Bumper, Cooktop	18	W10465081	Grate, Bumper
	W11508721	Guide, Use and Care	10	98005000	Screw	19	8273062	Screw
	98007130	Tips, Safe Cooking (English)	11		Burner Cap Kit			FOLLOWING PARTS NOT ILLUSTRATED
	W10200950	Sheet, Tech		W11498499	Black (Set of 4)		W11465032	Harness, Main
2		Cooktop	12	8534079	Screw, Ground		98005896	Clip, Wire
	W11443179	Black	13	W11352018	Spreader, Flame		W11492747	Insulation, Manifold
	W11443178	White			(Left Front & Right Front)		3391018	Tie, Cable
3		Panel, Manifold					98015022	Bushing, Snap
	W11578531	Black		W11352020	Spreader, Flame		98005894	Clamp, Cord
	W11578530	White			(Left Rear)			
4		Knobs		W11352021	Spreader, Flame			
	W11488096	Black			(Right Rear)			
	W11488103	White	14	W10613666	Bracket, Anti-Tip			
5	98007225	Screw	15	7101P485-60	Screw, Anti-Tip Kit			
6		Set, Grate	16	W11357363	Oval Burner Assembly			
	W11465357	Black			(Center)			
7	98004722	Clip, Cooktop						


# BACKGUARD PARTS

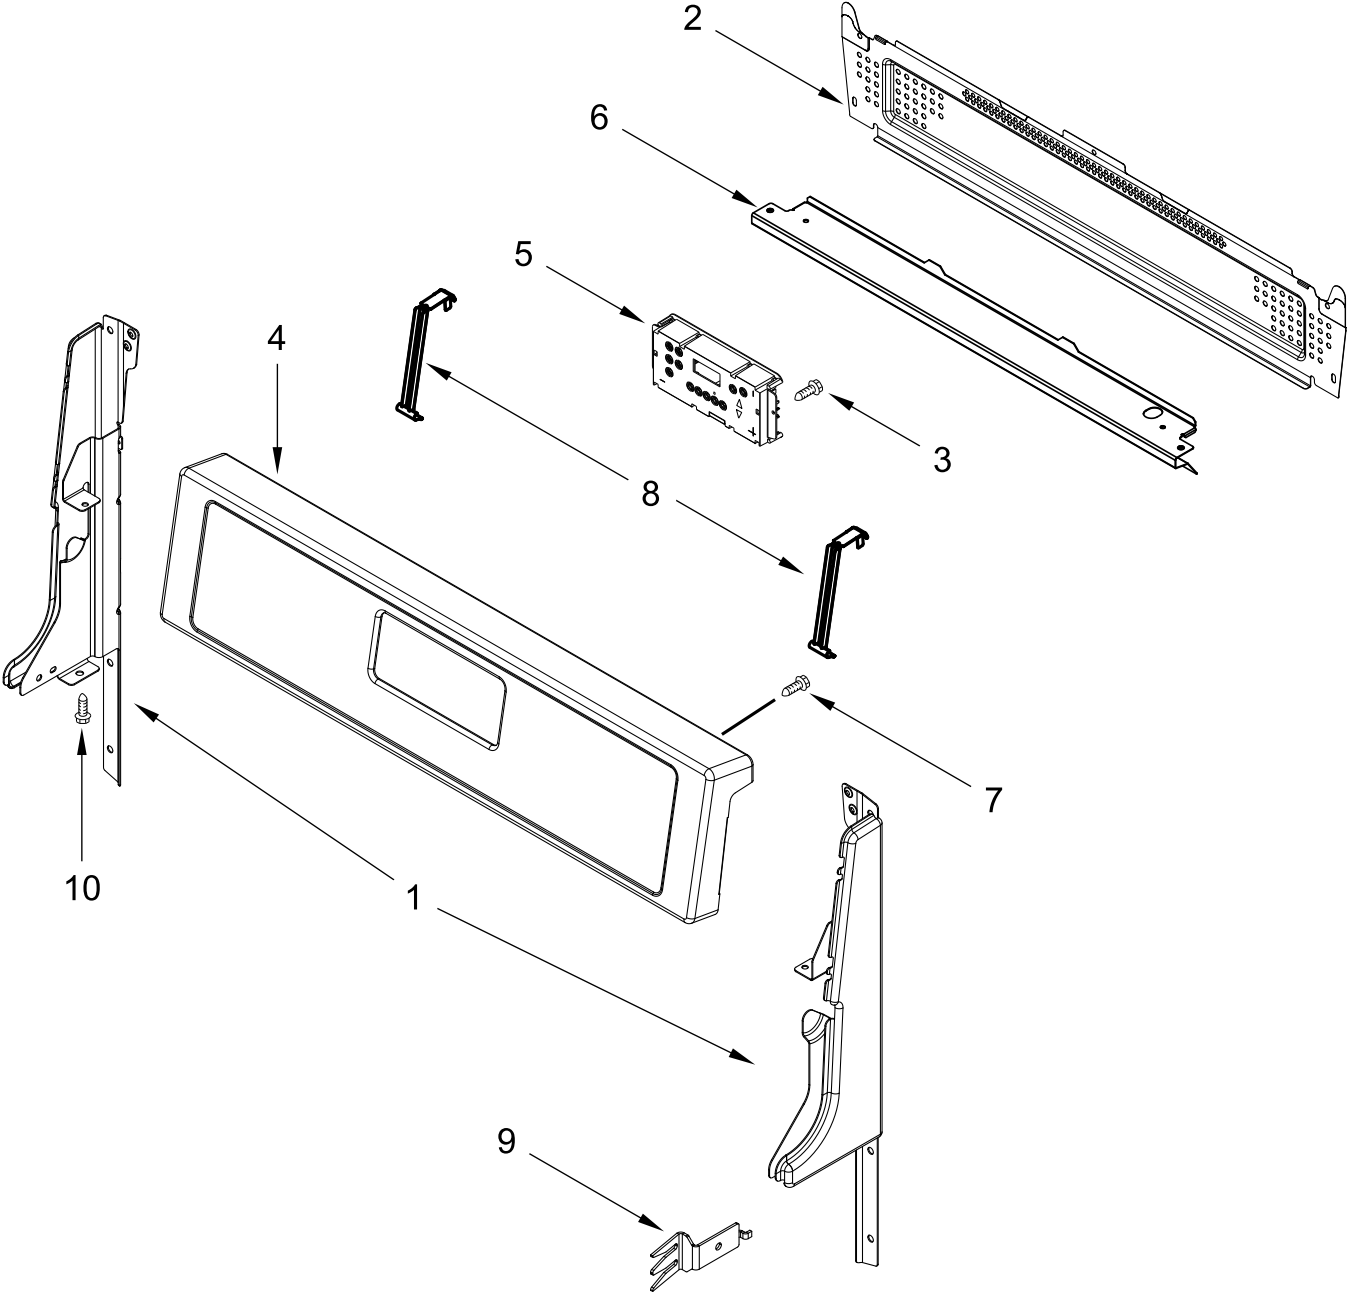

# BACKGUARD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap (Left Hand)	3	98006632	Screw	6	W10535746	Bracket, Console Mount
	W10873109	Black	4		Panel, Control			
	W10873441	White		W11488013	Black	7	98008545	Screw (Black)
		Endcap (Right Hand)		W11495707	White		98008544	Screw (White)
	W10873107	Black	5		Control, Electronic	8	W11462420	Bracket, Control
	W10873438	White		W11520704	Black	9	W10535815	Bracket, Rear
2	W10535808	Backguard, Rear		W11520705	White	10	W10493726	Screw


# MANIFOLD PARTS

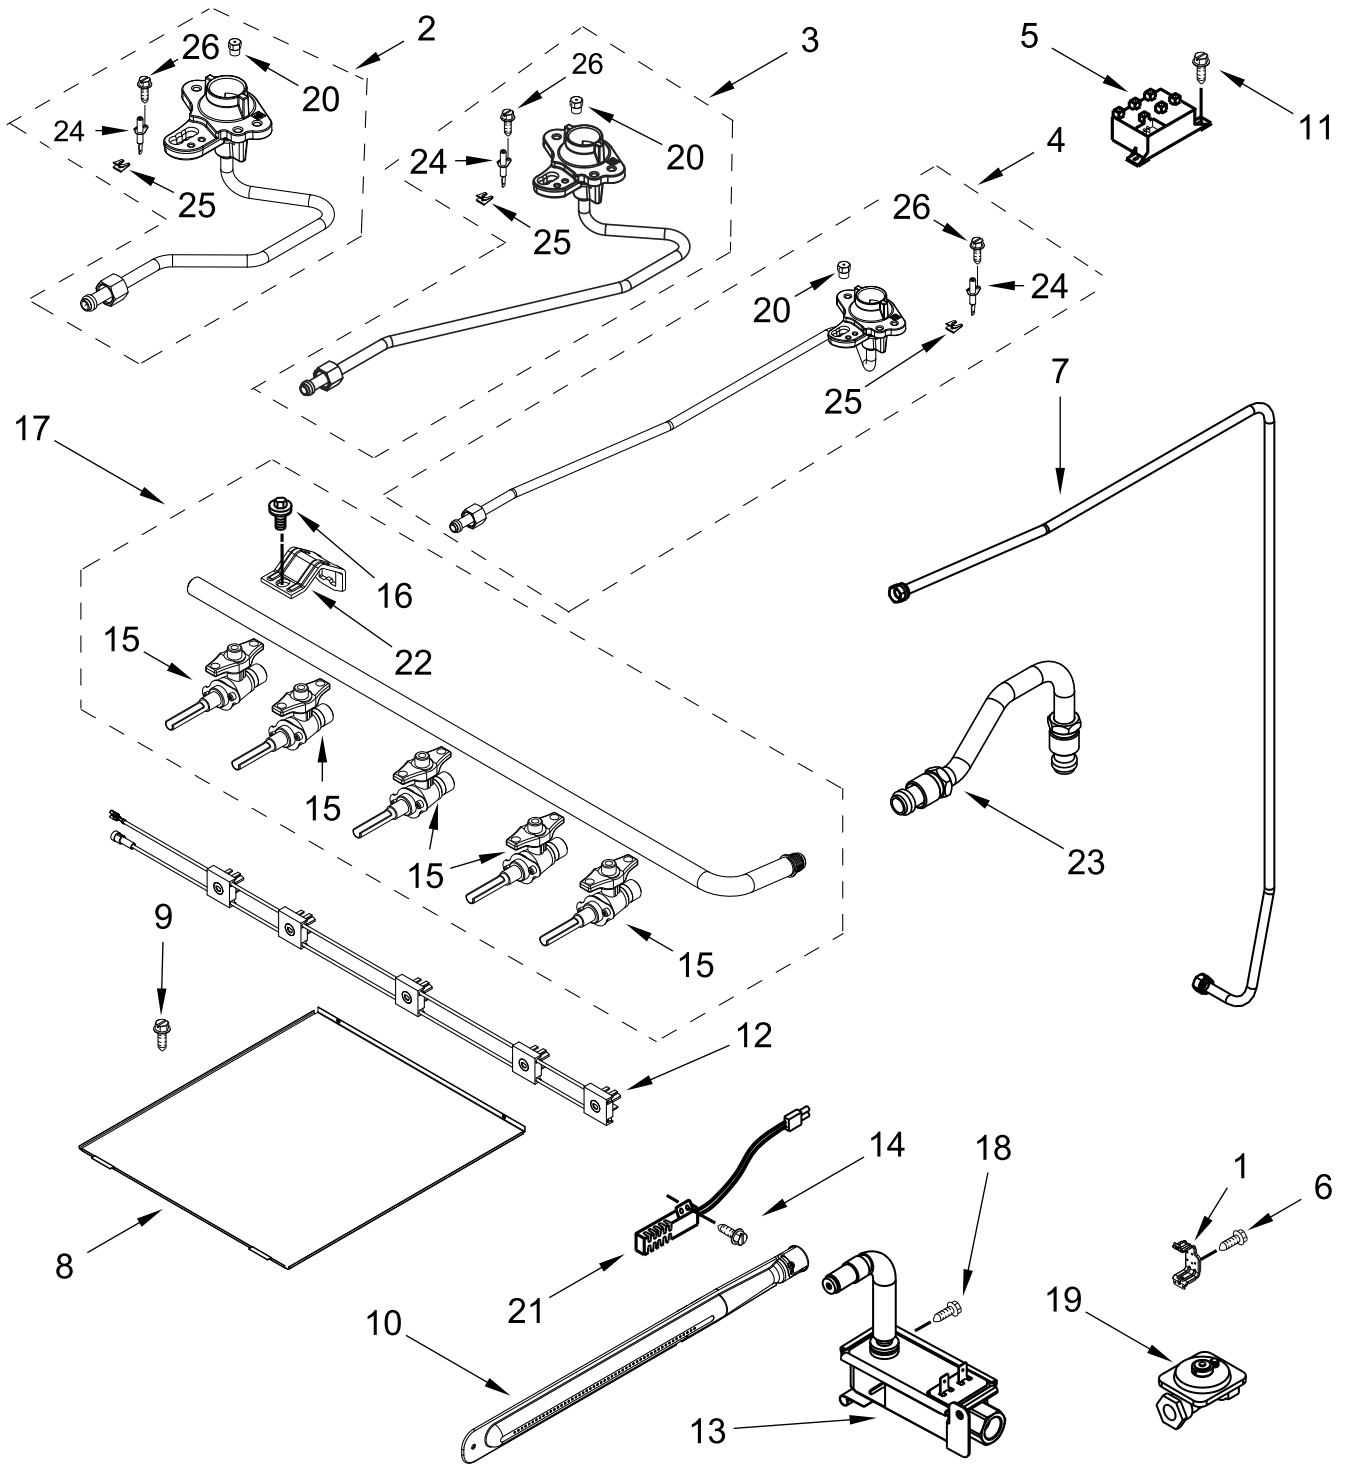

# MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	98007410	Bracket, Regulator	14	98005659	Screw	22	W10574737	Bracket, Valve
2	W11459683	Assembly, Tubing (Left Front)	15	W11509768	Valve, Saddle (Left Front & Right Front)	23	W10512963	Tubing (Regulator to Oven Valve)
	W11459686	Assembly, Tubing (Right Front)		W11509767	Valve, Saddle (Left Rear & Center)	24	W10669525	Electrode (Left Front, Right Front & Center)
3	W11495381	Assembly, Tubing (Center)		W11509766	Valve, Saddle (Right Rear)		W10876260	Electrode (Left Rear, Right Rear)
4	W11459685	Assembly, Tubing (Left Rear)	16	98017517	Screw	25	W10827923	Electrode, Spring (Left Front, Right Front, Left Rear, Right Rear & Center)
	W11459684	Assembly, Tubing (Right Rear)	17	W11509588	Assembly, Manifold			
5	W11281168	Spark Module	18	98013634	Screw			
6	98007225	Screw	19	W11466755	Regulator	26	W10673618	Screw
7	W10619922	Tube 3/8" Manifold To Reg	20	W11485872	Orifice (15K) (Left Front & Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
8	W10670196	Spread, Flame (Bake)		W11498976	Orifice (8K) (Center)		W11517377	Kit, LP Conversion
9	98006726	Screw (Black)		W11548158	Orifice, Natural (9.5K) (Left Rear)			
10	W10650358	Oven Burner Asm-US Electronic		W11485871	Orifice (5K) (Right Rear)			
11	W10493726	Screw	21	W11208965	Igniter, Hot Surface			
12	W11542590	Harness, Switch						
13	W11449991	Valve, Oven						

# CHASSIS PARTS

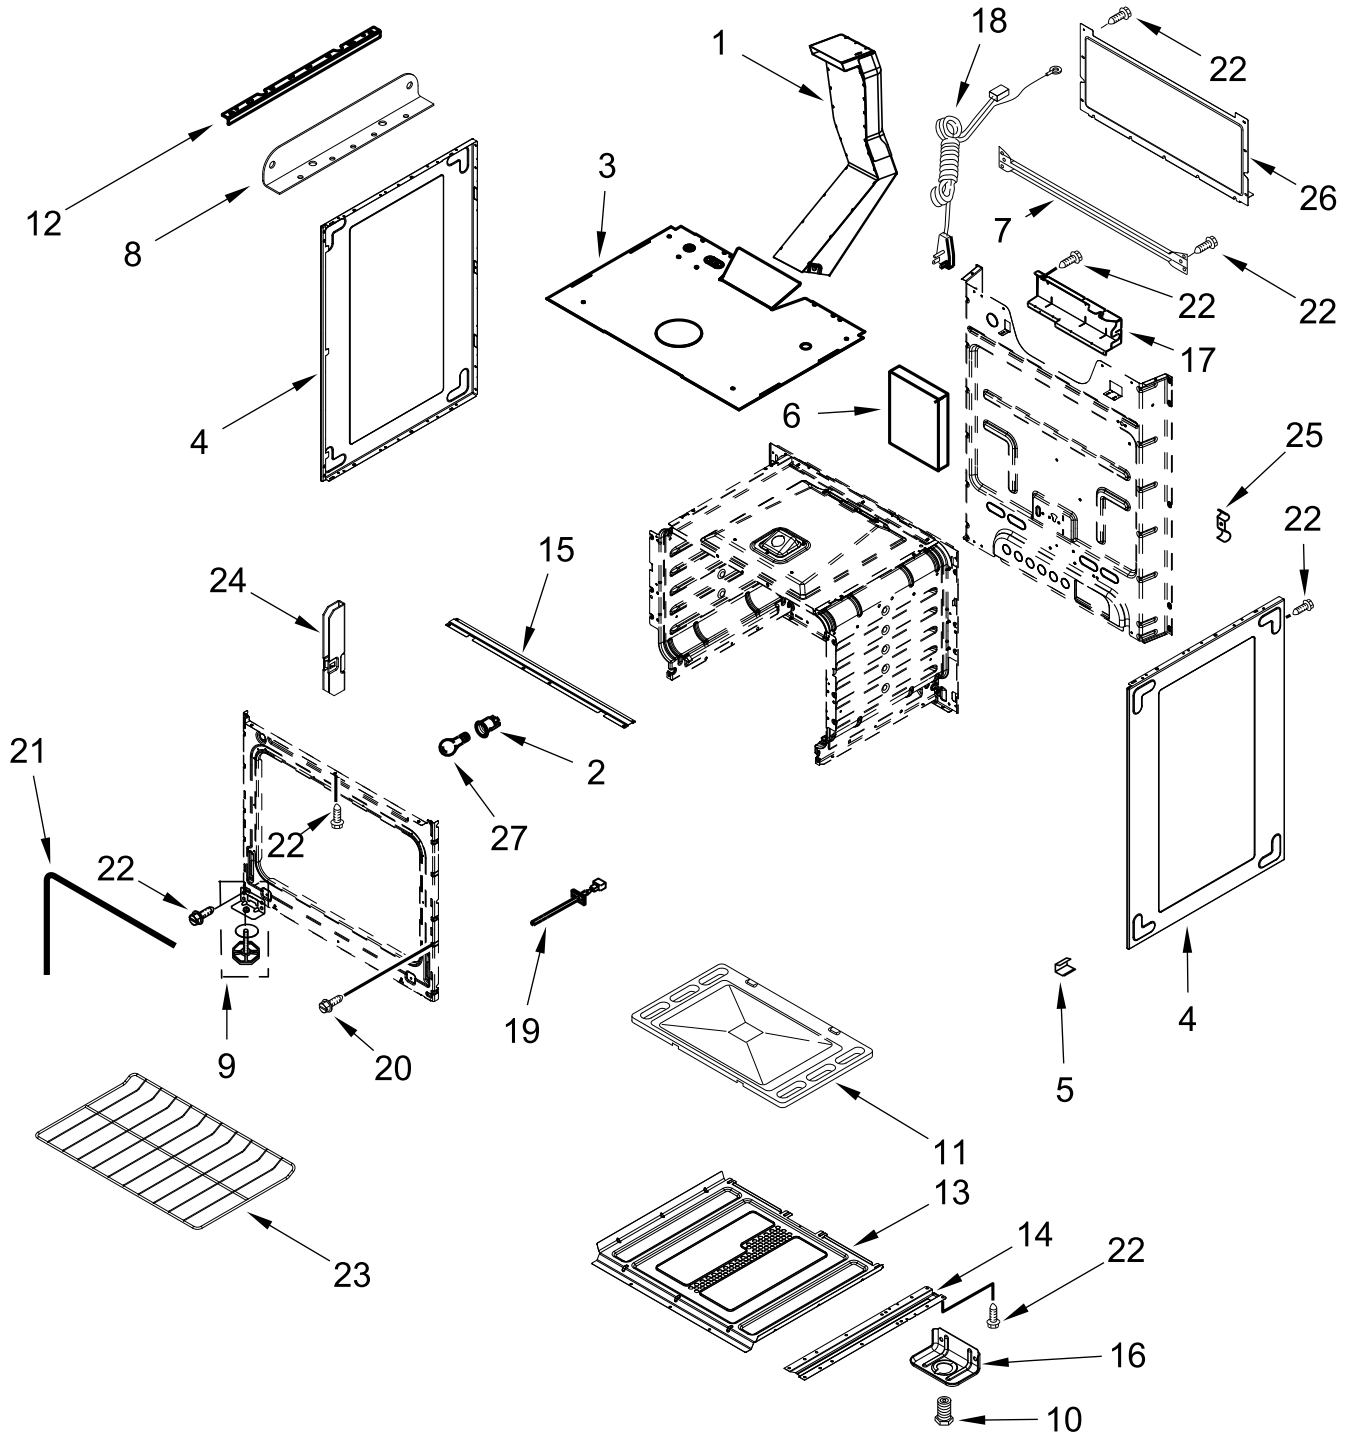




# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10675411	Box, Flue	10	W10058460	Foot, Leveling (Rear)	24	W10327222	Counter Support-Hinge
2	W10554269	Socket - Oven Light	11	W10620410	Assembly, Oven Bottom	25	W11510655	Clip, Tubing
3	W10636342	Shield, Insulation	12	W10577312	Support, Side Panel	26	W11492823	Cover
4		Panel, Side	13	W10670197	Deflector, Oven	27	W10788320	Bulb, Light
	W10666212	Black (Left)	14	W10520269	Rail, Base			FOLLOWING PARTS NOT ILLUSTRATED
	W10666211	Black (Right)	15	W10545322	Bracket, Manifold	W11492324		Insulation, Wrap
	W10666176	White (Left)	16	W11172758	Bracket, Foot	W11048974		Insulation, Back (Black and White Models)
	W10666141	White (Right)	17	W10549293	Safety Valve, Rear Cover	W10537475		Insulation, Back (Stainless Model)
5	98005502	Clip, Oven Botton	18	W10640762	Cord, Power	W10613818		Insulation, Upper
6	W10902689	Counterweight (Black and White Models)	19	W10181986	Sensor, Oven	W11506534		Insulation,Flue
7	98015363	Support, Rear	20	98008545	Screw (Black)	98004294		Wire Tie, Insulation
8	W10532560	Side Panel, Support	21	W10535778	Seal, Oven			
9	W10650383	Foot Leveling & Foot Base (Front)	22	W10493726	Screw			
			23	W10550642	Rack, Oven			


# OVEN AND BROILER PARTS

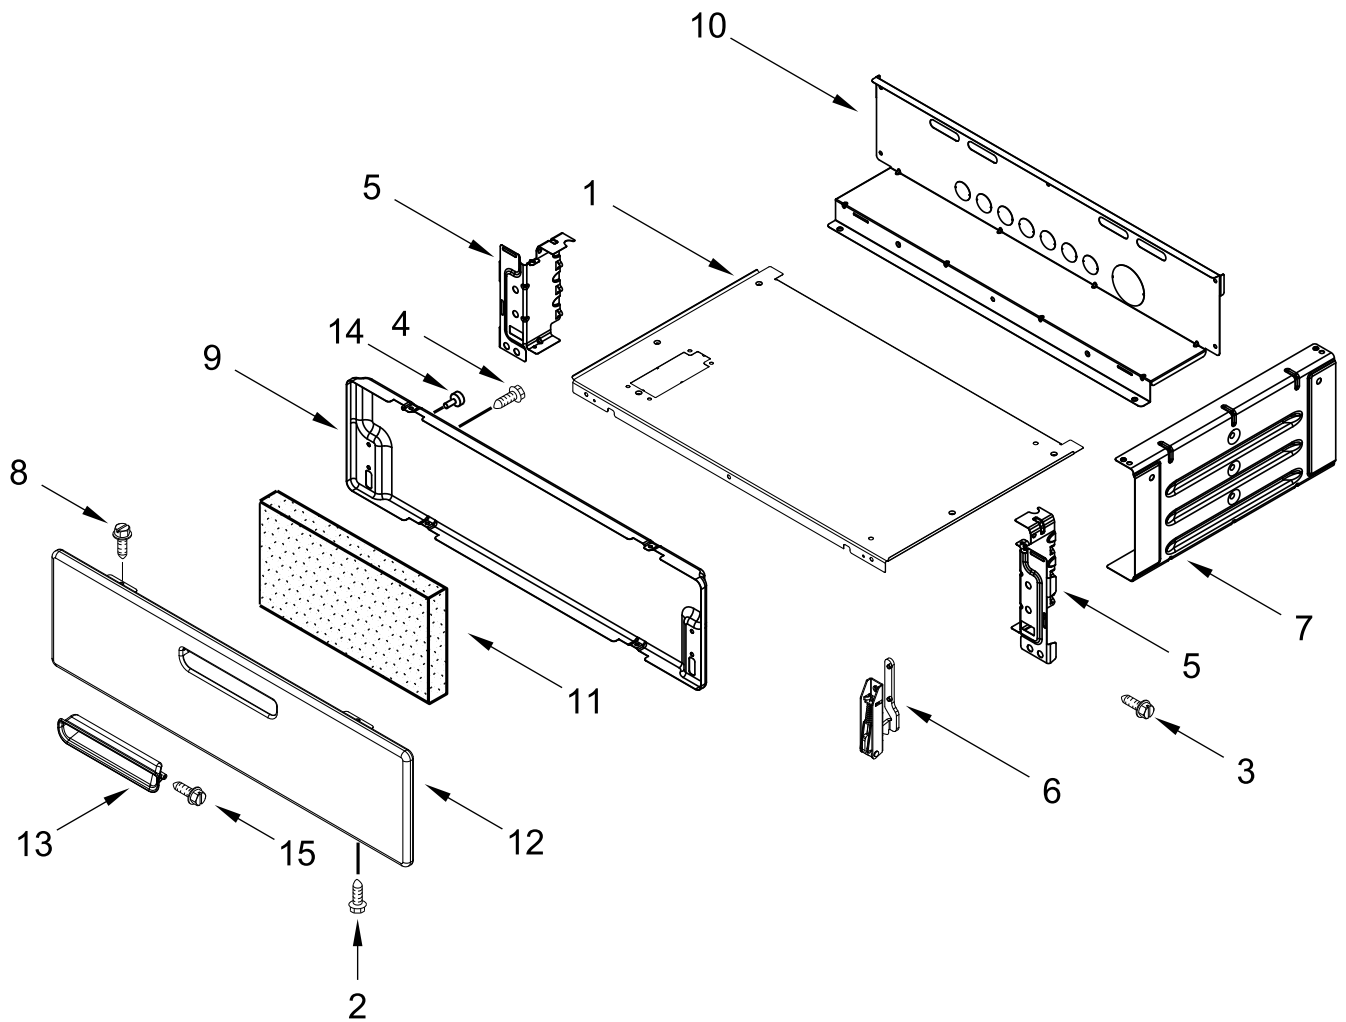

# OVEN AND BROILER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11620318	Baffle, Base	9	W10446851	Liner, Broiler Drawer	13		Handle, Broiler Door
2	W10119413	Screw	10	W10682676	Back Cover, Broiler		W10535809	Black
3	98008545	Screw (Black)	11	W10216478	Insulation, Broiler Door		W10498563	White
4	W10155121	Screw	12		Panel, Broiler Door	14	98004052	Bumper, Door
5	W10624273	Cover, Broiler Left				15	98004993	Screw
	W10624275	Cover, Broiler Right		W10874825	Black			
6	W10647966	Hinge		W10874828	White			
7	W10605426	Panel, Side						
8	98006726	Screw (Black)						

# DOOR PARTS

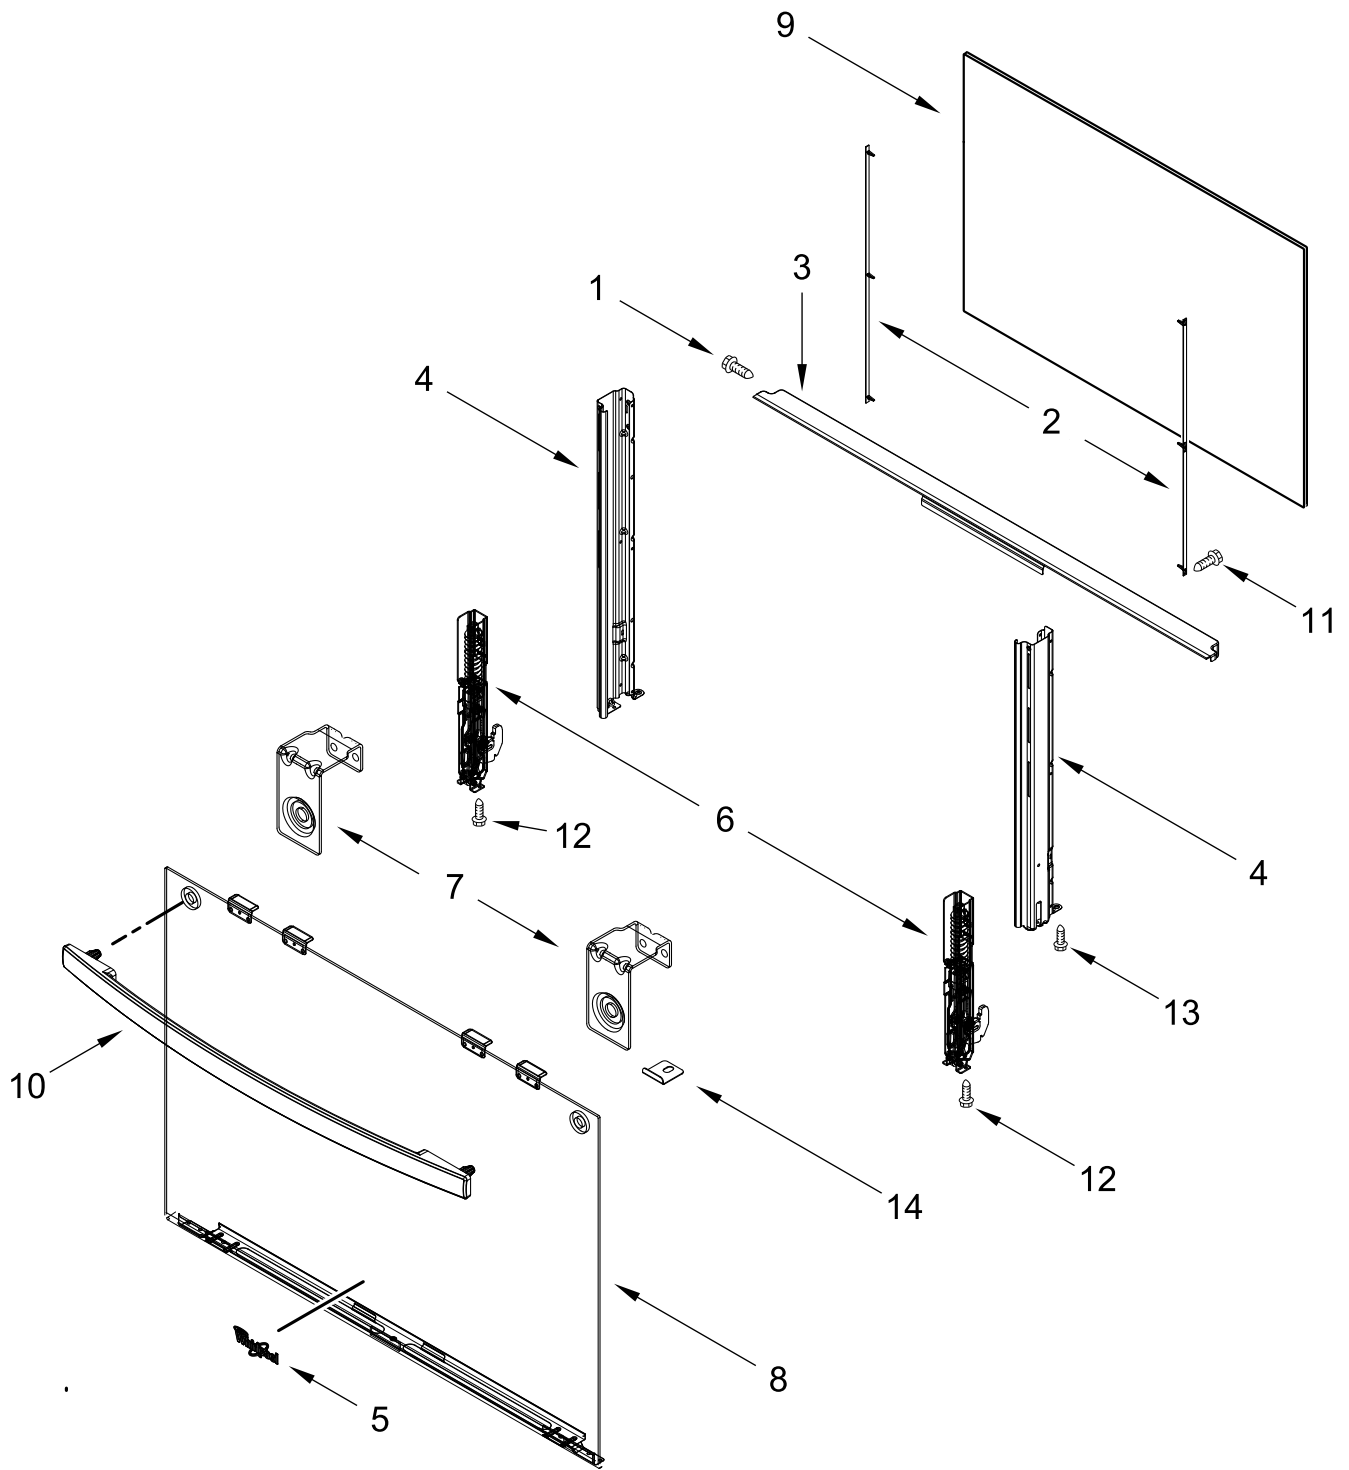

# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	98005521	Screw (Stainless)
2	W10292266	Seal, Inner Door
3	W10544145	Upper Trim, Oven Door
4		Trim, Side
	W11184558	Left
	W11184560	Right
5	W10884775	Badge
6	W10535788	Hinge, Oven Door (Black and White Models)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11569276	Handle, Support Bracket
8		Glass, Outer Door Assembly
	W11506544	Black
	W11541421	White
9	W11528109	Glass, Inner
10		Handle, Oven Door
	W11533141	Black
	W11533142	White

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	98008699	Screw
12	W10146346	Screw
13	W10493726	Screw
14		Bracket, Glass Door Hold
	W10811550	Black
	W10823829	White

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

## MISCELLANEOUS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	98012220	Kit, Door Pin