

**KitchenAid®**


**MICROWAVE**

**MODELS:**

KMHC319LPS00 (Stainless)

KMHC319LBS00 (Black Stainless)

# CONTROL PANEL PARTS

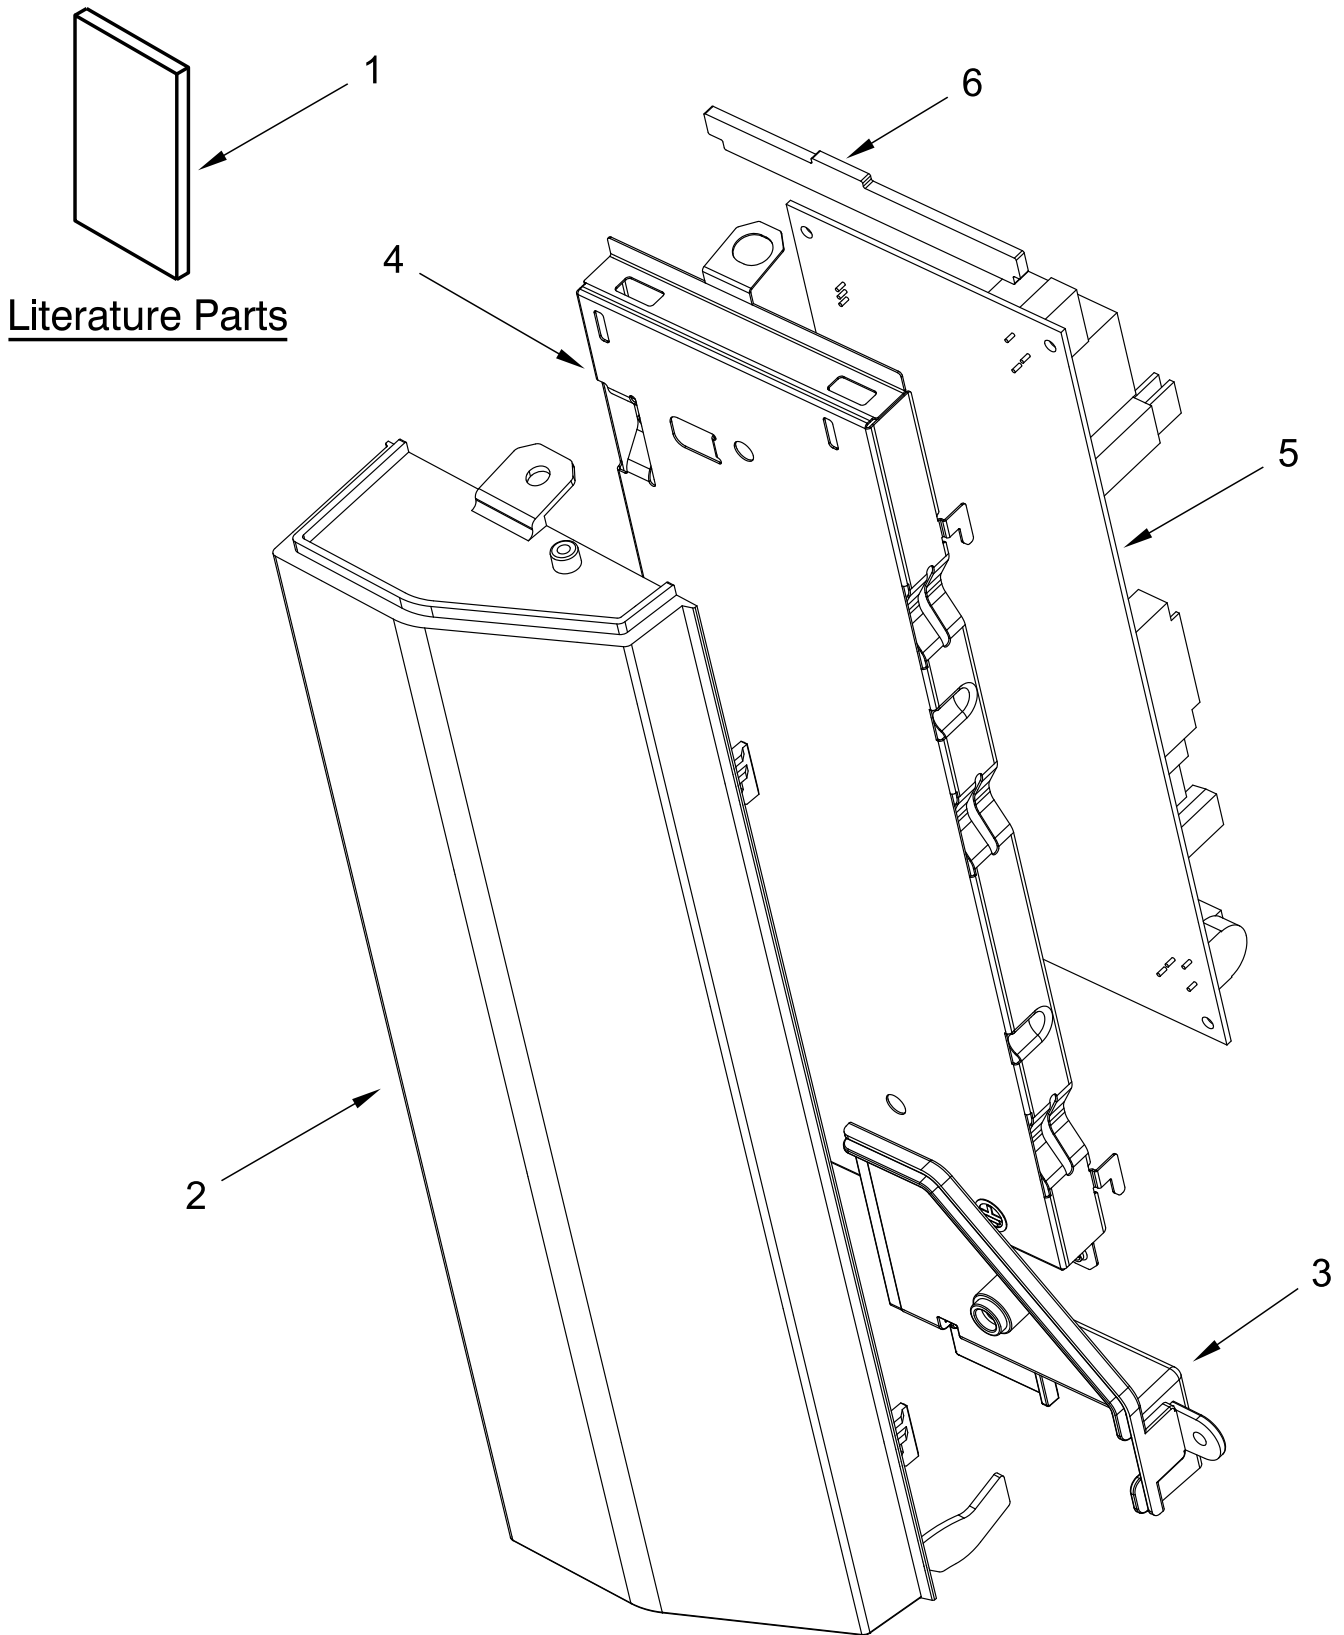


Literature Parts

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2		Cover, Control
	W11496338	Installation Instructions		W10478239	Black
	W11603629	Use and Care Guide	3	W10533504	Duct, Cooling Front
	W11603635	Quick Reference Guide	4	W10540727	Background, Control
	W11603648	Tech Sheet	5	W11627690	PCBA, Appliance Control Unit
			6	W10540721	Seal, Control

# DOOR PARTS

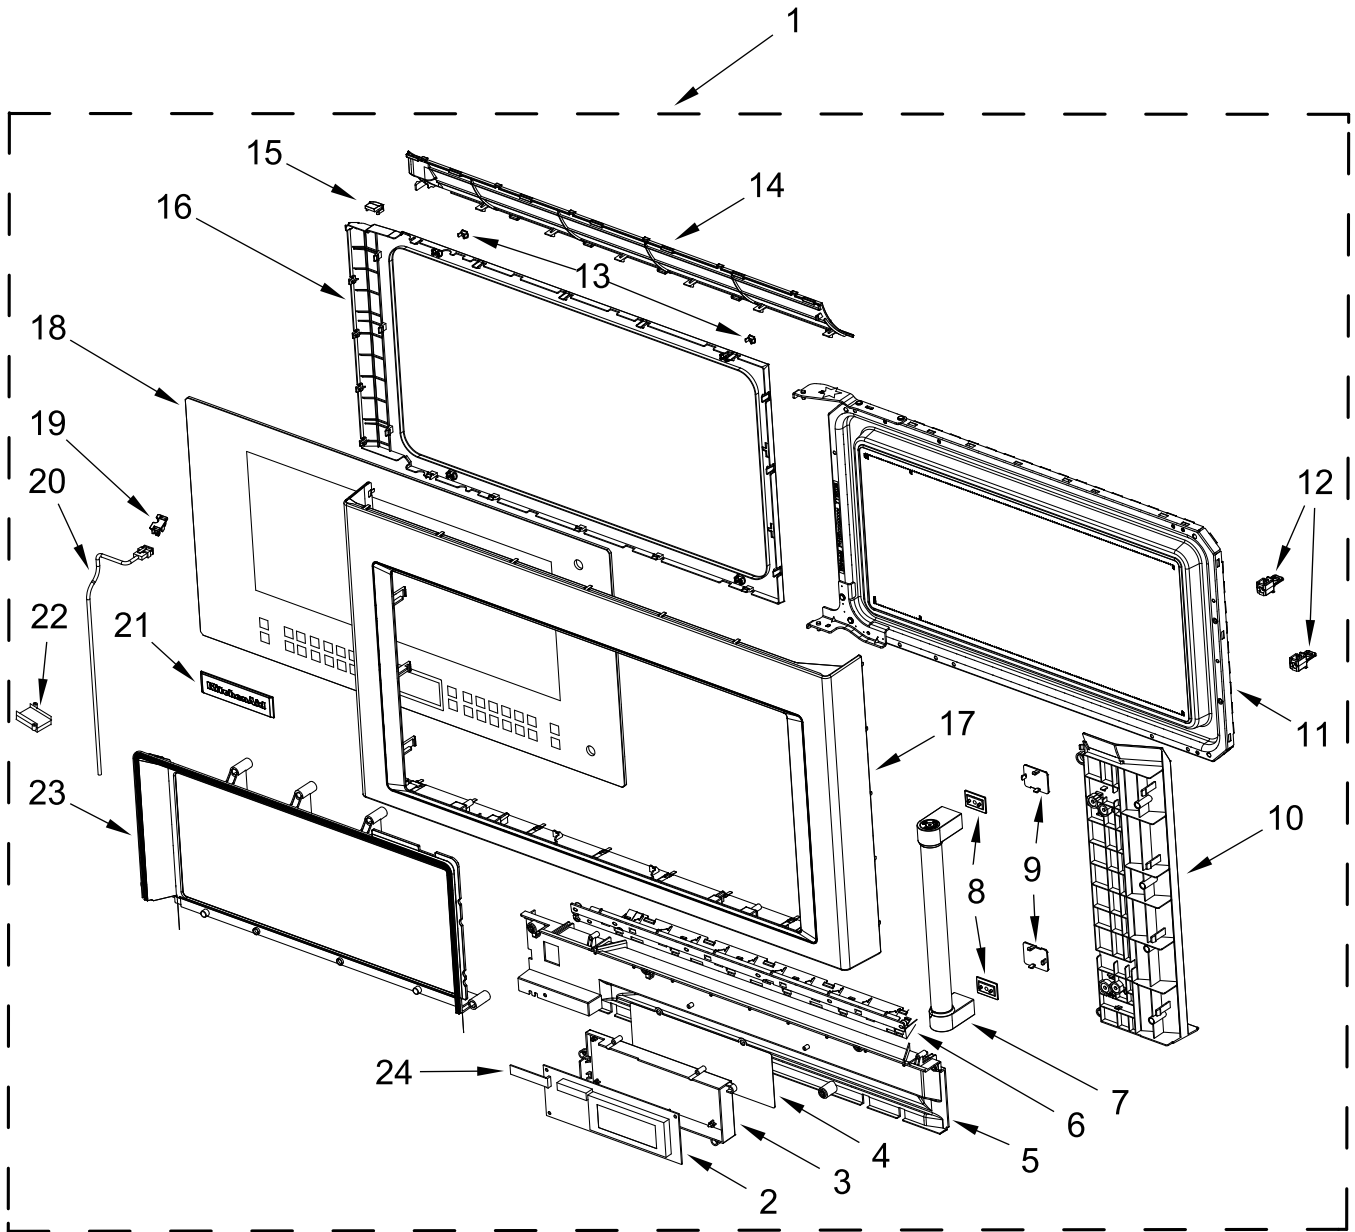


# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Complete
	W11643093	Stainless
	W11643083	Black Stainless
2	W11582284	PCBA, User Interface
3	W10770970	Holder, UI
4	W10540298	Plate, UI Insulation
5	W10617743	Cover, UI
6	W10476546	Bracket, Door
7	W10604264	Assembly, Handle
8	W10540736	Cushion, Handle
9		Cover, Screw
	W10478657	Black
10		Bracket, Outer Door
	W10734943	Black

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10891969	Body, Door (With Glass)
12	W10740455	Hooks, Door
13	W10542546	Cover, Screw
14		Frame, Back Decorating
	W10476550	Black
15	W10643448	Stopper, Door
16	W10897612	Frame, Inner
17		Assembly, Outer Door
	W11437820	Stainless
	W10866701	Black Stainless
18	W11602974	Glass, Door
19	W10770972	Holder, Door Cable

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
20	W11320318	Cable, Door User Interface
21	W10754513	Nameplate
22	W10770971	Bracket, Door Cable
23	W10478647	Plate, Steam Protection
24	W10509362	Cable, Touch Sensor

# INTERIOR AND VENTILATION PARTS

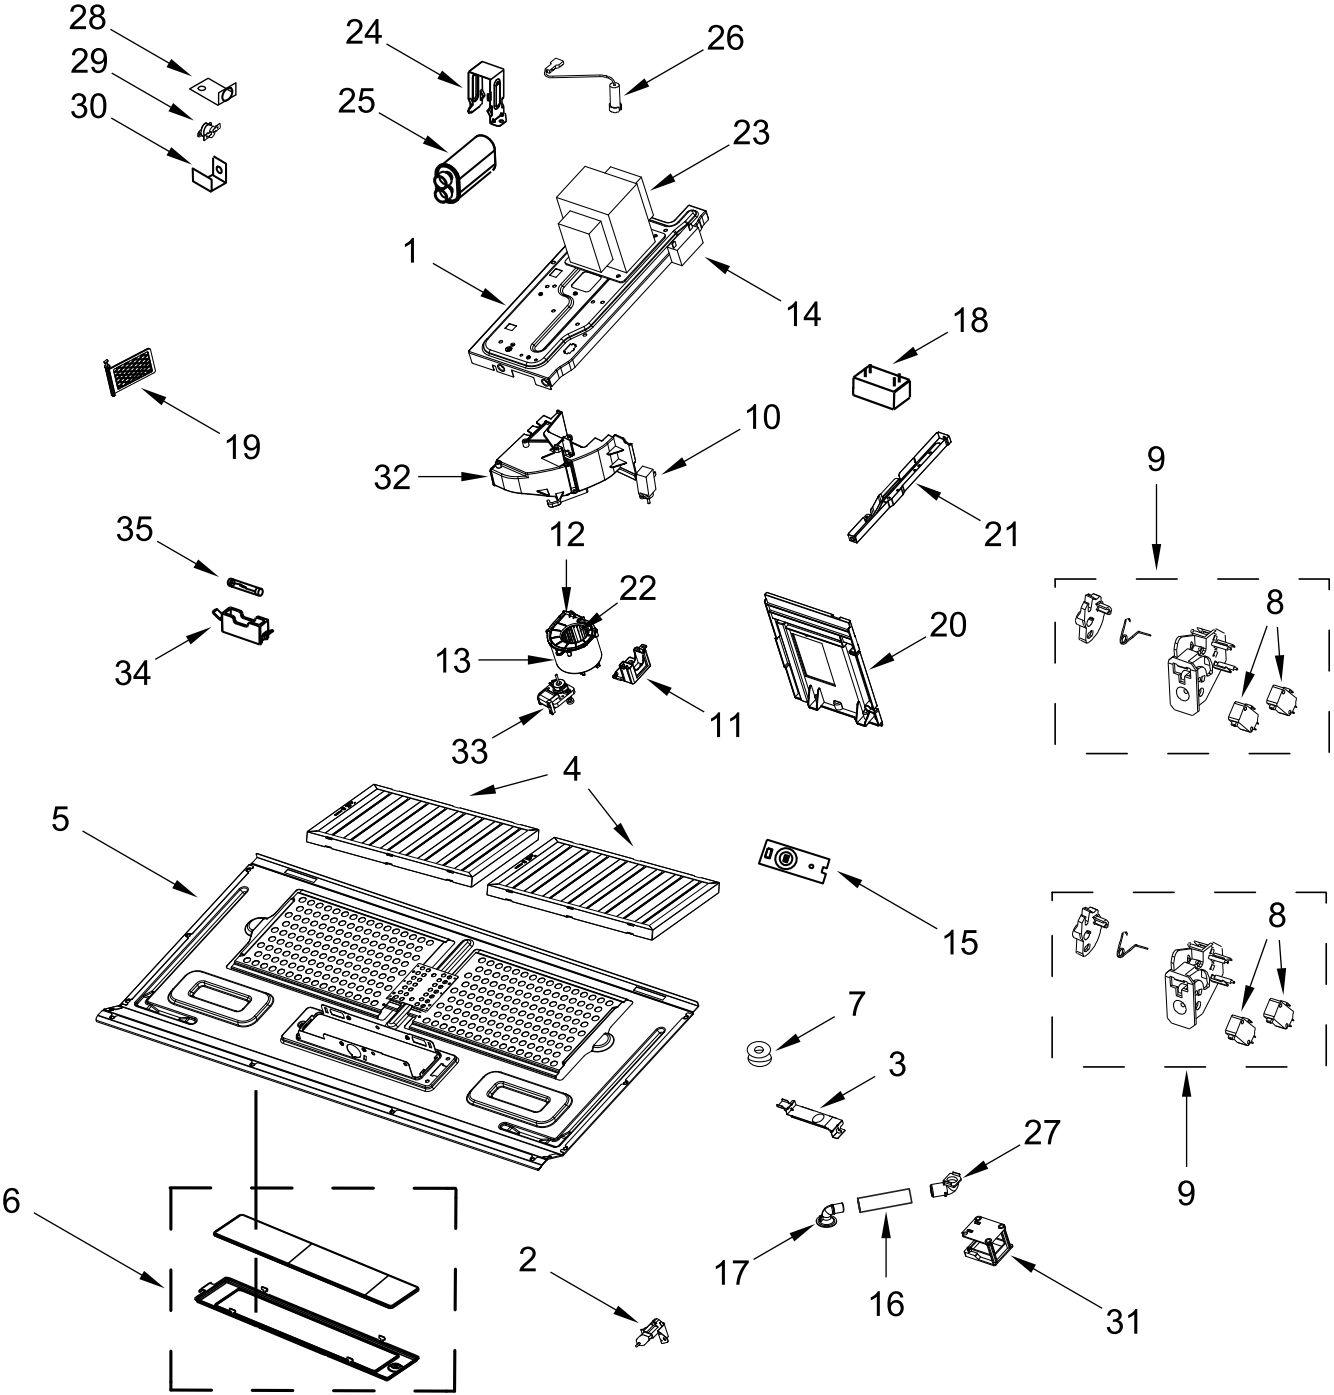

# INTERIOR AND VENTILATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10908578	Chassis	12	W10533502	Cover, Cooling Fan	25	W10561774	Capacitor, High Voltage
2	W11409090	Lamp, Halogen	13	W10533501	Housing, Cooling Fan	26	W11222648	Diode, High Voltage
3	W10525853	Bracket, Smart Pop	14	W11405831	Capacitor, Motor	27	W10510233	Terminal, PCBA Smart Pop
4	W10535933	Filter, Grease	15	W10536989	Thermistor, PCBA	28	W10259248	Cover, Thermostat
5	W10607242	Plate, Bottom	16	W10510235	Tube, Smart Pop Sound	29	W11268275	Thermostat, Convection
6	W10240330	Assembly, Lamp Glass and Holder	17	W10510234	Terminal, Smart Pop	30	W11643070	Clip, Temp Sensor
7	W10510237	Spacer, Smart Pop	18	W11259891	Resistor, Cement	31	W11381433	PCBA, Smart Pop
8		Switches, Interlock (Not Serviced, Order Interlock Assemblies)	19	W10533486	Valve, Door	32	W10631701	Air Guide, Magnetron
9	W11187757	Assembly, Interlock (Includes Switches)	20	W10533107	Deflector, Air	33	W11169357	Motor, Cooling Fan
10	W10458325	Actuator	21	W10540718	Bracket, Cavity	34	W10245194	Holder, Fuse
11	W10533480	Holder, NTC	22	W10533503	Wheel, Cooling Fan	35	W10138793	Fuse
			23	W11249660	Transformer, High Voltage			
			24	W11643065	Bracket, Capacitor			






# AIR FLOW PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11300398	Deflector, Air	11	W10557537	Sensor, Convection	19	W10892383	Duct, Cavity (Front)
2	8206382	Cover, Lamp	12	W10632409	Baseplate, Air Guide	20	W10715053	Shield, Finger
3	W10557536	Sensor, Humidity	13	W11293488	Cover, Right Duct	21	W10531724	Glass, Lamp
4	W11409090	Lamp, Halogen	14	W10572027	Board, Filter	22	W10758887	Assembly, Airguide Grille
5	W10533487	Plate, Air Guide	15	W10810142	Socket, Motor Wire	23	W10138793	Fuse
6	W11409088	Motor, Fan	16	W10533112	Outlet, Cavity (Back)	24	W10591803	Thermostat, Magnetron
7	W10712444	Housing, Damper	17	W10754517	Magnetron	25	W10565479	Board, Door Control
8	8206230	Filter, Charcoal	18	W10533113	Duct, Cavity (Rear)			
9	W10571180	Seal, Foam						
10	W10654514	Thermostat, Cavity						


# TURNTABLE PARTS

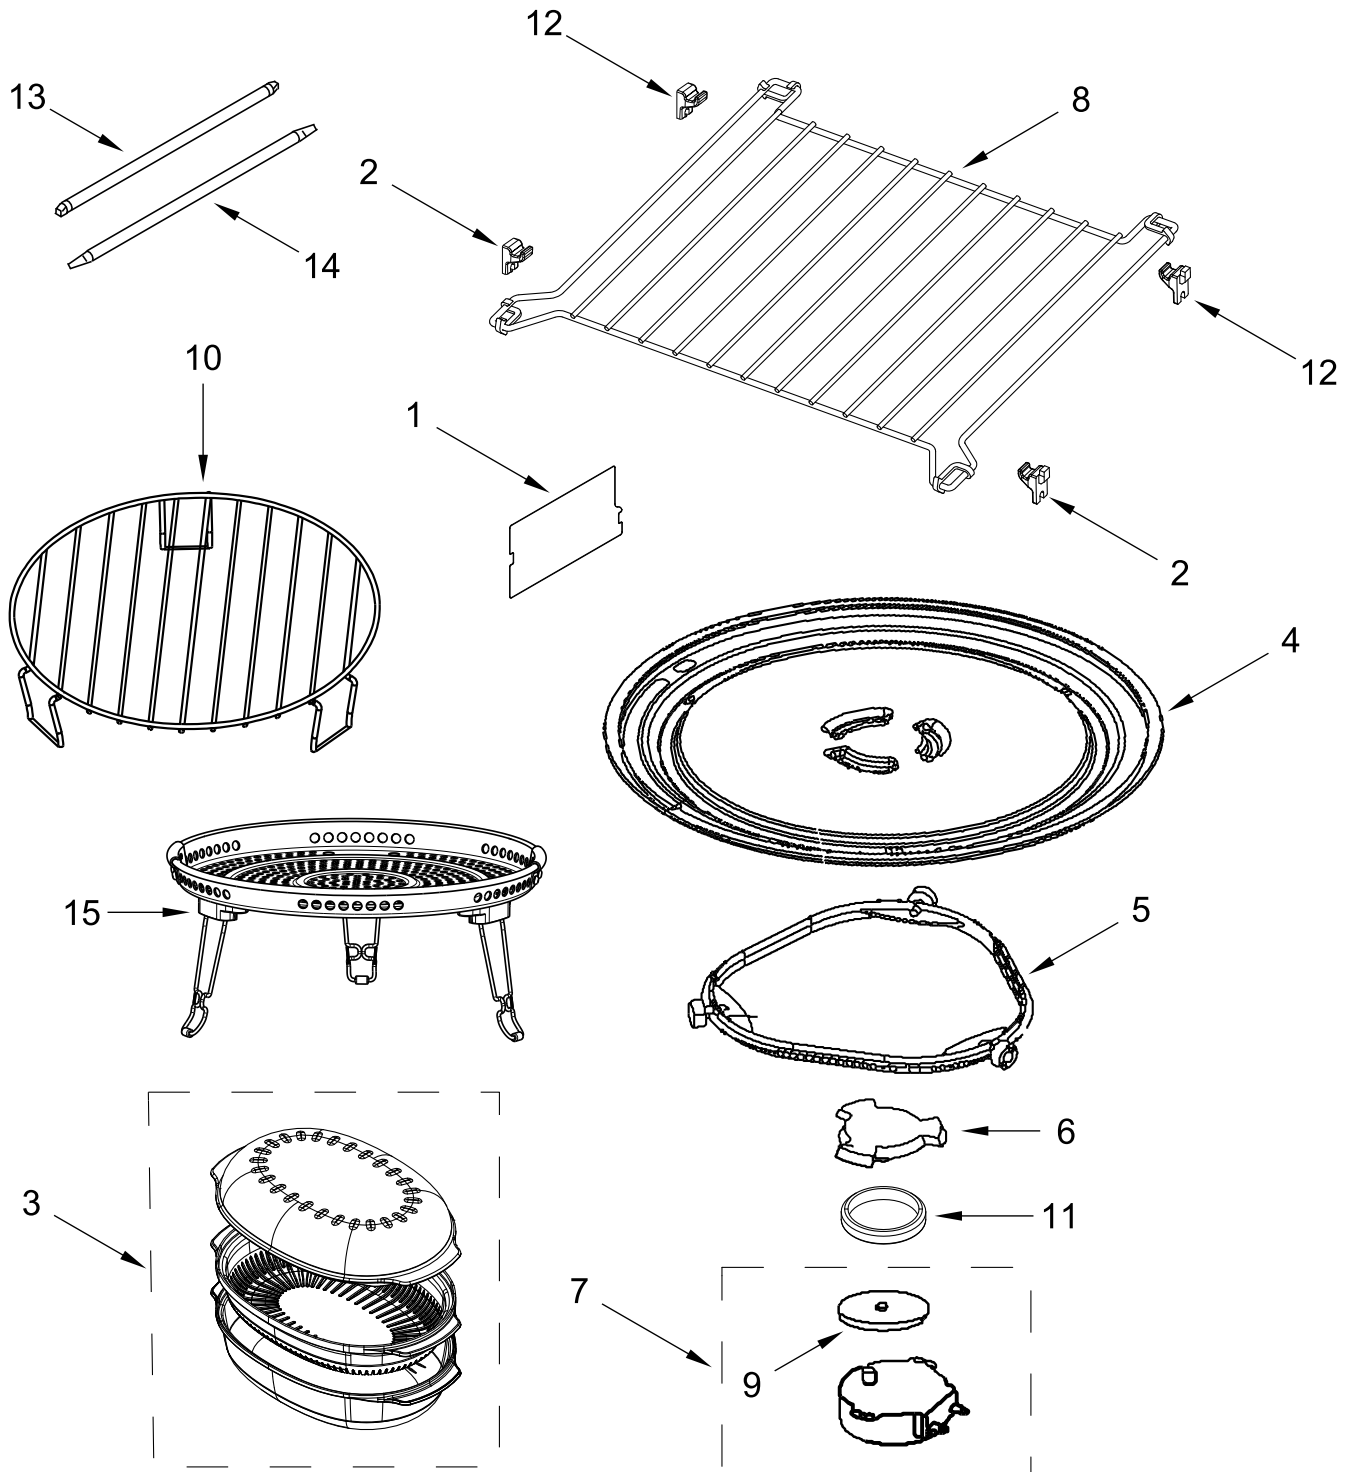

# TURNTABLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11361167	Cover, Waveguide	7	W10466420	Motor, Turntable	13	8184837	Element, Grill Halogen
2	W10740485	Hook, Microwave (Left Front And Right Front)	8	W10637931	Rack, Microwave	14	W10510203	Heater, Quartz Grill
			9	8184109	Seal, Waterproof	15	W11613390	Basket, Air Fry
3	W10857799	Steamer	10	W10440082	Rack, Convection			
4	W11358813	Turntable	11	W10568148	Seal, Turntable Block			
5	W10679313	Ring, Turntable	12	W10573936	Hook, Microwave (Left Rear & Right Rear)			
6	W10337248	Driver, Turntable						

# CABINET AND INSTALLATION PARTS

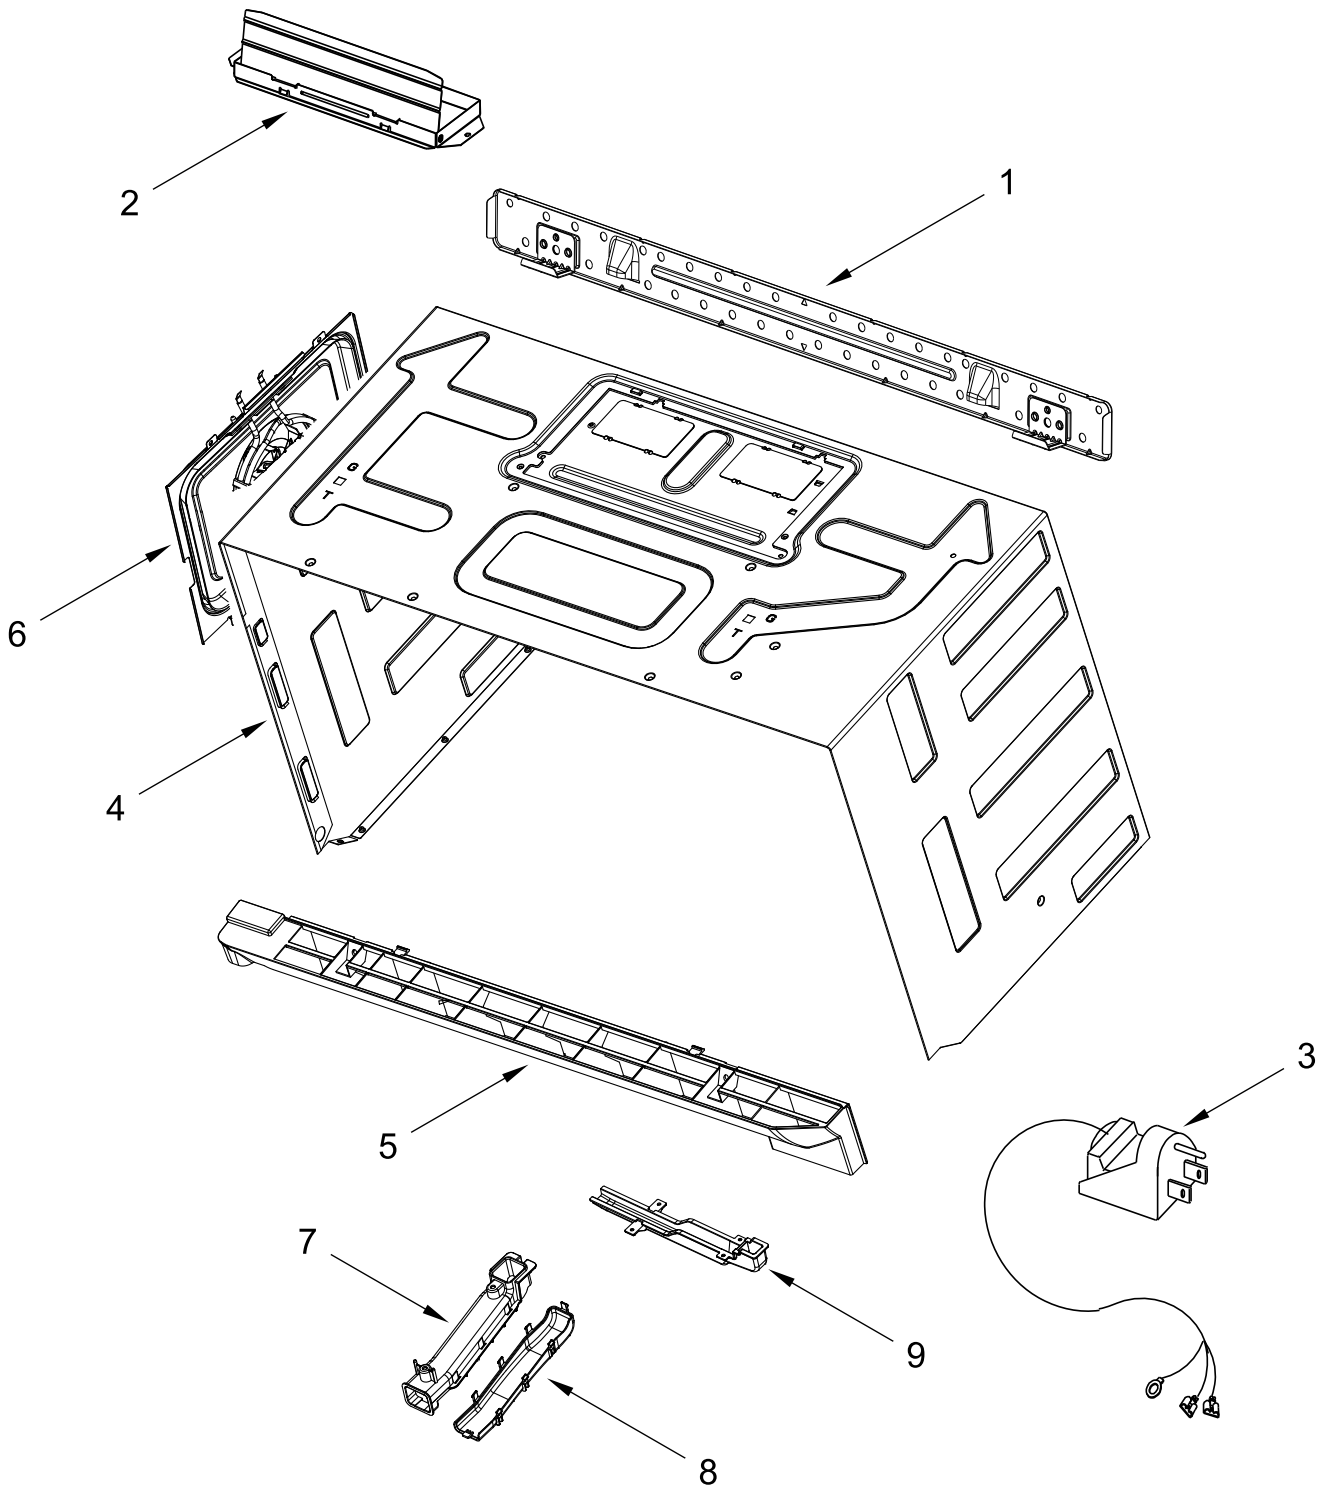

# CABINET AND INSTALLATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11025649	Plate, Mounting
2	W10748710	Damper
3	W10654511	Cord, Power
4		Case, Outer
	W11446919	Black
5		Grille, Vent
	W10701701	Black
6	W10571554	Assembly, Convection Motor and Fan
7	W10740434	Duct, Cooling (Upper)
8	W10533489	Duct, Cooling (Bottom)
9	W10570212	Air Duct, Turntable Motor
		FOLLOWING PARTS NOT ILLUSTRATED
	W10571450	Insulation, Back
	W10571452	Insulation, Top
	W10892377	Insulation, Bottom
	W10571453	Insulation, Side
		MISCELLANEOUS PARTS
	W10821385	Hardware, Installation
	W10190020	Template, Upper (English & Spanish)
	W10190018	Template, Upper (English & French)
	8169704	1/4-20x3" Panhead Screw
	W11302364	Harness, Main
	W11483628	Harness, Hood Lamp and Turntable Motor
	W10539840	Harness, PCBA Ground Wire
	W10566563	Harness, Smart Pop
	W10508741	Wire, Door Control Cable
	W10670896	Harness, Fade In / Fade Out
	W10566562	Cable, Fade In / Fade Out