


KitchenAid®

GAS RANGE

MODELS:

KSGG700EBS6 (Black Stainless)


COOKTOP PARTS

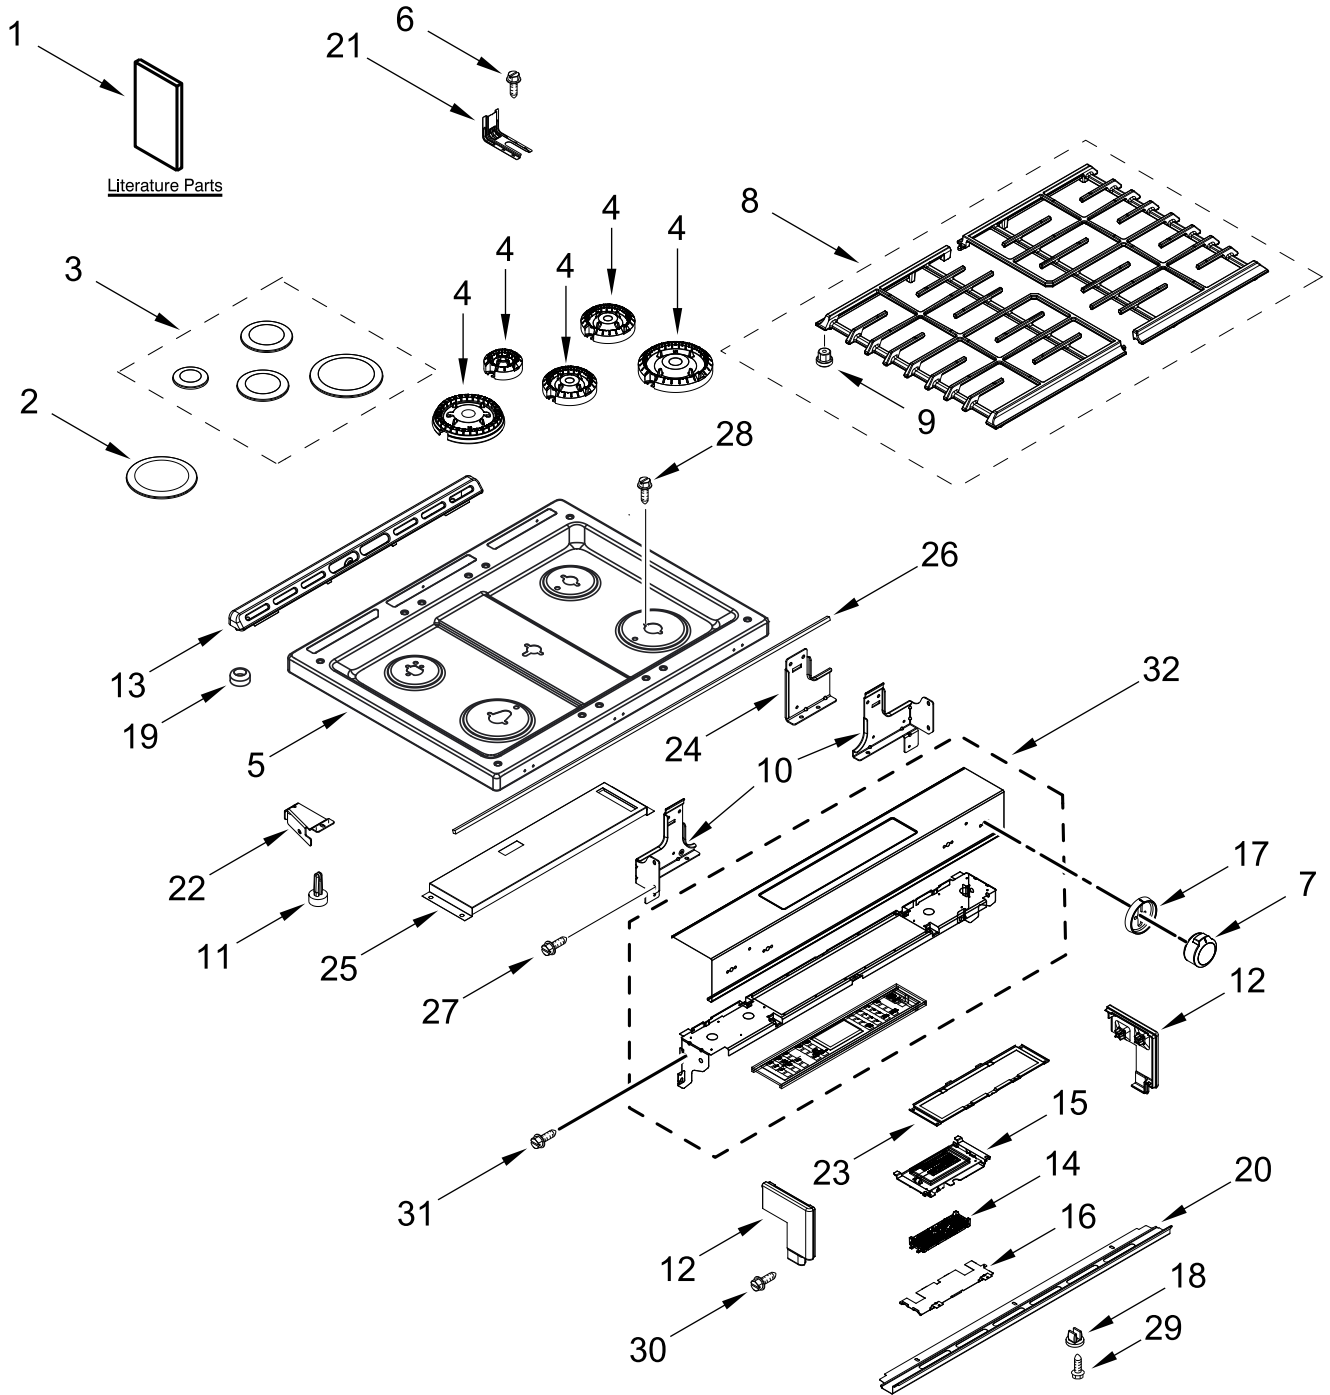

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Grate Kit	25	W11355689	Keypad Shield
	W11426594	Owners Manual		W10432520	Black	26	W11512127	Gasket, Console and Cooktop
	W11565456	Tech Sheet	9	W10465081	Grate, Bumper	27	W10067840	Screw
	W11427468	Quick Start Guide	10	W11563529	Bracket, Support (Left)	28	W10673618	Screw
2		Cap, Stack Burner		W11563527	Bracket, Support (Right)	29	W10516115	Screw
	W11346163	Black (Left Front)	11	8016P022-60	Glide, Main Top	30	9780274	Screw
3		Burner Cap Kit	12		Endcap	31	3196169	Screw
	W11352136	Black (Left Rear, Center, Right Front, Right Rear)		W10913412	Black (Left)	32		Console
				W10913413	Black (Right)		W10861022	Black Stainless
			13		Trim, Vent			FOLLOWING PARTS NOT ILLUSTRATED
				W10577781	Black		W11465340	Main Harness
4	W11348511	Flame Spreader, Stack (Left Front)	14	W11541189	Control, MRC2		W10754419	Harness, Bake and Broil
	W11352197	Flame Spreader (Left Rear)	15	W10759325	Assembly, Display		W10598169	Harness, Display
	W11352193	Flame Spreader (Right Front)	16	W10558372	Bracket, Control		W10575120	Harness, Keypad
	W11352195	Flame Spreader (Right Rear and Center)	17		Bezel		313438	Clip, Harness
				W10785119	Stainless (Kit of 5)		3196520	Clip, Wire
			18	W10645947	Grommet		W10182767	Tie, Manifold Wire
			19	W10854253	Bumper		W10580229	Wire, Ground
			20		Console, Lower Panel		3196174	Screw
				W10860957	Black		W11397194	LP Conversion Kit
5		Cooktop	21	W11379947	Bracket, Anti-Tip		W10566535	LP Conversion Kit (Bake and Broil)
	W11341028	Black	22	W10162253	Brace, Corner (Left)		7111P017-60	Clamp, Wire
6	7101P485-60	Screw, Anti-Tip Kit		W10162252	Brace, Corner (Right)		3196896	Clip, Wire
7		Knob	23	W10555923	Bracket, User Interface			
	W10786065	Stainless (All except Left Front)	24	W10598048	Bracket, Console (Center)			
	W10786064	Stainless (Left Front)						


CHASSIS PARTS

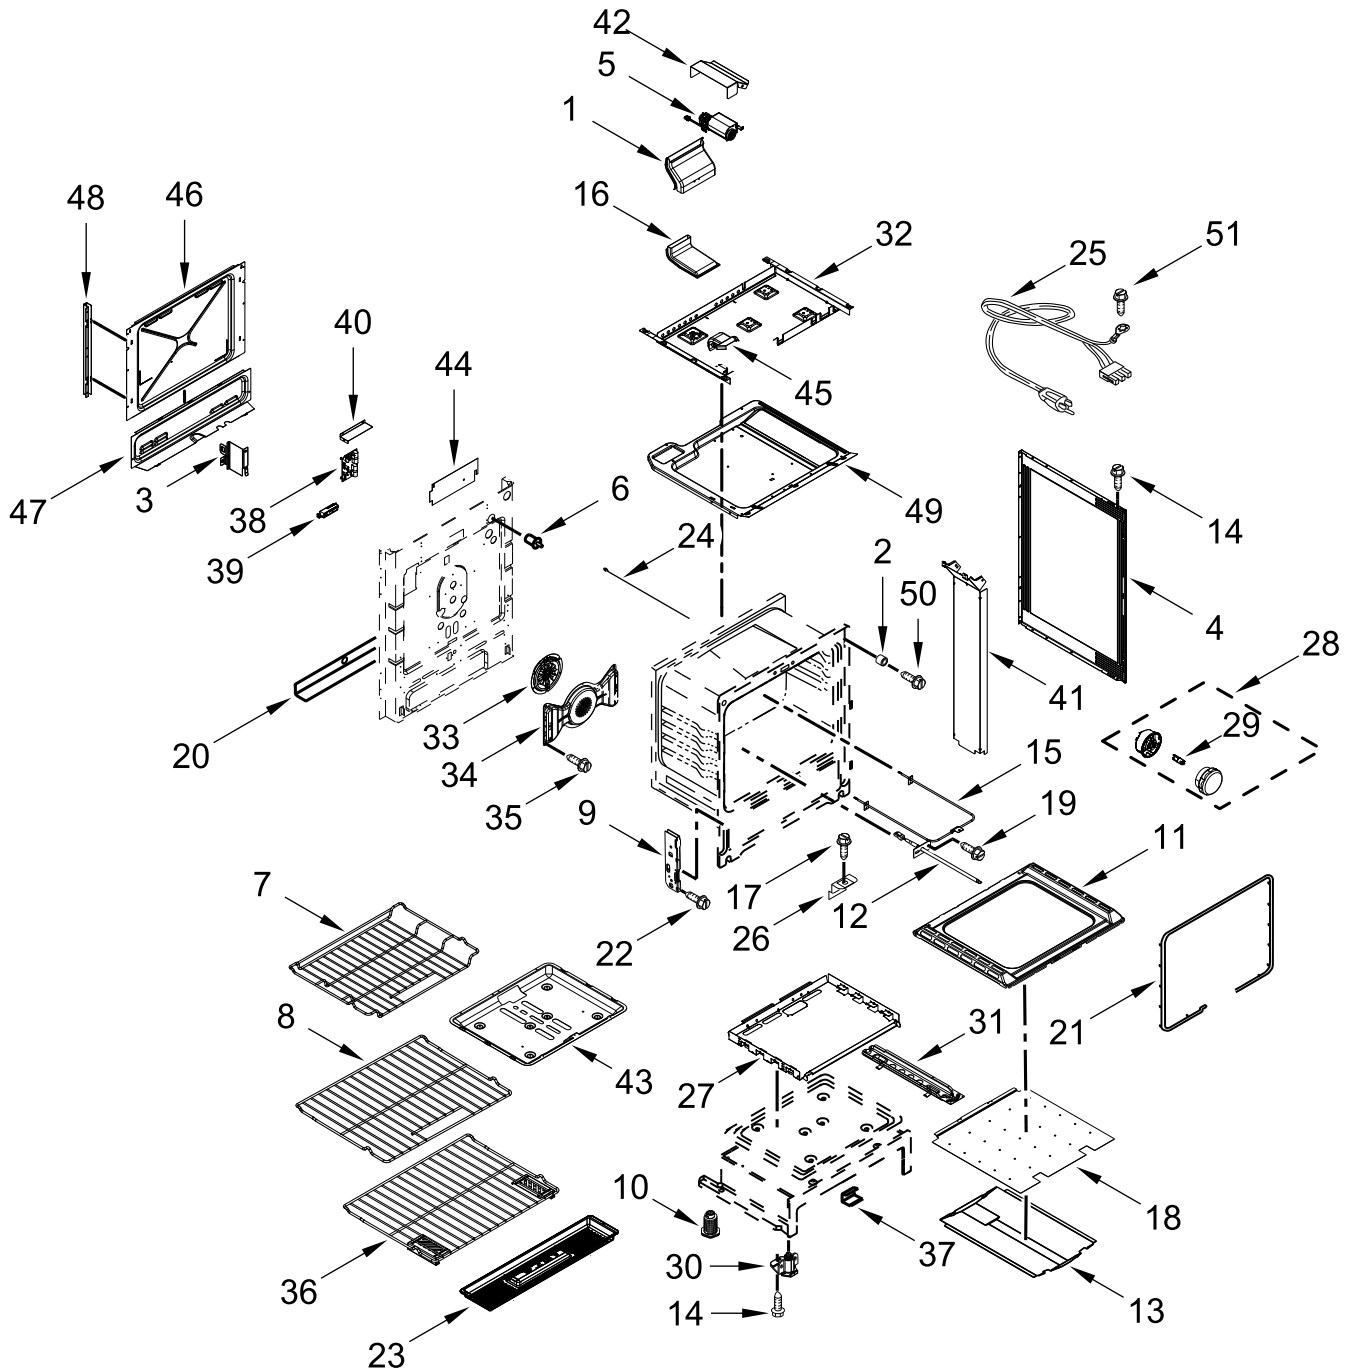

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	22	W10031780	Screw	39	W10475149	Module, Spark
2	9758701	Spacer, Door	23	W10686408	Kit, Reservoir (Steam Rack)	40	W11206138	Guard, Splash
4		Panel, Side	24	W10273192	Rod, Door Switch	41	W10162254	Duct, Cooling
	W10162245	Black	25	W10624590	Cord, Power	42	W10162255	Duct, Cover
5	W11467246	Cooling Fan	26	W10035900	Support, Oven Bottom	43	W11379356	Pan, Bake
6	W11511828	Switch, Door	27	W10541959	Shield, Bake	44	W10818358	Shield, Wire
7	W10554006	Rack, Maximum Capacity	28	W11544377	Light Assembly	45	W10162257	Duct, Cooktop
8	W10554005	Rack, Heavy Duty	29	W10571723	Bulb, Halogen 40 Watts	46	W11379354	Cover, Back
9	W10289077	Receiver, Hinge	30	W10341186	Front Foot Assembly	47	W10162249	Cover, Wire
10	W10058460	Foot, Leveling	31	W10390008	Base Rail Assembly (Left)	48	W10162241	Channel, Rear
11	W10211368	Bottom, Oven		W10390007	Base Rail Assembly (Right)	49	W10289168	Box, Burner SI
12	W10586204	Sensor				50	3196560	Screw
13	3601P356-45	Baffle, Bake Burner				51	3196173	Screw
14	3196178	Screw						FOLLOWING PARTS NOT ILLUSTRATED
15	W10552502	Element, Broil Assist	32	W11320442	Gas Box Burner		4820F015-59	Insulation, Strap
16	W11040249	Assembly, Flue (Upper)	33	W11353926	Convection Assembly		W10289173	Insulation, Wrap
17	W10362924	Screw	34	W10346153	Baffle, Full Convection		W10162240	Insulation, Back
18	W10323077	Diffuser, Flame	35	W10362924	Screw			
19	3196178	Screw	36	W10554007	Rack, Steam			
20	W10435470	Brace, Main Back	37	W10137382	Clip, Panel			
21	W11491752	Gasket, Door	38	W10457998	Module, Spark (0 plus 2)			


MANIFOLD PARTS

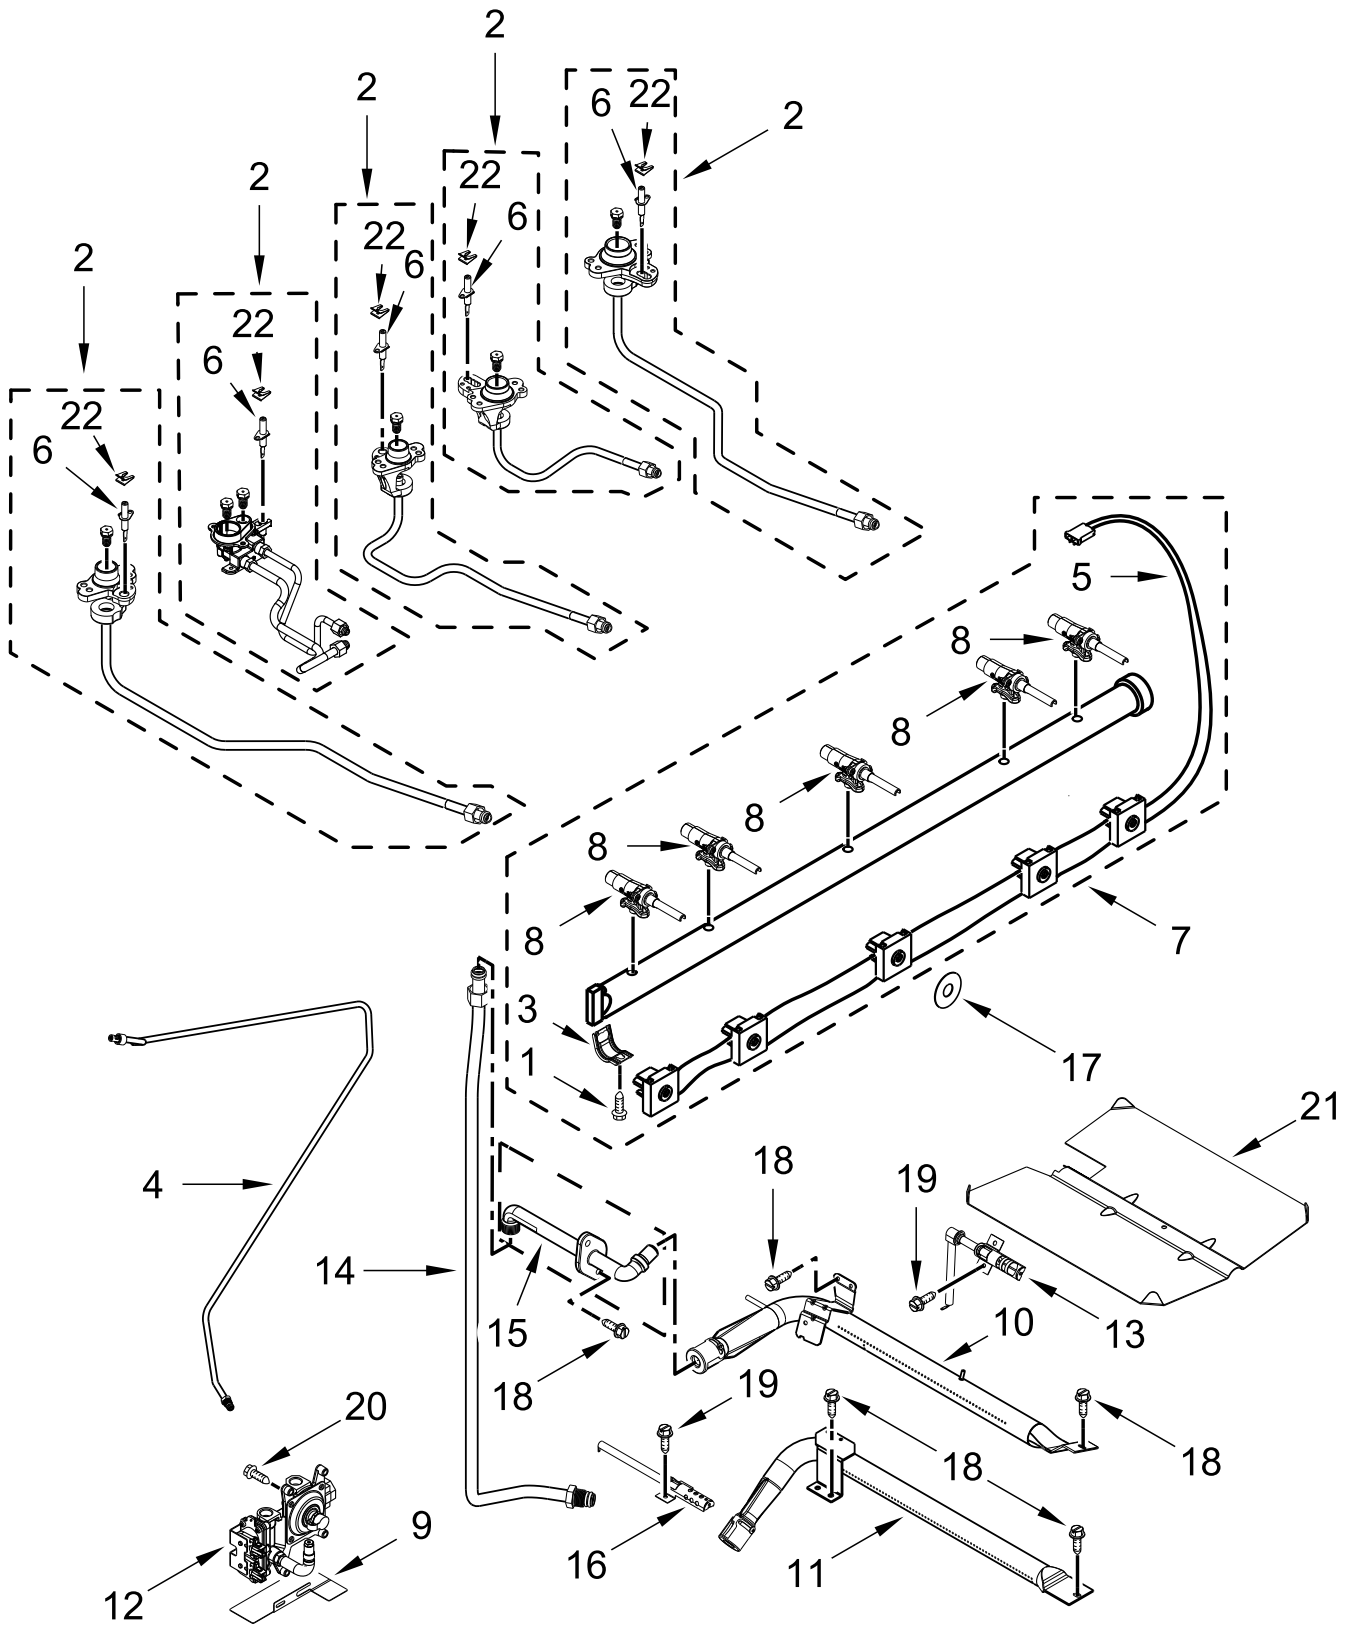

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	6	W10898387	Electrode, Burner	9	W10224921	Bracket, Aegis
2	W11230090	Orifice Assembly (Left Front)			(Left Front)	10	W10439242	Burner, Broiler
	W11186509	Orifice Assembly (Left Rear)		W10669525	Electrode	11	W10680035	Burner, Bake
	W11186526	Orifice Assembly (Right Front)		W10669524	Electrode, Burner	12	W10554066	Valve, Regulator
	W11186522	Orifice Assembly (Right Rear)			(Right Front and Center)	13	W10324262	Igniter, Bake
	W11186518	Orifice Assembly (Center)		W10669523	Electrode, Burner	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)
3	W10949105	Bracket, Saddle Valve			(Right Rear)	15	W10583216	Fitting, Broil Burner
4	W10432252	Tube, Gas Supply	7	W11356345	Manifold Assembly	16	W10333842	Electrode, Broil
5	W10432517	Harness, Switch Spark	8	W10432224	Valve, Gas Duel	17	W10140571	Seal, Switch Shaft
					(Left Front)	18	3196178	Screw
				W10831590	Valve, Gas	19	3196385	Screw
					(Left Rear)	20	3400016	Screw
				W10566062	Valve, Gas	21	3601P336-45	Baffle, Broil Burner
					(Right Front)	22	W10827923	Electrode, Spring
				W10566057	Valve, Gas			
					(Right Rear and Center)			

DOOR PARTS

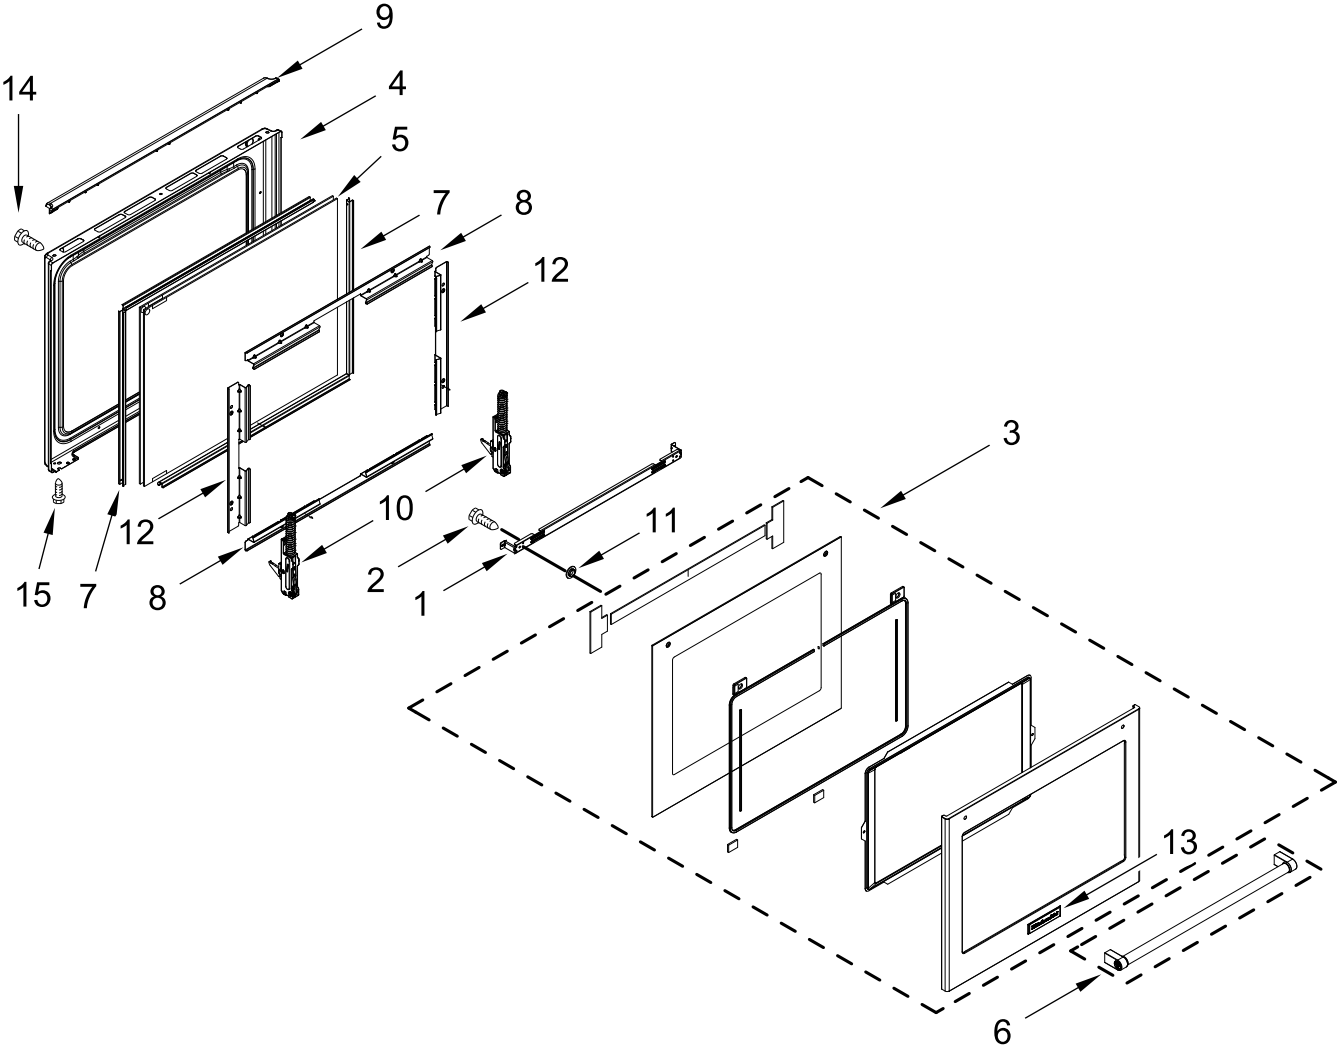


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle
2	W11091878	Screw
3		Assembly, Outer Door
	W10861021	Black
4	W10826568	Liner, Door
5	W11223202	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6		Assembly, Door Handle
	W10551000	Stainless
7	W11379948	Glass Spacer
8	W10813140	Rail, Horizontal Support
9		Scoop, Door
	W10613791	Black

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10885519	Hinge, Door (Active)
11	W10319024	Washer, Door
12	W10813139	Rail, Vertical Support
13	W10518672	Badge
14	W10031790	Screw
15	W10327235	Screw

DRAWER PARTS

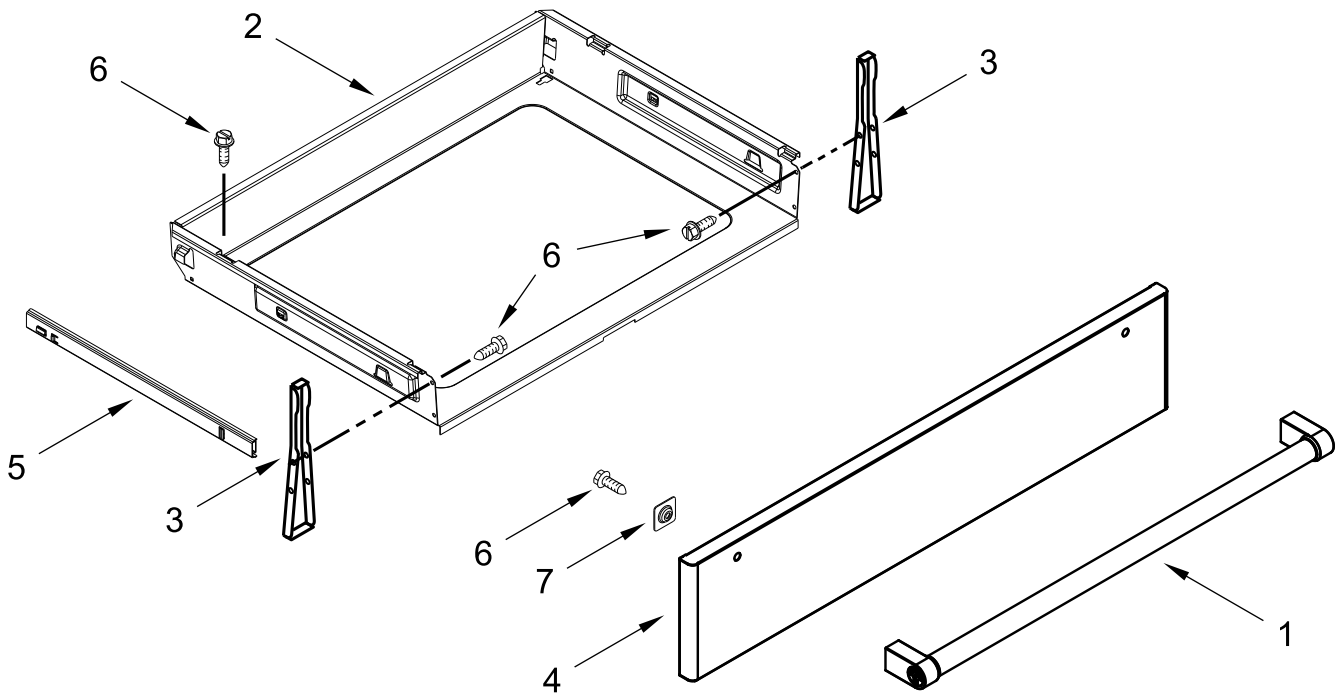

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	6	8533988	Screw
	W10551000	Stainless		W10441805	Slide, Drawer (Right)	7	3823F017-45	Spacer, Handle
2	W10688022	Drawer, Storage						
3	W10318026	Bracket, Mounting						
4		Panel, Drawer Front						
	W10860958	Black						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	WA906B	Scraper, Cooktop
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill
	W10432019	Alt Cleaning Kit Assembly, Trim (Includes Blind Threaded Insert)
		(5/8 in)
	W10675026	Black
	W10675027	White
	W10675028	Stainless (1 1/8 in)
	W10731886	Black
	W10731885	White
	W10731887	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless