




ELECTRIC RANGE

MODELS:

WFES7530RB0 (Black)

WFES7530RW0 (White)


COOKTOP PARTS

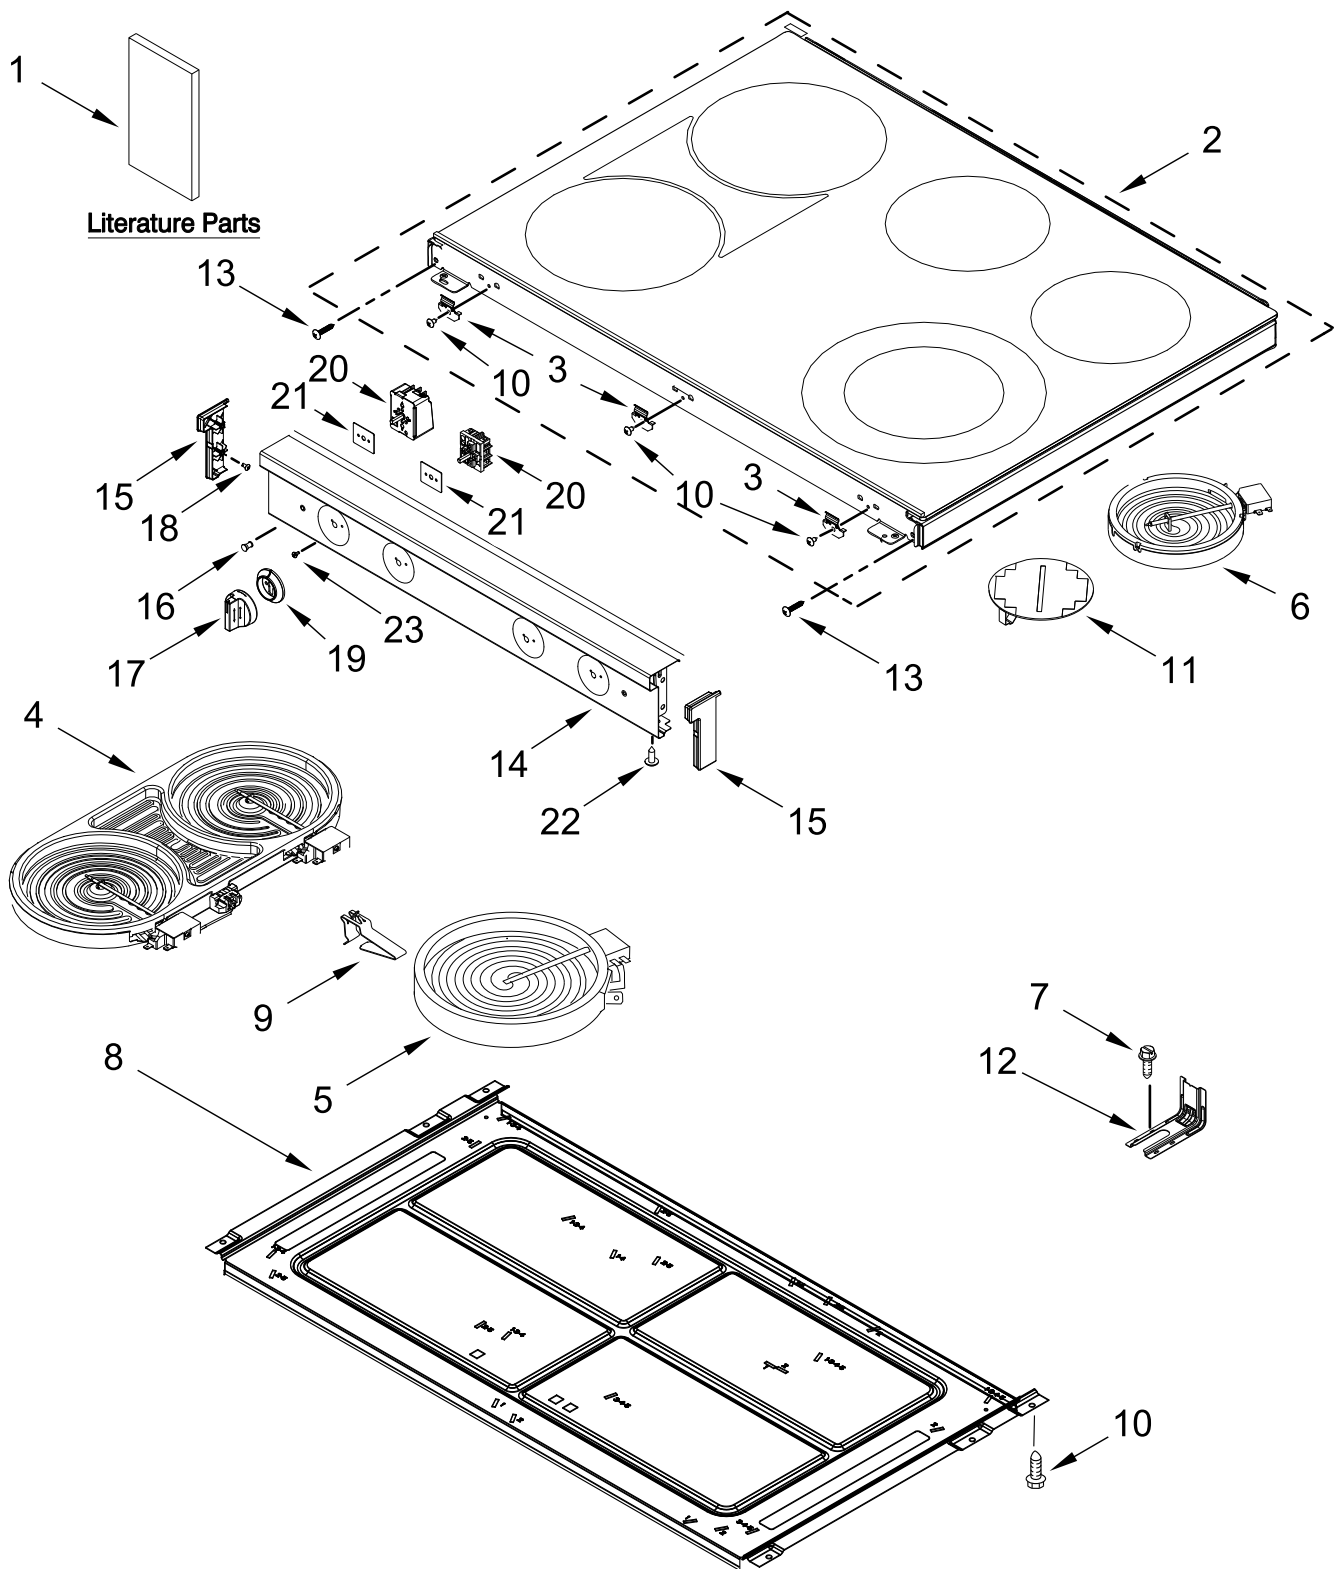

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	3196169	Screw	18	9780274	Screw
	W11638635	Owners Manual	11	W11668631	Element, Warm Zone	19		Bezel
	W11638798	Quick Start Guide			(Center Rear)		W11635853	Black
	W11639164	Tech, Sheet	12	W11379945	Bracket, Anti-Tip		W11635854	White
2		Cooktop	13	3400080	Screw	20	W10437092	Switch, Infinite
	W11629537	Black (includes, Cooktop Bracket)	14		Panel Upper, Manifold	21	7201P077-60	Gasket, Infinite Switch
3	W11593284	Bracket, Cooktop		W11393095	Black	22	3196178	Screw
4	W11724301	Bridge, (1800W, 800W)		W11393094	White	23	W10498399	Screw
		(Left Front and Left Rear)	15		Panel, Manifold End Cap			FOLLOWING PARTS NOT ILLUSTRATED
				W11361195	Black (Left)		W11334457	Harness, Main
5	W11735737	Element (3000W) (Right Front)		W11361200	Black (Right)		W11341267	Harness, Cooktop
				W11361204	White (Left)		W11393541	Harness, Wire
6	W11724296	Element (Single, 1200W) (Right Rear)		W11361202	White (Right)		W11341202	Harness, Front Dual
			16	3196068	Lens, Indicator		W11585874	Harness, Hidden Bake
7	7101P485-60	Screw, Anti-Tip Kit	17		Knob			
				W11636063	Single, (Black)			
8	W11300812	Pan, Radiant Element		W11636064	Dual, (Black)			
				W11635844	Single, (White)			
9	W11600012	Spring, Element		W11635845	Dual, (White)			


CONTROL PANEL PARTS

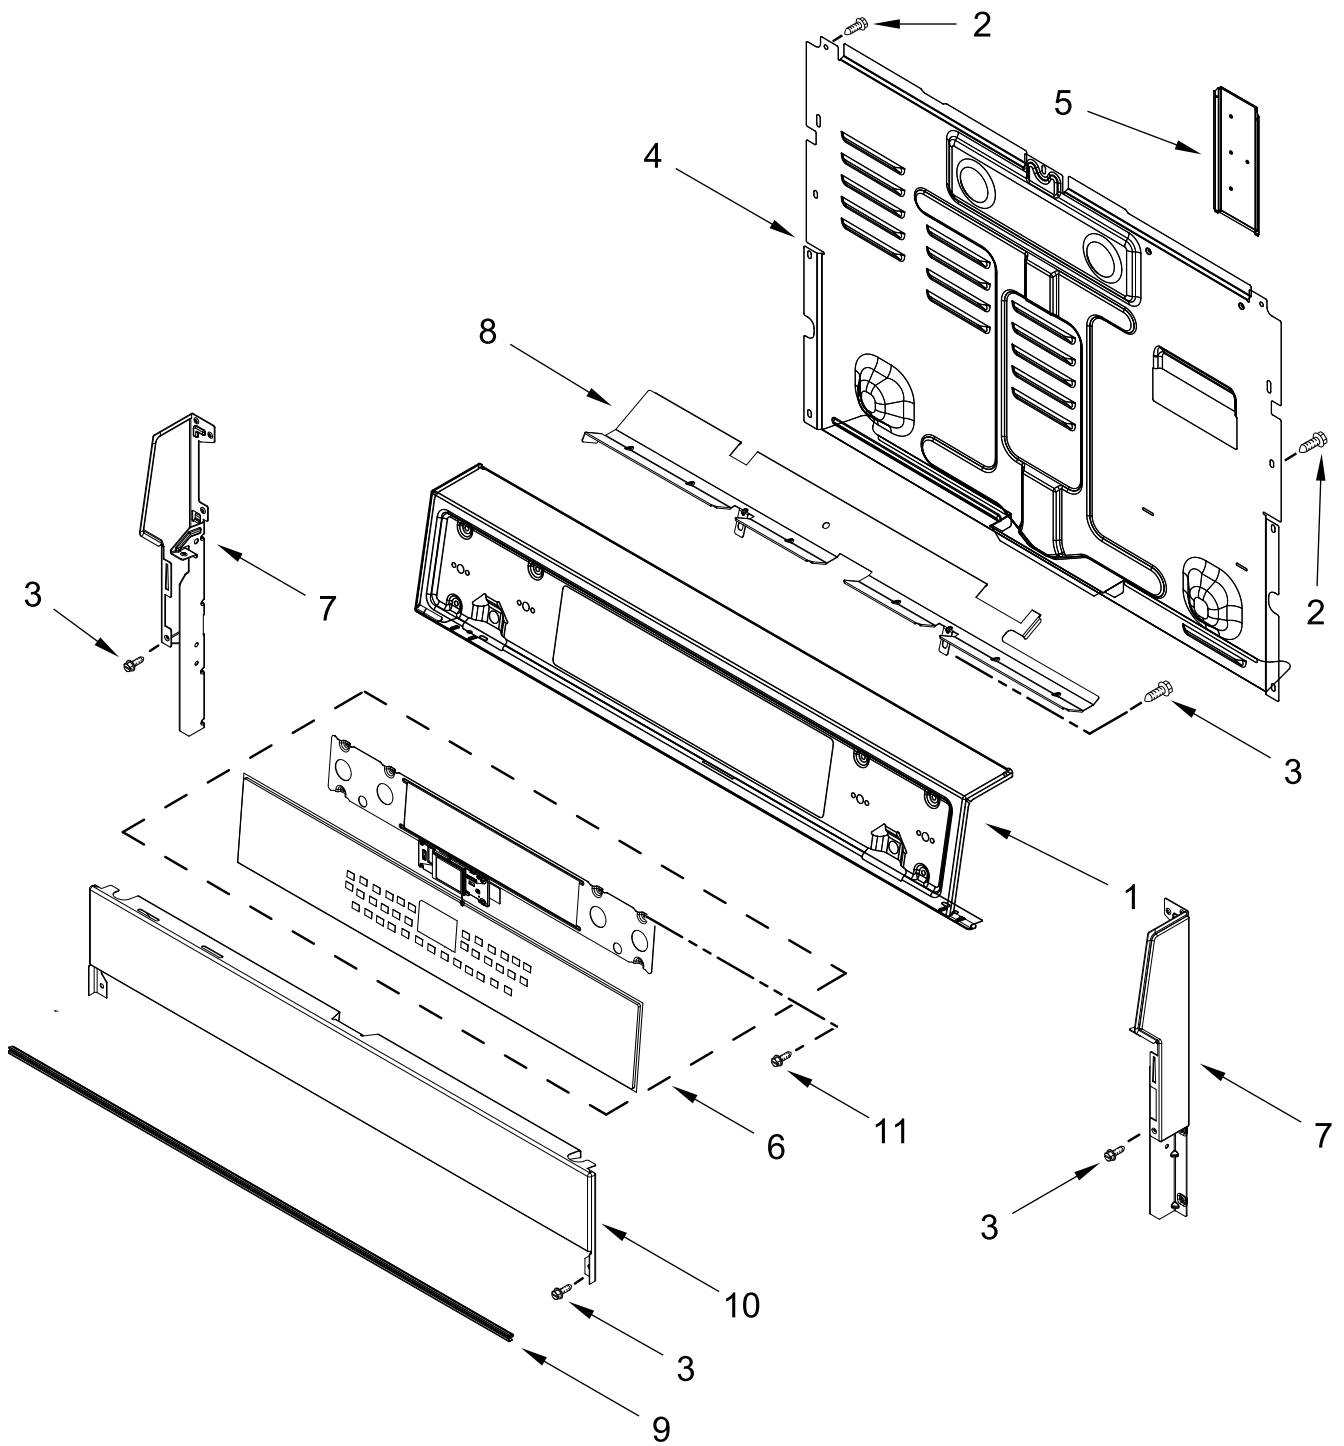

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	W11394231	Cover, Rear Flue	10		Panel, Lower
	W11385176	Black	6	W11400085	Assembly, User Interface		W11625413	Black
	W11371987	White					W11625412	White
2	3196178	Screw	7		Endpost, Console	11	3196160	Screw
3	3196169	Screw		W11625423	Black (Left)			
4	W11392241	Cover, Upper Rear		W11625420	Black (Right)			
		(Left Front and Right Front)		W11625422	White (Left)			
	W10843843	Switch, Infinite (Left Rear)		W11625418	White (Right)			
	W10578768	Switch, Infinite (Right Rear)	8	W11363806	Shield, Heat			
			9	W11643797	Gasket, Lower Panel			


CHASSIS PARTS

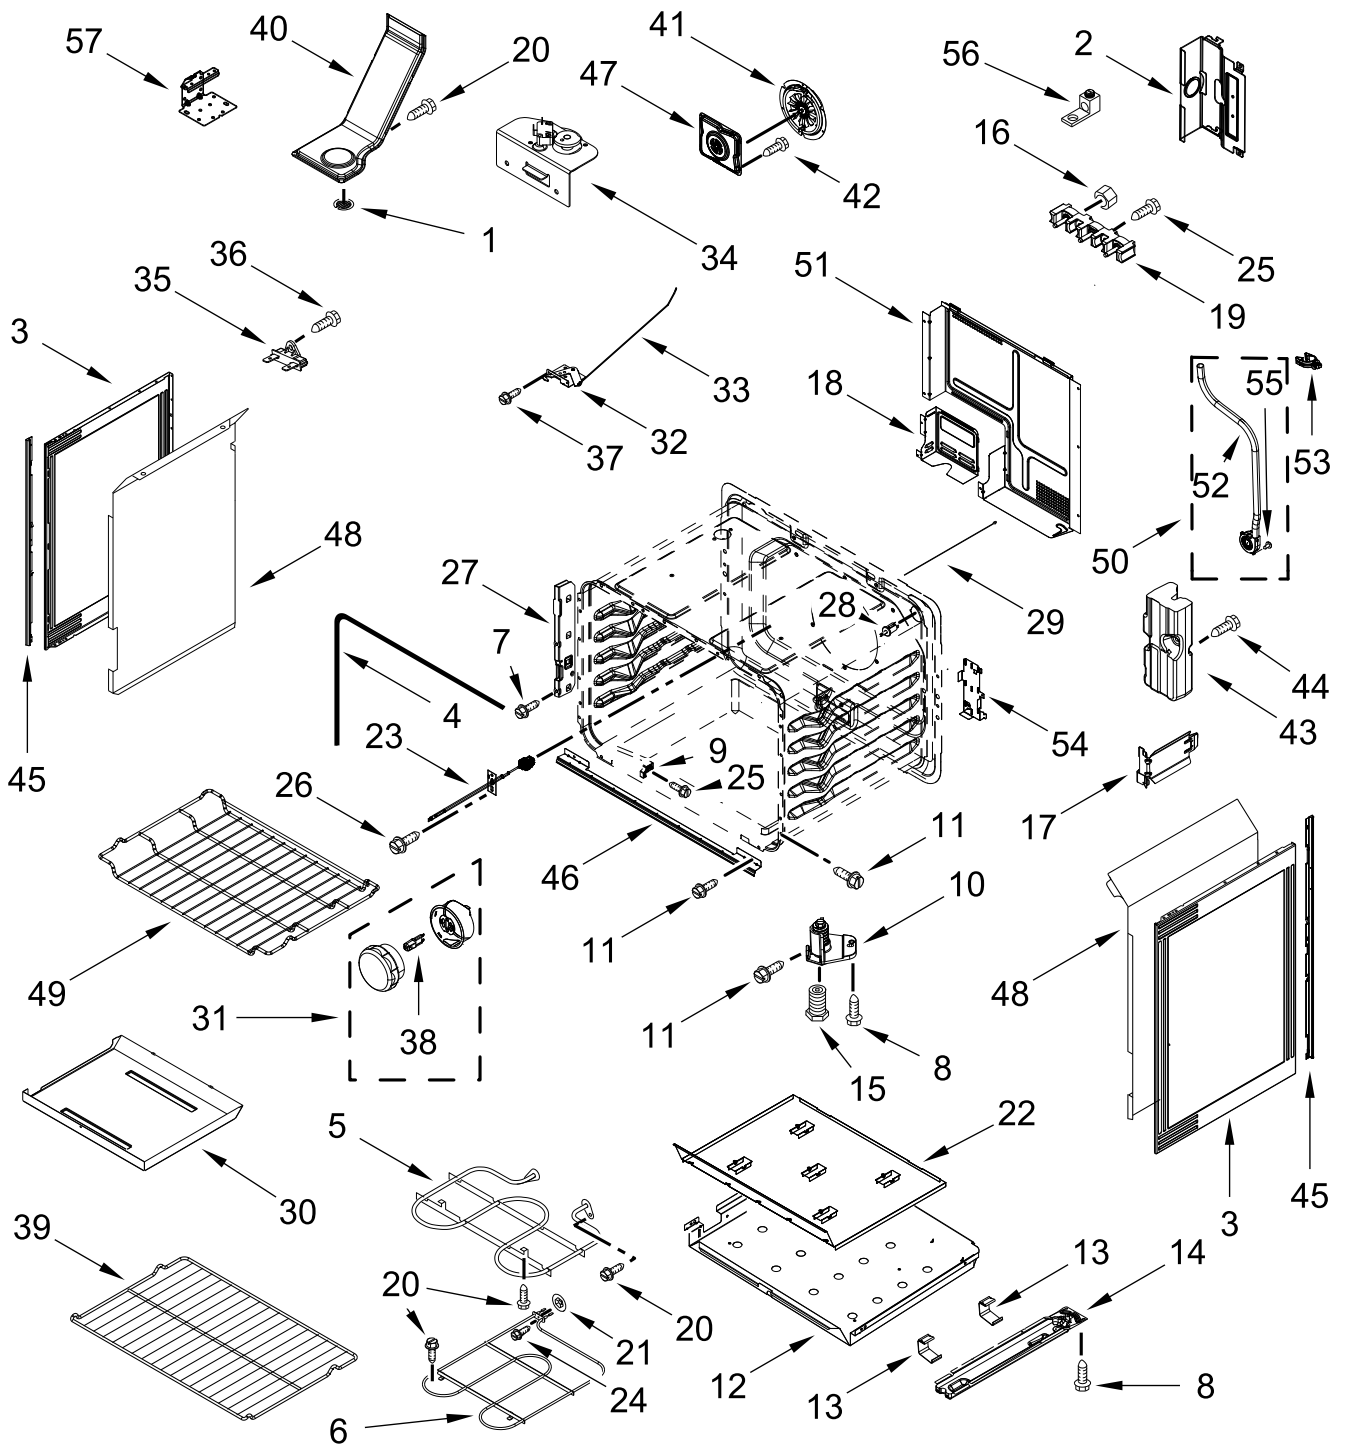

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	23	W11633068	Sensor	46	W11464547	Bracket, Front Frame
2	W11391997	Bracket, Service	24	3196174	Screw	47	W11373155	Cover, Conv Fan
3		Panel, Side	25	3400080	Screw	48	W11379353	Retainer, Insulation (Left)
	W11445467	Black	26	3196169	Screw		W11379943	Retainer, Insulation (Right)
	W11445761	White	27	W10289077	Receiver, Hinge			
4	W11491751	Seal, Door	28	W11511828	Switch, Door			
5	W10308476	Element, Broil	29	9757239	Rod, Door Switch	49	W11607819	Rack, Oven (Gull-Wing)
6	9755770	Element, Bake	30	W10183712	Tray, Hidden Bake	50	W11625914	Ventilation Assembly, Console
7	W10031780	Screw	31	W11634772	Light Assembly	51	W11367541	Side, Fan Cover
8	3196178	Screw	32	9761013	Front Door Latch Assembly	52	W11411632	Blower, Tube
9	W10674705	Glide, Drawer Front	33	W10078370	Rod, Push Latch	53	W11642475	Tube, Clamp
10	W10341186	Front Foot Assembly	34	W10107820	Rear Door Latch Assembly	54	W11365827	Bracket, Acu
11	W10067840	Screw	35	3196548	Fuse, Thermal	55	3400701	Screw
12	W11309796	Tray, Insulation	36	3196172	Screw	56	W10281322	Kit, Bare Wire Adapter Block
13	W10137382	Clip, Panel	37	3196560	Screw	57	W11287215	Bracket, Cooktop Console
14	W10390007	Base Rail Assembly (Right)	38	W10571723	Bulb, Halogen 40 Watts			FOLLOWING PARTS NOT ILLUSTRATED
	W10390008	Base Rail Assembly (Left)	39	W11173792	Rack, Oven		3196520	Clip, Wire
15	W10058460	Foot, Leveling	40	W11366092	Tube, Vent		W10646923	Card, Insulator
16	3400029	Nut	41	W11635909	Fan, Convection		W10774939	Insulation, Wrap
17	W10404688	Clip, Oven Support	42	W10516115	Screw		W11407378	Insulation, Back
18	W11596201	Corner, Cover	43	W10910404	Counterweight		W11404469	Insulation, Flue
19	W11750818	Block, Terminal (without Ground Strap)	44	W11034869	Screw		4820F015-59	Insulation, Strap
20	W10362924	Screw	45	W11510561	Barrier Rail, Rubber (Front Left)			
21	3400968	Nut		W11510562	Barrier Rail, Rubber (Front Right)			
22	W11310684	Shield, Heat						


DOOR PARTS

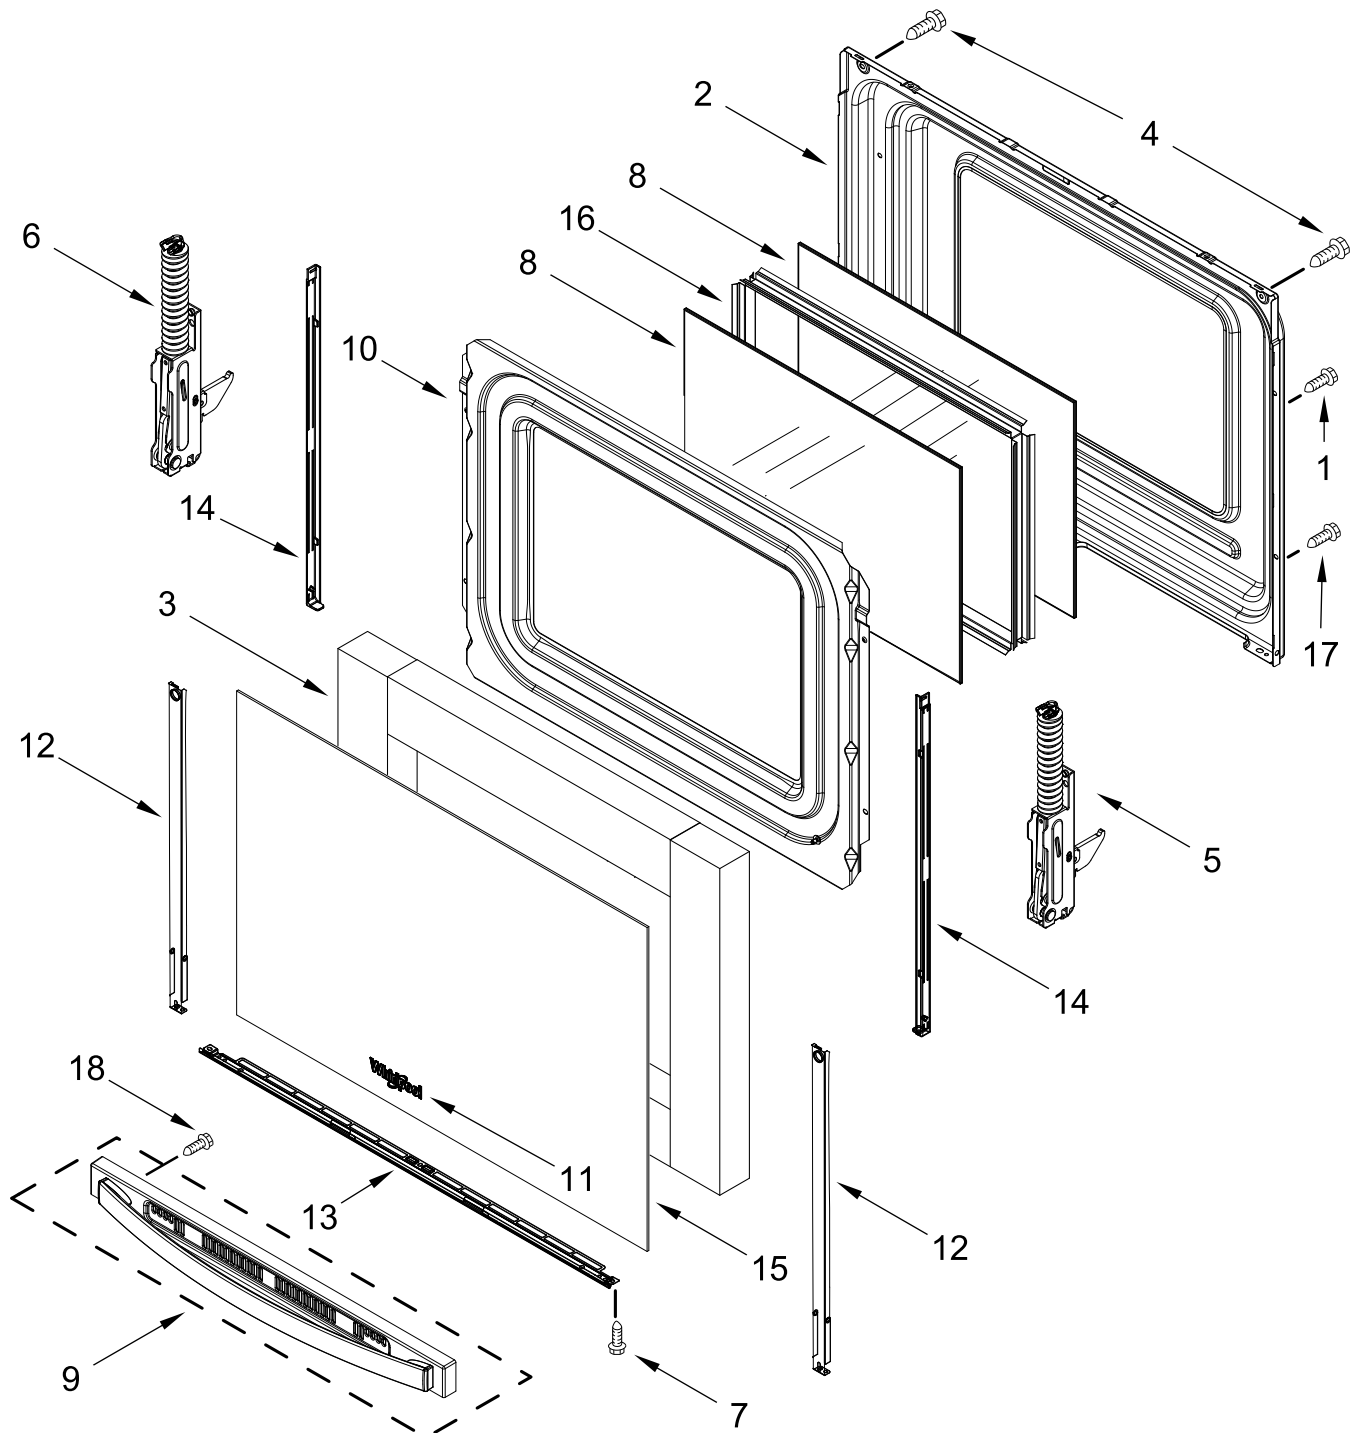

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	10	W11380222	Retainer, Insulation	15		Glass Assembly, Outer Door
2	9761344	Liner, Door	11	W10884775	Badge			
3	W10278991	Insulation, Door Strip	12		Door, Trim		W11729636	Black
4	W10200660	Screw		W10746436	Black (Left)		W11729637	White
5	W10388635	Hinge, Door (Active)		W10746435	Black (Right)	16	W10316950	Frame, Glass
6	W10440013	Hinge, Door (Active)		8523172	White (Left)	17	W10031780	Screw
7	W10327235	Screw		8523166	White (Right)	18	W10465158	Screw
8	9758162	Glass, Inner	13		Door, Lower Trim			
9		Handle and Vent Assembly		W11444043	Black			
	W11353052	Black		W11444042	White			
	W11353053	White	14	W11379944	Strap, Door			

DRAWER PARTS

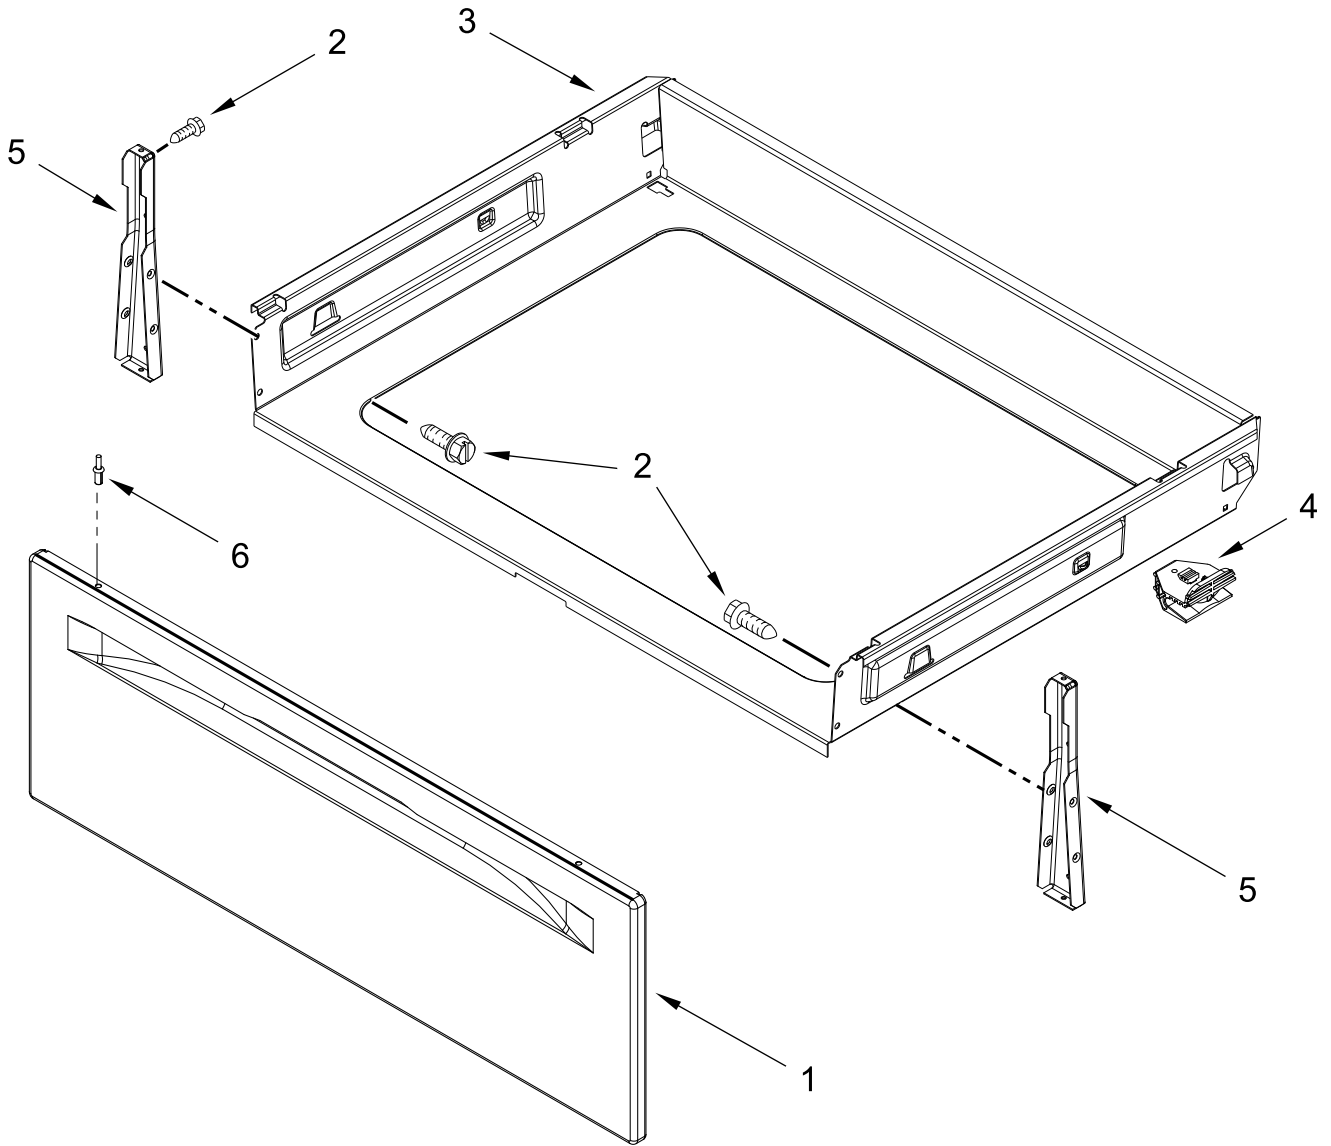

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer	3	W10688022	Drawer, Storage	6		Rivet, Push
	W11123976	Black	4	W10674708	Glide, Drawer Rear		3196813	Black
	W11123977	White	5	W10462911	Bracket, Mounting		3196814	White
2	3196169	Screw						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		PAINT, TOUCH-UP (1/2oz.)
	72017	White PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	285006	Black PAINT, BULK (1 qt.)
	799344	White (Uncut) ACCESSORY PARTS
	W11661815	Basket, Airfry