




**ELECTRIC RANGE**

**MODELS:**

WSES7530RV0 (Black Stainless)


# COOKTOP PARTS

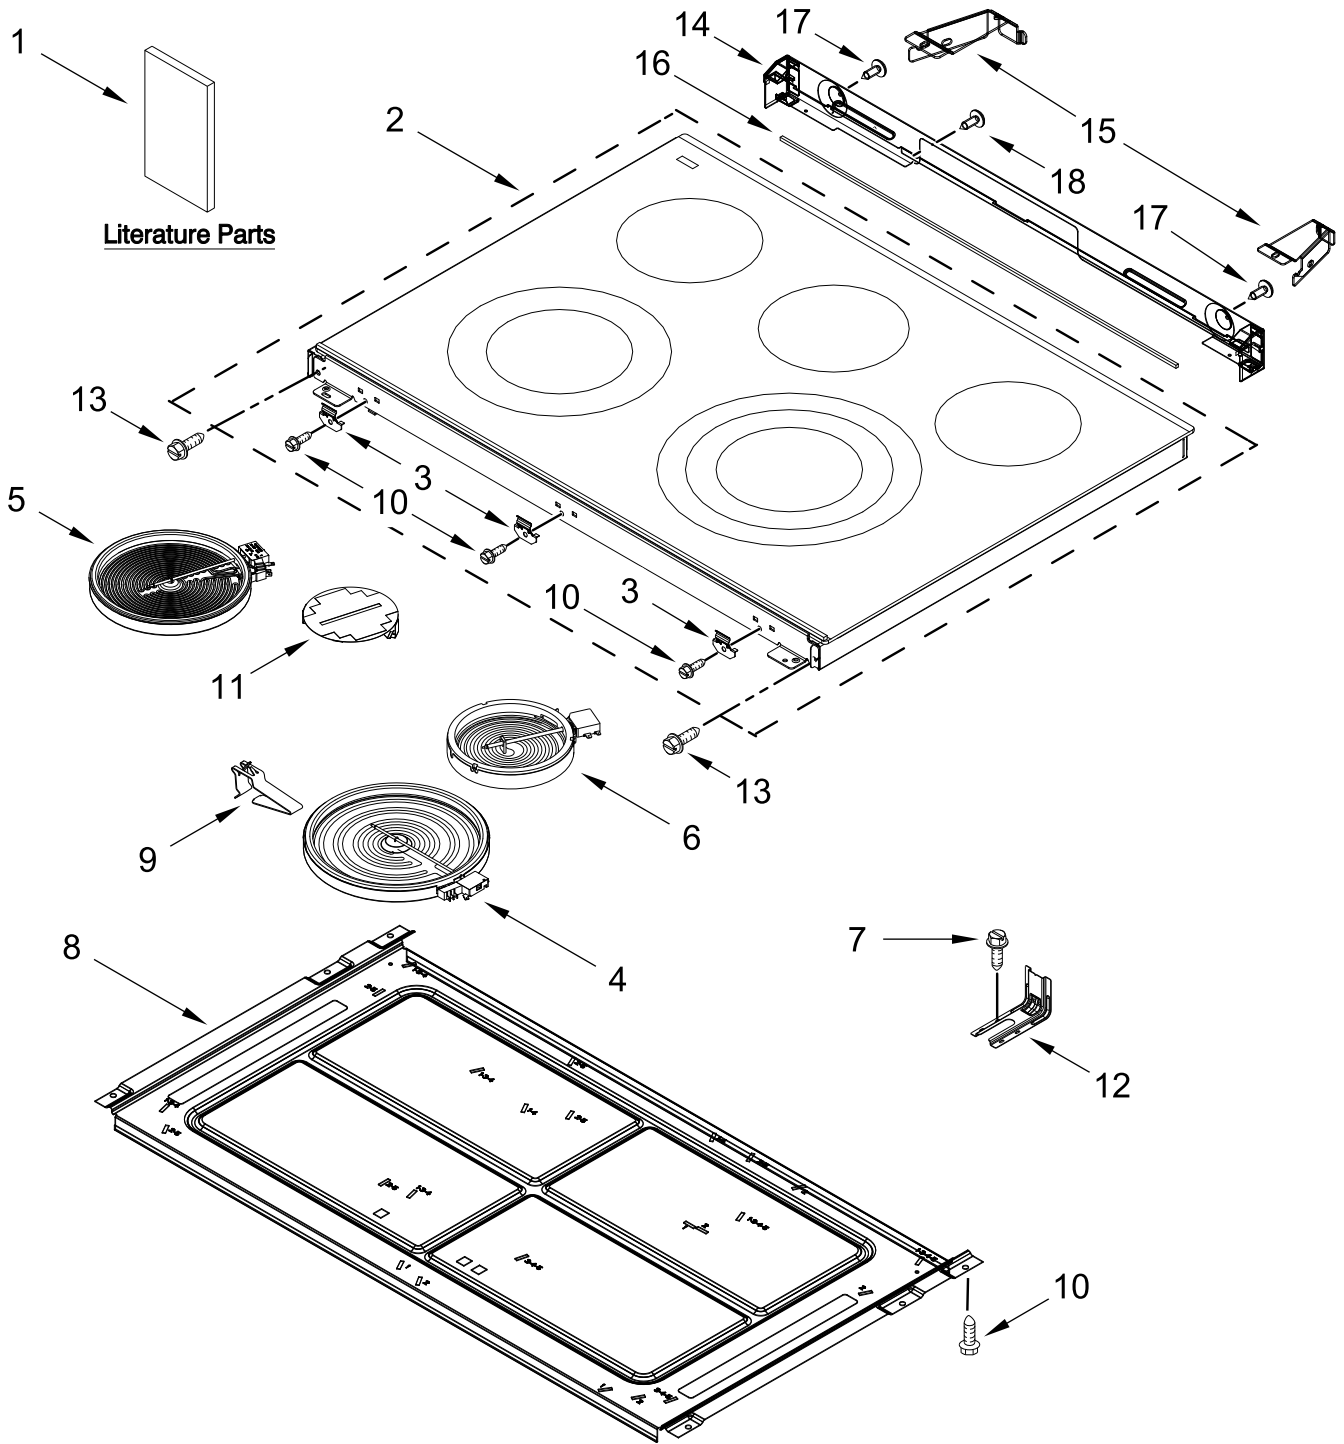

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11724296	Element (Single, 1200W)	15		Corner, Brace (Right)
	W11640308	Owner's Manual			(Left Rear, Right Rear)		W11673745	(Left)
	W11640328	Quick Start Guide					W11673746	
	W11639168	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit	16	W11401890	Gasket Cooktop, Console
2		Cooktop	8	W11300812	Pan, Radiant Element	17	W10362924	Screw
	W11616660	Black (Includes, Cooktop Bracket)	9	W11600012	Spring, Element	18	W10498399	Screw
3	W11593284	Bracket, Cooktop	10	3196169	Screw			FOLLOWING PARTS NOT ILLUSTRATED
4	W11726009	Element (3000W, Triple)	11	W11668631	Element, Warm Zone (Center Rear)		W11351384	Harness, Main
		(Right Front)	12	W11379947	Bracket, Anti-Tip		W11341269	Harness, Cooktop
5	W11726010	Element (Dual, 3000W)	13	3400080	Screw		W11349007	Harness, DC
		(Left Front)	14	W11632793	Bracket, Front Cooktop		W11341203	Harness, Console
							W11585874	Harness, Hidden Bake


# CONTROL PANEL PARTS

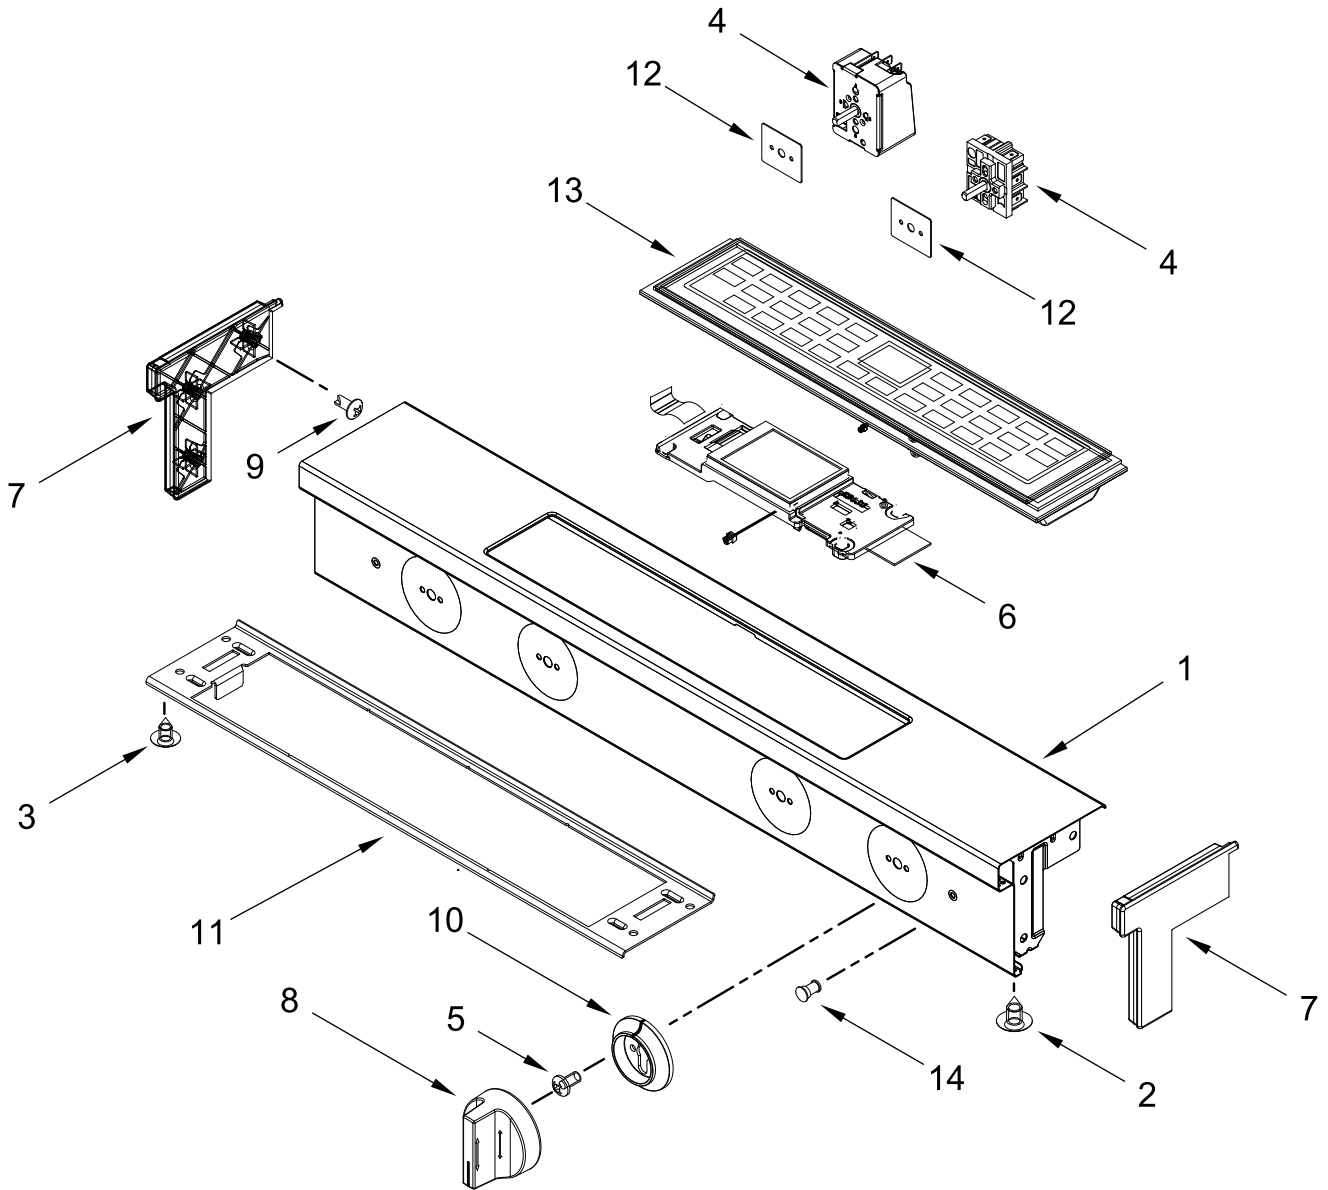

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	6		Board, Control	9	9780274	Screw
	W11300041	Black		W11734473	Black	10		Bezel
2	3196178	Screw	7		Endpost, Console		W11635851	Black Stainless
3	W10327235	Screw		W11357955	Black, (Left)	11	W11291721	Mounting, Bracket
4	W10437092	Switch, Infinite (Left Front)		W11357956	Black, (Right)	12	7201P077-60	Gasket, Infinite Switch
	W10437097	Switch, Infinite (Right Front)	8		Knob	13	W11333900	Assembly, User Interface
	W10578768	Switch, Infinite (Left Rear, Right Rear)		W11635841	Single, (Black Stainless)	14	3196068	Lens, Indicator
5	W10498399	Screw		W11635842	Dual, (Black Stainless)			
				W11635843	Triple, (Black Stainless)			


# CHASSIS PARTS

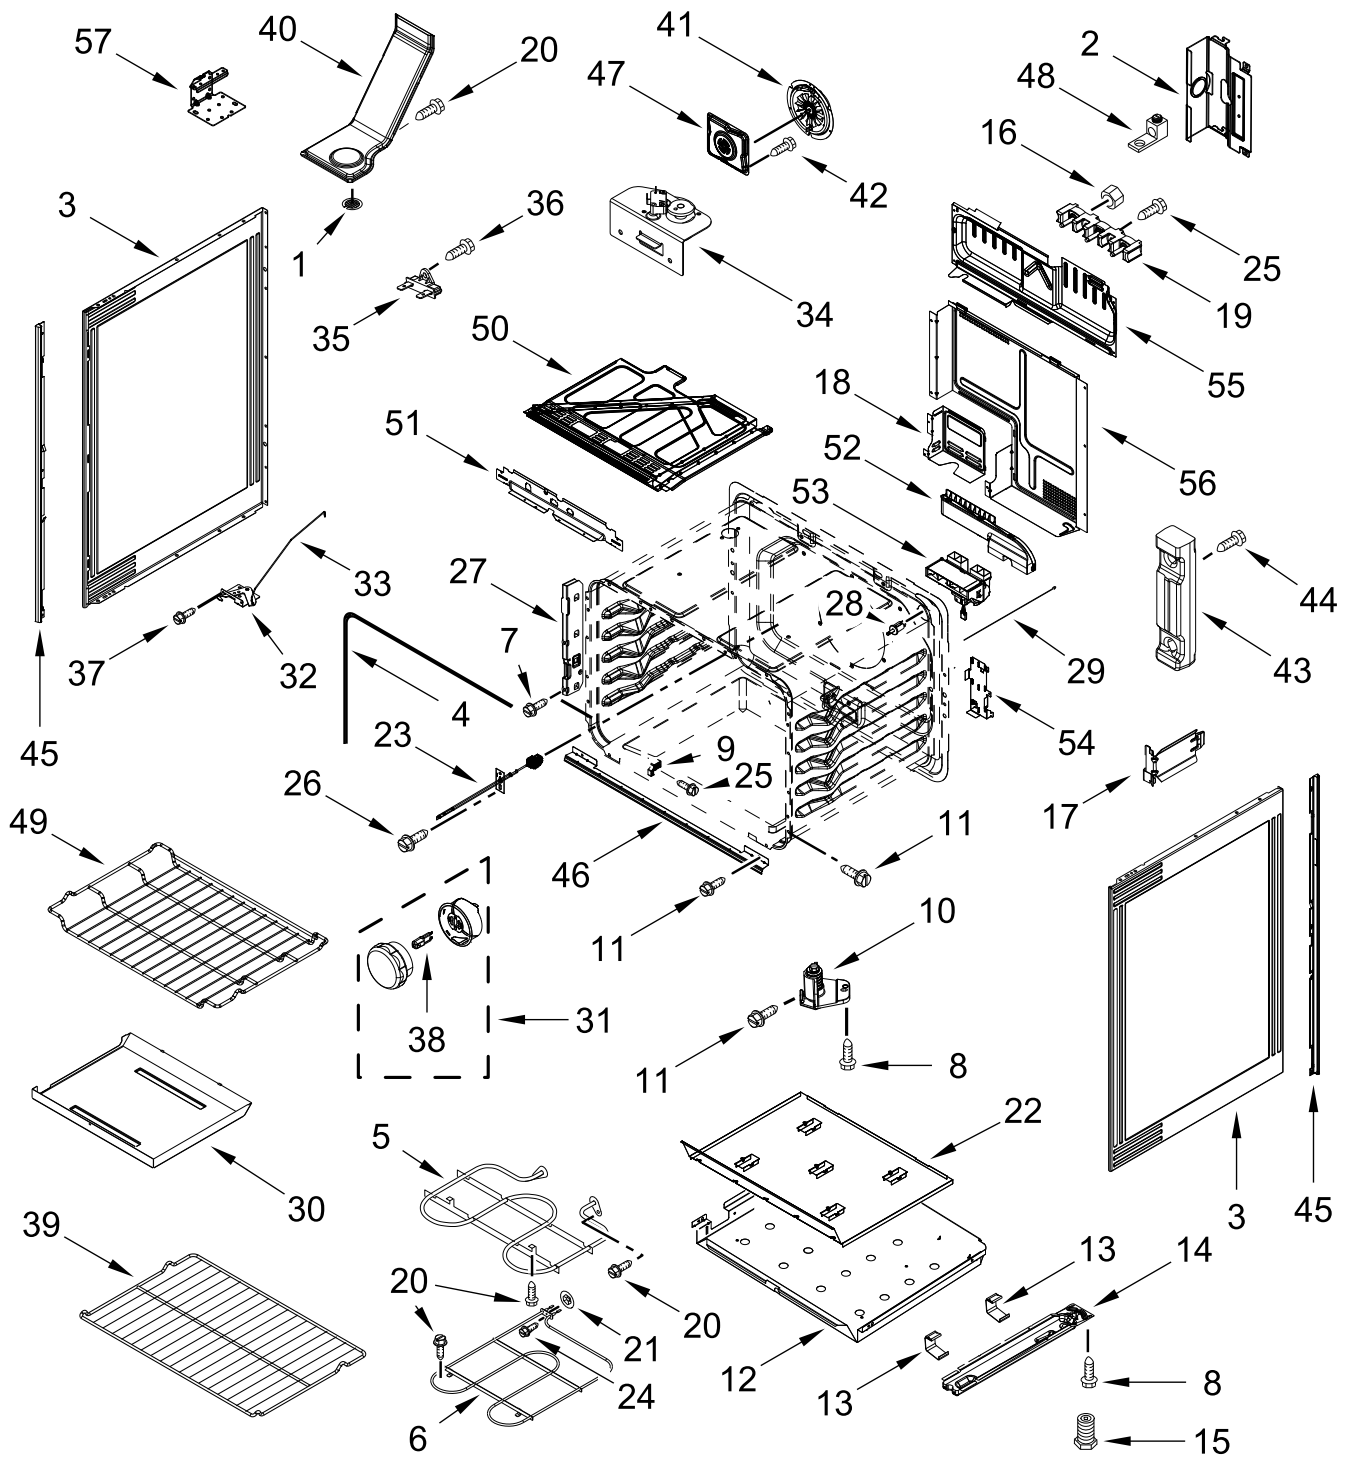

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	24	3196174	Screw	47	W11373155	Cover, Conv Fan
2	W11391997	Bracket, Service	25	3400080	Screw	48	W10281322	Kit, Bare Wire Adapter Block
3		Panel, Side	26	3196169	Screw	49	W11607819	Rack, Oven (Gull-Wing)
	W11445467	Black	27	W10289077	Receiver, Hinge	50	W11617265	Ventilation Assembly, Duct and Frame
4	W11491751	Seal, Door	28	W11511828	Switch, Door	51	W11615875	Console, Front
5	W10308476	Element, Broil	29	9757239	Rod, Door Switch	52	W11637749	Rear, Duct Assembly
6	9755770	Element, Bake	30	W10183712	Tray, Hidden Bake	53	W11616407	Dual, Blower
7	W10031780	Screw	31	W11634772	Light Assembly	54	W11365827	Bracket, Acu
8	3196178	Screw	32	W11612000	Front Door Latch Assembly	55	W11361778	Convection, Rear Cover
9	W10674705	Glide, Drawer Front	33	W11616635	Rod, Latch	56	W11633166	Side, Cover
10	W10341186	Front Foot Assembly	34	W11612001	Rear Door Latch Assembly	57	W11287215	Bracket, Cooktop Console
11	W10067840	Screw	35	3196548	Fuse, Thermal			FOLLOWING PARTS NOT ILLUSTRATED
12	W11309796	Tray, Insulation	36	3196172	Screw		3196520	Clip, Wire
13	W10137382	Clip, Panel	37	3196560	Screw		W10646923	Card, Insulator
14	W10390007	Base Rail Assembly (Right)	38	W10571723	Bulb, Halogen 40 Watts		W10774939	Insulation, Wrap
	W10390008	Base Rail Assembly (Left)	39	W11173792	Rack, Oven		W11407378	Insulation, Back
15	W10058460	Foot, Leveling	40	W11366087	Tube, Vent		W11404469	Insulation, Flue
16	3400029	Nut	41	W11635909	Fan, Convection		4820F015-59	Insulation, Strap
17	W10404688	Clip, Oven Support	42	W10516115	Screw			
18	W11596201	Corner, Cover	43	W10914589	Counterweight			
19	W11750818	Block, Terminal (without Ground Strap)	44	W11034869	Screw			
20	W10362924	Screw	45	W11510561	Barrier Rail, Rubber (Front Left)			
21	3400968	Nut		W11510562	Barrier Rail, Rubber (Front Right)			
22	W11310684	Shield, Heat	46	W11464547	Bracket, Front Frame			
23	W11633068	Sensor						


# DOOR PARTS

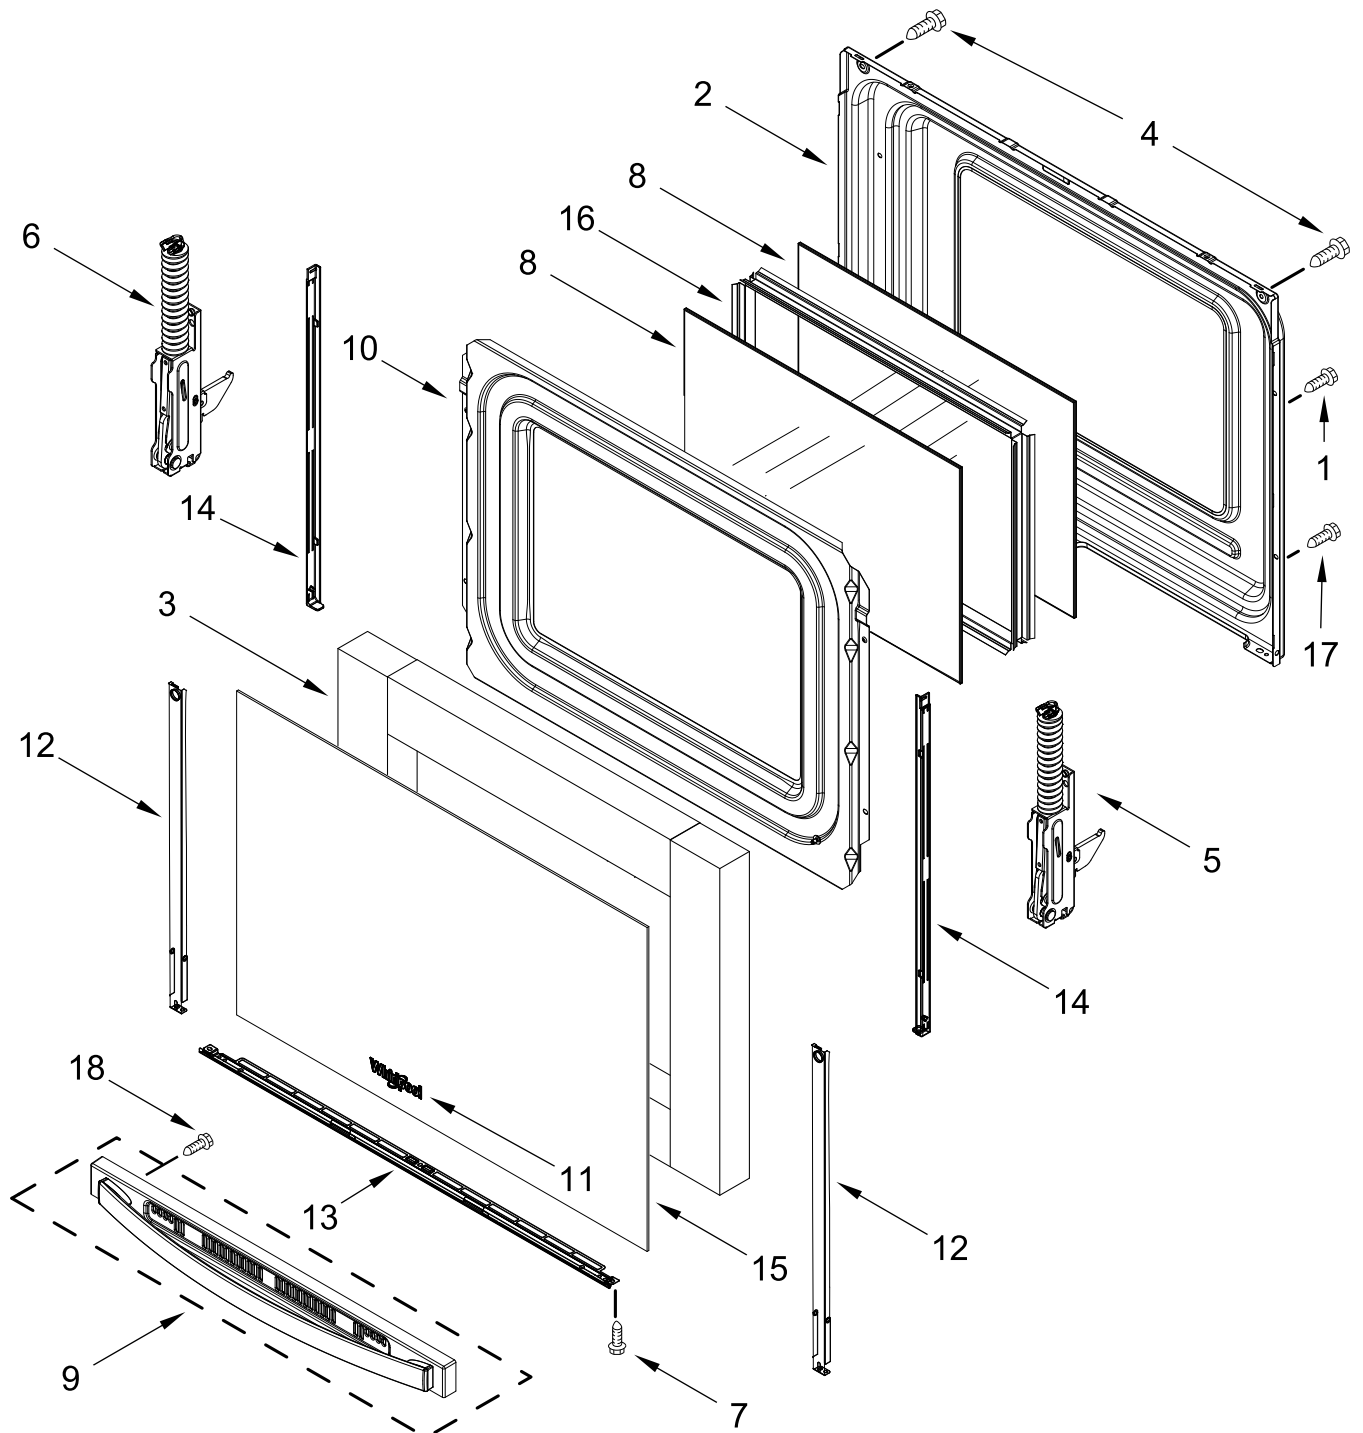

# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	9		Handle and Vent Assembly	13		Door, Lower Trim
2	9761344	Liner, Door					W11444043	Black
3	W10278991	Insulation, Door Strip		W11353056	Black Stainless	14	W11379944	Strap, Door
4	W10200660	Screw	10	W11380222	Retainer, Insulation	15		Glass Assembly, Outer Door
5	W10388635	Hinge, Door (Active)	11	W10884775	Badge		W11729636	Black
6	W10440013	Hinge, Door (Active)	12		Door, Trim	16	W10316950	Frame, Glass
7	W10327235	Screw		W10746436	Black (Left)	17	W10031780	Screw
8	9758162	Glass, Inner		W10746435	Black (Right)	18	W10465158	Screw

# DRAWER PARTS

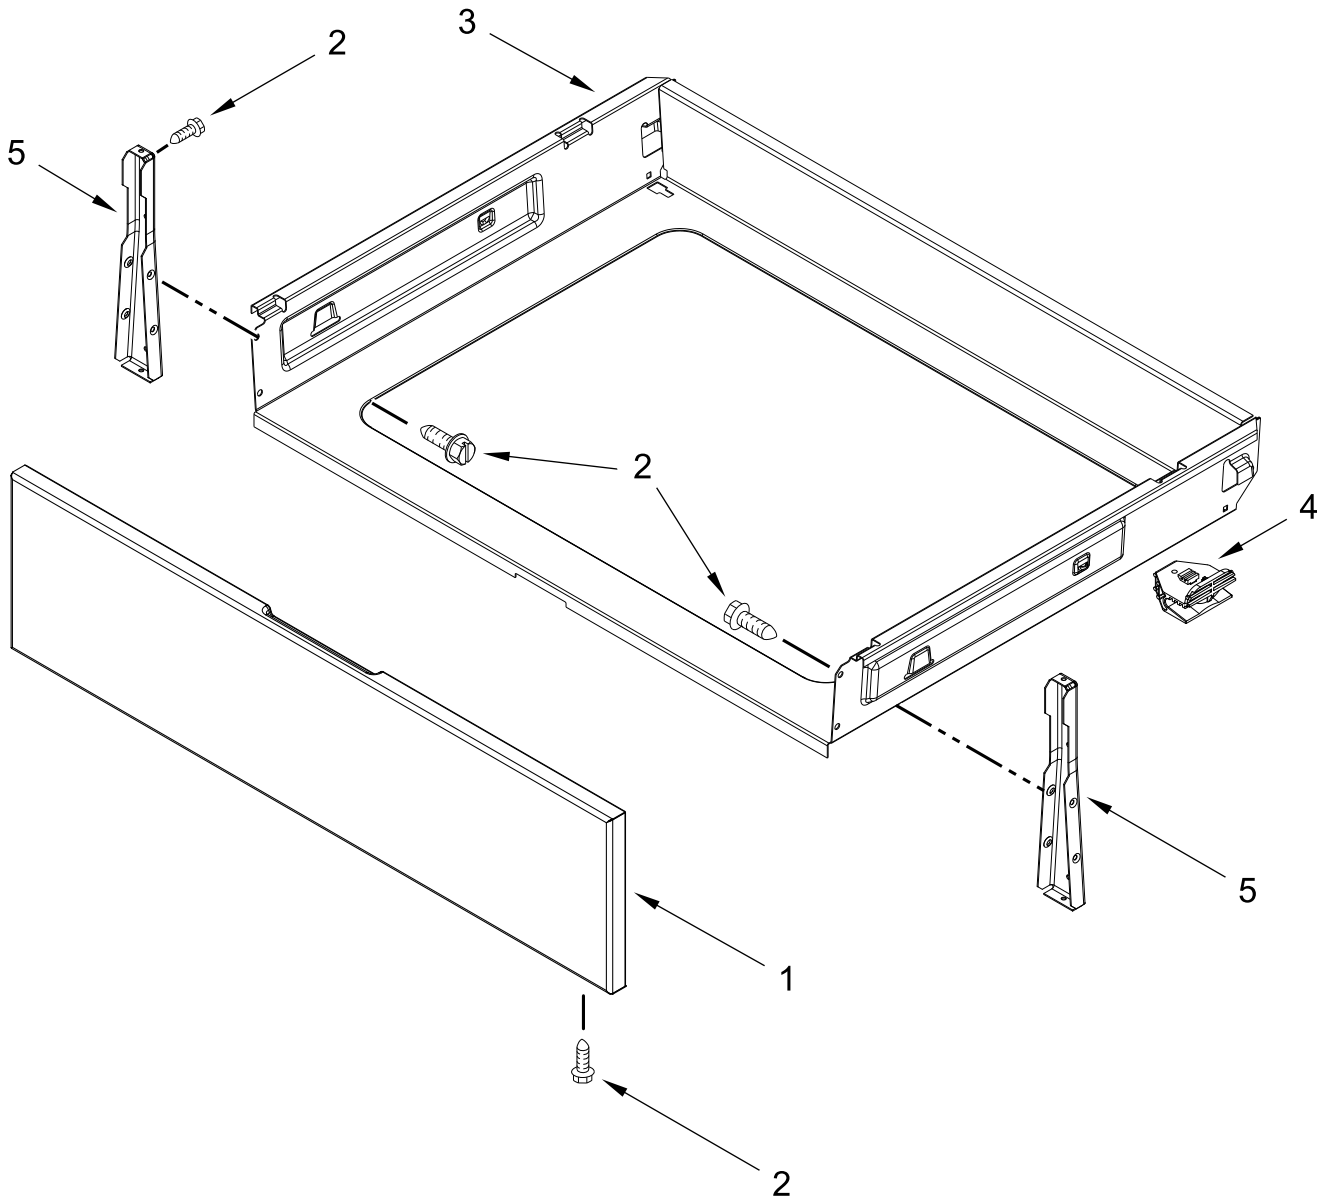

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11450003	Panel, Drawer Black Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
2	3196169	Screw
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	W10462909	Bracket, Mounting

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		PAINT, TOUCH-UP (1/2oz.)
	72017	White PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	285006	Black PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	W11661815	Basket, Airfry