




30" GAS FREESTANDING SELF CLEAN RANGE

MODELS:

WFG525S0JT0 (Biscuit)


COOKTOP PARTS

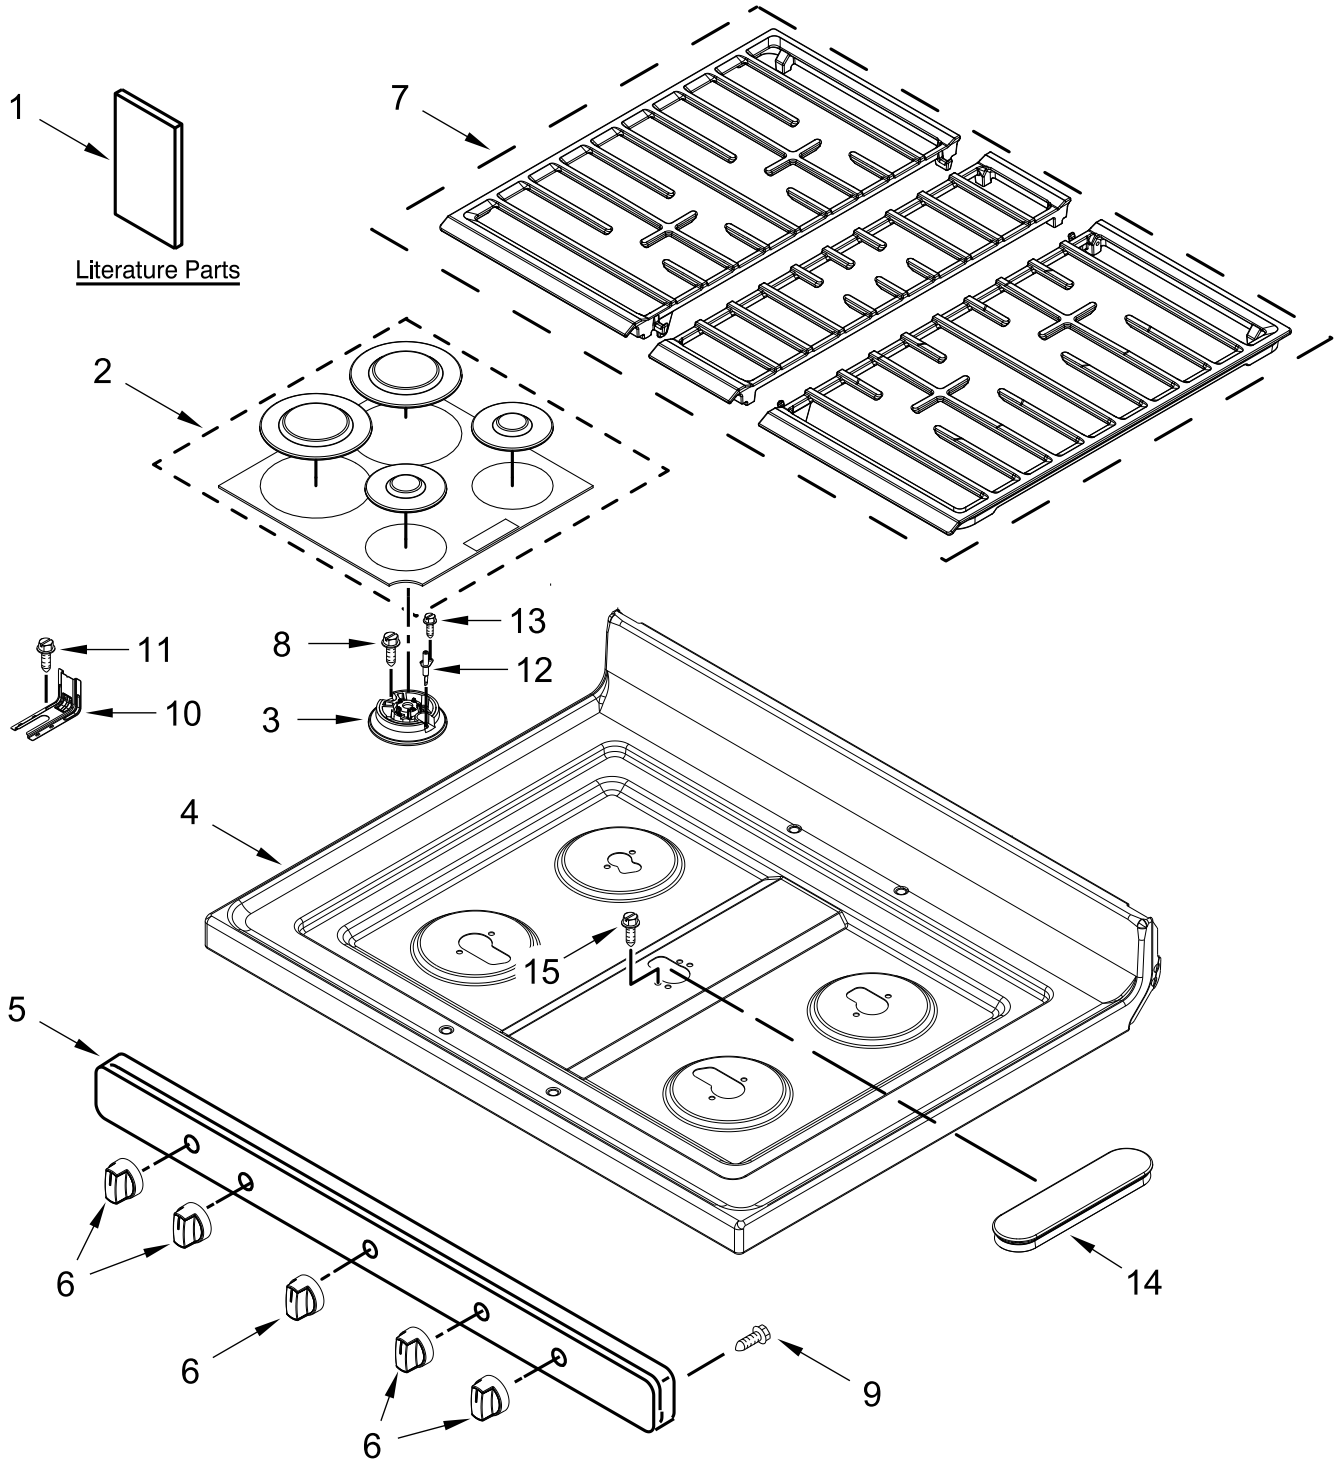

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Panel, Manifold	15	W10673618	Screw
	W11333091	Instructions, Installation		W11089576	Biscuit			FOLLOWING PARTS NOT ILLUSTRATED
	W11333082	Guide, Use and Care	6		Knob, Control		W10842520	Harness, Main
	W11333114	Sheet, Tech		W11023143	Biscuit		W10753750	Harness, Bake/Broil
	W11351206	Diagram, Wiring	7		Kit, Grate		W10809927	Harness, Cooktop
2		Kit, Burner Cap	8	3400701	Screw		3196520	Clip, Wire
	W10183375	Black	9	3196557	Screw		W10334923	Clip, Gas Wiring
3	W10515455	Assembly, Burner (17.5K)	10	W10306542	Bracket, Anti-Tip		313438	Clip, Harness
		(Left Front & Right Front)	11	7101P485-60	Screw, Anti-Tip Kit		3196896	Clip, Wire
	W10515454	Assembly, Burner (9.5K)	12	W11194809	Electrode (Left Front, Left Rear, Right Front)		3196173	Screw (Grounding)
		(Left Rear & Center)			(Center)			
	W10515453	Assembly, Burner (6K)		W10515459	Electrode (Right Rear)			
		(Right Rear)	13	8273062	Screw			
4		Cooktop	14	W10298664	Spreader, Flame			
	W11182551	Biscuit						


CONTROL PANEL PARTS

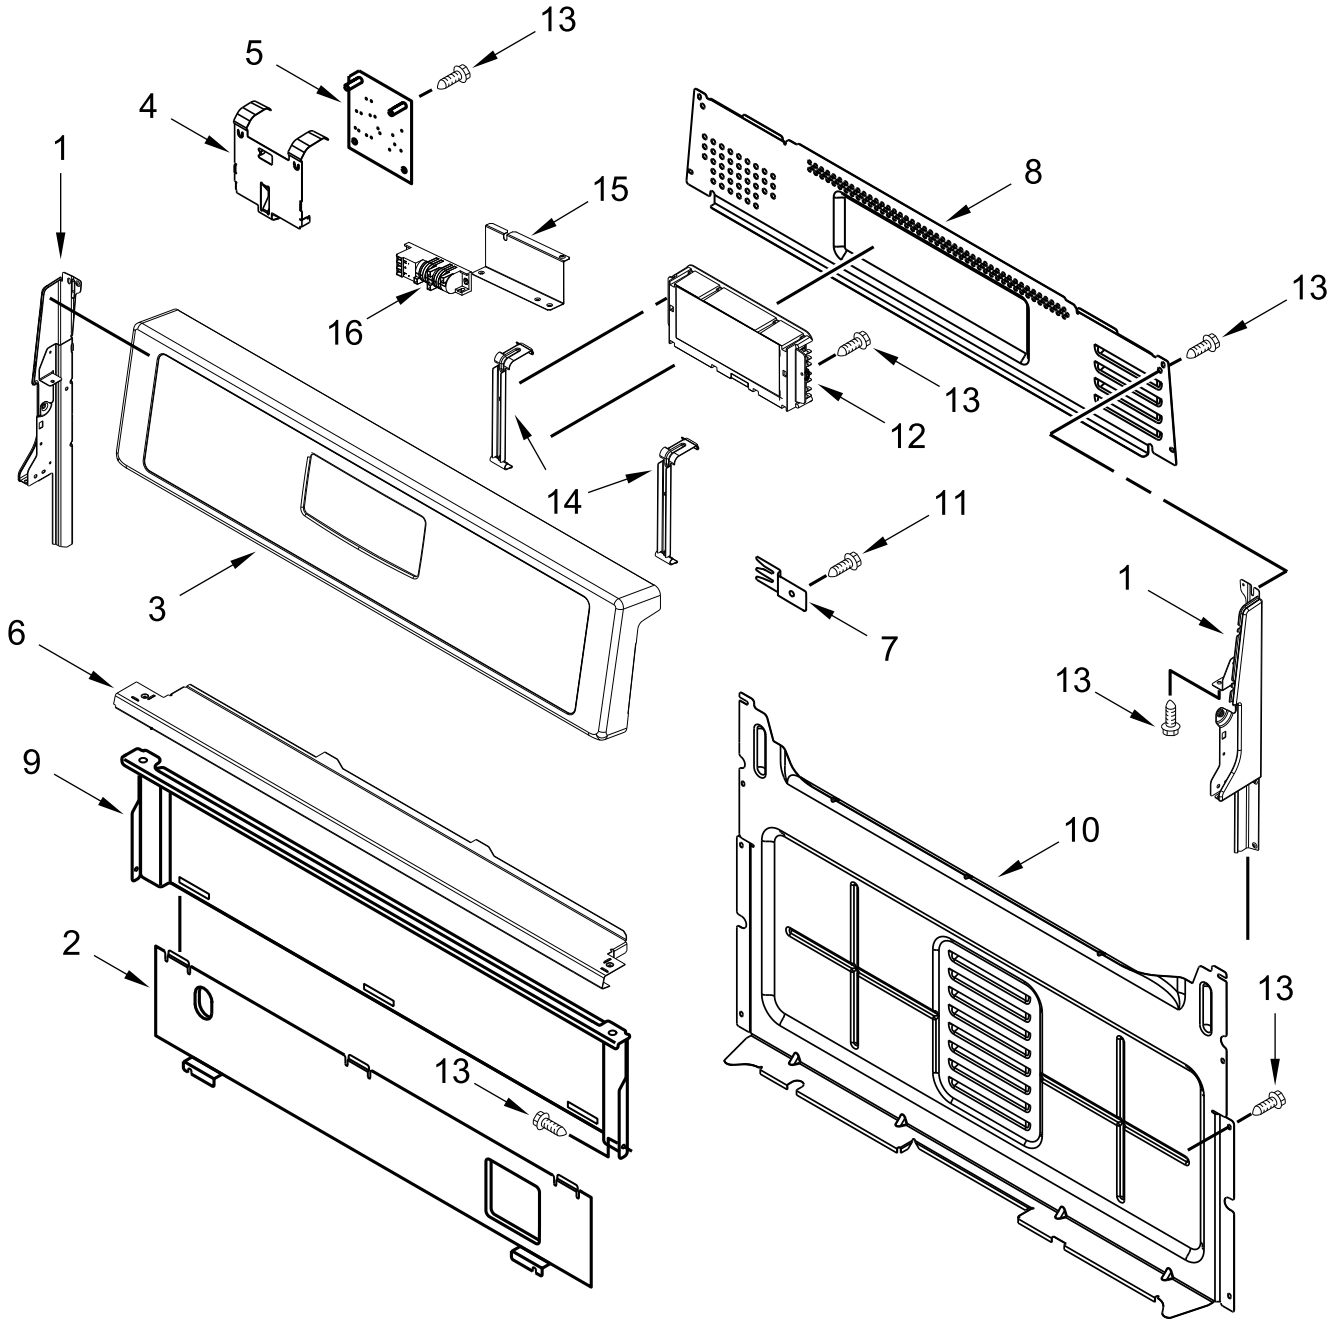

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10920631	Module, Spark DSI	11	3196169	Screw
	W11130373	Biscuit (Left)	6	W10516123	Bracket, Console Mounting	12		Control, Electronic (LCX)
	W11130380	Biscuit (Right)					W11204523	Biscuit
2	8053505	Shield, Heat	7	8523412	Bracket, Rear Cooktop	13	3196178	Screw
3		Panel, Control	8	W10198745	Cover, Upper	14	W10695491	Bracket, Control
	W11027383	Biscuit	9	W10192841	Shield, Heat	15	W10797001	Bracket, Ignitor
4	W10762981	Bracket, Mounting	10	W10184370	Cover, Back	16	W10475149	Module, Spark (5+0)


MANIFOLD PARTS

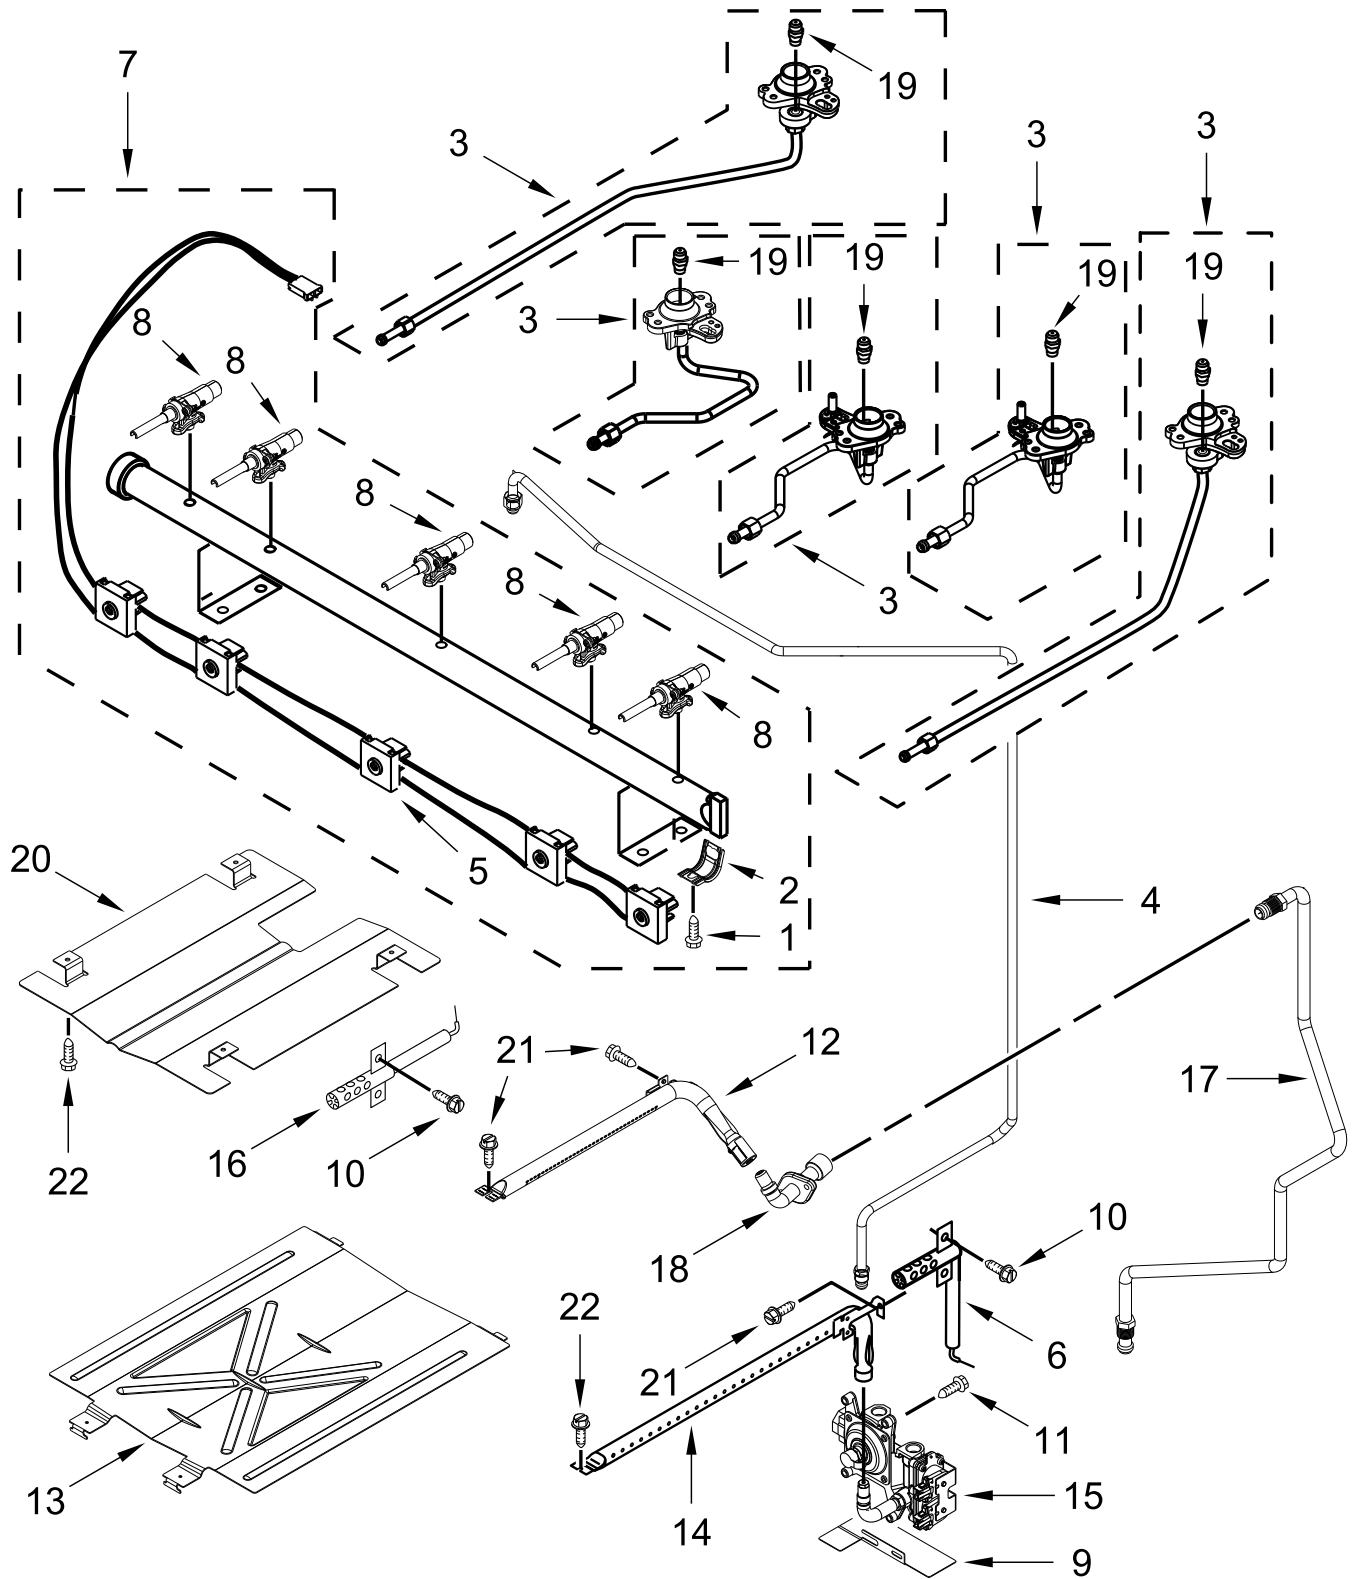

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	7	W10859728	Assembly, Manifold	19	W10347414	Orifice (15K) (Left Front & Right Front)
2	W10295996	Bracket, Saddle Valve	8	W10279615	Valve, Gas (Left Front & Right Front)		W10170508	Orifice, Natural (9.5K) (Left Rear)
3	W10473936	Assembly, Orifice Holder (15K) (Left Front)		W10279614	Valve, Gas (Left Rear)		W10170506	Orifice, Natural (5K) (Right Rear)
	W10473932	Assembly, Orifice Holder (9.5K) (Left Rear)		W10247744	Valve, Gas (Right Rear)		W10657947	Orifice (8K) (Center)
	W10474166	Assembly, Orifice Holder (15K) (Right Front)		W10850894	Valve, Gas (Center)	20	W10137062	Spreader, Flame (Broiler)
	W10474162	Assembly, Orifice Holder (5K) (Right Rear)	9	W10224921	Bracket, Aegis	21	3196265	Screw
	W10836764	Assembly, Orifice Holder (8K) (Center)	10	3196385	Screw	22	W10362924	Screw
4	W10215439	Tubing (Manifold to Regulator)	11	3400016	Screw			FOLLOWING PARTS NOT ILLUSTRATED
5	W10811691	Harness, Igniter (Includes Switches)	12	8054078	Burner, Broiler		W11087531	Kit, LP 5 Orifice Conversion
6	9758079	Electrode, Bake	13	W10184491	Spreader, Flame (Oven)		W10566537	Kit, LP Bake and Broil
			14	9758078	Burner, Bake		W10400495	Orifice, LP Bake
			15	W10602001	Regulator		W10465080	Orifice, LP Broil
			16	W10333842	Electrode, Broil			
			17	W10420040	Tube, Broiler Supply			
			18	W10592836	Fitting, Broiler			


CHASSIS PARTS

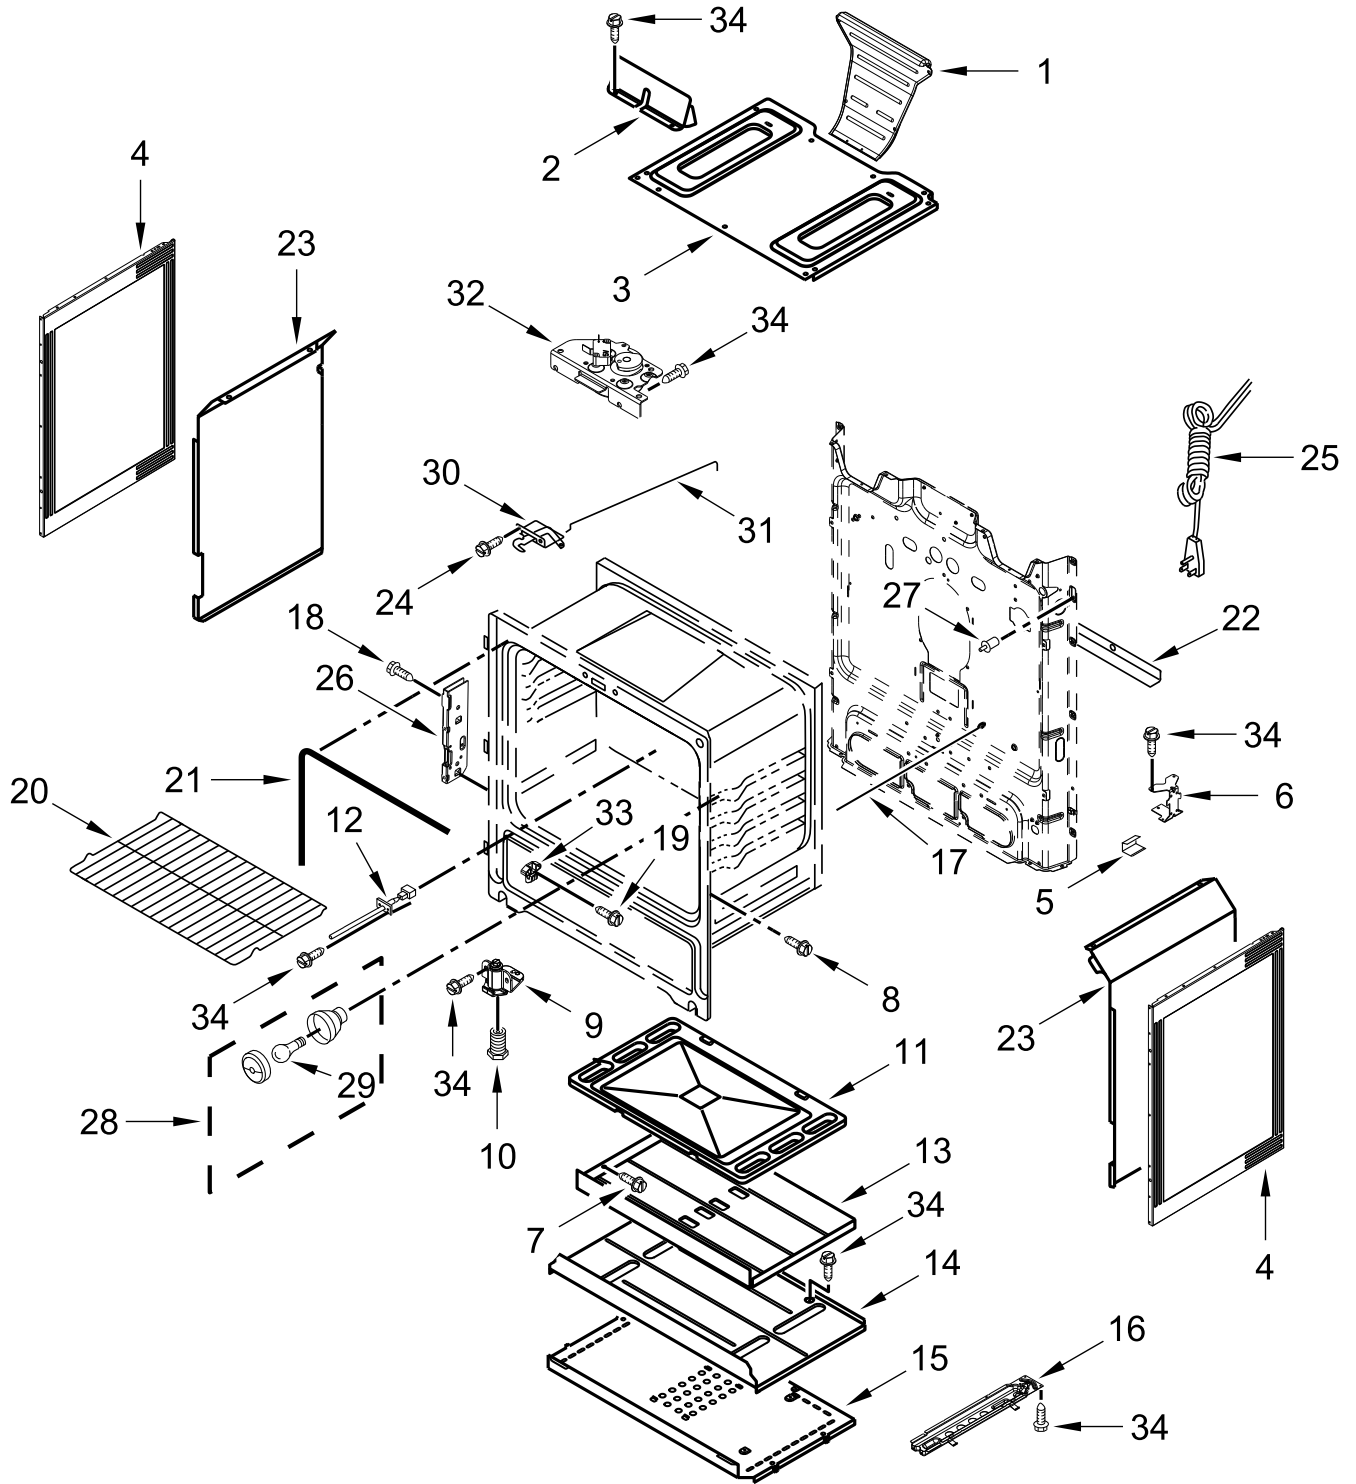

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10153186	Box, Flue	15	8053968	Shield, Lower	26	W10289077	Receiver, Hinge
2	8272747	Shield, Flue	16	W10390008	Assembly, Base Rail (Left)	27	W10627802	Switch, Door
3	8273036	Box-Burner, Gas Sealed		W10390007	Assembly, Base Rail (Right)	28	W11175594	Assembly, Light
4		Panel, Side				29	W10571723	Bulb, Halogen 40 Watts
	W10162246	Biscuit	17	9757239	Rod, Door Switch	30	9761013	Assembly, Door Latch (Front)
5	W10137382	Clip, Panel	18	W10031780	Screw			
6	8523249	Bracket, Manifold	19	3400080	Screw	31	W10078370	Rod, Push Latch
7	W10362924	Screw	20	W10268578	Rack, Oven	32	W10107820	Assembly, Door Latch (Rear)
8	3196560	Screw	21	W10658354	Seal, Door			
9	W10341186	Assembly, Front Foot	22	W10435470	Brace, Main Back	33	W10674705	Glide, Drawer Front
10	W10058460	Foot, Leveling	23	9761449	Retainer, Insulation (Left)	34	3196178	Screw
11	3195097	Bottom, Oven		9761448	Retainer, Insulation (Right)			FOLLOWING PARTS NOT ILLUSTRATED
12	W10586204	Sensor					8524099	Insulation, Wrap
13	8053967	Baffle, Burner Oven	24	3196560	Screw		W10180437	Insulation, Back
14	8053969	Shield, Heat	25	W10624590	Cord, Power			

DOOR PARTS

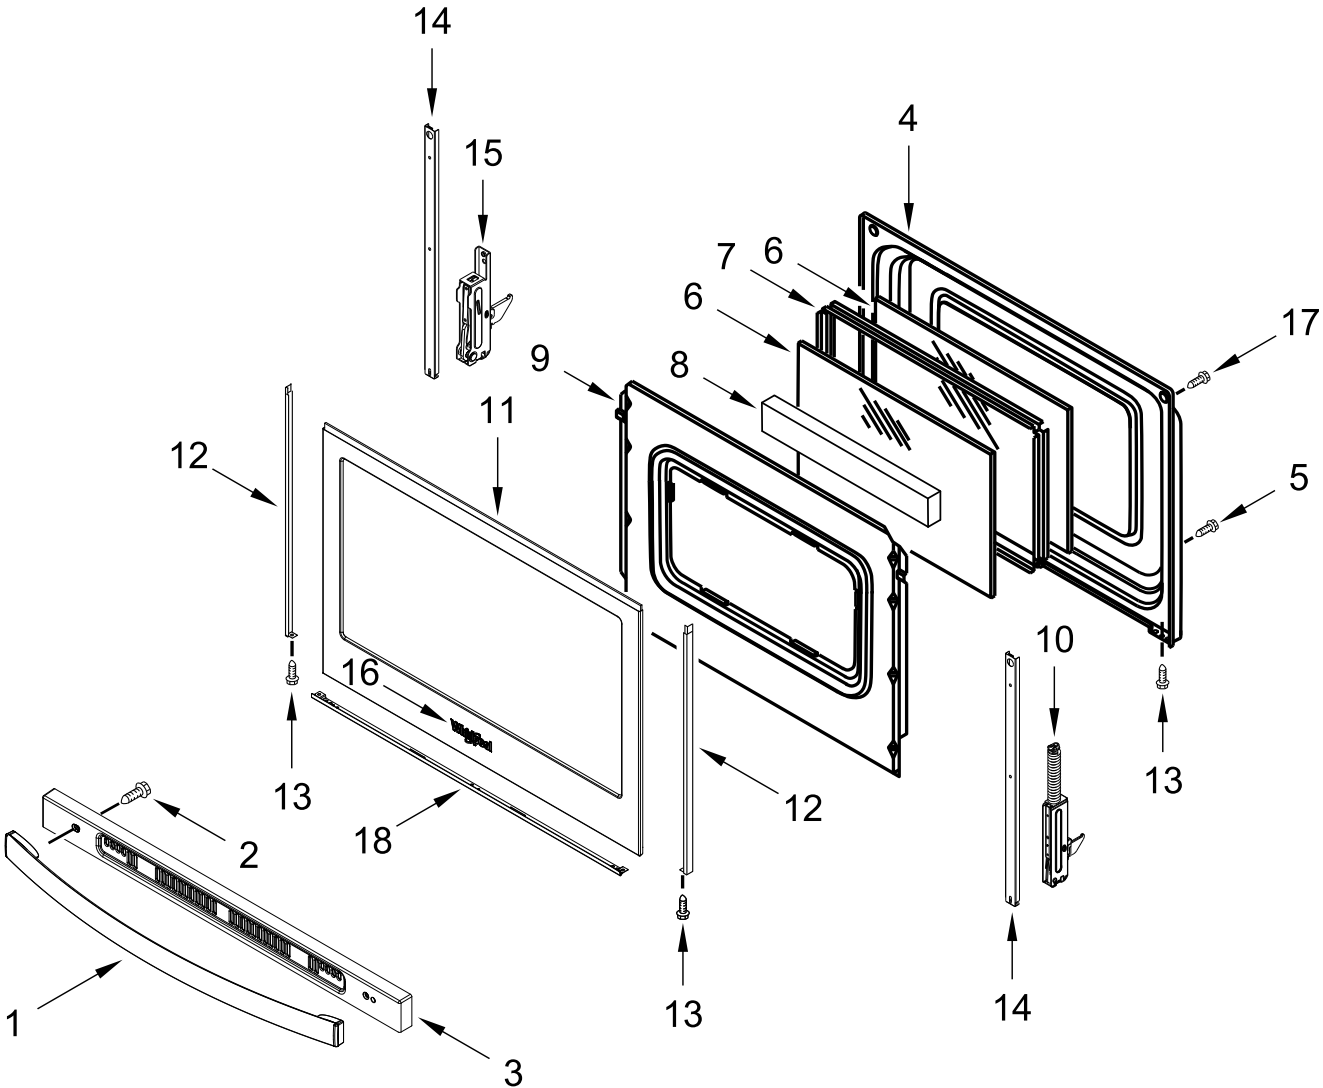


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door Handle (Includes Standoff)
	W11039069	Biscuit
2	W10480830	Screw
3		Trim, Vent
	W10310923	Biscuit
4	9761344	Liner, Door
5	W10031790	Screw
6	W11044424	Glass, Inner
7	W10316950	Frame, Glass

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10278991	Insulation, Door Strip
9	9761357	Retainer, Insulation
10	W10299226	Hinge, Active
11		Glass, Outer Door
	W10409947	Biscuit
12		Trim, Door
	8523173	Biscuit (Left)
	8523167	Biscuit (Right)
13	W10327235	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10544179	Strap, Door
15	W10299227	Hinge, Door (Passive)
16	W10884775	Nameplate
17	W10200660	Screw
18		Trim, Lower Door
	8523178	Biscuit

DRAWER PARTS

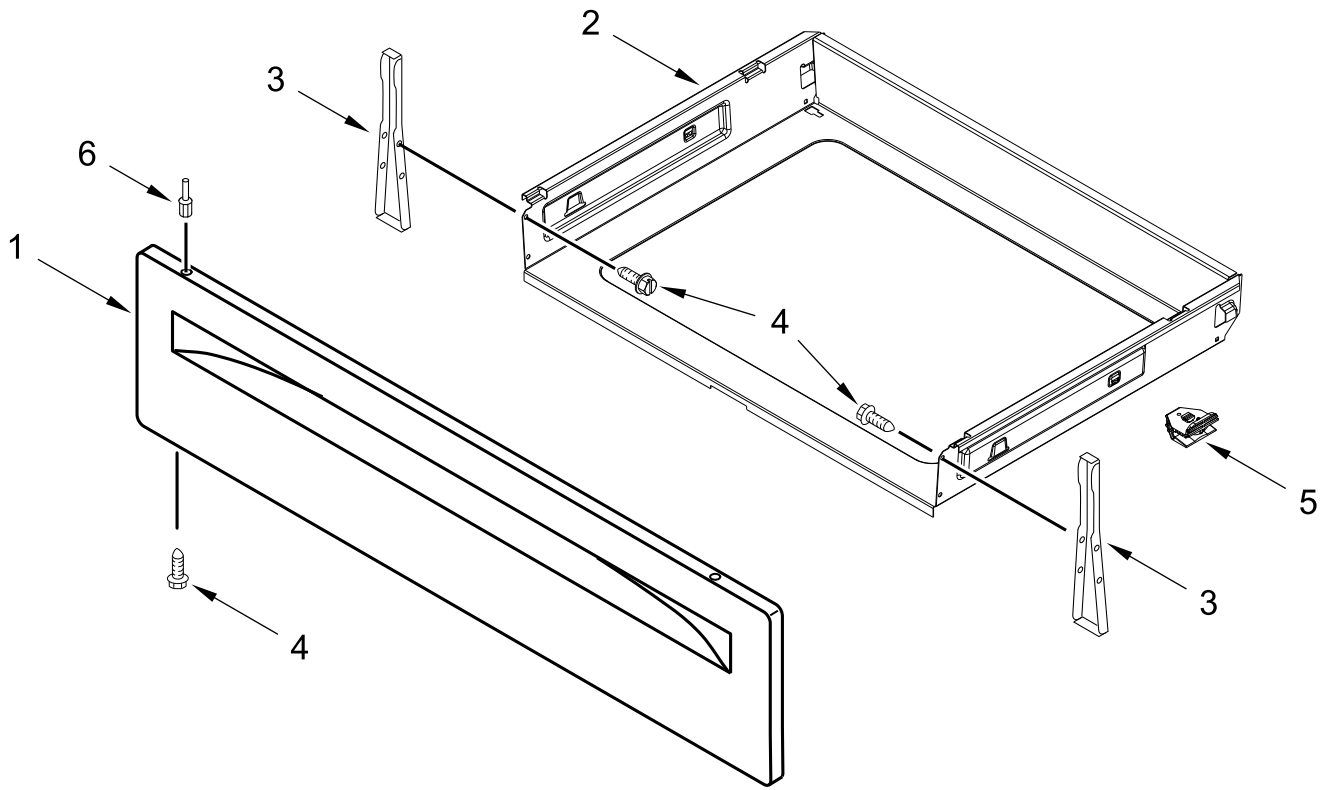

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	4	3196169	Screw	6		Rivet, Push
	W11123978	Biscuit	5	W10674708	Glide, Drawer Rear		3196814	White
2	W10688022	Drawer, Storage						
3	W10462911	Bracket, Mounting						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	4396927	Rack, Oven (Split)