



ADA KIT INSTALLATION INSTRUCTIONS PART # ADAKIT



KIT CONTAINS: Tapered Hood Handle
Hood Handle Set Screw 3/8-16X 1/4 SS
Handle Hood Clamp Weldment
Main Burner ADA Gas Valve Knobs
Rotisserie Burner ADA Gas Valve Knob(s)
Gas Valve Knob D -Clips (Two per knob)

TOOLS REQUIRED:

You will need a 3/16" Allen wrench (not provided) to install the handle.



INSTALLING THE SIDE HANDLE

1. Locate the handle, set screw and Hood Mounting Clamp from packaging. You will need a 3/16" Allen wrench (not provided) to install the handle.
2. With the hood open, slide the Handle Hood Clamp mounting bracket on the front side edge and slide it into position at a convenient position and height
3. Screw the Hood Handle Set Screw into the weld nut and tighten it in place with the Allen Wrench.
4. Thread the Tapered Hood Handle onto the set screw and hand tighten only.

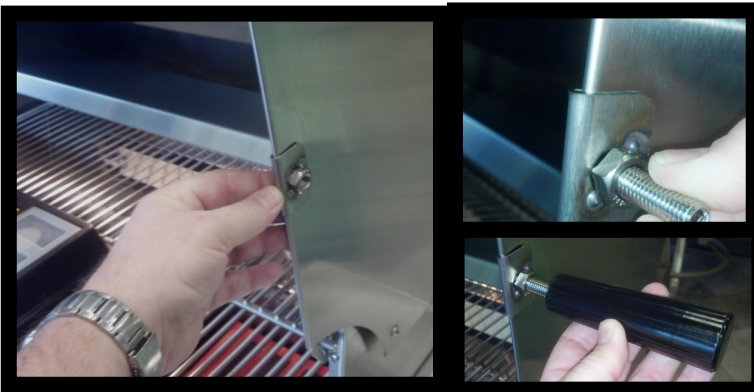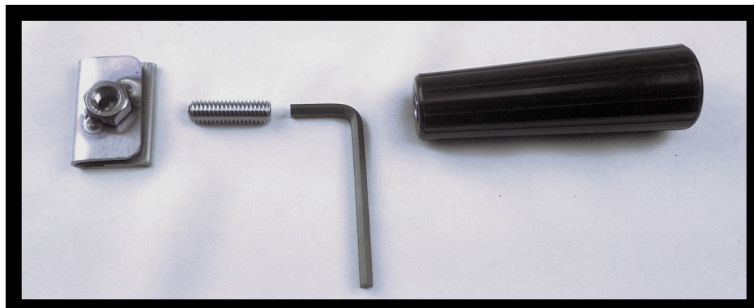

INSTALLING THE ADA GAS KNOBS

1. Remove the existing gas valve knobs
2. Insert two metal knob clips into the "D" cavity of each gas burner knob.
3. Firmly push the new gas burner knob onto the gas valve stem. Note the 'OFF' position on the main burner gas valve knobs faces up

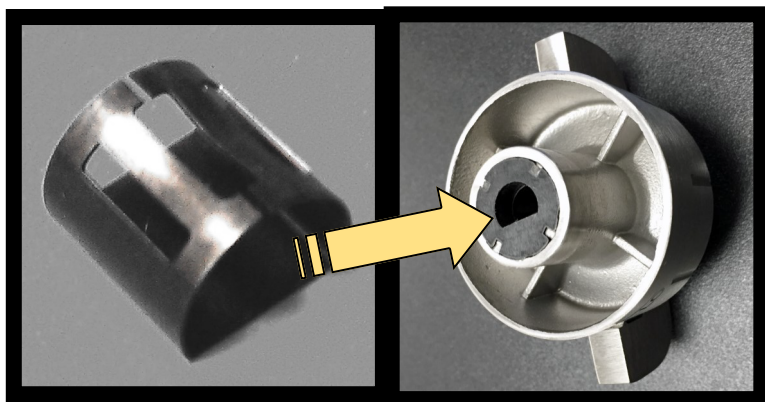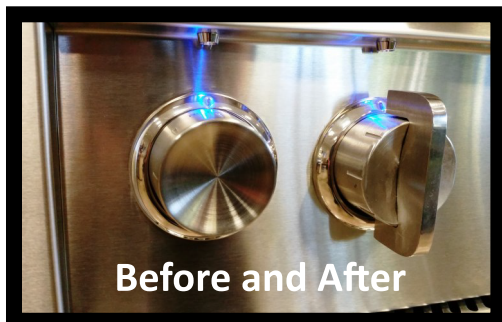

'D' Clip is inserted into the 'D' Cavity on the Gas Valve Knob

Lynx Customer Care
Ph.: 8882895969
Service@lynxgrills.com
www.lynxgrills.com