

Smart Choice[®]

8' PEX Refrigerator Water Line Kit


BEFORE BEGINNING INSTALLATION, READ ALL MANUFACTURER'S INSTALLATION INSTRUCTIONS THOROUGHLY.

⚠ DANGER


FIRE AND ELECTROCUTION HAZARD

INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER. THESE INSTRUCTIONS ARE INTENDED FOR PROFESSIONAL INSTALLATION ONLY. IF YOU DO NOT POSSESS THE NECESSARY QUALIFICATIONS AND CERTIFICATION, DO NOT ATTEMPT THE INSTALLATION YOURSELF!


This Kit Includes:

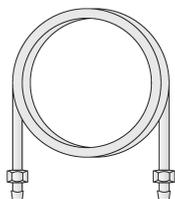

8' PEX Water Line

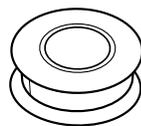

Teflon Tape

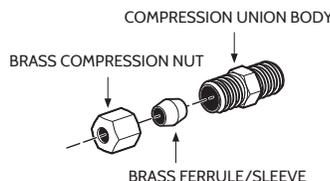

Two 1/4" x 1/4" Unions



1/4" Sleeve for PEX Tubing

smart
CHOICE[®]

⚠ WARNING

This product contains lead, a substance known to the State of California to cause birth defects or other reproductive harm.

INSTALLATION INSTRUCTIONS

Preinstallation Requirements

Tools and materials needed for installation:



Adjustable
Wrench

Determine the Water Supply Configuration


1. Shut Off Valve
2. PEX Supply Tubing
3. Copper Supply Tubing

▶ IMPORTANT

Do not overtighten.

(1) Installation Instructions for Supply Shut Off Valve


1. Shut off the cold water supply.
2. Connect either end of the PEX water line to the water supply valve.
3. Connect the other end of the PEX connector directly to the ice maker inlet located on the back of the refrigerator (See Page 3)

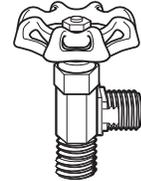

WATER
SUPPLY VALVE

(2) Installation Instructions for PEX Supply Line


1. Shut off the cold water supply.
2. Ensure that the PEX water supply tubing has a clean cut at the connection point. Do not re-use any pre-existing compression nuts or sleeves. (Caution - do not cut the molded PEX waterline supplied with this kit.)
3. Take nut from end of compression union and place nut on PEX water supply tube.
4. Slide the supplied PEX compression sleeve onto the PEX water supply tube. Do not use the brass compression sleeve with the PEX water line.
5. Place tubing squarely into body of compression union. Slide sleeve and nut into position on threads and tighten. Remove nut and sleeve from other end of compression union and discard.
6. Connect either end of the PEX water line to the other end of the compression union.
7. Connect the other other end of the PEX water line directly to the ice maker inlet located on the back of the refrigerator (See Page 3)

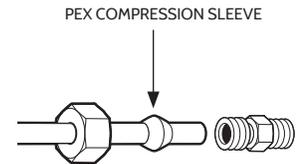

PEX
WATER SUPPLY

Installation Instructions for Copper Supply Line

1. Shut off the cold water supply.
2. Ensure that the copper tubing has a clean cut at the connection point. Do not re-use any pre-existing compression nuts or sleeves.
3. Take nut and sleeve from end of compression union and place nut first, then sleeve, on copper water supply tube.
4. Place tubing squarely into body of compression union, slide sleeve and nut into position on threads and tighten.
5. Remove nut and sleeve from other end of compression union and discard.
6. Connect either end of the PEX water line to the other end of the compression union.
7. Connect the other end of the PEX water line directly to the ice maker inlet located on the back of the refrigerator (See Page 3)

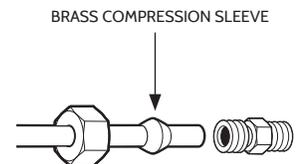

COPPER
WATER SUPPLY

INSTALLATION INSTRUCTIONS


Connect the other end of the PEX water line directly to the ice maker inlet located on the back of the refrigerator (Figure A) unless :

▶ IMPORTANT

Do not overtighten.


...the refrigerator icemaker inlet has 1/4" copper tube (Figure B).
Then use the 1/4" brass compression union enclosed:

- Take nut and sleeve from end of compression union and place nut first, then sleeve, on tube from refrigerator.
- Place tubing squarely into body of compression union, slide sleeve and nut into position on threads and tighten.
- Remove nut and sleeve from other end of compression union and discard.
- Connect the end of the PEX connector to the other end of compression union and tighten.
- Turn on water supply and check for leaks. If leaks occur, tighten connection and recheck for leaks.

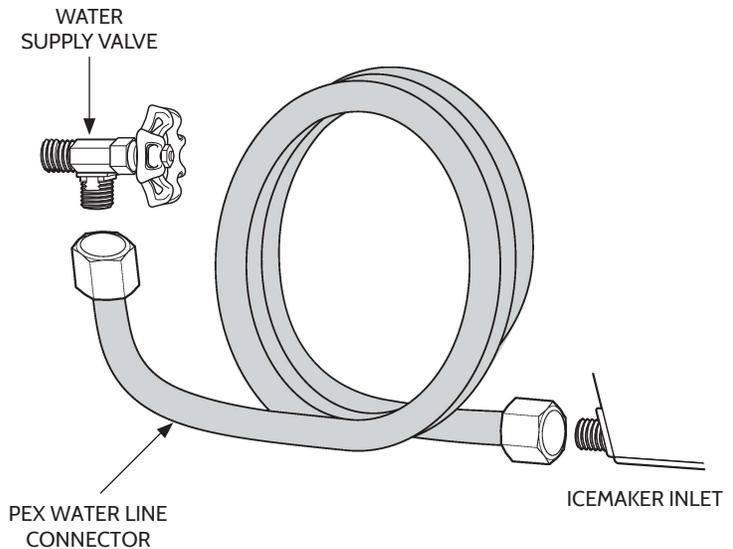

...the refrigerator icemaker inlet has 1/4" plastic tube (Figure B).
Then use a 1/4" brass compression union enclosed:

- Remove nut and sleeve from one end of compression union.
- Take nut and sleeve from the compression union and place the nut then the sleeve onto the refrigerator's plastic tubing.
- Slide the brass insert provided with the refrigerator inside the plastic tubing.
- Place tubing squarely into body of compression union, slide sleeve and nut into position on threads and tighten.
- Remove nut and sleeve from other end of compression union and discard.
- Connect the end of the PEX connector to the other end of compression union and tighten.
- Turn on water supply and check for leaks. If leaks occur, tighten connection and recheck for leaks.

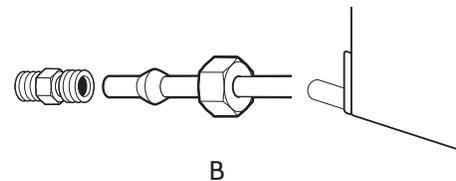

...the refrigerator icemaker inlet has 90° Water Supply Adapter (Figure C).
Then use a 1/4" brass compression union enclosed:

- Remove brass nut and sleeve from 90° water supply adapter.
- Remove the compression nuts and sleeves from the brass compression union.
- Wrap Teflon tape around one side of the compression union threads.
- Insert the wrapped threads of the body of the compression union into the 90° water supply adapter and tighten.
- Remove nut and sleeve from other end of compression union and discard.
- Connect the end of the PEX connector to the other end of the compression union and tighten.
- Turn on water supply and check for leaks. If leaks occur, tighten connection and recheck for leaks.

