


Fully Integrated 30" Bottom Mount

KF 1813 SF / KF 1803 SF





FOR PROUD INSTALLATION

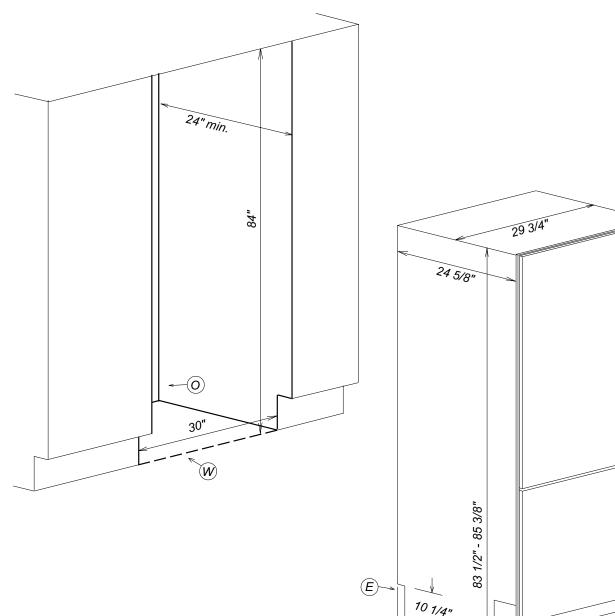

1 1/8"

Location Codes


- E 5 foot 120 Volt 15 Amp 3-wire molded plug power supply connects lower left rear
- O Standard NEMA 5-15 Duplex Outlet locate less than 9" above finished floor
- W 1/4" flexible water line tape to floor

Notes

• All Installations must be done in accordance with local codes



FOR FLUSH INSTALLATION

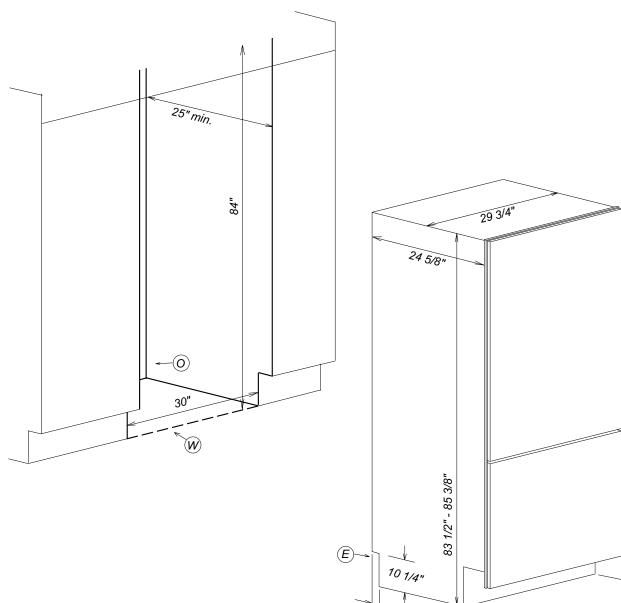

1 1/8"

Location Codes

- E 5 foot 120 Volt 15 Amp 3-wire molded plug power supply connects lower left rear
- O Standard NEMA 5-15 Duplex Outlet locate less than 9" above finished floor
- W 1/4" flexible water line tape to floor

Notes

- All Installations must be done in accordance with local codes
- Sides of adjoining cabinets should be filled (flush to frame) to insure proper fit and finish

Fully Integrated 30" Bottom Mount KF 1813 SF / KF 1803 SF



HINGING DETAILS

