




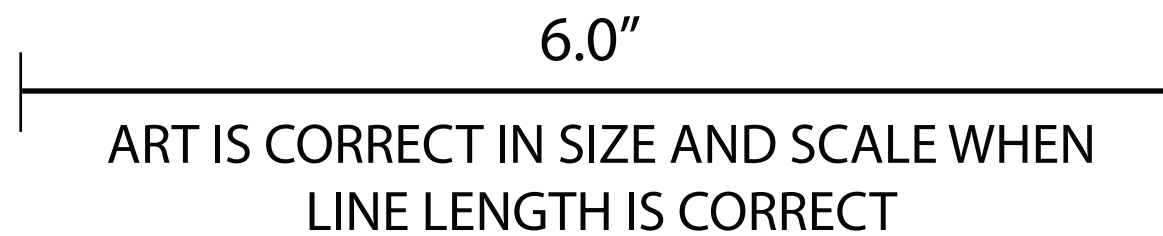

0.200" Routing

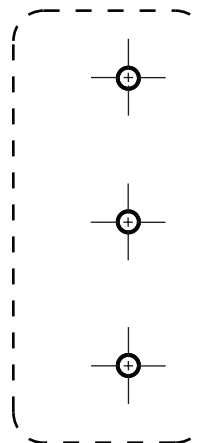

Top of Panel

Freezer Drawer Template Custom Panel

Pilot holes 0.125" diameter, 0.300" depth




Warning: Before drilling holes for brackets, please make sure they do not line up with thin areas on the panel.



0.200" Routing

0.200" Routing


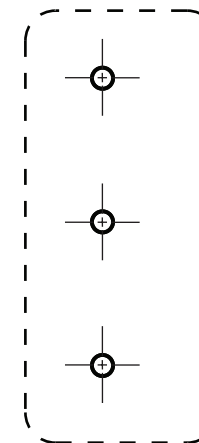


31-46543 (C)
197D8240P001

6.0"
ART IS CORRECT IN SIZE AND SCALE WHEN
LINE LENGTH IS CORRECT

Top of 80" Panel

84" Panel will extend above this template

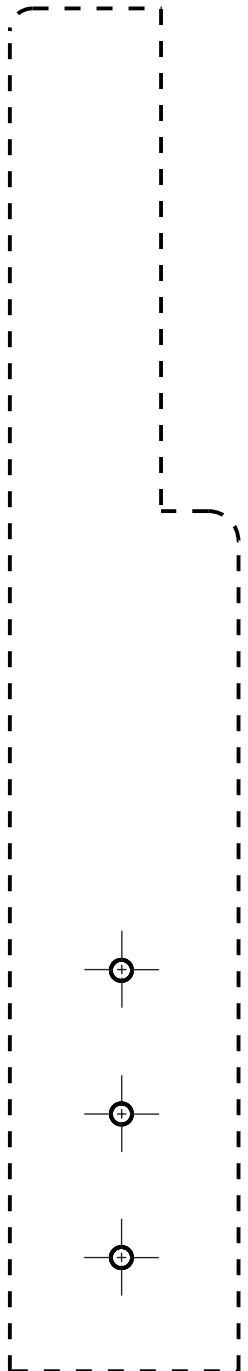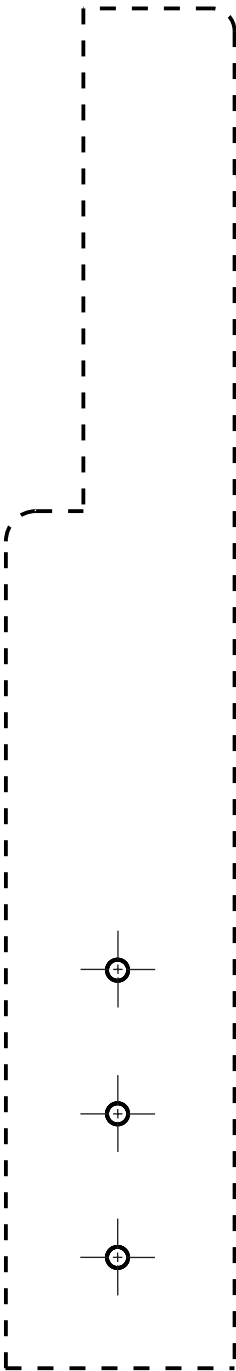



Directions For Using Templates:

- 1. Align template bottom with bottom of door/drawer panel.
- 2. Tape the template to the door/drawer panel.
- 3. Drill all of the 0.125" pilot holes.
- 4. Using a marker, go along all of the perforated edges to trace the routings.
- 5. Remove the template from the panel.
- 6. Route the marked areas to the depth indicated on the templates.

Solid Door Template Custom Panel

Pilot holes 0.125" diameter, 0.300" depth

0.200" Routing
4 Places

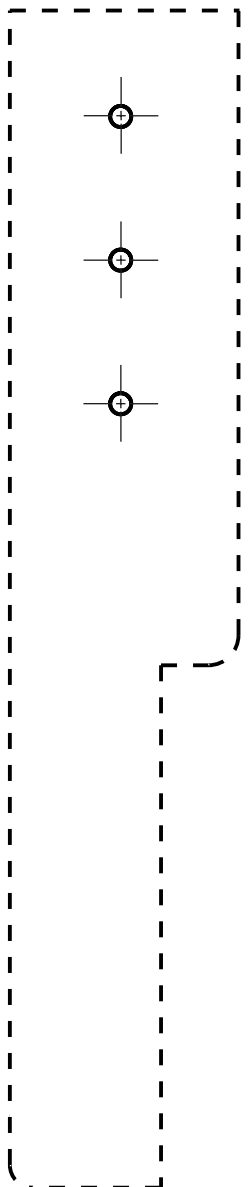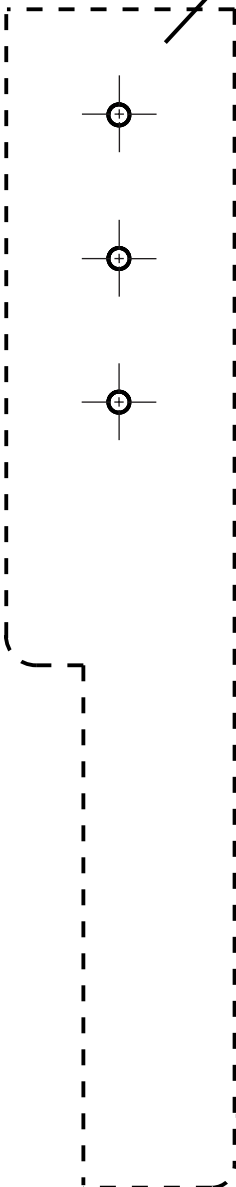



Warning: Before drilling holes for brackets, please make sure they do not line up with thin areas on the panel.



Bottom of Panel


31-46543 (B)
197D8240P001

0.200" Routing

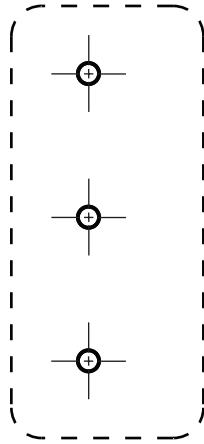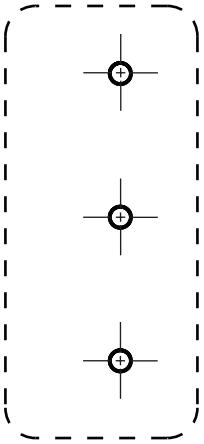

0.200" Routing

Top of Panel

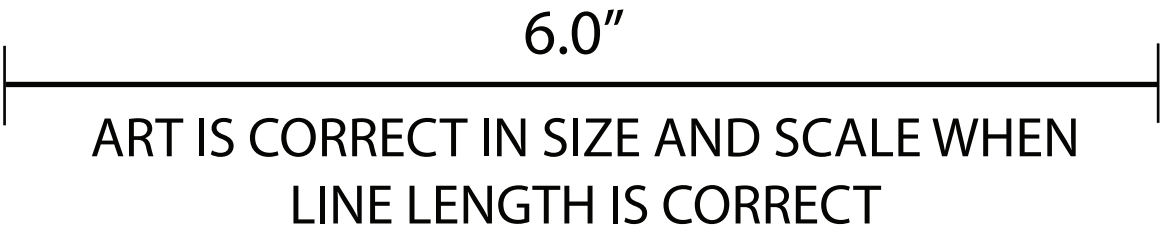

Customizable Drawer Template
Custom Panel

Pilot holes 0.125" diameter, 0.300" depth



Warning: Before drilling holes for brackets, please make sure they do not line up with thin areas on the panel.

0.200" Routing



Bottom of Panel