



## **ZRC-03NA**

For use with models: ZNA-M90DS / ZNA-E42DS

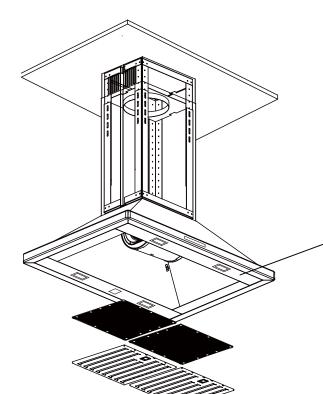

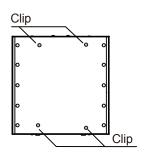

Place charcoal filters to back side of baffle filters. Secure charcoal filters in place by ruber clips. Depending on filter design secure top and bottom of charcoal filters by either rubber clips.

Remove all black foam from filter opening before installing the charcoal filter brackets.

## **LIST OF MATERIALS**

