



FRIGIDAIRE

Factory Parts Catalog

Product No.	FFGH2422UW
	94300346900
Series	24" fs gas
Color	white
Market	North America
Owner's Guide	808575805
Installation Instructions	809019203
Service Data Sheet	808532304

Frigidaire


P.O. BOX 8020
CHARLOTTE, NC 28262

Publication No.
5995717492
19/09/16
(EN/SERVICE/ECL)
377

24-INCH FREE STANDING GAS RANGE

Model No.
FFGH2422U


BACKGUARD

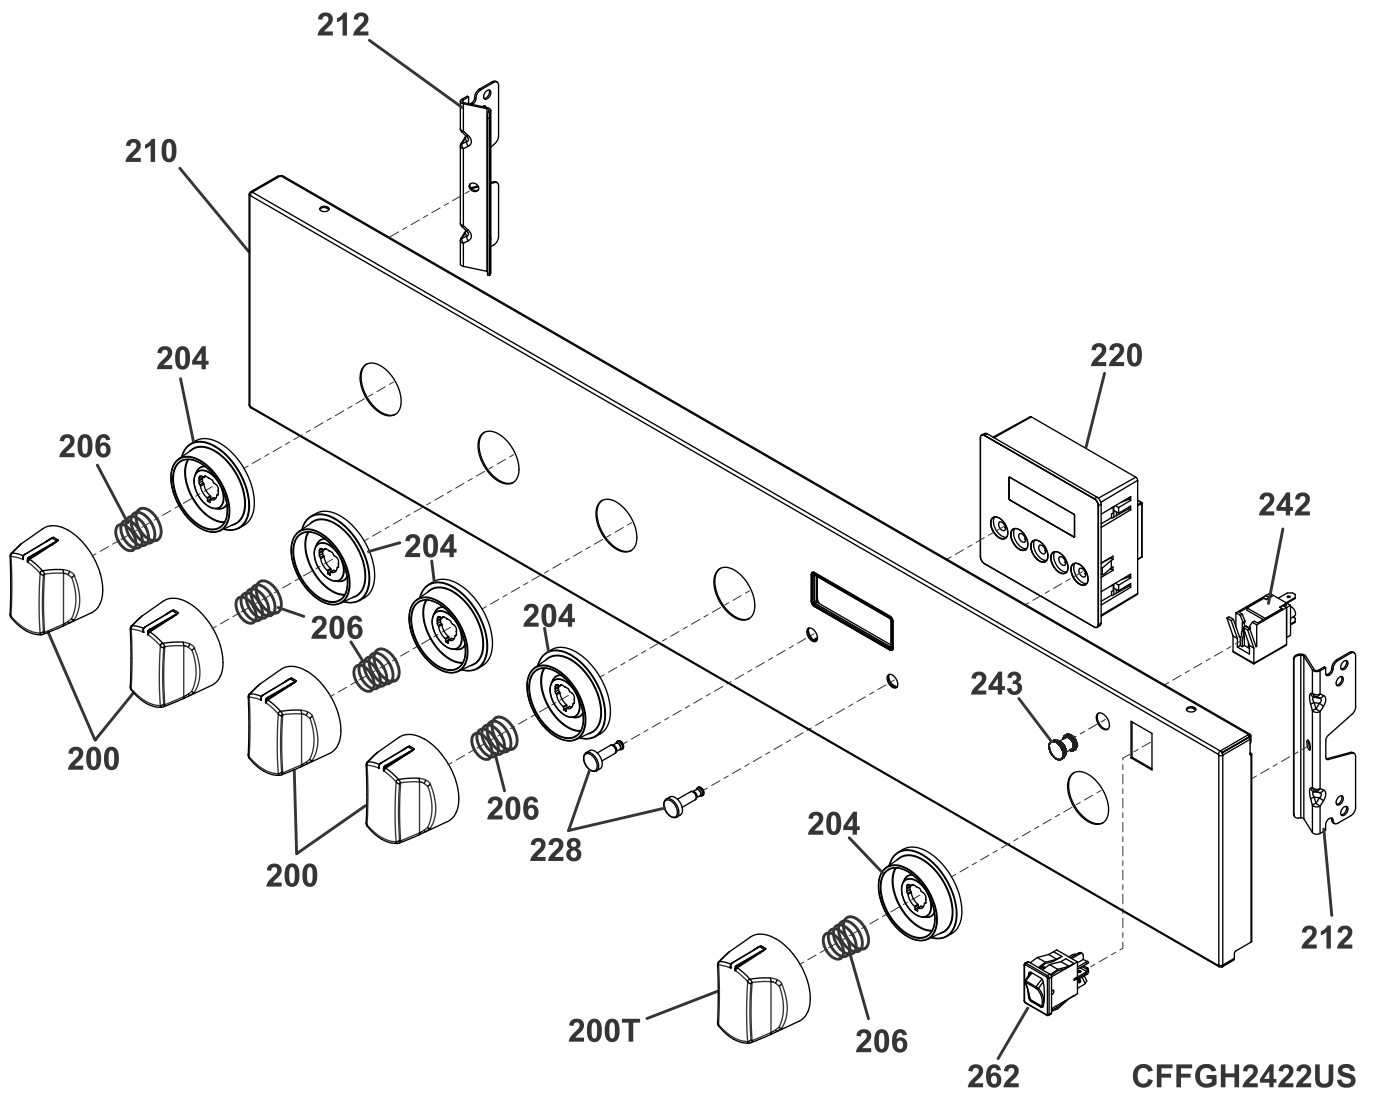

BACKGUARD

POS. NO	PART NO.	DESCRIPTION
200	A14176501	Knob, top valve, white
200T	A14177901	Knob, oven control, white
204	A00196002	Bezel, knob indicator, white
206	354302903	Spring, knob
210	342840439	Panel, control, white
212	342610701	Support, control panel
220#	A02169804	PC Board, assembly, user interface
228	342557313	Knob, user interface, white
242#	318369502	Lamp, indicator
243	318044511	Lens, indicator light
262#	A03134601	Switch, oven lamp, white

BURNER

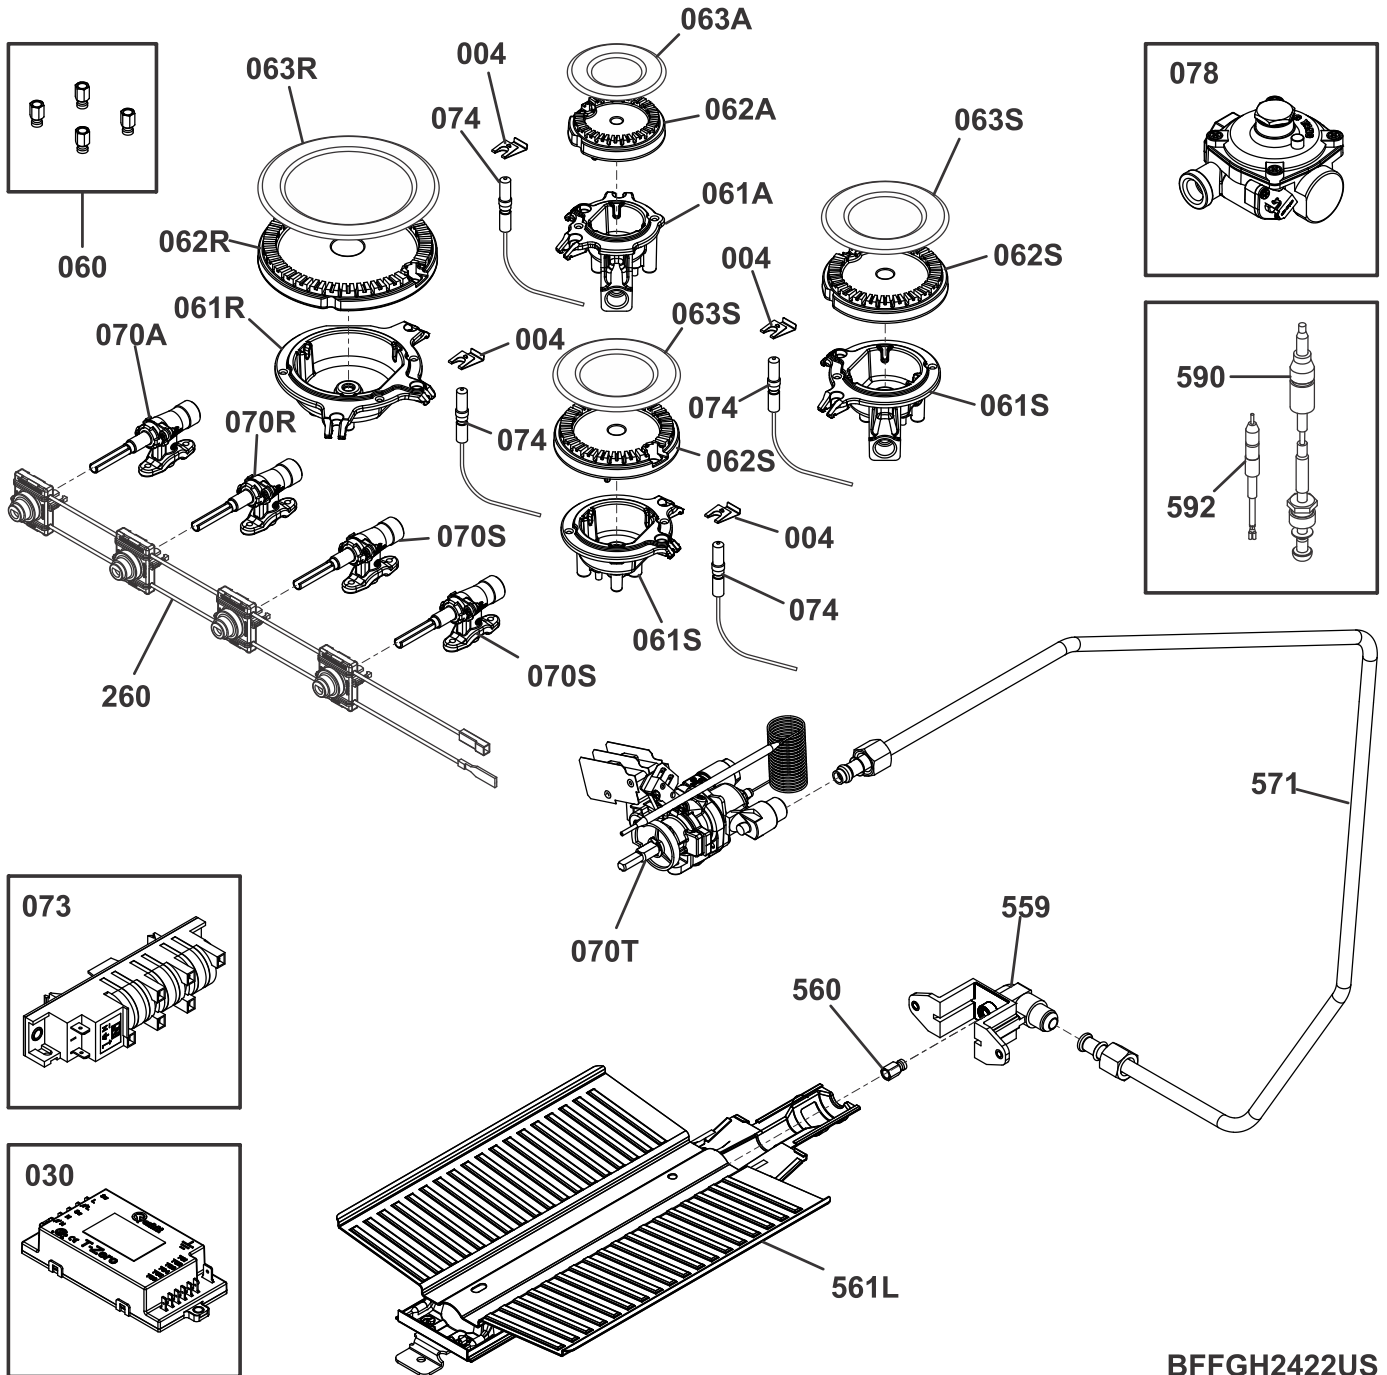


BFFGH2422US

BURNER

POS. NO	PART NO.	DESCRIPTION
004	A03381701	Clip, spring, ignitor/thmcple
030#	357233503	PC Board, assembly, time zero
060#	405547395	Orifice Set, top burner, (4 pcs), natural gas
060#	405549276	Orifice Set, top burner, (4 pcs), LP gas
061A	A01483803	Burner Body, assembly, small
061R	A01484003	Burner Body, assembly, large
061S	A01483903	Burner Body, assembly, medium
062A	354013801	Top Burner, Crown, small
062R	354013605	Top Burner, Crown, large
062S	354013701	Top Burner, Crown, medium
063A	354017006	Cap, top burner, small
063R	354017004	Cap, top burner, large
063S	354017005	Cap, top burner, medium
070A	A15580201	Valve, top burner, small
070R	A15580203	Valve, top burner, large
070S	A15580202	Valve, top burner, medium
070T	A13030601	Thermostat, oven control, w/valve
073#	808608804	Spark Module
074#	A01330603	Ignitor, spark, 250mm lead, top burner
074#	A01330606	Ignitor, spark, 400mm lead, top burner
074#	A01330607	Ignitor, spark, 500mm lead, top burner
078#	A13097101	Regulator, gas pressure
260#	A13059201	Switch Assembly, ignitor spark, w/harness
559#	342034201	Support Nozzle, oven burner
560#	131002392	Orifice, oven burner, natural gas
560#	354400003	Orifice, oven burner, LP gas
561L	A14238401	Burner, oven
571#	342384801	Tube, supply, oven burner
590#	342907301	Thermocouple, oven burner
592#	342906802	Ignitor, oven burner
*	354324402	Bolt, 9x13mm T10
*	5029426600	Screw Pack, burner fixing, 9x13mm, (24 pcs)



BODY

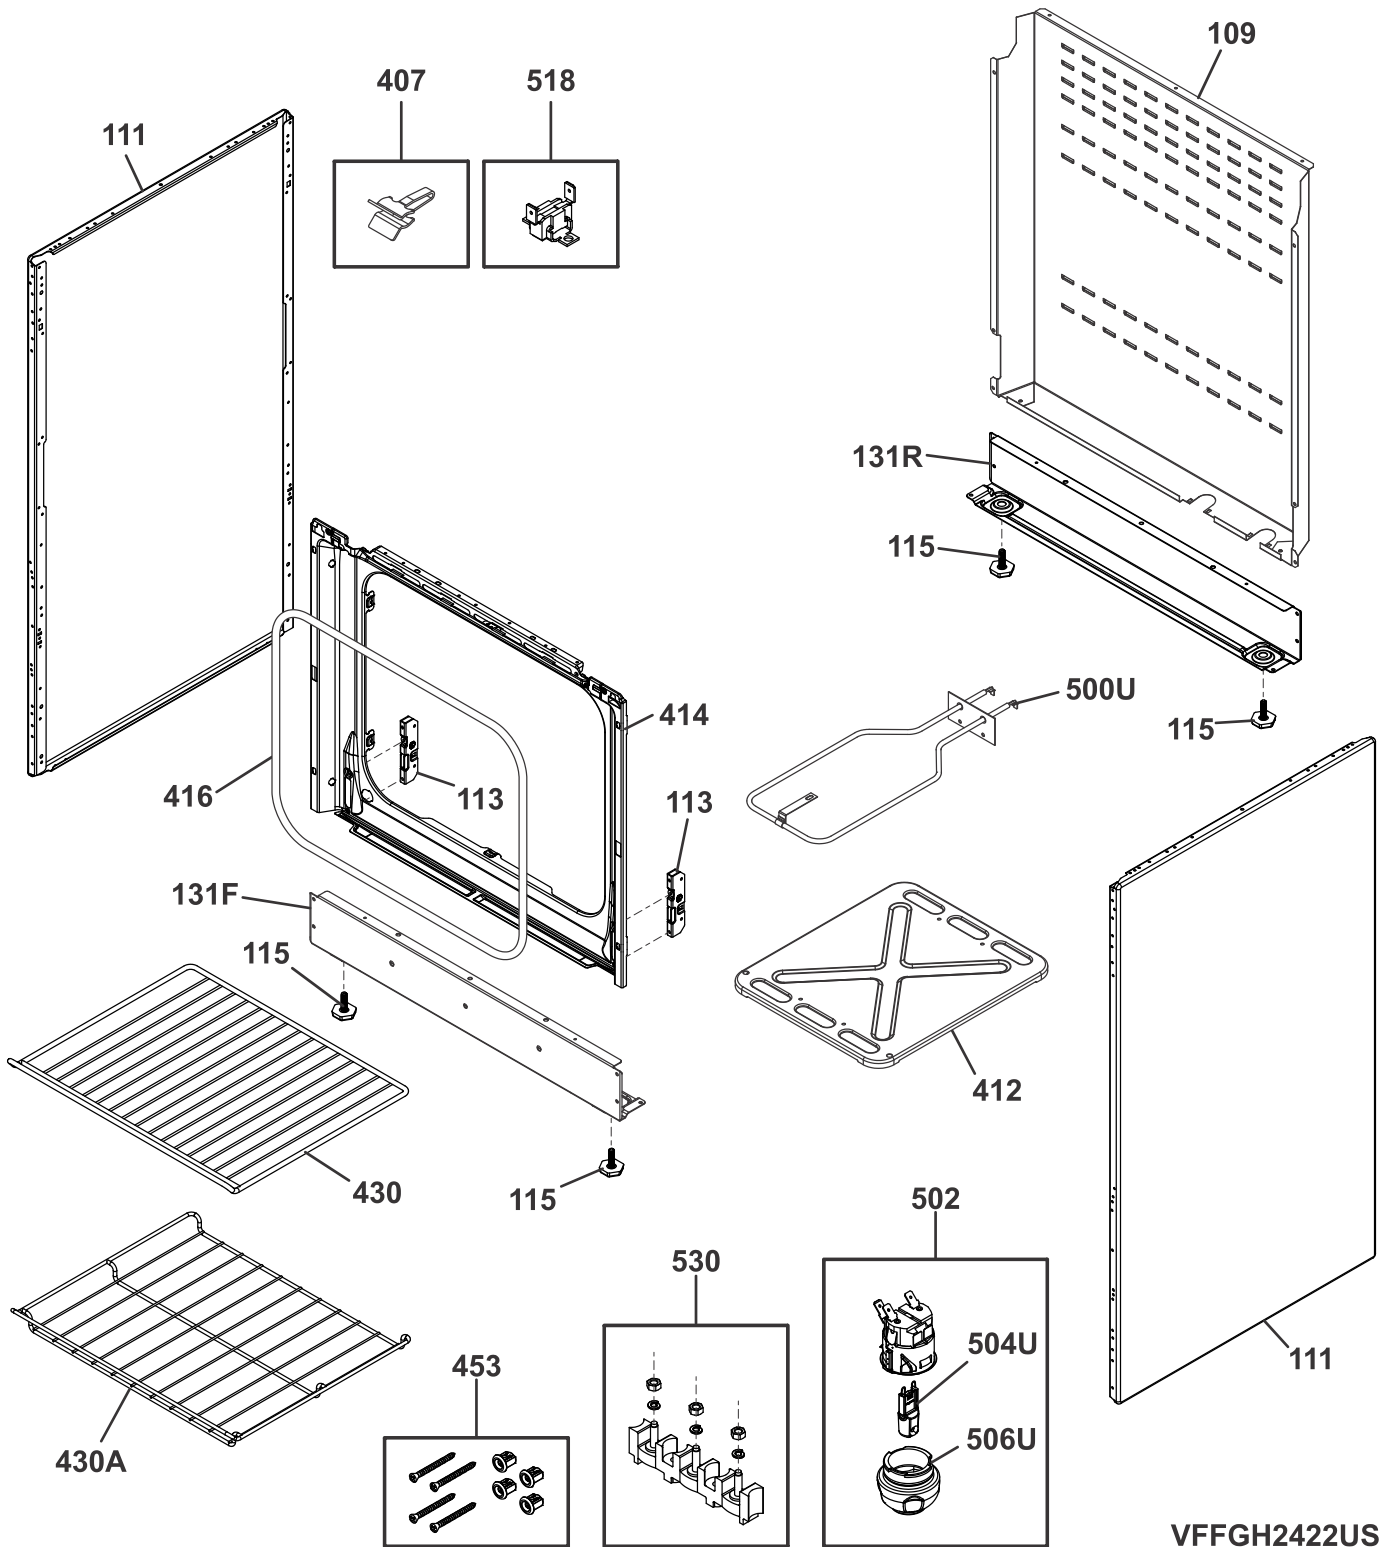

BODY

POS. NO	PART NO.	DESCRIPTION
109	A14125903	Panel, oven back
111	A02114902	Panel, side, white
113	A05102101	Receptacle, hinge, door
115	A02244101	Foot, cabinet, adjustable
131F	A02827002	Toe Plate, front, white
131R	A02827004	Panel, filler, lower rear
407	354313201	Clip, bulb, oven thermostat
412	353201123	Cover, oven bottom
414	342397603	Frame, oven front
416	357732201	Seal, oven door
430	354659502	Rack, oven, 422.8x347mm
430A	A15915601	Rack, oven, 423x348.8mm
453	5029303600	Kit, bushing, (4 pcs), w/screws
500U	A10620302	Element, heating, upper, 1000W, 120V
502#	808769006	Lamp Assembly, oven, G9 bulb, 25W, 120V, w/receptacle
504U	808564103	BULB, oven lamp, G9, 25W, 120V
506U	808769001	Cover, lamp, glass, top
518#	330208111	Thermostat, protection, overheating
530#	405538919	Kit, terminal block
* #	A03781401	Power Cord, electric servic
*	342176001	Support, corner

TOP/DRAWER

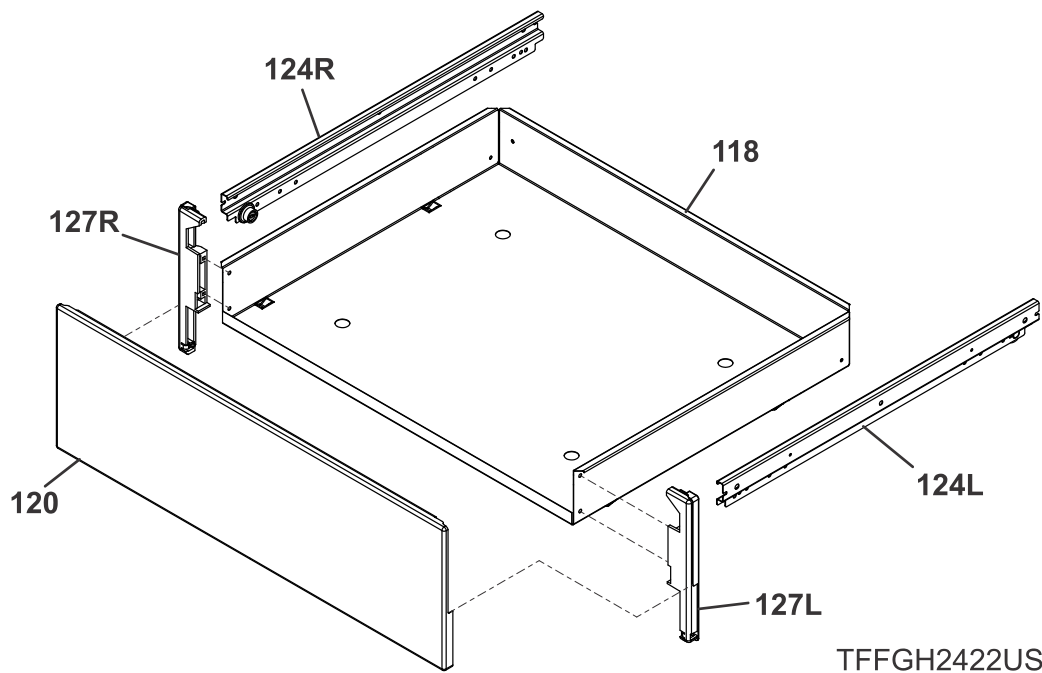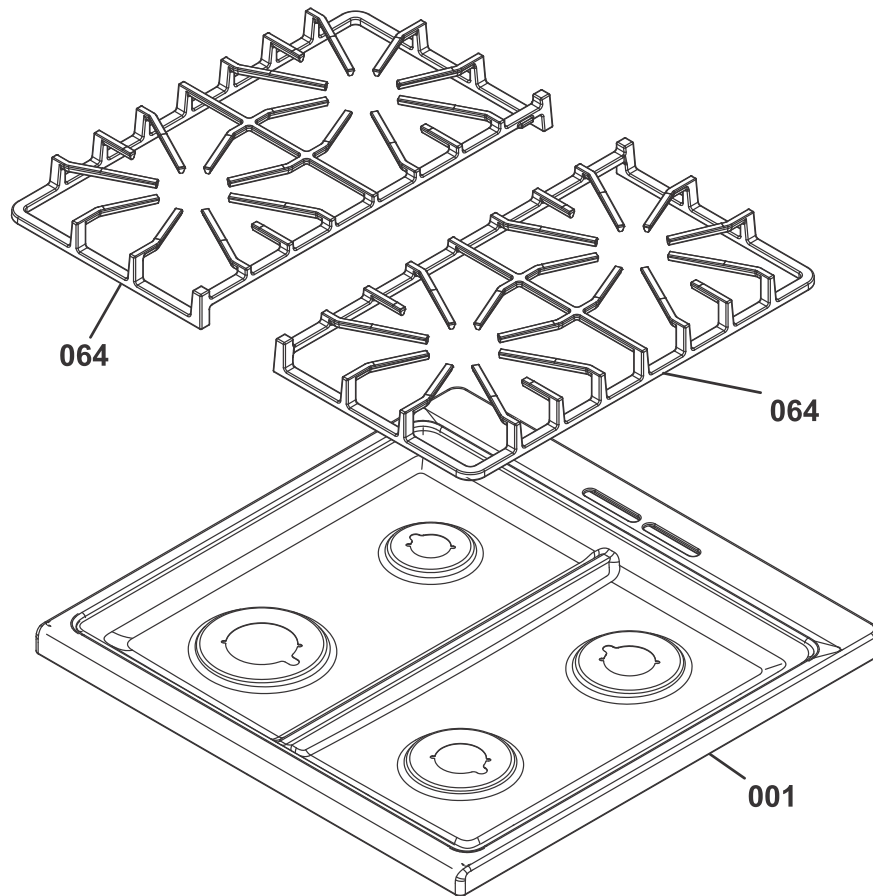


TFFGH2422US

TOP/DRAWER

POS. NO	PART NO.	DESCRIPTION
001	A02441646	Cook Top, white
001*	356520607	Seal, cooktop
064	A12620501	Grate, top burner, black
064*	405536699	Foot Kit, grate, rubber, (8 pcs)
118	342175101	Drawer, tray
118*	342553001	Wheel, drawer, back
118*	342553101	Wheel, drawer, front
118*	342557201	Axle, drawer
120	342174603	Panel, drawer front, white
124L	342817707	Glide, drawer, LH
124R	342817708	Glide, drawer, RH
127L	A14042601	Support, drawer, LH
127R	A14042602	Support, drawer, RH
*	A15216401	Plug, button, drawer
*	342485201	Bolt, burner support, M4x9 PH
*	342583401	Holder, HOB

DOOR

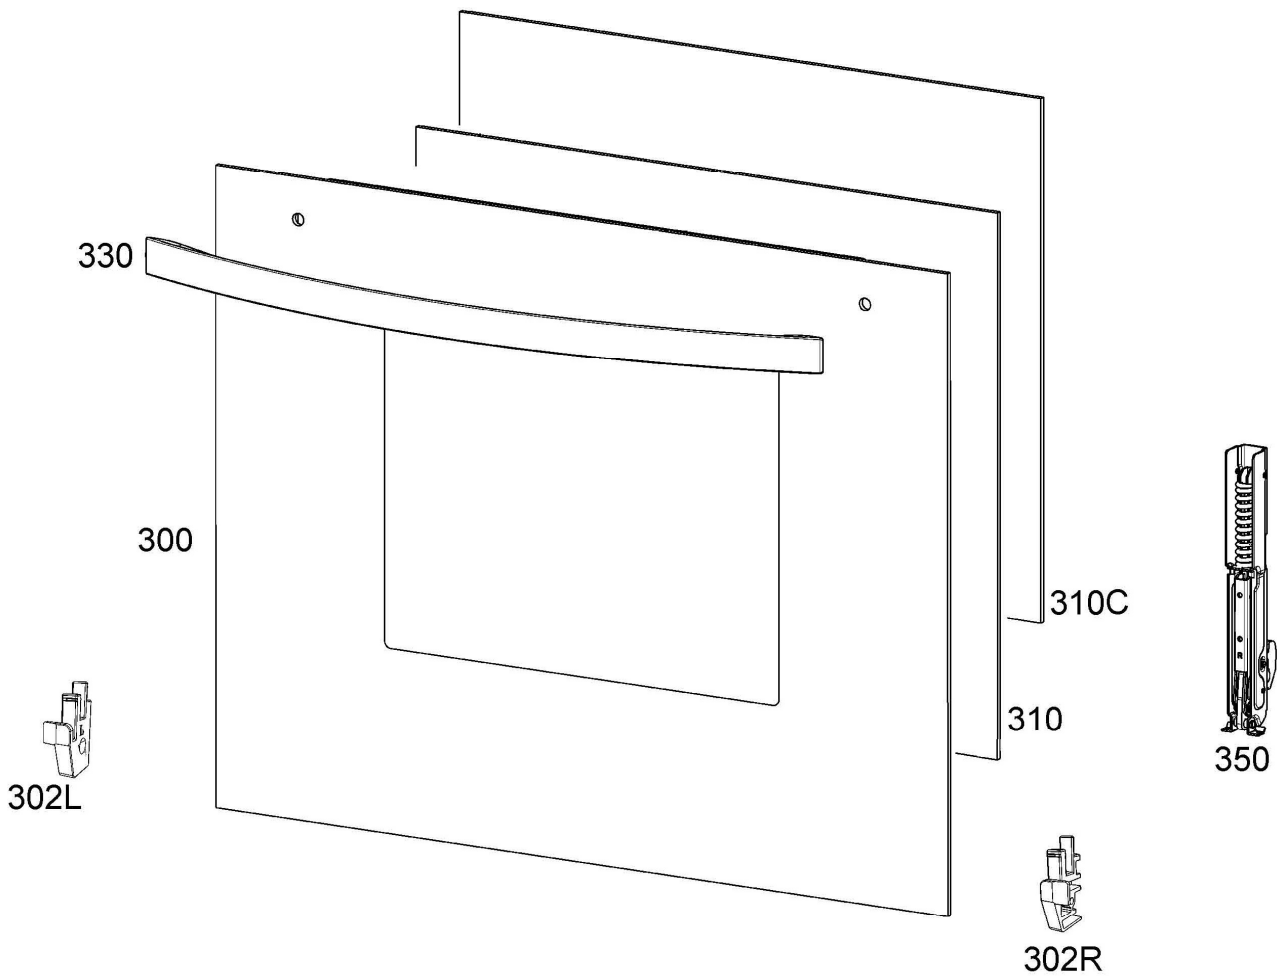


DFFEH2422US

DOOR


POS. NO	PART NO.	DESCRIPTION
300	342841147	Glass, door front, black
302L	A03195502	Bracket, glass holder, LH
302R	A03195501	Bracket, glass holder, RH
310	356150302	Glass, door, 474x383mm, inner
310C	342934103	Glass, door, 490x401.5mm, inner
330	A00206002	Handle, door, white
330*	807031902	Bolt, handle, 4x16 T20
350	A12611602	Hinge, oven door

WIRING DIAGRAM

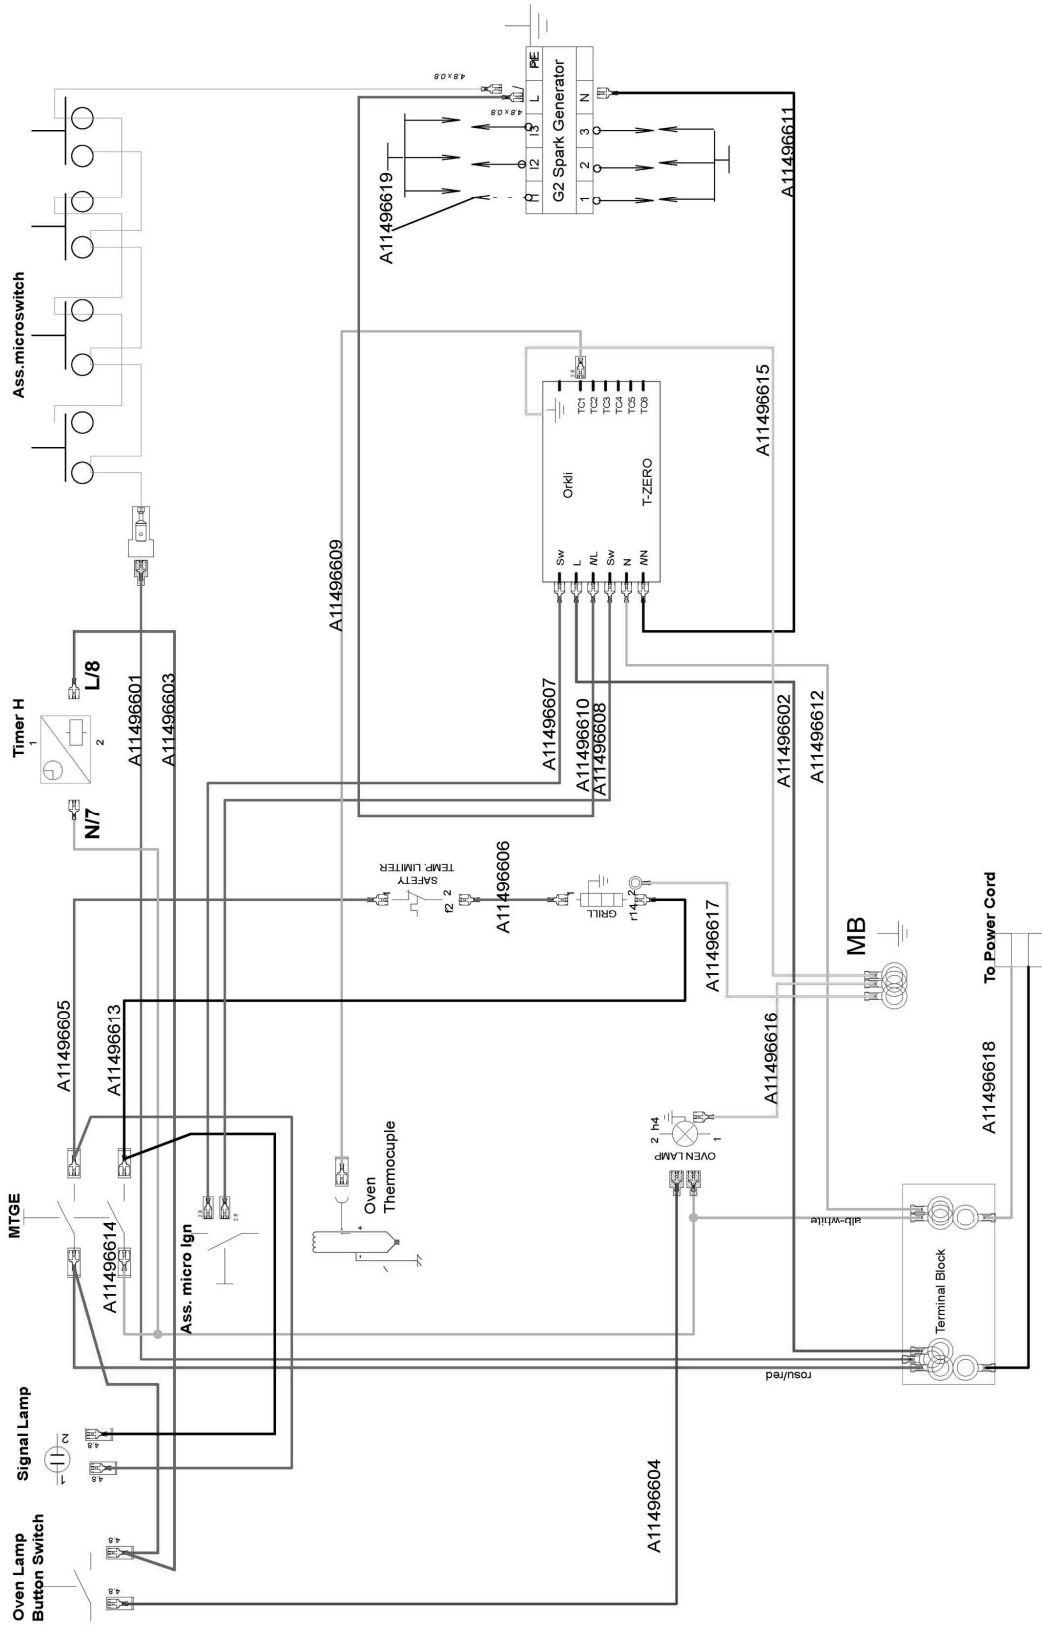

A11496601

WIRING DIAGRAM

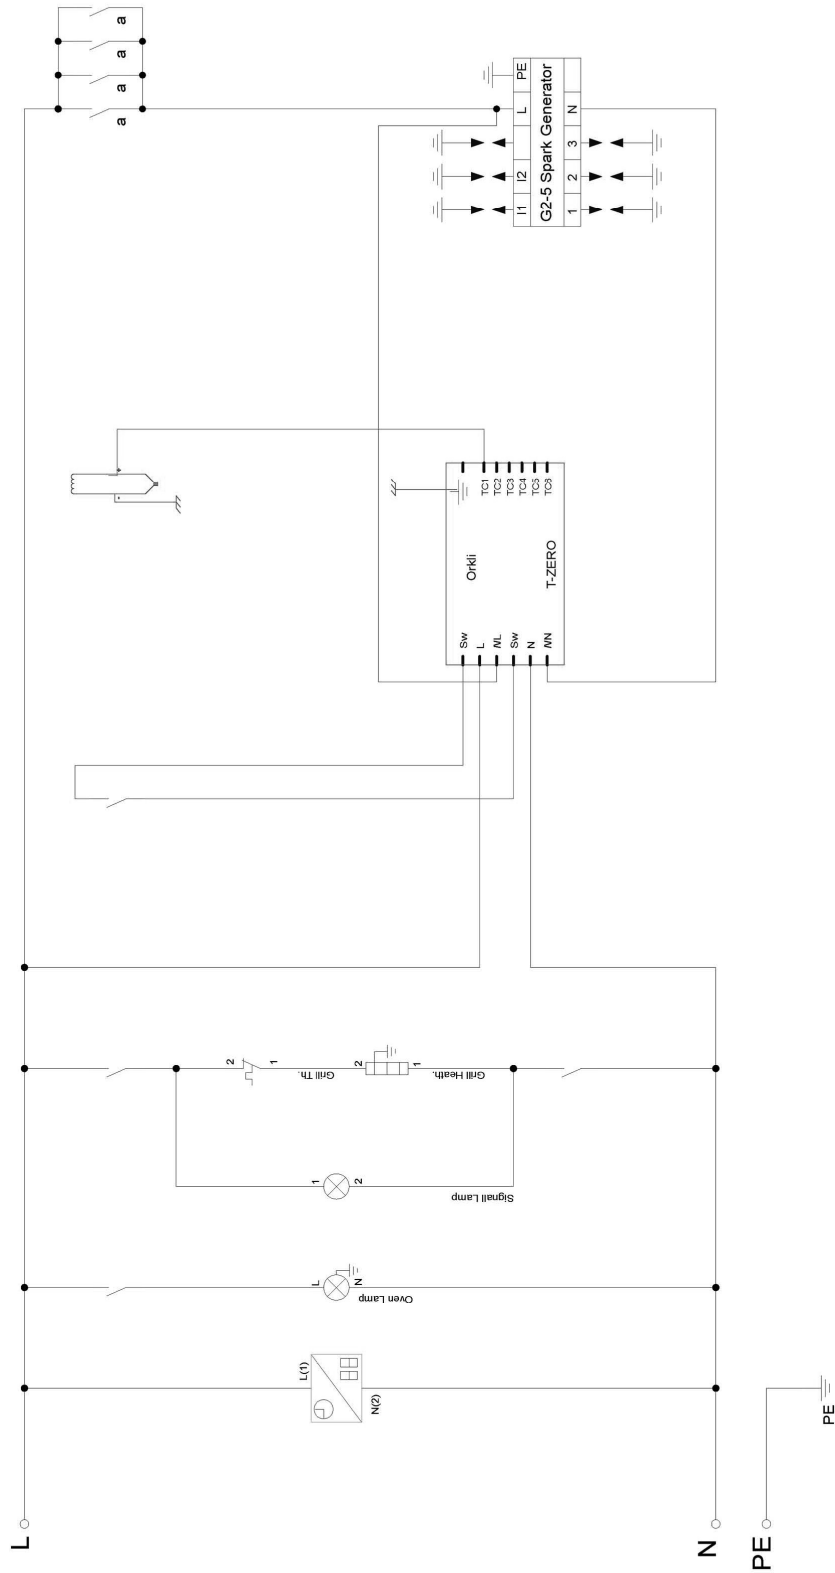

A11496901