


(Only for Models FF1532BSS, SCFF1533BSS, AL54IF, FF64BSS and SCFF53BSS)

This appliance includes a stainless steel handle that is not required to operate the unit. To install the handle, follow the instructions below:


1. Use a screwdriver to remove the screws on the side of the door where the handle is to be installed.
2. Align the handle with the screws removed in step # 1. Tighten the screws using a Phillips head screwdriver until the handle is both flush and secured tightly against the door side. (DO NOT over-tighten as this will cause damage to the stainless steel door surface.)

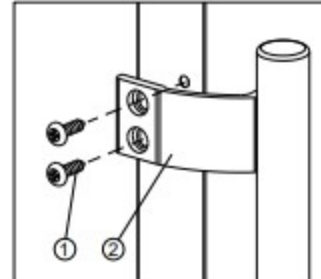

Full Overlay Panel Installation Instructions

Most of these models are designed for field-installed overlay panels. The overlay panels cover the stainless steel to give the unit a built-in appearance. The overlay panel and appropriate hardware are not included with the unit and the end user needs to prepare them themselves. Please follow the instructions below for installation:

1. Peel off the gasket (4) and remove the handle by removing the four screws that attach the handle to the door.
2. Drill the 8 holes shown by using a 3/16" drill bit inside the door groove on the four sides of the door front (2).
3. Cut the overlay panel (1) with a thickness of 3/4" to the dimensions corresponding to your model. *
4. Attach the handle to the overlay panel by using the flat head screws and drive the screws flush with the panel.
5. Then attach the overlay panel to the door face using the 8 wood screws #10x2 (ST4x50) (3) and through the 8 existing holes inside the door groove.
6. Reinstall the gasket.

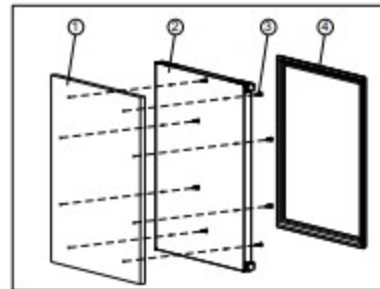

*Suggested Panel Sizes:

FF1532BSS / SCFF1533BSS: 14 3/4" W x 30" H
FF64BSS / SCFF53BSS / SCR610BLSD: 23.4" W x 30" H
ASDS1523: 14 3/4" W x 28 3/8" H
SPR618OSADA / ASDS2413 / AL54IF: 23.4" W x 28 3/8" H