

# Accessories for PG 8056 & PG 8061 Dishwashers

## Upper and Lower Baskets/Basket Carriers



**O 891 Upper Basket with E 810**  
67189101D

**Included with dishwasher**

- Plastic-coated wire basket
- Integrated spray arm, rear docking
- 2 hinged cup racks for 20 cups
- 2-stage height adjustment by 2"
- Vertical clearance 7 $\frac{1}{4}$ "
- 7 $\frac{1}{2}$ " H x 20 $\frac{1}{2}$ " W x 19 $\frac{1}{4}$ " D




**O 892 Upper Basket**  
67189201D

- With E 812 and 2 glass rails
- Plastic-coated wire basket
- Integrated spray arm, rear docking
- Vertical clearance 7 $\frac{1}{4}$ "
- 7 $\frac{1}{2}$ " H x 20 $\frac{1}{2}$ " W x 19 $\frac{1}{4}$ " D




**O 899 Upper Basket Carrier**  
67189901D

- Plastic-coated wire basket
- Integrated spray arm, rear docking
- 2-stage height adjustment by 2"
- Vertical clearance 7 $\frac{1}{4}$ "
- 7 $\frac{1}{2}$ " H x 20 $\frac{1}{2}$ " W x 19 $\frac{1}{4}$ " D

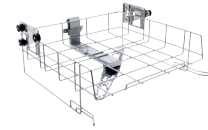

**O 898 Upper Basket**  
67189801D

- For PG 8061
- Stainless steel
- Integrated spray arm, rear docking
- Height adjustable by 2 $\frac{3}{8}$ "
- Vertical clearance 9 $\frac{1}{2}$ "
- 8 $\frac{1}{8}$ " H x 20 $\frac{3}{4}$ " W x 19 $\frac{1}{2}$ " D

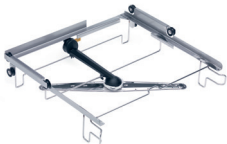

**O 885 Upper Basket Carrier**  
67188501D

- Stainless steel
- Integrated spray arm, rear docking
- For 19 $\frac{3}{4}$ " x 19 $\frac{3}{4}$ " baskets
- Vertical clearance 5 $\frac{1}{8}$ "
- 4 $\frac{3}{4}$ " H x 20 $\frac{7}{8}$ " W x 20 $\frac{3}{8}$ " D



**U 890 Lower Basket**  
67189001D

**Included with dishwasher**

- Plastic-coated wire basket
- For inserts or plastic baskets sized 19 $\frac{3}{4}$ " x 19 $\frac{3}{4}$ "
- 4" H x 21" W x 20 $\frac{3}{8}$ " D



**U 881 Lower Basket**  
4906620

- Plastic-coated wire basket
- Fixed insert for 54 saucers
- For combination with E 809 top insert for 23 cups with 3 $\frac{1}{8}$ " diameter
- 7 $\frac{1}{8}$ " H x 20 $\frac{1}{8}$ " W x 20 $\frac{3}{8}$ " D



**U 876 Lower Basket Carrier**  
67187501D

- Stainless steel
- For baskets and various inserts sized 19 $\frac{3}{4}$ " x 19 $\frac{3}{4}$ "
- Vertical clearance 9 $\frac{1}{8}$ " \*
- 2" H x 21 $\frac{1}{8}$ " W x 19 $\frac{3}{4}$ " D
- \* With O 885 upper basket carrier

## Inserts for Upper and Lower Baskets



**E 816 Plate Insert**  
67581601D

**2 Included with dishwasher**


- Plastic-coated wire basket
- For use in U 890 lower basket
- 2 positions possible:

*Load arrangement without cutlery holder*

- For 19 plates with 9 $\frac{1}{8}$ " diameter
- For 19 plates with 13" diameter

*Load arrangement with cutlery holder*

- For 16 plates with 9 $\frac{1}{8}$ " diameter
- For 16 plates with 13" diameter



**E 216 Plate Insert**  
3809080

- Plastic-coated wire basket
- For use in lower baskets
- For 15 plates with 9 $\frac{1}{2}$ " diameter
- Accommodates E 165 cutlery holder



**E 810 Plate Insert**  
67581001D


**Included with dishwasher**

- Plastic-coated wire basket
- For use in O 891 upper basket
- 33 saucers or 17 dessert plates



**E 888 Plate Insert**  
5018690

- Plastic-coated wire basket
- For use in U 890 lower basket
- For 9 plates with 14 $\frac{1}{4}$ " diameter or 18 plates with 11 $\frac{1}{8}$ " diameter
- Rests spaced 1 $\frac{1}{8}$ " apart
- Rest height 7"
- 7" H x 18 $\frac{1}{8}$ " W x 18 $\frac{1}{8}$ " D

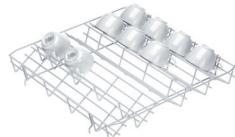

**E 809 Lower Basket Top Insert**  
5018650

- Plastic-coated wire basket
- For use in U 881 lower basket
- For 23 cups with 3 $\frac{1}{8}$ " diameter
- 2 $\frac{1}{8}$ " H x 20" W x 19 $\frac{1}{2}$ " D



**E 9 Insert**  
3808260

- Plastic-coated wire basket
- For use in U 890 and U 876 lower baskets
- For pots, pans, bowls and dishes
- Rests spaced 1 $\frac{1}{8}$ " apart
- Rest height 4 $\frac{1}{4}$ "
- 4 $\frac{3}{8}$ " H x 8 $\frac{1}{8}$ " W x 16 $\frac{1}{2}$ " D




**E 884 Insert**  
5018680

- Plastic-coated wire basket
- For use in U 890 lower basket
- For 10 large trays or platters, max. size 19 $\frac{3}{4}$ " x 12 $\frac{5}{8}$ "
- Rests spaced 1 $\frac{1}{4}$ " apart
- Rest height 7"
- 7" H x 18 $\frac{1}{8}$ " W x 18 $\frac{1}{8}$ " D

# Accessories for PG 8056 & PG 8061 Dishwashers

## Inserts for Upper and Lower Baskets

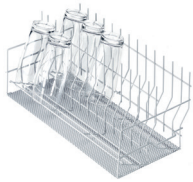

**E 205 Glassware Insert**  
3808980

- Plastic-coated wire basket
- For use in lower baskets
- For 17 glasses with 2 $\frac{5}{8}$ " diameter
- Perforated plate to reduce impact of water jets
- Max. glass height 10 $\frac{1}{4}$ "
- 8 $\frac{3}{4}$ " H x 9 $\frac{5}{8}$ " W x 19 $\frac{1}{2}$ " D




**E 459 Glassware Insert**  
4326630

- Stainless steel
- For use in upper or lower baskets
- For 12 glasses with 2 $\frac{1}{4}$ " diameter
- Max. glass height 8 $\frac{3}{4}$ "
- 6 $\frac{3}{4}$ " H x 7 $\frac{5}{8}$ " W x 18 $\frac{1}{8}$ "



**E 815 Glassware Insert**  
5018670

- Plastic-coated wire basket
- For use in U 890 lower basket
- For 10 beer glasses
- Rests spaced 3 $\frac{3}{4}$ " apart
- Rest height 9 $\frac{1}{2}$ "
- 10" H x 8 $\frac{3}{4}$ " W x 20 $\frac{1}{4}$ " D

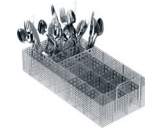

**E 437 Cutlery Insert**  
4326640

- Stainless-steel container with carrying handle
- For use in O 885 upper basket carrier and U 876 lower basket carrier
- 18 compartments, 2 $\frac{3}{8}$ " x 1 $\frac{1}{4}$ "
- 2 compartments, 2 $\frac{3}{8}$ " x 2 $\frac{3}{8}$ "
- 16 compartments, 1 $\frac{1}{4}$ " x 1 $\frac{1}{4}$ "
- 2 $\frac{3}{4}$ " H x 8 $\frac{3}{8}$ " W x 17 $\frac{1}{4}$ " D



**E 165 Cutlery Holder**  
3808830

- **2 Included with dishwasher**
- Plastic holder
- For use in E 218 insert
- 3 compartments, 2 $\frac{3}{4}$ " x 2 $\frac{5}{8}$ "
- 4 $\frac{3}{8}$ " H x 2 $\frac{3}{4}$ " W x 8 $\frac{5}{8}$ " D



**E 167 Cutlery Holder**  
67616701D

- Plastic holder
- For use in U 506 plate basket
- 7 compartments
- 4 $\frac{1}{4}$ " H x 17 $\frac{3}{8}$ " W x 2" D



**E 812 Glassware Insert**  
67581201D

- Plastic-coated wire basket
- For use in upper baskets
- For 7 glasses, 2 $\frac{5}{8}$ " diameter

## Lower Baskets



**U 504 Cutlery Basket**  
67650401D

- Plastic-coated wire basket
- Plastic cutlery holder
- 9 compartments sized 4 $\frac{1}{4}$ " x 4 $\frac{1}{4}$ "
- 5 $\frac{3}{4}$ " H x 19 $\frac{3}{4}$ " W x 19 $\frac{3}{4}$ " D



**U 506 Plate Basket**  
67650601D

- Plastic-coated wire basket
- 8 rows
- Rests spaced 2 $\frac{1}{8}$ " apart
- Accommodates E 167 cutlery holder
- 3 $\frac{5}{8}$ " H x 19 $\frac{3}{4}$ " W x 19 $\frac{3}{4}$ " D



**U 507 Bistro Basket**  
67650701D

- Plastic-coated wire basket
- Spacing (tall) 3 $\frac{5}{8}$ " or 4" or 3 $\frac{1}{8}$ "
- Spacing (low) 2 $\frac{1}{8}$ " or 2 $\frac{1}{2}$ "
- 6 $\frac{1}{2}$ " H x 19 $\frac{3}{4}$ " W x 19 $\frac{3}{4}$ " D



**U 524/1 Glassware Basket**  
10094770

- Plastic-coated wire basket
- 4 rows for glasses with 4" diameter
- 7 $\frac{1}{4}$ " H x 19 $\frac{3}{4}$ " W x 19 $\frac{3}{4}$ " D



**U 525/1 Glassware Basket**  
10094780

- Plastic-coated wire basket
- 5 rows for glasses with 3 $\frac{3}{4}$ " diameter
- 7 $\frac{1}{4}$ " H x 19 $\frac{3}{4}$ " W x 19 $\frac{3}{4}$ " D

## Accessories for PG 8056 & PG 8061 Dishwashers


Glassware Baskets - Low Top Frame (for use with U 876 or U 890)\*




- U 534 Glassware Basket**  
67653401D
- Plastic basket
  - For 16 glasses, 4½" diameter
  - Compartments: 4½" x 4½"
  - Basket: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D



- U 535 Glassware Basket**  
67653501D
- Plastic basket
  - For 25 glasses, 3⅝" diameter
  - Compartments: 3⅝" x 3⅝"
  - Basket: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D

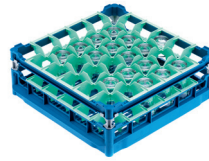


- U 536 Glassware Basket**  
67653601D
- Plastic basket
  - For 36 glasses, 2⅞" diameter
  - Compartments: 2⅞" x 2⅞"
  - Baskets: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D

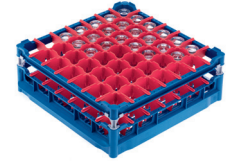


- U 537 Glassware Basket**  
67653701D
- Plastic basket
  - For 49 glasses, 2½" diameter
  - Compartments: 2½" x 2½"
  - Baskets: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D


Glassware Baskets - High Top Frame (for use with U 876)\*

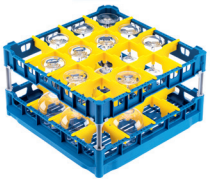


- U 544 Glassware Basket**  
67654401D
- Plastic basket
  - For 16 glasses with 4½" diameter
  - Compartments: 4½" x 4½"
  - Basket: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D

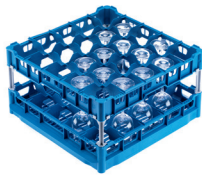

- U 545 Glassware Basket**  
67654501D
- Plastic basket
  - For 25 glasses, 3⅝" diameter
  - Compartments: 3⅝" x 3⅝"
  - Basket: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D

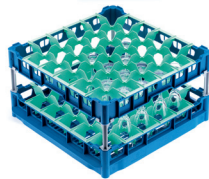

- U 546 Glassware Basket**  
67654601D
- Plastic basket
  - For 36 glasses, 2⅞" diameter
  - Compartments: 2⅞" x 2⅞"
  - Baskets: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D

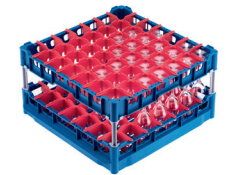

- U 547 Glassware Basket**  
67654701D
- Plastic basket
  - For 49 glasses, 2½" diameter
  - Compartments: 2½" x 2½"
  - Baskets: 4¼" or 6¾" or 9¼" H x 19¾" W (20⅞" incl. side runners) x 19¼" D

Universal Baskets (for use with O 885, U 876 or U 890)\*



- U 502 Plate Basket**  
67650201D
- Plastic basket
  - 6 or 9 rows
  - Rests spaced 2¼" or 1⅞"
  - 4⅞" H x 19¾" W x 19¼" D



- U 503 Cutlery Basket**  
67650301D
- Plastic basket
  - Suitable for ice-cream bowls
  - Narrow-mesh base
  - 4⅞" H x 19¾" W x 19¼" D



- U 508 Cup Basket**  
67650801D
- Plastic basket
  - 4 rows for cups sized 4" diameter
  - 4⅞" H x 19¾" W x 19¼" D



- U 520 Glassware Basket**  
67652001D
- Plastic basket
  - 36 compartments sized 2⅞" x 2⅞"
  - 4⅞" H x 19¾" W x 19¼" D

Lower Baskets (for use with U 876 or U 890)\*



- U 313/2 Basket for Trays**  
67631305D
- Plastic basket with pre-fitted skids
  - Insert for 10 trays sized 20½" x 11½"
  - Rests spaced 1" apart
  - Rest height 16⅞"
  - 7⅞" H x 20⅞" W x 19⅞" D



- U 505 Multi-Purpose Basket**  
67650501D
- Plastic basket
  - Interior height 6⅞"
  - Coarse-mesh base
  - 7¼" H x 19¾" W x 19¼" D

\*See Basket Combinations Chart for Further Details

### Accessories for PG 8056 & PG 8061 Dishwashers

#### Accessories




- ABL 50 Spacer Trim**  
67211401D
- Stainless steel
  - Allows height adjustment to 28 3/8" cabinet size
  - Height 2"



- UO 30-60/80 Base**  
67376103D
- Stainless steel
  - Open base
  - Can be bolted to machine
  - 11 1/8" H x 23 3/8" W x 23 3/8" D



- UG 30-60/80 Base**  
67376104D
- Stainless steel
  - Closed base
  - Can be bolted to machine
  - 11 1/8" H x 23 3/8" W x 23 3/8" D

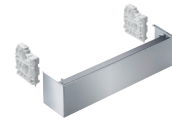

- Base Conversion Kit**  
67211605D
- Stainless steel
  - Non-continuous fascia with 2 brackets
  - 5 1/8" H x 23 3/8" W x 5" D



- 1-80 Conversion Kit**  
67211603D
- Stainless steel
  - Base fascia with 2 brackets, lid and rear panel to convert standard unit into freestanding unit




- DOS G80/1 Dosing Module**  
67747025USA
- Dispenser module for liquid detergent
  - 2 AC 208V 60Hz / 2 AC 240V 60Hz
  - 7 1/8" siphon for 5 liter canister
  - Container empty indicator


#### Basket Combinations

	Plate Basket	Cutlery Basket	Multi-Purpose Basket	Cup Basket	Tray Basket	Glassware Baskets			Max. Vertical Clearance of Dishware
	U 502	U 503	U 505	U 508	U 313/2	U 520	U 534 - U 537	U 544 - U 547	
Upper Basket Carrier O 885	X	X		X		X			5 1/8"
Lower Basket Carrier U 876	X	X	X	X	X	X	X	X	9 1/8"
Lower Basket U 890	X	X	X	X	X	X	X		7 1/8"

#### Glassware Baskets Height Configurations

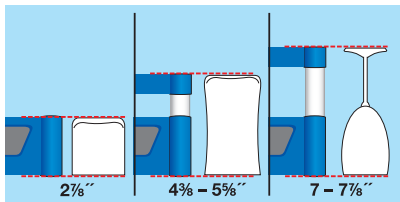

- Glass heights for all basket sets with low top frame:
- Max. 2 7/8" without extenders and without top frame
  - 4 3/8" - 5 5/8" with short extenders
  - 7" - 7 7/8" with long extenders

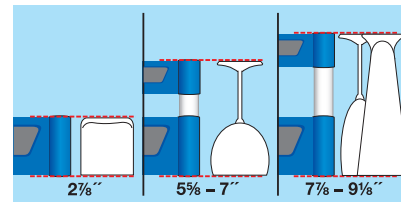

- Glass heights for all basket sets with high top frame:
- Max. 2 7/8" without extenders and without top frame
  - 5 5/8" - 7" with short extenders
  - 7 1/8" - 9 1/8" with long extenders