24" Pocket Handle Dishwasher

500 Series - White SHP65CM2N





SHP65CM2N White

Also available in:

Stainless Steel SHP65CM5N Black SHP65CM6N

The AutoAir® drying option automatically releases the door at the end of the cycle to let moisture escape and fresh air in for drier dishes.

Features & Benefits

So quiet at 44 dBA, InfoLight® shines on the floor so you know the dishwasher is running.

The Flexible 3rd Rack with fold down sides adds 30% more* loading area, perfect for utensils and ramekins.

Enhance your cleaning experience with Wi-Fi enabled Home Connect*. Access additional wash cycles and options or choose the right one for your needs using Smart Cycle.

General Properties	
Number of wash cycles	5 + 3 additional in Home Connect®
Number of options	3 + 2 additional in Home Connect®
dBA	44
Wash system	PrecisionWash®
Drying system	AutoAir®
Third rack	Flexible 3rd Rack
Rack adjustability	Rackmatic®
Tub material	Stainless Steel
Control type	Touch Controls
Concealed water heating element	Yes
Leak protection system	24/7 AquaStop®
Home Connect® (WiFi enabled)	Yes
NSF®-certified** sanitize option	Yes
Water softener	No
Five-level wash	Yes
Child Lock button suspension	No
Anti-Fingerprint Finish	N/A
Special features	InfoLight®, AutoAir Option
Efficiency	
Water usage per cycle	3.2
ENERGY STAR® qualified	Yes
Total annual energy consumption	240 kWh
Capacity	
Number of place settings	16

Q	Home Connect
---	--------------





Technical Details		
Watts	1440 W	
Current	12 Amps	
Volts	120 V	
Frequency	60 Hz	
Power cord full length	67"	
Power cord install length from edge of unit when facing the door	Left – 45" Right – 56"	
Minimum water pressure	14 lb/sin	
Length outlet hose	78 3/4"	
Dimensions & Weight		
Overall appliance dimensions (HxWxD)	33 7/8" x 23 9/16" x 23 3/4"	
Required cutout size (HxWxD)	33 7/8" x 24" x 24"	
Adjustable feet	Yes	
Net weight	85 lbs	
Accessories-Optional		
Junction Box	SMZPCJB1UC	
Junction Box + Supply Hose Kit	SMZ3IN1UC	
Bosch Dishwasher Water Supply Hose	SMZSH1ABUC	
Drain Hose Extension Kit	SGZ1010UC	
Silverware Basket	SMZ4000UC	
Dishwasher Accessory Kit	SMZ5000	
Anti-Tarnish Silverware Cassette	SMZ5002UC	
Edge Protector + Power Cord Clip Install Kit	SMZEPCC1UC	



Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

^{*}Compared to a Bosch dishwasher with 2 racks.


^{**}Certification to NSF/ANSI Standard 184 for residential dishwashers.


24" Pocket Handle Dishwasher


500 Series - White SHP65CM2N





Installation Details

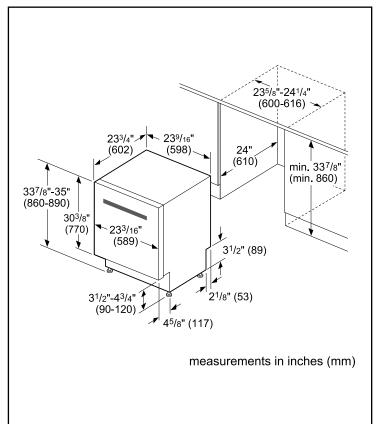

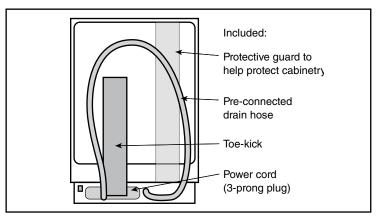

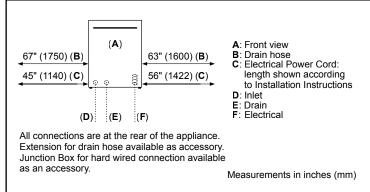

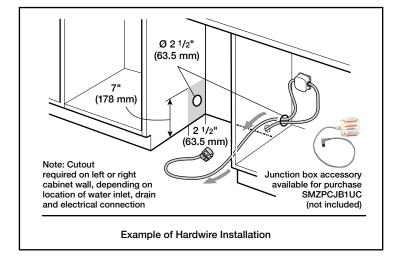

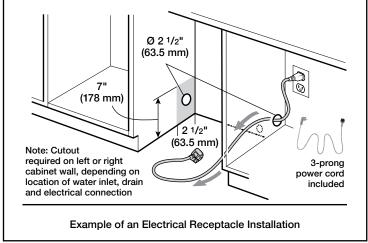

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


24" Pocket Handle Dishwasher

500 Series - White SHP65CM2N



Installation Details

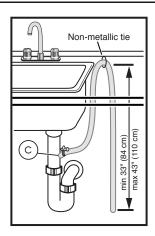

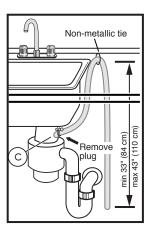

Note: Plumbing installations will vary - refer to local codes. Drain hose included is 79" (201 cm) and can be extended to a maximum of 155 3/4" (396 cm).

Always use the approved drain hose extension kit (SGZ1010UC).

Ensure a portion of the drain hose is raised between min. 33" (84 cm) and max. 43" (110 cm) above the cabinet floor.

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.