




## **30" GAS FREESTANDING SELF CLEAN RANGE**

### **MODELS:**

WFG525S0HS0 (Stainless)


# COOKTOP PARTS

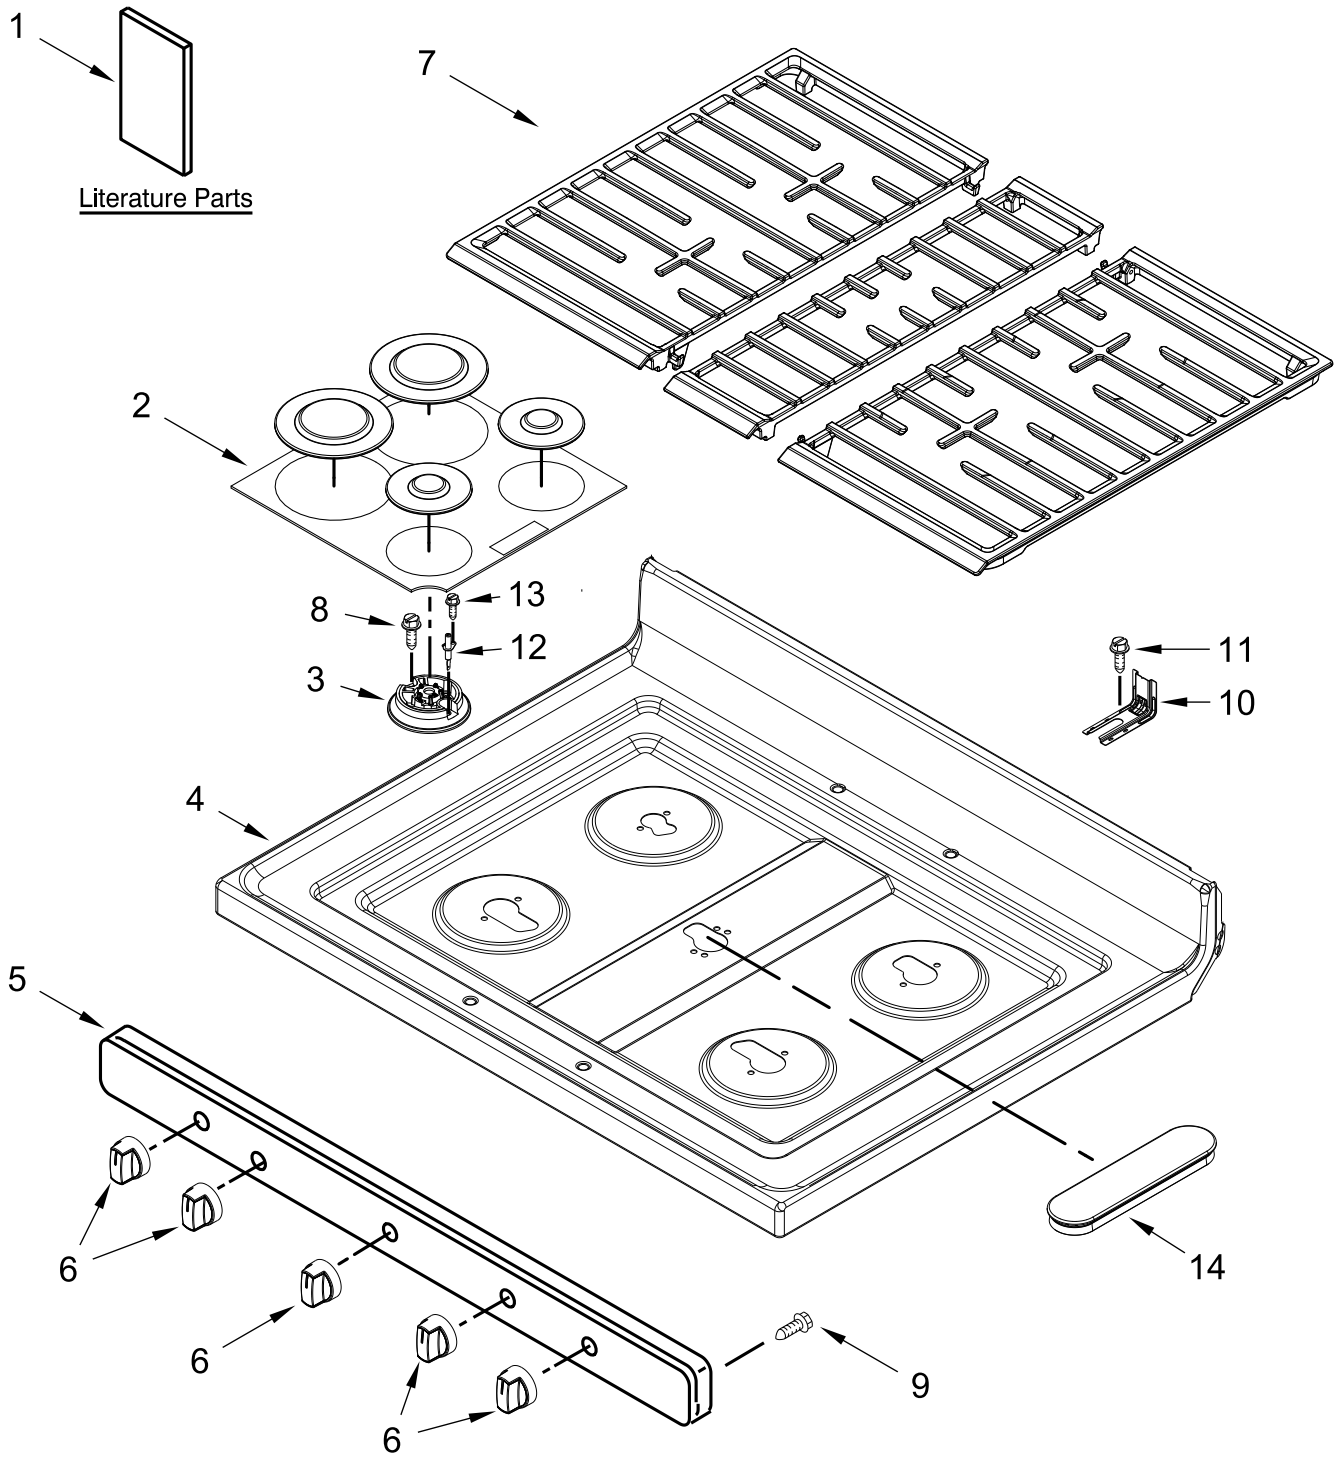

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	14	W10298664	Spreader, Flame
	W11122558	Instructions, Installation		W10884167	Black Panel, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11102912	Guide, Use and Care	5		Stainless Knob, Control	W10842520		Harness, Main
	W11102748	Sheet, Tech (English)	6		Stainless Kit, Grate	W10753750		Harness, Bake/Broil
	W11032799	Diagram, Wiring	7		Black Kit, Burner Cap	W10809927		Harness, Cooktop
2		Kit, Burner Cap		W11090908	Black Kit, Burner Cap	3196520		Clip, Wire
	W10850506	Black (Set of 4)	8	3400701	Screw	W10334923		Clip, Gas Wiring
3	W10515455	Assembly, Burner (17.5K)	9	3196557	Screw	313438		Clip, Harness
		(Left Front & Right Front)	10	W10306542	Bracket, Anti-Tip			
	W10515454	Assembly, Burner (9.5K)	11	7101P485-60	Screw, Anti-Tip Kit			
		(Left Rear & Center)	12	W10515459	Electrode			
	W10515453	Assembly, Burner (6K)	13	8273062	Screw			
		(Right Rear)						


# CONTROL PANEL PARTS

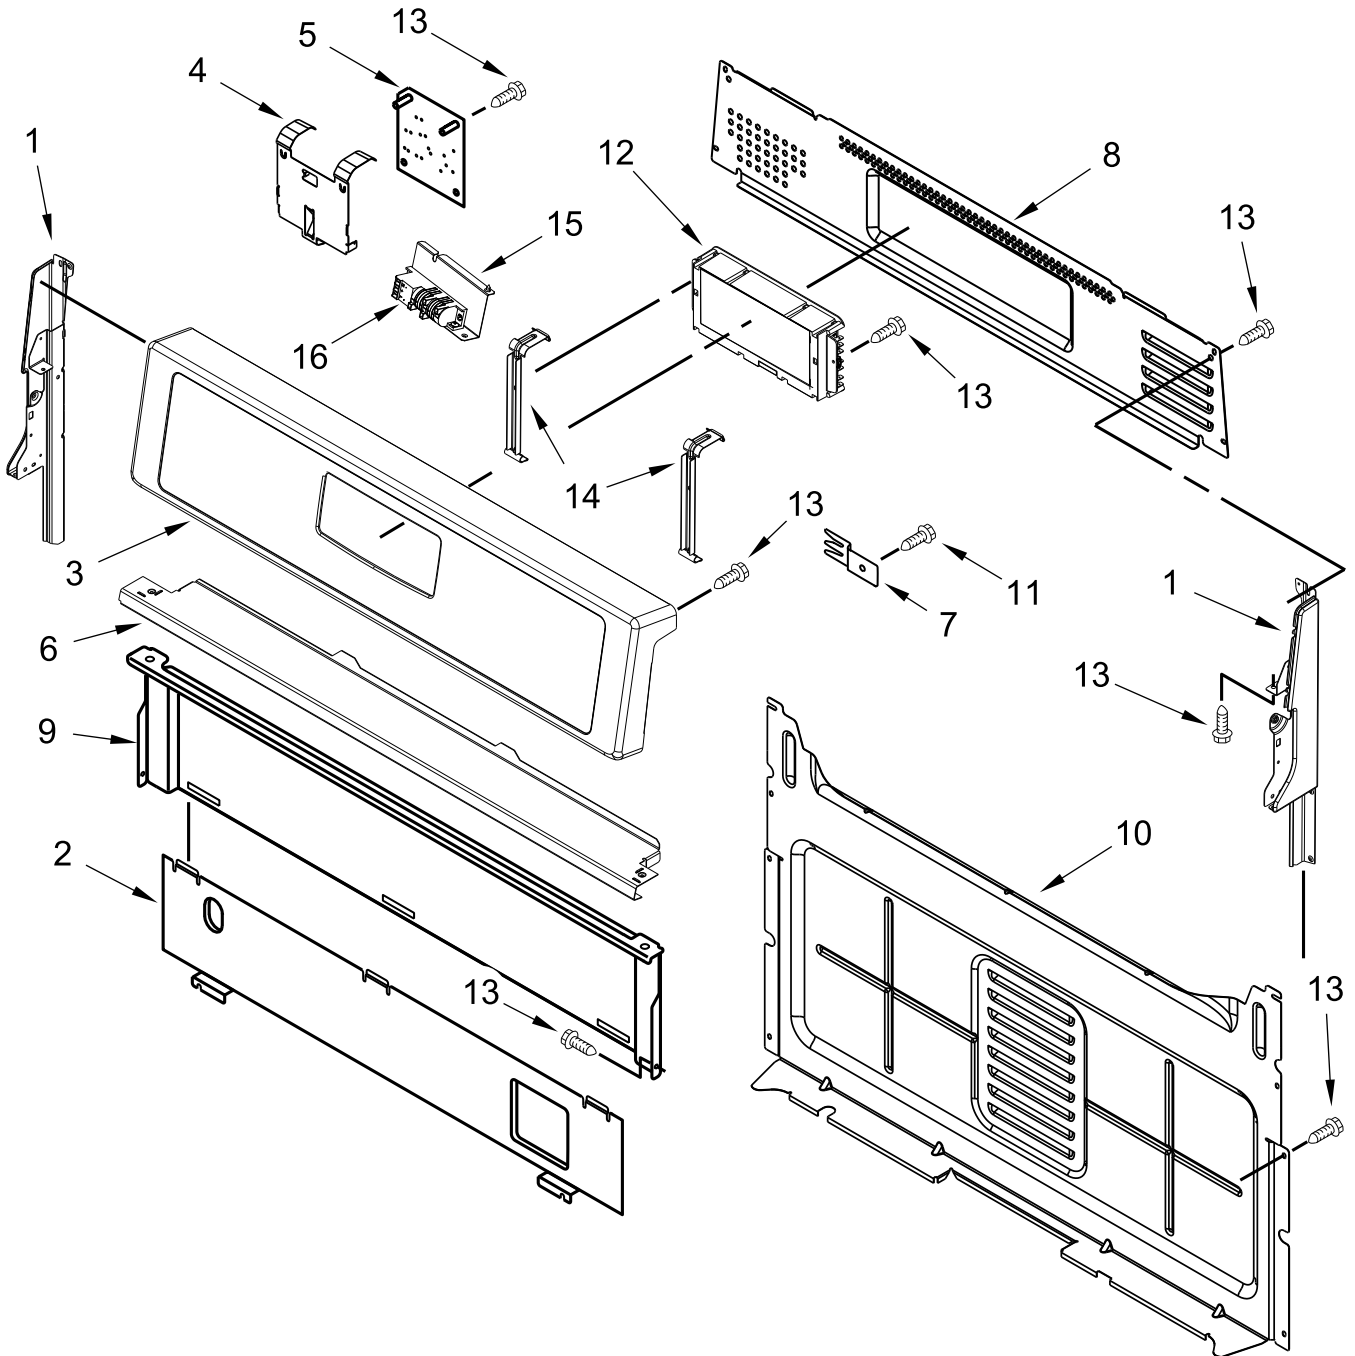

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10920631	Module, Spark DSI	11	3196169	Screw
	W11130372	Black (Left)	6	W10516123	Bracket, Console Mounting	12		Control, Range LCC190
	W11130379	Black (Right)					W11204525	Black
2	8053505	Shield, Heat	7	8523412	Bracket, Rear Cooktop	13	3196178	Screw
3		Panel, Control	8	W10198745	Cover, Upper	14	W10695491	Bracket, Control
	W10835288	Stainless	9	W10192841	Shield, Heat	15	W10797001	Bracket, Ignitor
4	W10762981	Bracket, Mounting	10	W10184370	Cover, Back	16	W10475149	Module, Spark (5+0)


# MANIFOLD PARTS

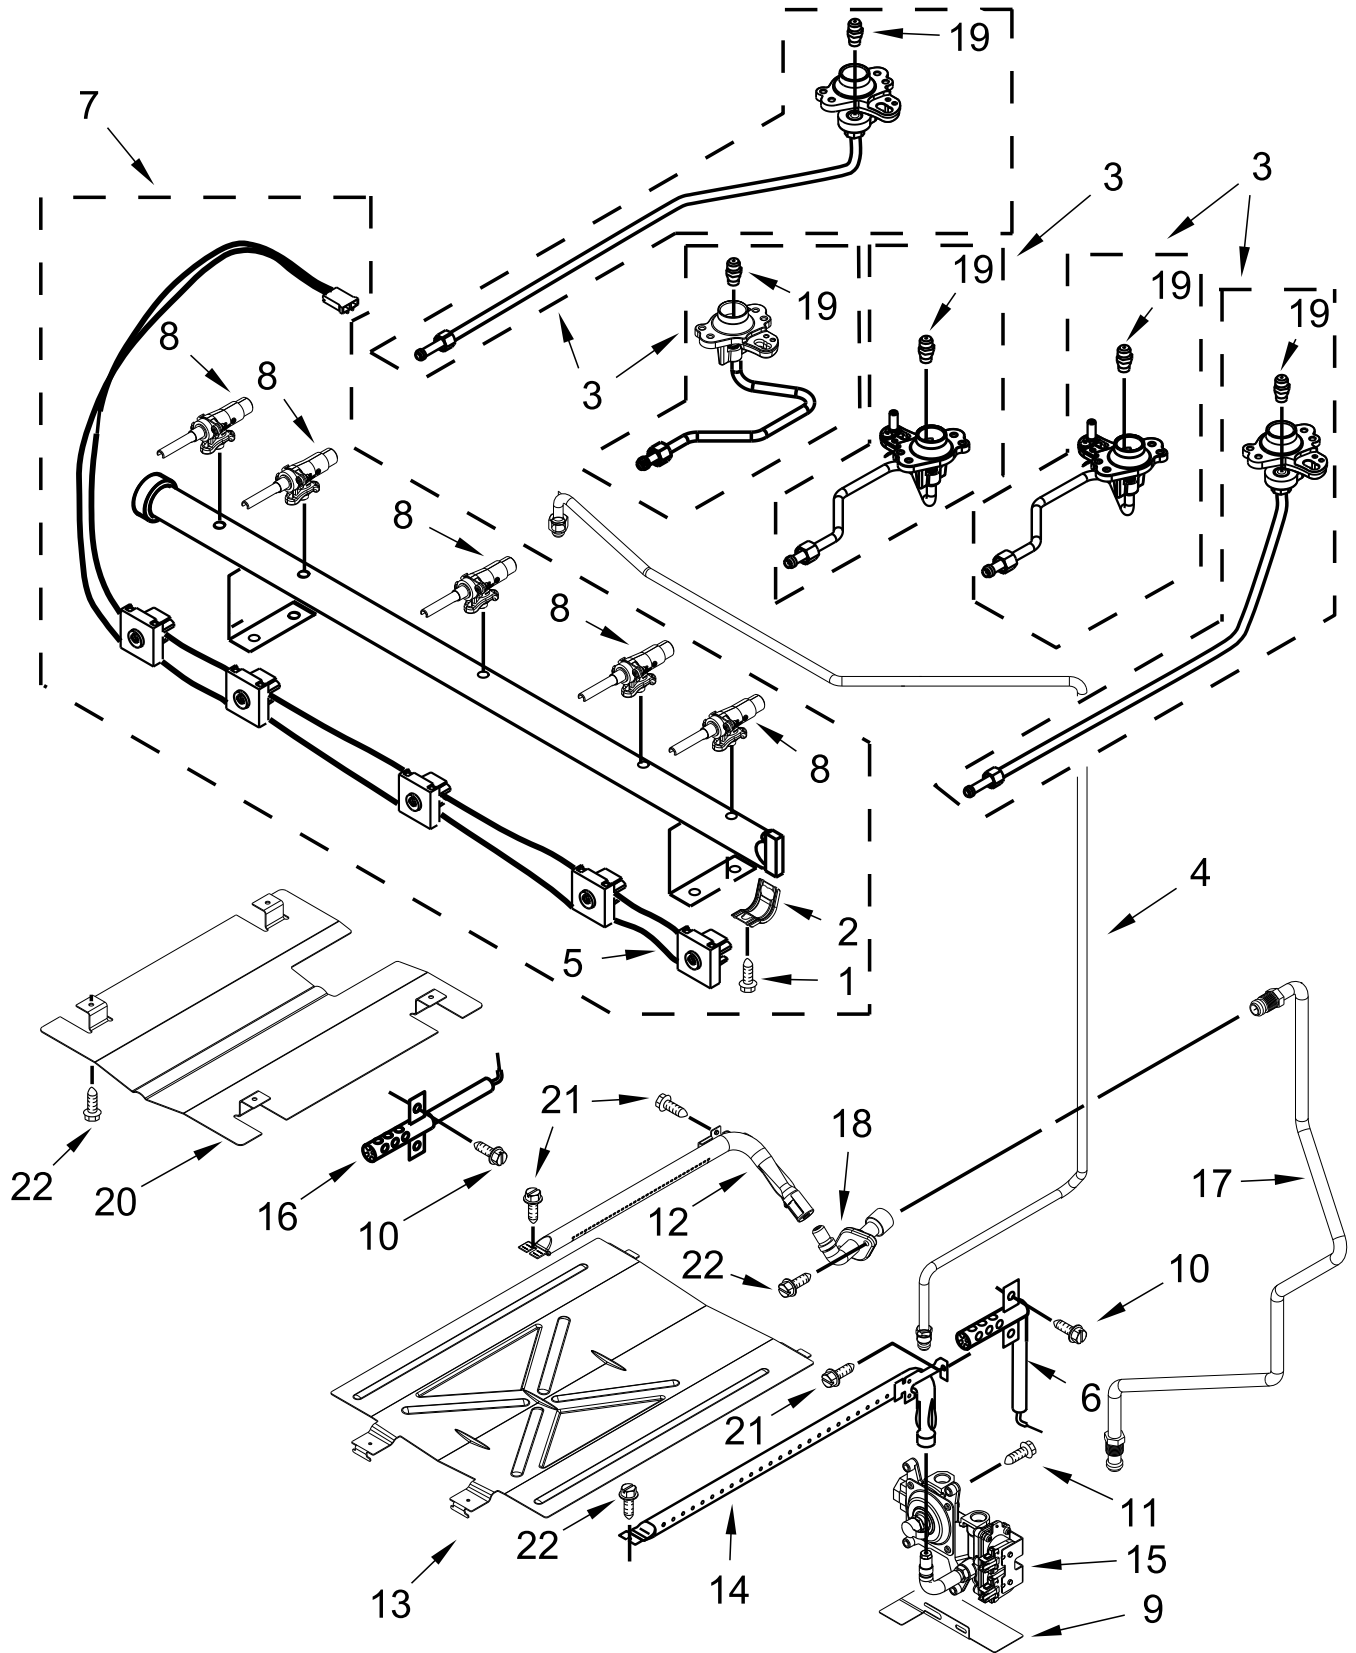

# MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	6	9758079	Electrode, Bake	19	W10347414	Orifice (15K) (Left Front & Right Front)
2	W10295996	Bracket, Saddle Valve	7	W10859728	Assembly, Manifold		W10170508	Orifice, Natural (9.5K) (Left Rear)
3	W10473936	Assembly, Orifice Holder (15K) (Left Front)	8	W10279615	Valve, Gas (Left Front & Right Front)		W10170506	Orifice, Natural (5K) (Right Rear)
	W10473932	Assembly, Orifice Holder (9.5K) (Left Rear)		W10279614	Valve, Gas (Left Rear & Center)		W10657947	Orifice (8K) (Center)
	W10474166	Assembly, Orifice Holder (15K) (Right Front)		W10247744	Valve, Gas (Right Rear)	20	W10137062	Spreader, Flame (Broiler)
	W10474162	Assembly, Orifice Holder (5K) (Right Rear)	9	W10224921	Bracket, Aegis	21	3196265	Screw
	W10836764	Assembly, Orifice Holder (8K) (Center)	10	3196385	Screw	22	W10362924	Screw
4	W10215439	Tubing (Manifold to Regulator)	11	3400016	Screw			FOLLOWING PARTS NOT ILLUSTRATED
5	W10811691	Harness, Igniter (Includes Switches)	12	8054078	Burner, Broiler		W11087531	Kit, LP 5 Orifice Conversion
			13	W10184491	Spreader, Flame (Oven)		W10566537	Kit, LP Bake and Broil
			14	9758078	Burner, Bake		W10400495	Orifice, LP Bake
			15	W10602001	Regulator			
			16	W10333842	Electrode, Broil			
			17	W10420040	Tube, Broiler Supply			
			18	W10592836	Fitting, Broiler			


# CHASSIS PARTS

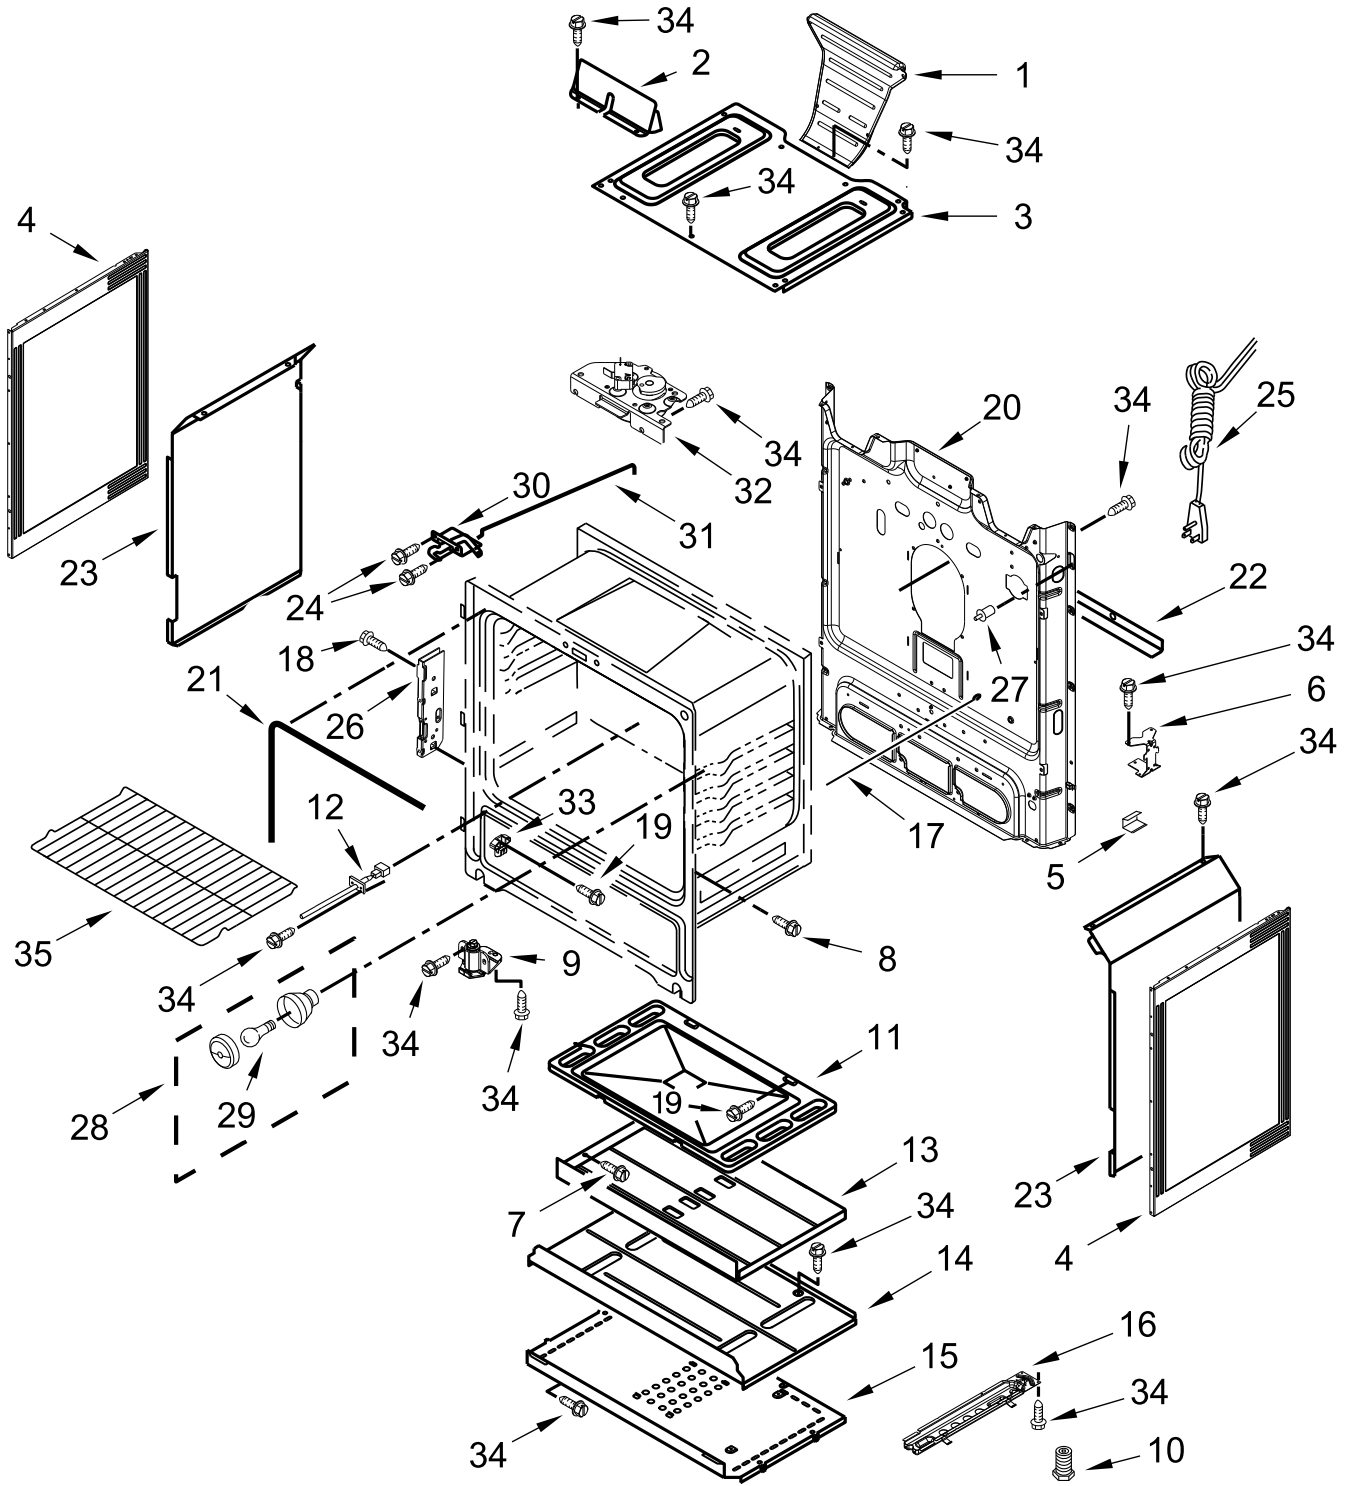

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10153186	Box, Flue	16	W10390008	Assembly, Base Rail (Left)	27	W10627802	Switch, Door
2	8272747	Shield, Flue				28	W11175594	Assembly, Light
3	8273036	Box-Burner, Gas Sealed		W10390007	Assembly, Base Rail (Right)	29	W10571723	Bulb, Halogen 40 Watts
4		Panel, Side	17	9757239	Rod, Door Switch	30	9761013	Assembly, Door Latch (Front)
	W10162245	Black	18	W10031780	Screw			
5	W10137382	Clip, Panel	19	3400080	Screw	31	W10078370	Rod, Push Latch
6	8523249	Bracket, Manifold	20		Back, Main (Not Serviced)	32	W10107820	Assembly, Door Latch (Rear)
7	W10362924	Screw	21	W10658354	Seal, Door	33	W10674705	Glide, Drawer Front
8	3196560	Screw	22	W10435470	Brace, Main Back	34	3196178	Screw
9	W10341186	Assembly, Front Foot	23	9761449	Retainer, Insulation (Left)	35	W10268578	Rack, Oven
10	W10058460	Foot, Leveling						FOLLOWING PARTS NOT ILLUSTRATED
11	3195097	Bottom, Oven		9761448	Retainer, Insulation (Right)		8524099	Insulation, Wrap
12	W10586204	Sensor					W10180437	Insulation, Back
13	8053967	Baffle, Burner Oven	24	3196560	Screw			
14	8053969	Shield, Heat	25	W10624590	Cord, Power			
15	8053968	Shield, Lower	26	W10289077	Receiver, Hinge			

# DOOR PARTS

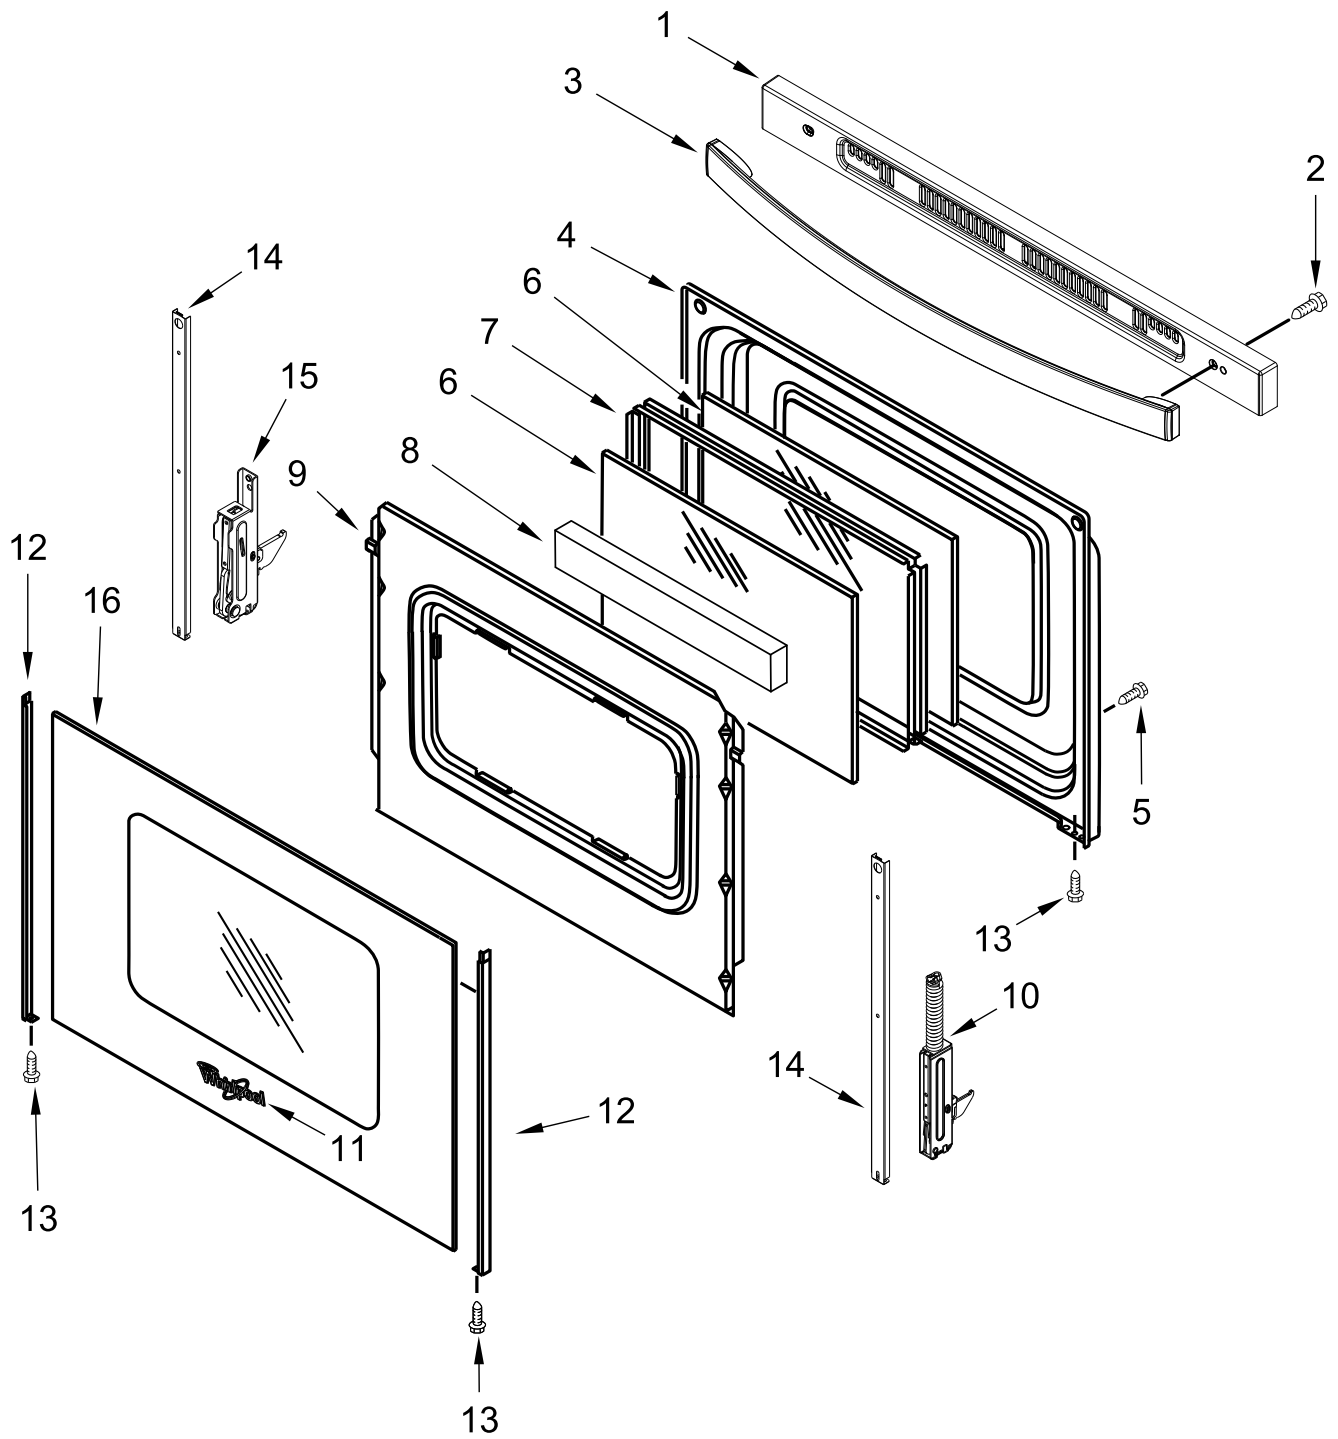


# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10480830	Screw
3		Handle, Door (Includes Standoff)
	W11039070	Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	W11044424	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10316950	Frame, Glass
8	W10278991	Insulation, Door Strip
9	9761357	Retainer, Insulation
10	W10299224	Hinge, Active (With Spring)
11	W10884775	Nameplate
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10327235	Screw
14	W10544179	Strap, Door
15	W10299227	Hinge, Door (Passive)
16		Glass Assembly, Outer Door
	W11169624	Stainless

# DRAWER PARTS

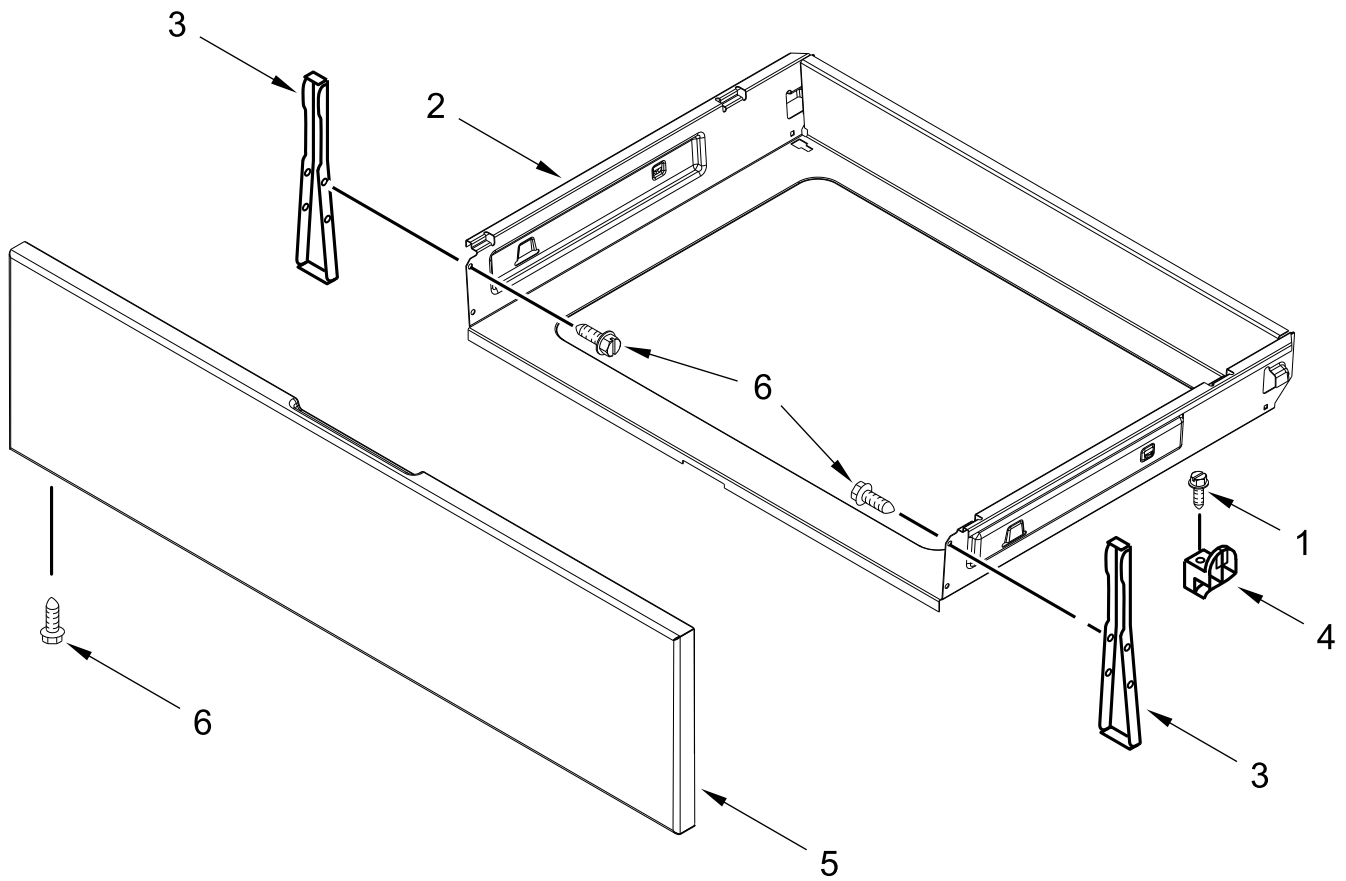

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196178	Screw
2	W10688022	Drawer, Storage
3	W10462909	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11190207	Stainless
6	3196169	Screw

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	4396927	Rack, Oven (Split)