




**30" GAS FREESTANDING SELF CLEAN RANGE
Finger Print Resistant**

MODELS:

WFG550S0HZ1 (Stainless)

WFG550S0HV1 (Black Stainless)


COOKTOP PARTS

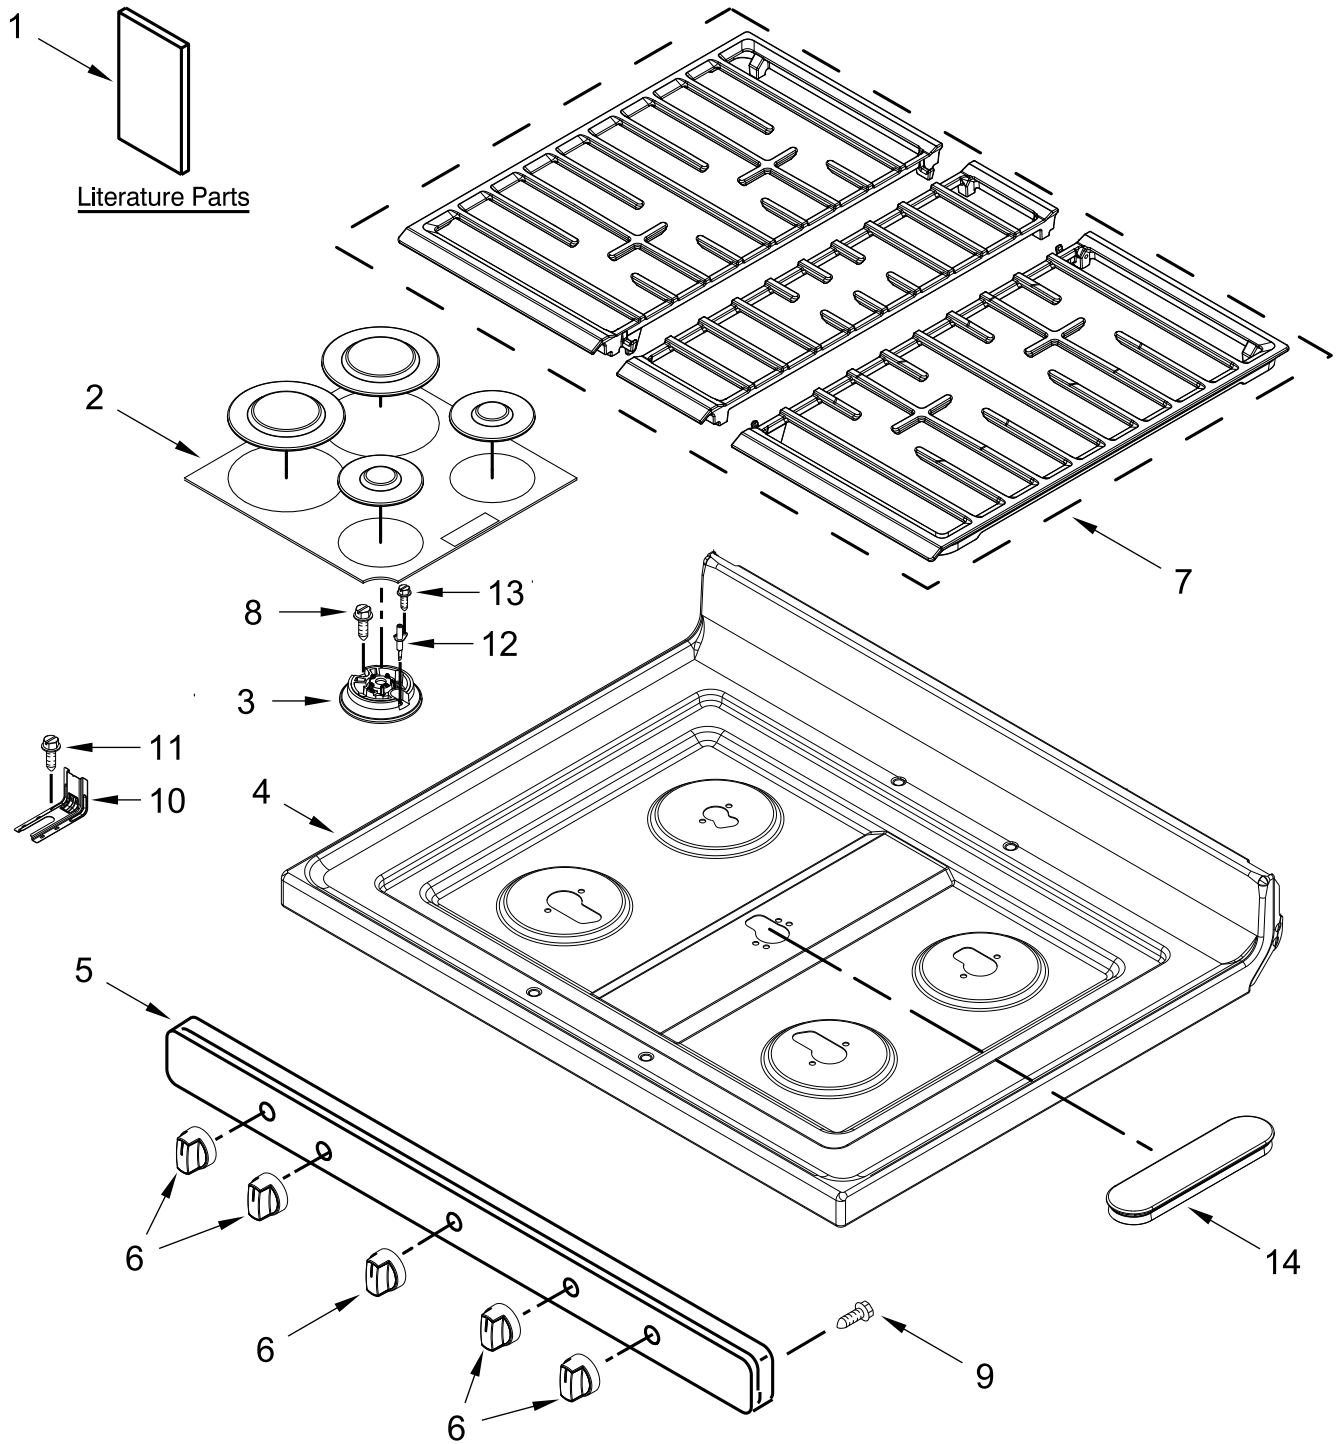

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Panel, Manifold	14	W10298664	Spreader, Flame
	W11122558	Instructions, Installation		W11044911	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
	W11121658	Guide, Use and Care		W11044910	Black Stainless		W10849001	Harness, Main
	W11102748	Sheet, Tech (English)	6		Knob, Control		W10753750	Harness, Bake/Broil
	W11032799	Diagram, Wiring		W11023139	Stainless		W10809927	Harness, Cooktop
2		Kit, Burner Cap		W11032553	Black Stainless		3196520	Clip, Wire
	W10850506	Black (Set of 4)	7		Kit, Grate		W10334923	Clip, Gas Wiring
3	W10515455	Assembly, Burner (17.5K)		W11037721	Black		313438	Clip, Harness
		(Left Front & Right Front)	8	3400701	Screw		3196896	Clip, Wire
	W10515454	Assembly, Burner (9.5K)	9	3196557	Screw			
		(Left Rear & Center)	10	W10306542	Bracket, Anti-Tip			
	W10515453	Assembly, Burner (6K)	11	7101P485-60	Screw, Anti-Tip Kit			
		(Right Rear)	12	W11194809	Electrode (Left Front, Left Rear, Center, Right Front)			
4		Cooktop		W10515459	Electrode (Right Rear)			
	W10884167	Black	13	W10673618	Screw			


CONTROL PANEL PARTS

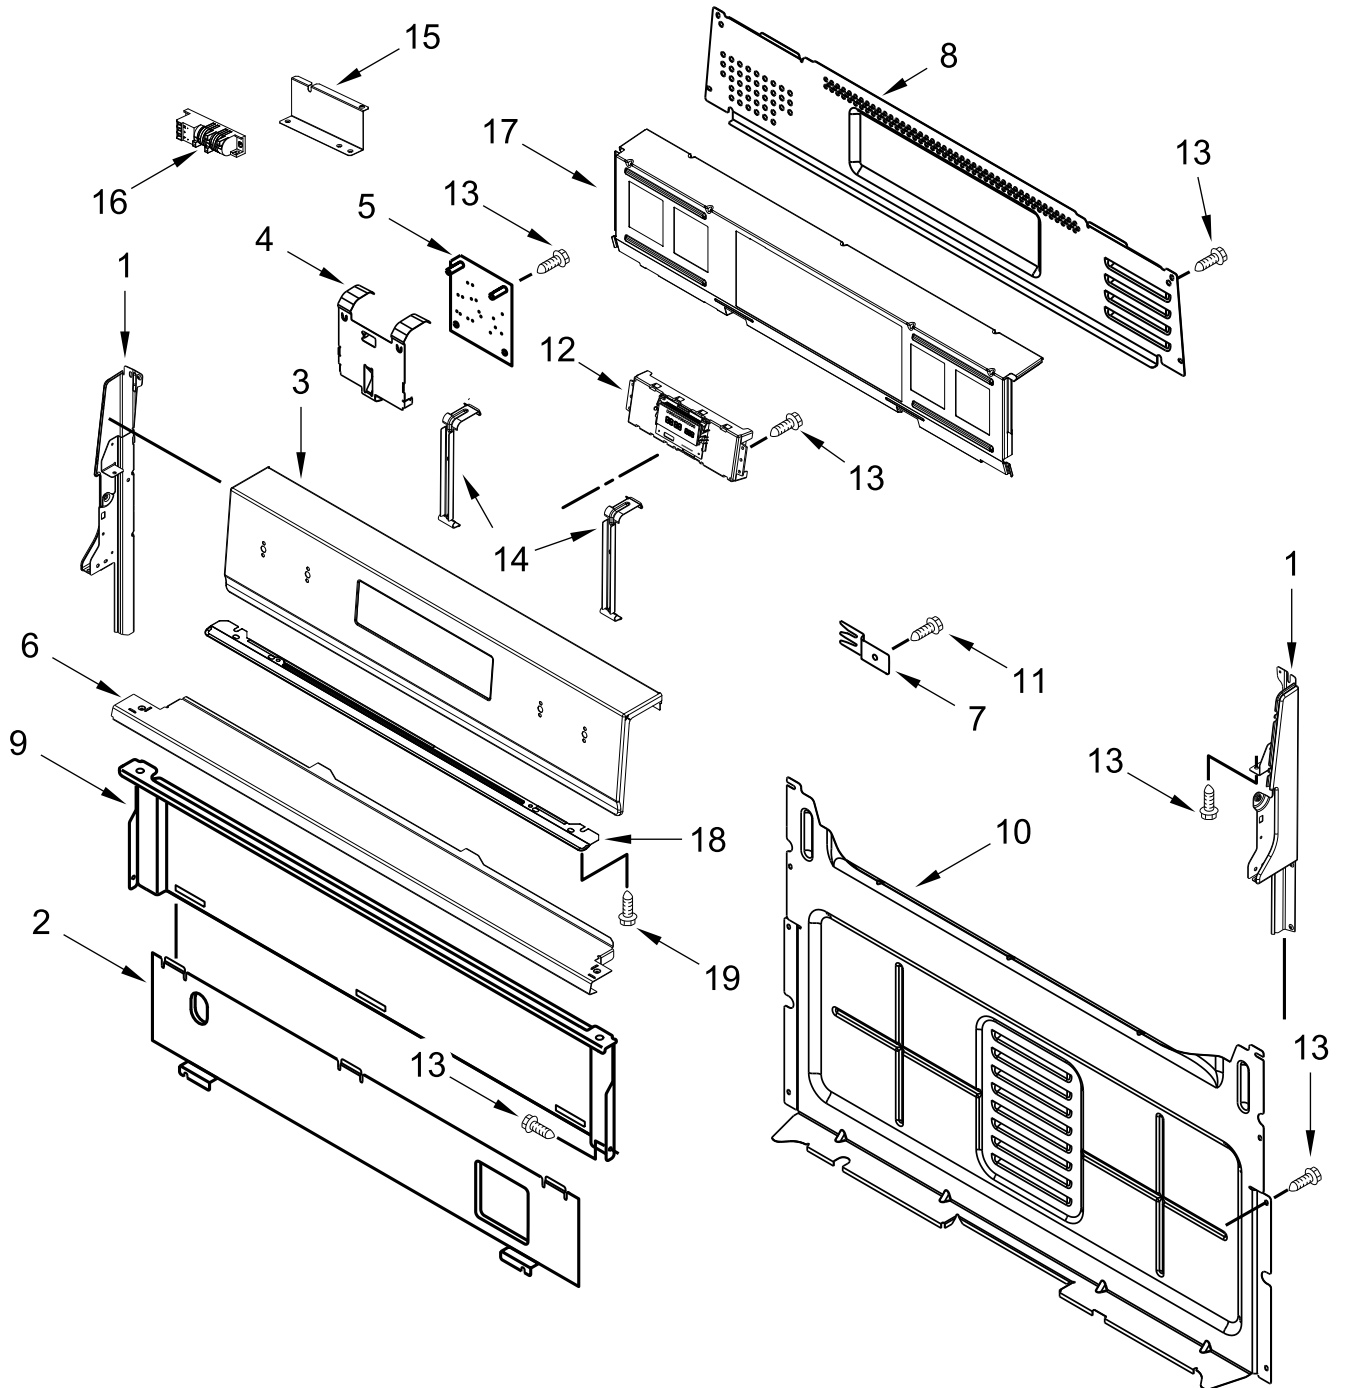

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	7	8523412	Bracket, Rear Cooktop	16	W10475149	Module, Spark (5+0)
	W11213290	Black (Left)	8	W10198745	Cover, Upper	17	W10901802	Panel, Backer
	W11213292	Black (Right)	9	W10192841	Shield, Heat	18		Bracket, Eye Brow
2	8053505	Shield, Heat	10	W10184251	Cover, Back		W11051312	Black
3		Panel, Control	11	3196169	Screw	19	3196165	Screw
	W10869988	Stainless	12		Control, Electronic (LCX)			
	W10881624	Black Stainless		W11204531	Black			
4	W10762981	Bracket, Mounting	13	3196178	Screw			
5	W10920631	Module, Spark DSI	14	W10856361	Bracket, Control			
6	W10516123	Bracket, Console Mounting	15	W10797001	Bracket, Ignitor			


MANIFOLD PARTS

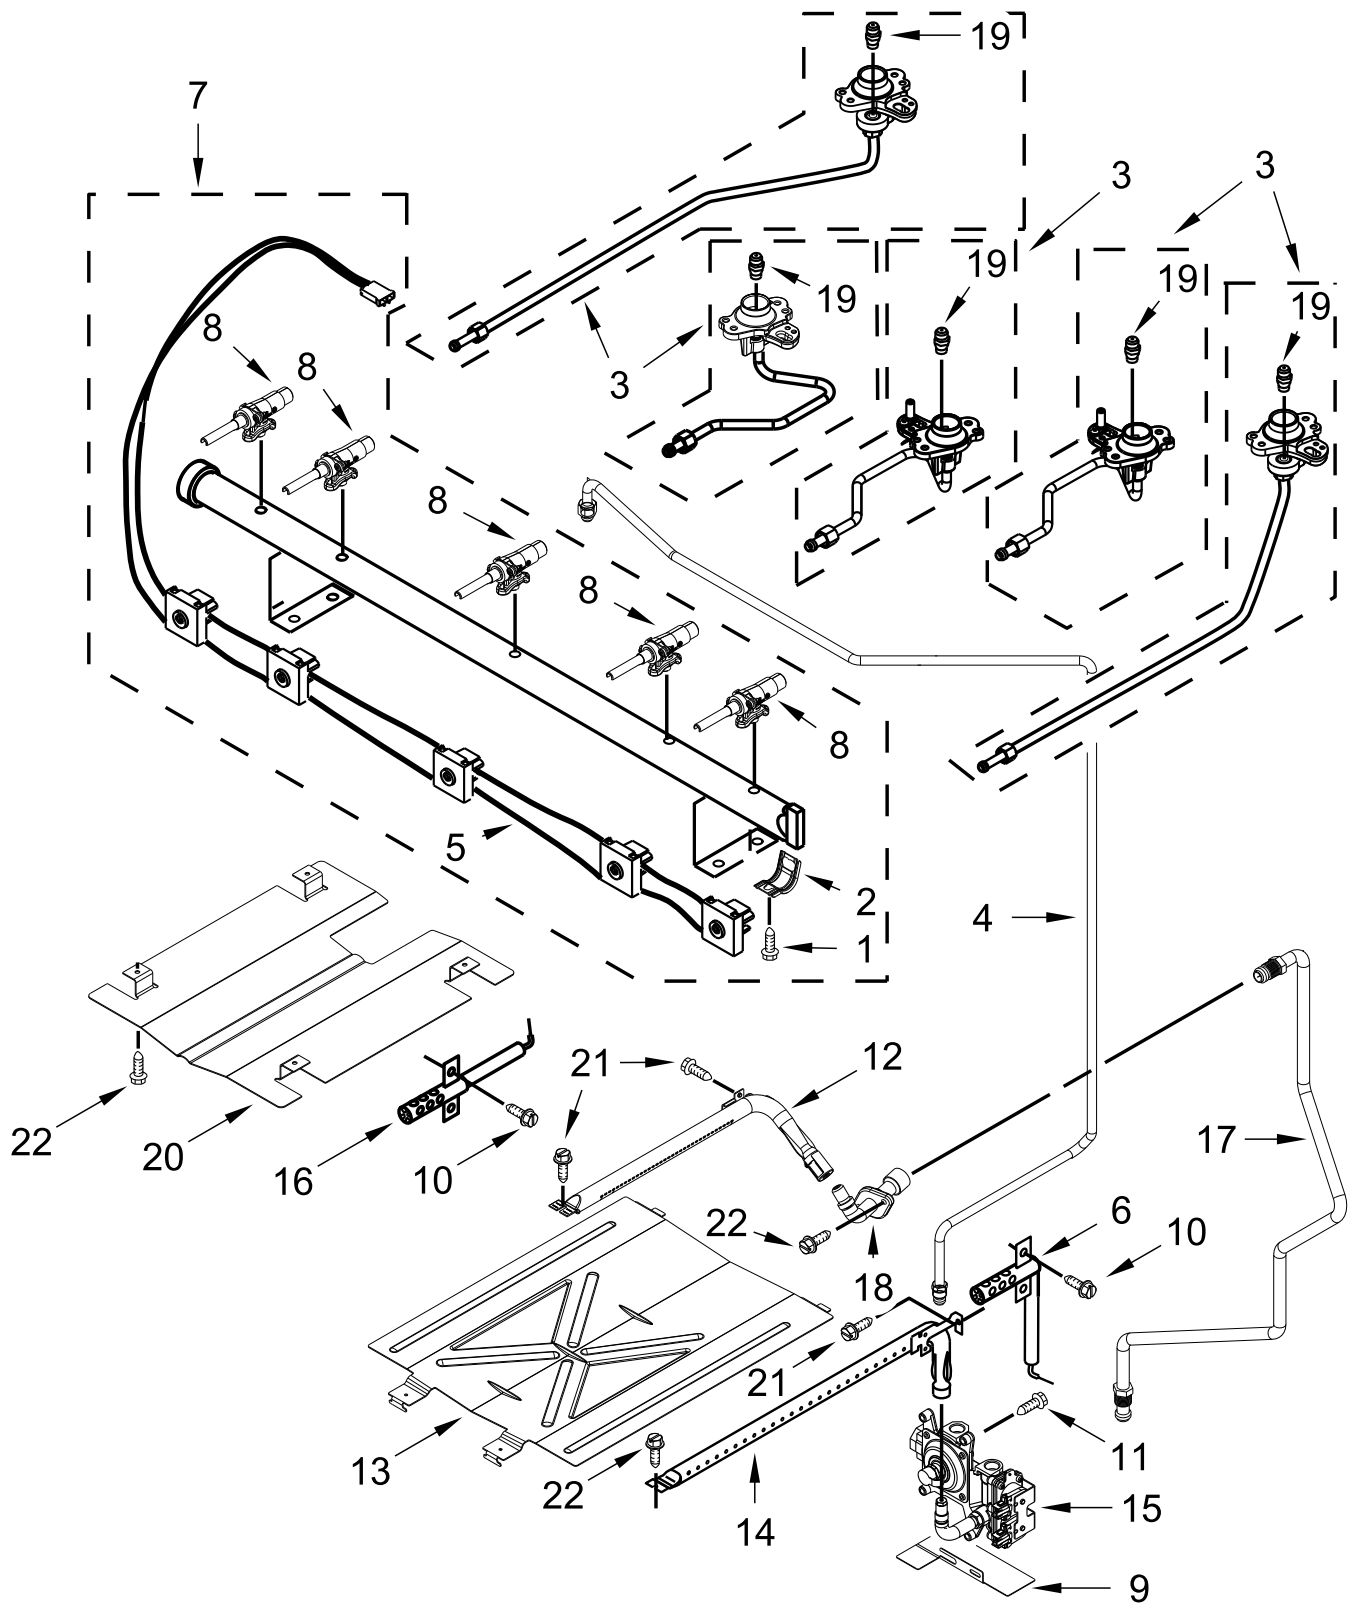

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	7	W10859728	Assembly, Manifold	19	W10347414	Orifice (15K) (Left Front & Right Front)
2	W10295996	Bracket, Saddle Valve	8	W10279615	Valve, Gas (Left Front & Right Front)		W10170508	Orifice, Natural (9.5K) (Left Rear)
3	W10473936	Assembly, Orifice Holder (15K) (Left Front)		W10279614	Valve, Gas (Left Rear)		W10170506	Orifice, Natural (5K) (Right Rear)
	W10473932	Assembly, Orifice Holder (9.5K) (Left Rear)		W10247744	Valve, Gas (Right Rear) (Center)		W10657947	Orifice (8K) (Center)
	W10474166	Assembly, Orifice Holder (15K) (Right Front)		W10850894	Valve, Gas	20	W10137062	Spreader, Flame (Broiler)
	W10474162	Assembly, Orifice Holder (5K) (Right Rear)	9	W10224921	Bracket, Aegis	21	3196265	Screw
	W10836764	Assembly, Orifice Holder (8K) (Center)	10	3196385	Screw	22	W10362924	Screw
4	W10215439	Tubing (Manifold to Regulator)	11	3400016	Screw			FOLLOWING PARTS NOT ILLUSTRATED
5	W10811691	Harness, Igniter (Includes Switches)	12	8054078	Burner, Broiler		W11087531	Kit, LP 5 Orifice Conversion
6	9758079	Electrode, Bake	13	W10184491	Spreader, Flame (Oven)		W10566537	Kit, LP Bake and Broil
			14	9758078	Burner, Bake		W10400495	Orifice, LP Bake
			15	W10602001	Regulator			
			16	W10333842	Electrode, Broil			
			17	W10420040	Tube, Broiler Supply			
			18	W10592836	Fitting, Broiler			


CHASSIS PARTS

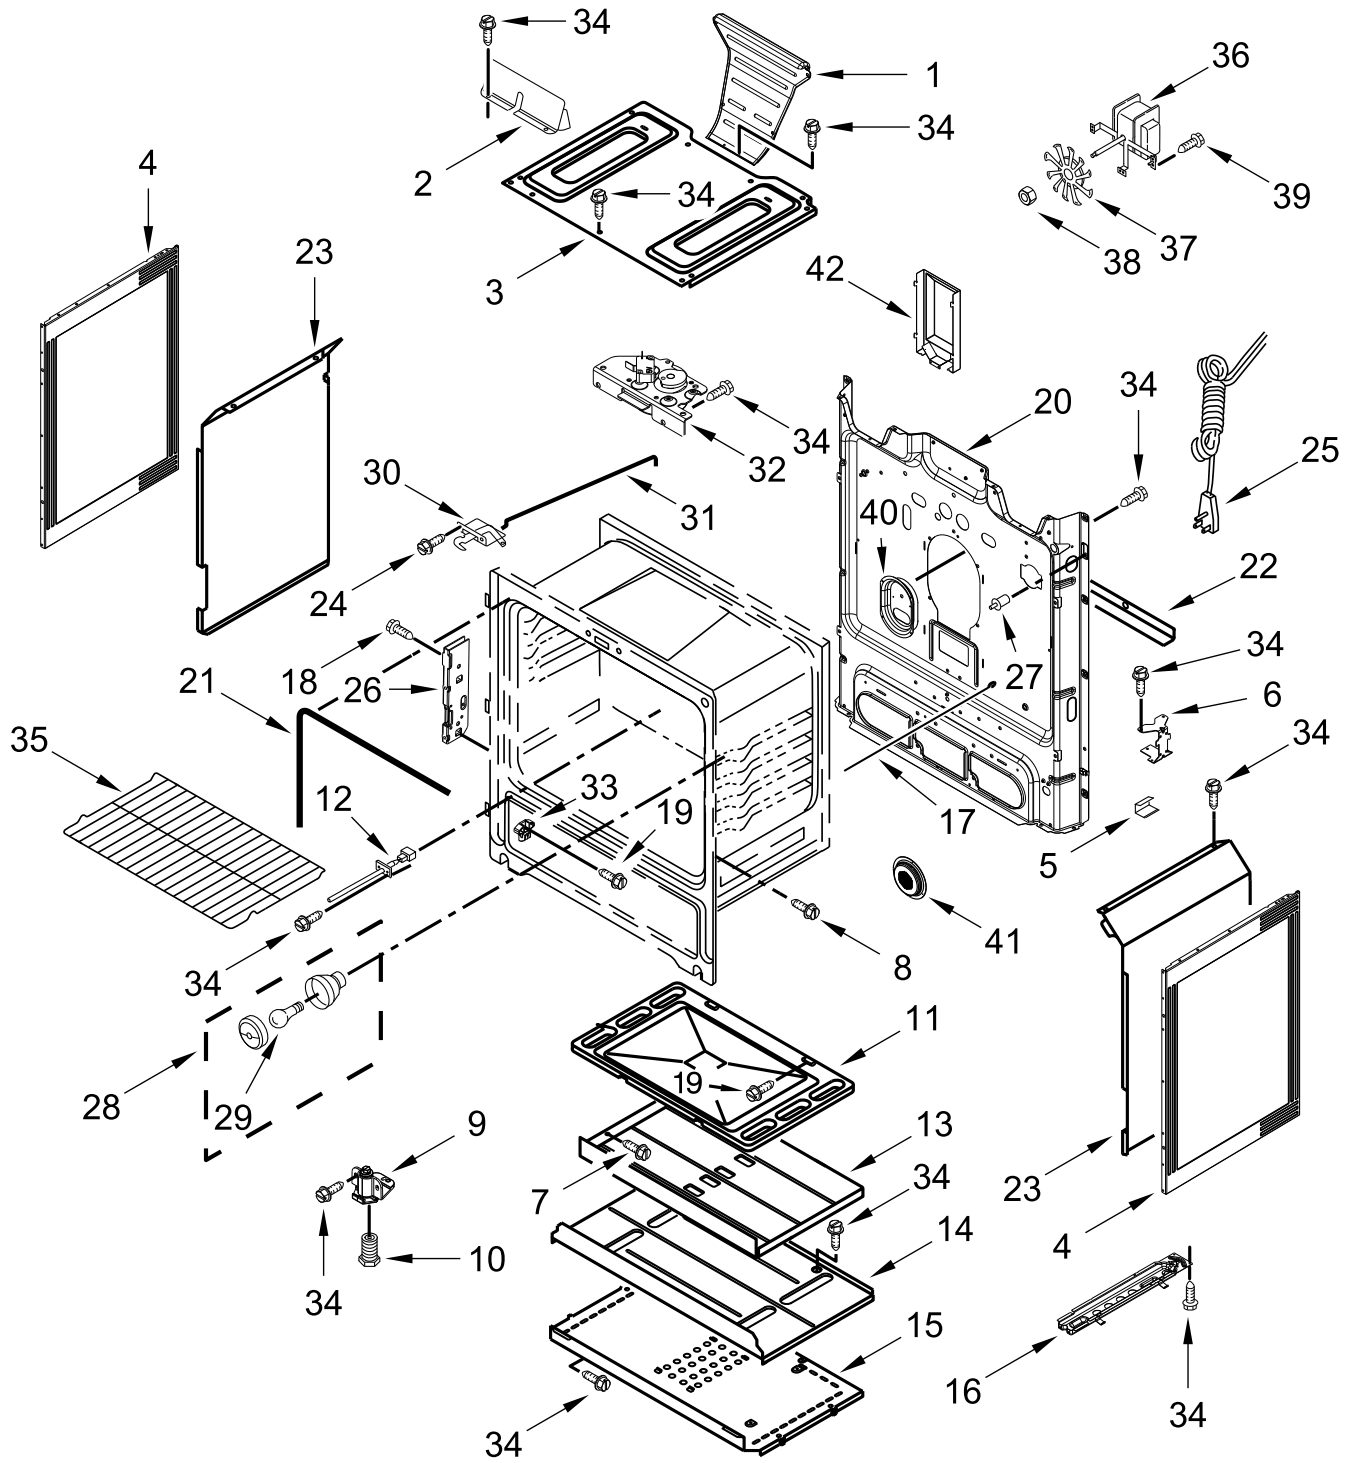

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10153186	Box, Flue	17	9757239	Rod, Door Switch	33	W10674705	Glide, Drawer Front
2	8272747	Shield, Flue	18	W10031780	Screw	34	3196178	Screw
3	8273036	Box-Burner, Gas Sealed	19	3400080	Screw	35	W10268578	Rack, Oven
4		Panel, Side	20	W10416099	Main, Back	36	W10167915	Fan Motor, Conv
	W10162245	Black	21	W10658354	Seal, Door	37	W10116351	Blade, Fan
5	W10137382	Clip, Panel	22	W10435470	Brace, Main Back	38	W10213748	Nut
6	8523249	Bracket, Manifold	23	9761449	Retainer, Insulation (Left)	39	4449809	Screw
7	W10362924	Screw		9761448	Retainer, Insulation (Right)	40	W10134126	Bracket, Fan
8	3196560	Screw	24	3196560	Screw	41	W10134124	Cover, Conv Fan
9	W10341186	Assembly, Front Foot	25	W10624590	Cord, Power	42	W10158780	Cover, Rear Fan
10	W10058460	Foot, Leveling	26	W10289077	Receiver, Hinge			FOLLOWING PARTS NOT ILLUSTRATED
11	3195097	Bottom, Oven	27	W10627802	Switch, Door		8524099	Insulation, Wrap
12	W10586204	Sensor	28	W11175594	Assembly, Light		W10180437	Insulation, Back
13	8053967	Baffle, Burner Oven	29	W10571723	Bulb, Halogen 40 Watts			
14	8053969	Shield, Heat	30	9761013	Assembly, Door Latch (Front)			
15	8053968	Shield, Lower	31	W10078370	Rod, Push Latch			
16	W10390008	Assembly, Base Rail (Left)	32	W10107820	Assembly, Door Latch (Rear)			
	W10390007	Assembly, Base Rail (Right)						

DOOR PARTS

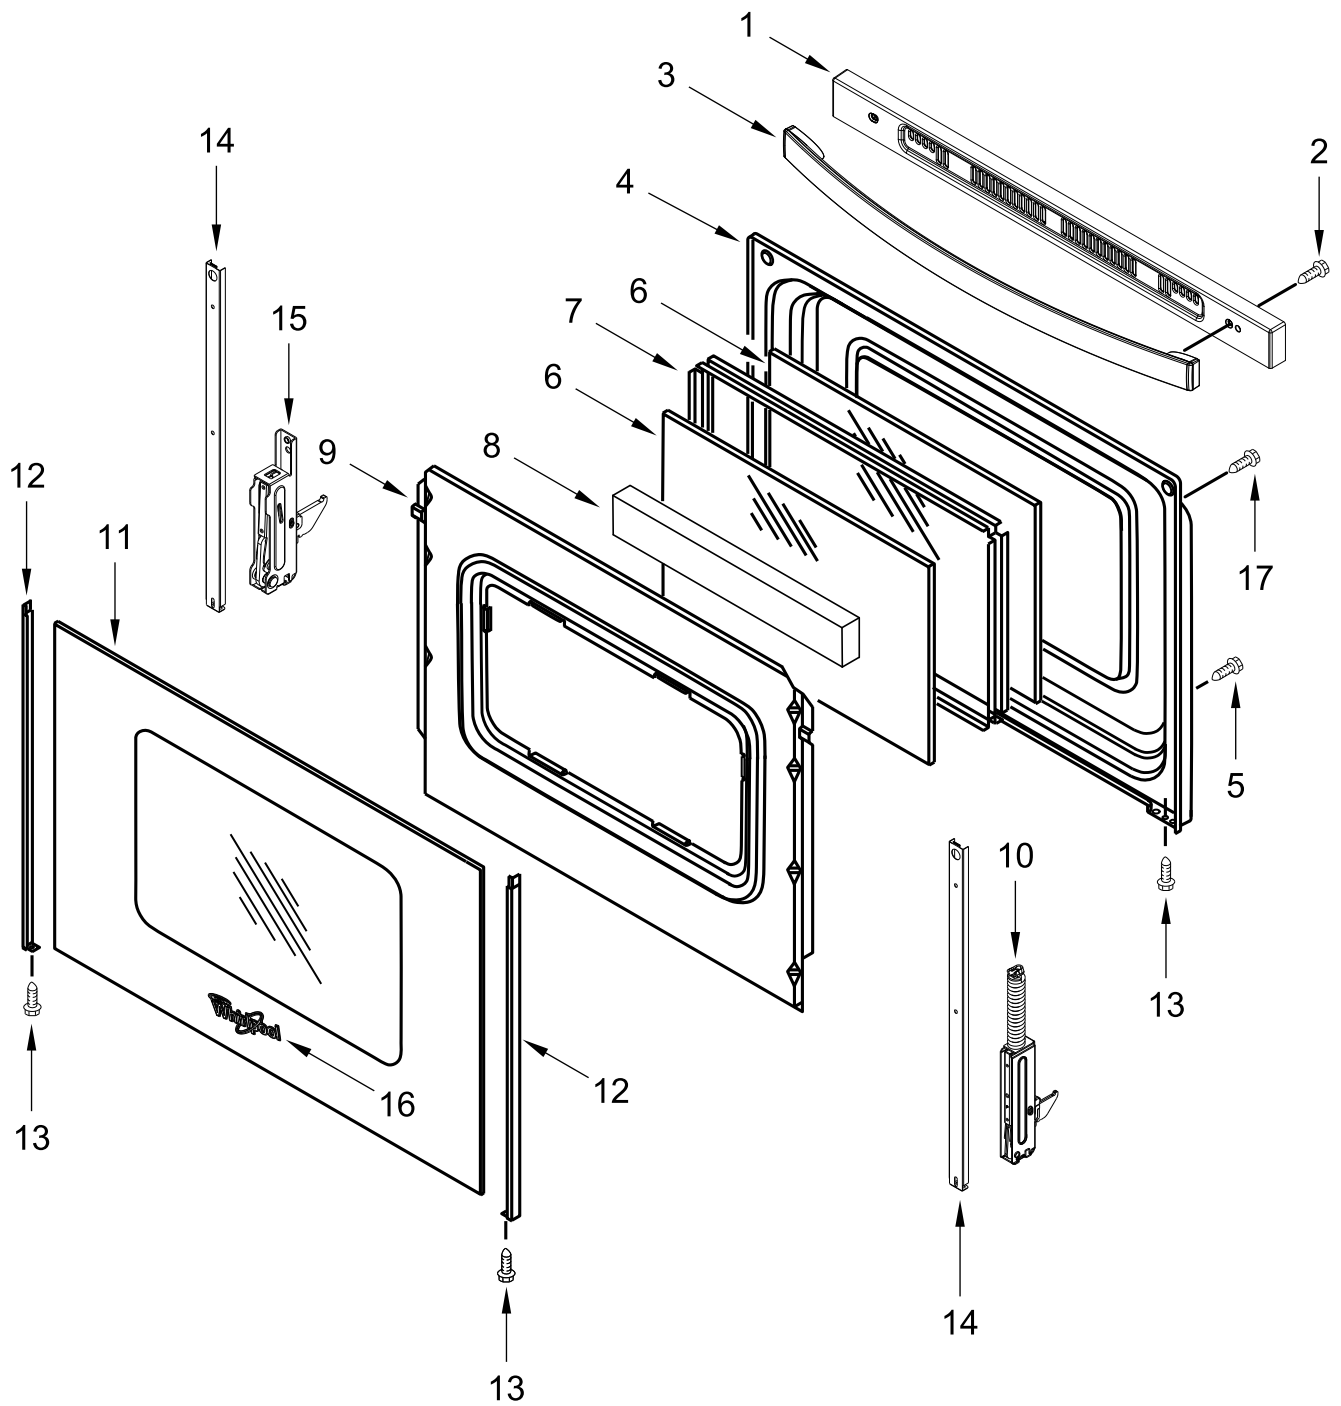


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W11047800	Stainless
	W10310922	Black
2	W10480830	Screw
3		Handle, Door (Includes Standoff)
	W11039070	Stainless
	W11039071	Black Stainless
4	9761344	Liner, Door
5	W10031790	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6	W11044424	Glass, Inner
7	W10316950	Frame, Glass
8	W10278991	Insulation, Door Strip
9	9761357	Retainer, Insulation
10	W10299224	Hinge, Active (With Spring)
11		Glass, Outer Door (Includes Nameplate)
	W11167877	Stainless
	W11169660	Black Stainless

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
13	W10327235	Screw
14	W10544179	Strap, Door
15	W10299227	Hinge, Door (Passive)
16	W10884775	Nameplate
17	W10200660	Screw

DRAWER PARTS

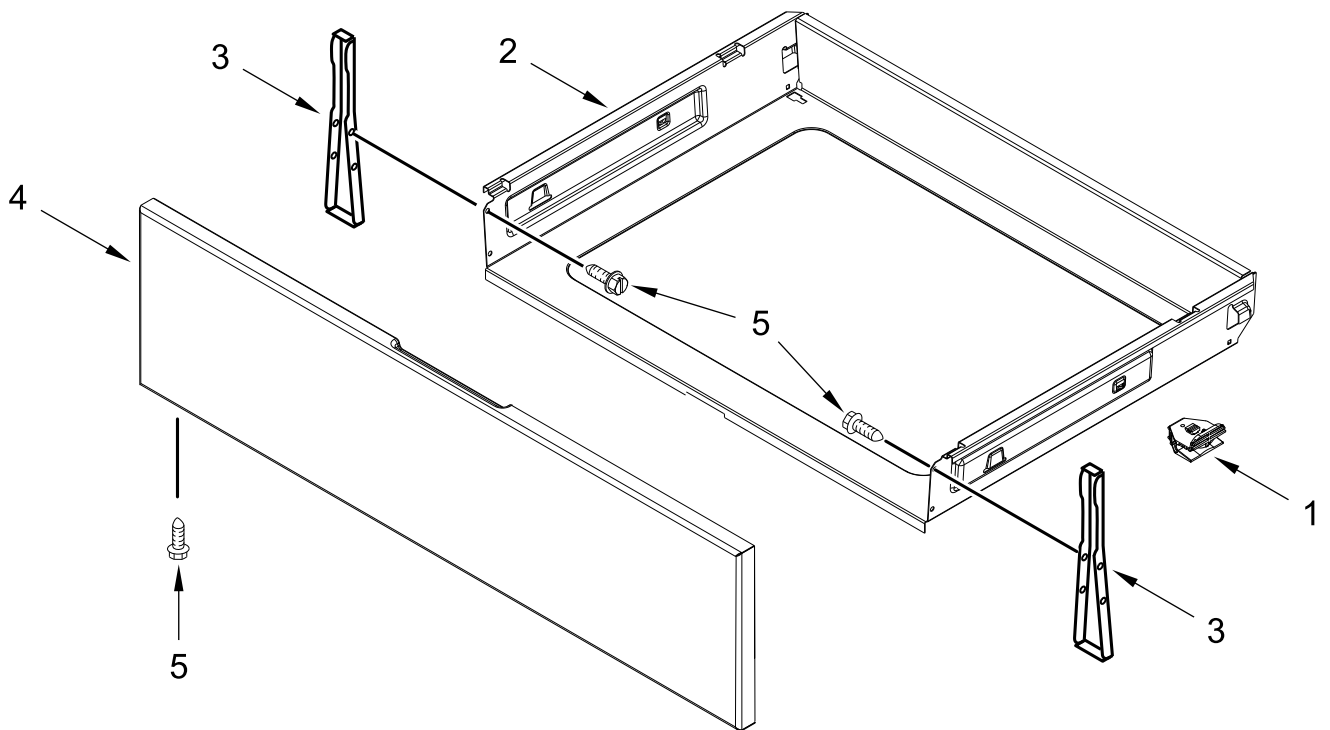

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10674708	Glide, Drawer Rear	4		Panel, Drawer Front
2	W10688022	Drawer, Storage		W11190210	Stainless
3	W10462909	Bracket, Mounting		W11045574	Black Stainless
			5	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	4396927	Rack, Oven (Split)