# SUMMIT

# SPWD2200W



## 33.25" x 23.38" x 24.5" (H x W x D)

24" wide washer/dryer combo for non-vented use, with 15 lb. wash capacity; replaces SPWD2200

## **Highlights:**

Full 15 lb. wash capacity in a slim-fitting 24" footprint

7 wash cycles offer the ideal treatment for all fabrics including cotton, wool, silk, and baby clothes

Intuitive controls with a digital display for easy use

Stainless steel drum with generous 2 cu.ft. capacity

## **Product Features:**

| 2 cu.ft. drum            | Washes up to 15 lbs. and dries up to 7.7 lbs. in one cycle   |
|--------------------------|--|
| Stainless steel drum     | Durable interior holds up load after load  |
| LCD Display              | Digital readout allows you to keep track of each cycle   |
| Accessible design        | Meets many ADA guidelines for accessibility, with controls being operable with one hand and between 15" and 48" high. Force to open door is 4.5 lbs. |
| Detergent dispenser      | Pull-out compartment for prewash, regular detergent, and fabric softener   |
| Cotton/Normal wash cycle | Ideal for daily cotton articles such as sheets, pillowcases, and basic cotton fabric   |
| Bulky/Large wash cycle   | Adds extra time for best results on large loads  |
| Sport wash cycle         | Perfect for active gear  |
| Delicate wash cycle      | Allows you to ensure silk material gets a thorough but safe cleaning   |

# SUMMIT

## SPWD2200W Specifications:

| Overview                    |                   |  |
|-----------------------------|-------------------|--|
| Height                      | 33.25"            |  |
| Width                       | 23.38"            |  |
| Depth                       | 24.5"             |  |
| Depth with door at 90°      | 40.5"             |  |
| Capacity                    | 2.0 cu.ft.        |  |
| Door                        | Glass             |  |
| Cabinet                     | White             |  |
| US Electrical Safety        | ETL               |  |
| Canadian Electrical Safety  | ETL-C             |  |
| Energy Usage/Year           | 85.0kWh/year      |  |
| Amps                        | 12.0              |  |
| Voltage/Frequency           | 115 V AC/60<br>Hz |  |
| Weight                      | 188.0 lbs.        |  |
| Shipping Weight             | 200.0 lbs.        |  |
| Parts & Labor Warranty      | 1 Year            |  |
| Washer-Dryer                |                   |  |
| Loading Style               | Front Loading     |  |
| Door Window                 | Yes               |  |
| Door Swing                  | LHD               |  |
| Reversible                  | No                |  |
| Maximum Wash Weight         | 15.4 lbs.         |  |
| Maximum Dry Weight          | 7.7 lbs.          |  |
| Control Type                | Digital & Dial    |  |
| Dispenser Compartment       | Yes               |  |
| Wash Cycles                 | 7                 |  |
| Dry Cycles                  | 3                 |  |
| Maximum Drum Speed          | 1200.0            |  |
| Maximum Temperature         | 100.0 °F          |  |
| Delayed Start               | Yes               |  |
| Delicate Cycle              | Yes               |  |
| Hand Wash Cycle             | Yes               |  |
| Height to Handle            | 18.5"             |  |
| Pedestal                    | Optional          |  |
| Force Required to Open Door | 4.5 pounds        |  |




summit

# **QUICK START GUIDE**

## SPWD2200W COMBO WASHER-DRYER

This washer requires a standard washer hook up as shown in any of the 4 diagrams

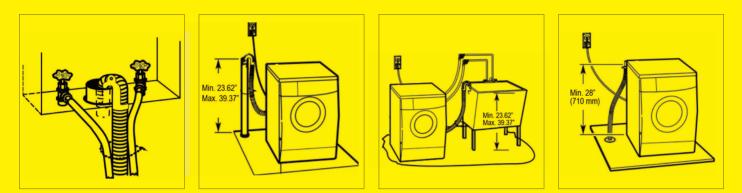

## IT IS NOT SUITABLE FOR PORTABLE USE OR HOOK-UP TO A SINK.

Installation must be performed by a qualified, licensed professional




#### **IMPORTANT: Remove shipping bolts**

- Remove packing material and discard.
- Cover holes with transport hole plugs
- Keep shipping bolts for future use



#### **IMPORTANT:** For best performance, washer/dryer must rest solidly on a sturdy floor or platform, with minimum vibration.

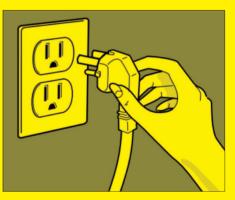

#### **NOTE:**

Remove four (4) shipping bolts prior to plugging machine into electrical outlet. Do not cut power supply cord

See ground instruction on pg. 5 for complete details.

## CAUTION A

- Use only high efficiency detergent in this machine
- Run one cycle in cotton and hot water setting without clothes before washing clothes for the first time.

## **BEFORE USING WASHER/DRYER READ MANUAL THOROUGHLY!**

SUMMIT APPLIANCE DIVISION FELIX STORCH. INC 770 Garrison Avenue, Bronx, NY 10474 USA TEL 718-893-3900 FAX 844-478-8799 💌 info@summitappliance.com 🖓 www.summitappliance.com