


# Operating and installation instructions

## Cooker hood

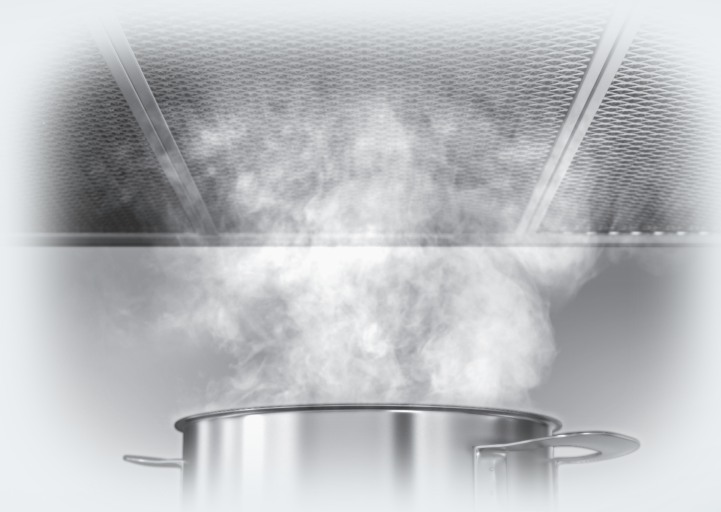

To prevent the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

# Contents

---

<b>Warning and Safety instructions</b> .....	4
<b>Caring for the environment</b> .....	13
<b>Modes of operation</b> .....	14
Con@ctivity 2.0 function.....	15
<b>Guide to the appliance</b> .....	16
<b>Operation (Automatic mode)</b> .....	18
Cooking with Con@ctivity 2.0 (Automatic mode).....	18
Leaving automatic mode temporarily.....	20
Returning to automatic mode.....	20
<b>Operation (Manual mode)</b> .....	21
Cooking without Con@ctivity 2.0 (Manual mode) .....	21
To switch the fan on .....	21
To select a power level .....	21
Selecting the run-on time .....	21
Switching the fan off .....	21
Switching the hob lighting on/off .....	21
Power management .....	22
<b>Operation (Automatic and Manual modes)</b> .....	23
Glass feature lighting: switching on, off and dimming it .....	23
Operating hours counters.....	23
Altering the operating hours counter for the grease filter.....	23
Activating and altering the charcoal filter operating hours counter.....	24
Reading the filter operating hours counter.....	24
<b>Energy saving tips</b> .....	26
<b>Cleaning and care</b> .....	27
Housing .....	27
Important for appliances with glass surfaces .....	27
Grease filters and panel for edge extraction .....	28
Charcoal filter .....	31
Resetting the charcoal filter operating hours counter .....	31
Disposing of charcoal filters .....	31
Reactivatable charcoal filter .....	31
<b>Installation</b> .....	33
Before installation.....	33
Installation instructions.....	33
Assembly parts.....	34

Appliance dimensions .....	36
Safety distance between hob and cooker hood (S) .....	37
Installation recommendations .....	38
Drilling diagram for wall mounting .....	38
<b>Connection for air extraction</b> .....	<b>39</b>
Condensate trap .....	40
Silencer .....	40
<b>Electrical connection</b> .....	<b>41</b>
<b>Activating Con@ctivity 2.0</b> .....	<b>42</b>
Installing the Con@ctivity 2.0 Stick .....	42
Activating Con@ctivity 2.0 .....	42
Activating the cooker hood .....	42
Activating the hob .....	43
Activation failed .....	43
Deactivating Con@ctivity 2.0 .....	43
<b>After Sales / Guarantee</b> .....	<b>44</b>
Position of the data plate .....	44
Note for test institutes .....	44
<b>Technical data</b> .....	<b>45</b>
Conformity declaration .....	45

## Warning and Safety instructions

---

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on the safety, installation, use and maintenance of the appliance. Miele cannot be held liable for non-compliance with these instructions.

Keep these instructions in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

### Correct application

- ▶ This cooker hood is intended for use in domestic households and similar working and residential environments.
- ▶ The cooker hood is not intended for outdoor use.
- ▶ It must only be used as a domestic appliance to extract vapours and remove odours from cooking. Any other usage is not supported by the manufacturer and could be dangerous.
- ▶ Where a recirculation cooker hood is fitted above a gas hob, please ensure that there is an adequate supply of fresh air into the room in which it is installed. Please seek the advice of a qualified gas fitter (e.g. GasSafe in the UK) if necessary.

## Warning and Safety instructions

---

▶ The cooker hood can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised whilst using it, or have been shown how to use it in a safe way and recognise and understand the consequences of incorrect operation.

### **Safety with children**

- ▶ Children under 8 years of age must be kept away from the cooker hood unless they are constantly supervised.
- ▶ Children 8 years and older may only use the cooker hood unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean or maintain the cooker hood unsupervised.
- ▶ Please supervise children in the vicinity of the cooker hood and do not let them play with it.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.

# Warning and Safety instructions

---

## Technical safety

- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
  - ▶ A damaged appliance can be dangerous. Check it for visible signs of damage. Do not use a damaged appliance.
  - ▶ The electrical safety of this appliance can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
  - ▶ Reliable and safe operation of this cooker hood can only be assured if it has been connected to the mains electricity supply.
  - ▶ Before connecting the appliance to the mains supply, ensure that the connection data on the data plate (voltage and frequency) match the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.
  - ▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.
  - ▶ For safety reasons, this appliance may only be used after it has been built in.
  - ▶ The cooker hood must not be used in a non-stationary location (e.g. on a ship).
  - ▶ Touching electrical components and tampering with electrical and mechanical parts is highly dangerous to the user and can cause operational faults.
- Only open the housing as described in the instructions given in the installation sheet and in the Cleaning and care section of this booklet. Under no circumstances should any other parts of the housing be opened.


## Warning and Safety instructions

---

- ▶ The manufacturer's warranty will be invalidated if the appliance is not repaired by a Miele approved service technician.
- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.
- ▶ If the electrical connection cable is faulty it must only be replaced by a Miele authorised service technician to protect the user from danger.
- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply.

# Warning and Safety instructions

Using at the same time as other heating appliances that depend on the air from the room

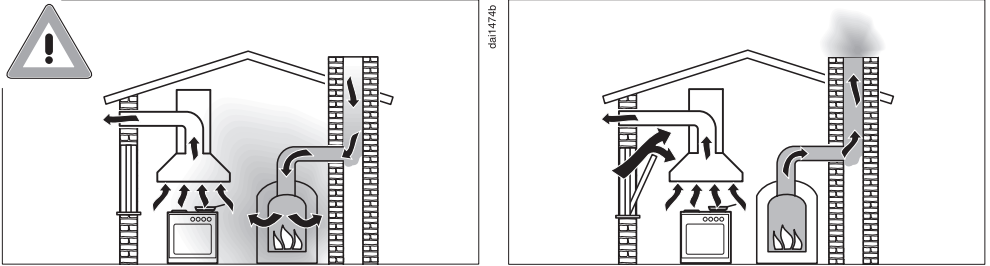

## Warning - danger of toxic fumes

Great care should be taken when using the cooker hood at the same time and in the same room or area of the house as another heating appliance which depends on the air in the room. Such appliances include gas, oil, wood or coal-fired boilers and heaters, continuous flow or other water heaters, gas hobs, cookers or ovens which draw air in from the room and duct exhaust gases out through a chimney or extraction ducting.

When used in extraction mode, with or without an external motor fitted, or in recirculation mode with a recirculation box installed outside the room, the appliance draws air in from the room in which it is installed and from neighbouring rooms.

If there is insufficient air, an underpressure will occur. The heating appliance will be starved of oxygen, impairing combustion. Harmful gases could be drawn out of the chimney or extraction ducting back into the room, with potentially fatal consequences.



## Warning and Safety instructions

In order to ensure safe operation, and to prevent gases given off by the heating appliances from being drawn back into the room when the cooker hood and the heater are in operation simultaneously, an underpressure in the room of 0.04 mbar (4 pa) is the maximum permissible.

Ventilation can be maintained by air inlets which cannot be blocked, in windows, doors or outside wall vents, or by other technical measures, such as ensuring that the cooker hood can only be switched on when the heating appliance is switched off or vice versa. A ventilation brick alone is not generally sufficient to ensure safe ventilation.

The overall ventilation condition of the dwelling must be taken into account. If in any doubt, the advice of a competent builder or, for gas a qualified gas fitter (registered with an official gas safety body in accordance with national safety regulations, GasSafe in the UK) must be sought.

If the cooker hood is used in recirculation mode, where the air is directed back into the room in which it is located, operating a heating appliance which depends on the room air at the same time is no cause for concern.

# Warning and Safety instructions

---

## Correct use

- ▶ Never use a naked flame beneath the cooker hood. To avoid the danger of fire, do not flambé or grill over a naked flame. When switched on, the cooker hood could draw flames into the filter. Fat deposits could ignite, presenting a fire hazard.
- ▶ The cooker hood can become damaged when exposed to excessive heat.
  - When using the cooker hood over a gas hob, ensure that any burners in use are always covered by a pan. Switch the cooking zone off when a pan is removed, even for a short time.
  - Select a pan which is suitable for the size of the burner.
  - Regulate the flame so that it does not burn up the sides of the pan.
  - Avoid overheating the pan (e.g. when cooking with a wok).
- ▶ Always switch the cooker hood on when a cooking zone is in use, otherwise condensation may collect in the hood, which could cause corrosion.
- ▶ When cooking with oil or fat, chip pans and deep fat fryers etc, do not leave the pans unattended. Never leave an open grill unattended when grilling. Overheated oil and fat can ignite and could set the cooker hood on fire.

## Warning and Safety instructions

---

- ▶ Do not use the cooker hood without the filters in place. This way you will avoid the risk of grease and dirt getting into the appliance and hindering its smooth operation.
- ▶ There is a risk of fire if the cooker hood is not cleaned as described in these operating instructions.
- ▶ The cooker hood can get very hot during cooking due to heat rising from the hob.  
Do not touch the housing or the grease filters until the cooker hood has cooled down.

### Correct installation

- ▶ Refer to the cooker or hob manufacturer's instructions as to whether a cooker hood may be operated above the cooker/hob.
- ▶ Safety regulations prohibit the fitting of a cooker hood over solid fuel stoves.
- ▶ Insufficient distance between the cooker or hob and the cooker hood can result in damage to the hood.  
The minimum safety distances between the top of the cooker or hob and the bottom of the cooker hood given in the "Installation" section must be maintained, unless the hob manufacturer states that a greater distance is required.  
If more than one cooking appliance is fitted beneath the cooker hood, and they have different minimum safety distances to the cooker hood, select the greater distance.
- ▶ The distances given in "Installation" must be observed when fitting the cooker hood.

## Warning and Safety instructions

---

- ▶ Exhaust ducting must be of non-inflammable material. Suitable material is available from Miele specialist dealers or the Miele Spares Dept.
- ▶ The appliance must not be connected to a chimney or flue which is in use. Neither should it be connected to ducting which ventilates rooms with fireplaces.
- ▶ If exhaust air is to be extracted into a chimney or ventilation duct no longer used for other purposes, seek professional advice.

### Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.
- ▶ You could injure yourself on the open vapour canopy. Only open it when necessary.

### Accessories

- ▶ Only use genuine original Miele accessories and spare parts with this appliance. Using accessories or spare parts from other manufacturers will invalidate the guarantee, and Miele cannot accept liability.


### Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

### Disposal of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

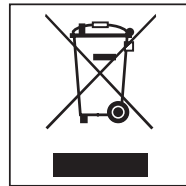

Please dispose of it at your local community waste collection / recycling centre or contact your Dealer for advice.


Ensure that it presents no danger to children while being stored for disposal.

# Modes of operation

---

Depending on the model of the cooker hood, the following options are available:

## Extraction mode

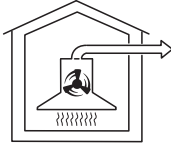

dsl00494a

The air is drawn in and cleaned by the grease filter and directed outside.

## Non-return flap

The non-return flap is designed to prevent the exchange of room and outside air taking place when the cooker hood is switched off.

The flap is closed when the cooker hood is switched off.

When the cooker hood is switched on, the non-return flap opens for the cooking vapours to be blown directly outside.

If the on-site ventilation system does not have a non-return flap, the non-return flap supplied must be fitted in the exhaust socket in the motor unit.

## Recirculation mode

Recirculation mode cooker hoods require charcoal filters. These are available as optional accessories: see "Technical Data".




dsl00494b

The air is drawn in and cleaned first by the grease filter and then by a charcoal filter. The cleaned air is then recirculated back into the kitchen.

## Con@ctivity 2.0 function

### Automatic control

The cooker hood has a communication facility which enables the automatic operation of the cooker hood depending on the operational state of the hob.

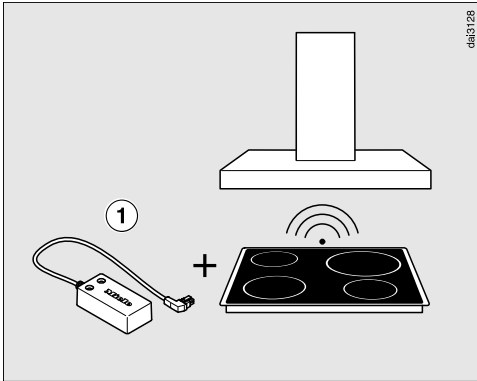

To make use of the communication facility the hob must be fitted with a Con@ctivity 2.0 Stick ①.

Refer to the installation instructions for the Con@ctivity 2.0 Stick to check whether it is compatible with your hob.


To use the Con@ctivity 2.0 function, a wireless connection must be established between the hob and the cooker hood (see "Activating Con@ctivity 2.0").

The hob transmits information about its operational status via a wireless signal to the cooker hood.

- When the hob is switched on, the hob lighting comes on independently and then after a short time the fan also comes on.
- During cooking the cooker hood automatically sets the power level according to the number of cooking zones in operation and their power levels.
- After switching the hob off the fan and the hob lighting will switch off automatically after a specified period of time.

See "Operation" for detailed information about this function.

# Guide to the appliance

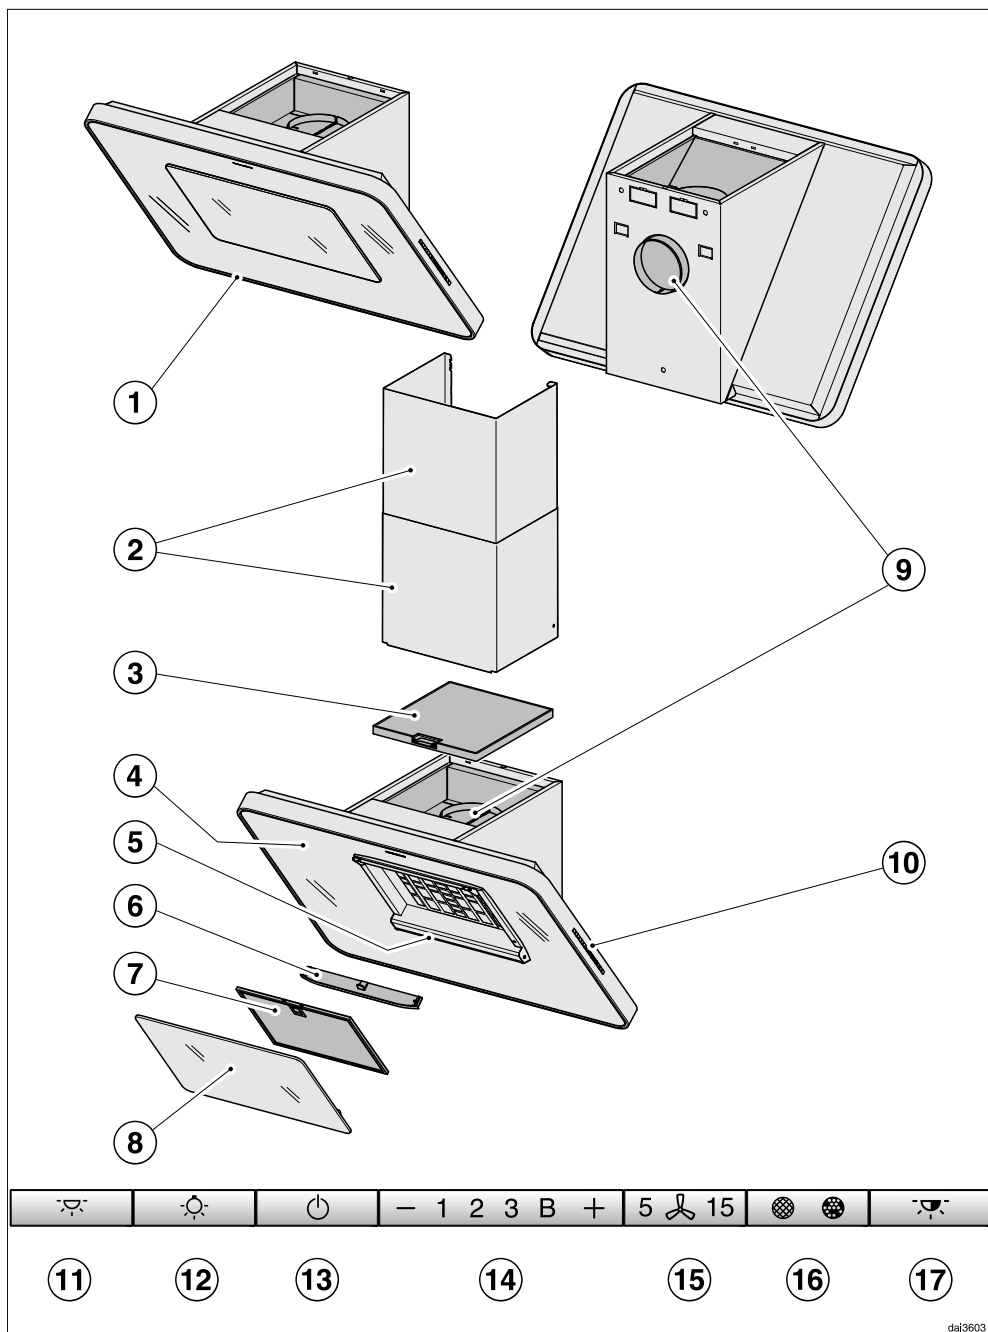



- ① Canopy
- ② DADC 6000 tower  
Available as an optional accessory for concealing extraction ducting to the ceiling.
- ③ Charcoal filter  
Optional accessory for recirculation mode
- ④ Glass feature lighting (dimnable)
- ⑤ Hob lighting
- ⑥ Drip tray
- ⑦ Grease filter
- ⑧ Edge extraction panel
- ⑨ Exhaust socket  
Extraction ducting can be directed through the back of the cooker hood or upwards to the ceiling.
- ⑩ Controls
- ⑪ On/Off control for the glass feature lighting
- ⑫ On/Off control for the hob lighting
- ⑬ On/Off control for the fan
- ⑭ Controls for setting the fan power level
- ⑮ Run-on option control
- ⑯ Operating hours control
- ⑰ Dimmer control for the glass feature lighting

# Operation (Automatic mode)

When Con@ctivity 2.0 is activated, the cooker hood always works in automatic mode (see "Activating Con@ctivity 2.0").

To operate the cooker hood manually, see "Cooking without Con@ctivity 2.0".

## Cooking with Con@ctivity 2.0 (Automatic mode)

- Switch a cooking zone on at the power level you want.


The hob lighting will come on.

After a few seconds the fan will come on, first at power level **2**, then it will switch immediately to power level **1**.

The cooker hood selects the power level automatically during cooking.

This is determined by the total output of the hob, i.e, the number of cooking zones in operation and the power levels selected.

- If you select a higher power level or are using several cooking zones, the cooker hood will switch to a higher power level.
- When you reduce the power level or the number of cooking zones on the hob, the cooker hood power level is also reduced.

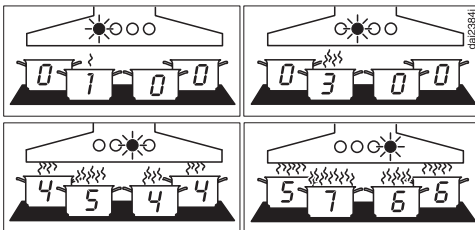

Examples for power levels **1** to **4**

## Reaction time

The cooker hood reacts with a slight delay because altering the power level on the hob does not immediately result in a reduction or increase in cooking vapours.

Because the hob transmits the information to the cooker hood at intervals, this can also cause delays.

The reaction can vary from a few seconds to a couple of minutes.

## Cooking process

- If for example you switch on a cooking zone at the highest power level to heat a pan for frying and reduce the power level after approx. 60 to 90 seconds\*, a cooking process is recognised (\*60 seconds to 5 minutes for a HiLight hob).

The cooker hood switches itself on and when the hob power level has been reduced, the hood switches to power level 3 and remains at that level for approx. 5 minutes.

After that the cooker hood power level is determined automatically by the Con@ctivity function.

- You can select another power level manually before then.

## Switching off

- Switch off all cooking zones.

The cooker hood fan will reduce its power level over the next few minutes and will eventually switch itself off.

This helps to neutralise any lingering vapours and odours in the air.

- From the intensive setting, the fan switches immediately to level 3.
- If the fan is operating at level 3, it will switch to level 2 after approx. 1 minute.
- From level 2, the fan switches to level 1 after 2 minutes.
- After 2 minutes at level 1 the fan switches itself off.
- After another 30 seconds, the hob lighting switches off.


The cooking process is then finished.

# Operation (Automatic mode)

---

## Leaving automatic mode temporarily

To leave automatic mode temporarily during cooking:

- Manually select a different power level, or
- Manually switch the cooker hood off, or
- Activate the run-on option  on the cooker hood. The fan will switch off after the selected time and the lighting remains switched on.

The cooker hood can now be operated manually (see "Cooking without Con@ctivity 2.0").

## Returning to automatic mode

The cooker hood returns to automatic mode:


- if the cooker hood has not been used for approx. 5 minutes after selecting a power level manually, or
- if the manually selected fan power level corresponds to the automatic one again, or
- if the cooker hood fan and the hob have been switched off for at least 30 seconds.  
Automatic mode will resume next time the hob is switched on.
- If you wish to operate the cooker hood manually for a complete cooking process, switch on the cooker hood fan **before** switching on the hob.  
If the cooker hood and the hob have been switched off for at least 30 seconds after cooking, automatic mode will resume the next time the hob is switched on.


## Cooking without Con@ctivity 2.0 (Manual mode)

The cooker hood can be operated manually if:

- Con@ctivity 2.0 is not activated.
- You have temporarily deactivated Con@ctivity 2.0 (see "Leaving automatic mode temporarily").

### To switch the fan on

- Press the On/Off control .

The fan will switch on at level **2**. The  symbol and **2** will light up in the power level display.

### To select a power level

For light to heavy cooking vapours and odours, select from power levels **1** to **3**.

For short periods of cooking food with intensive vapours and a strong aroma, e.g. when searing meat, select Booster setting **B**.

- For a lower power level, press the "-" control, or "+" for a higher level.




### Reducing power down from the Booster setting

If power management is activated (default setting), the fan automatically switches back to level **3** after 5 minutes.


## Selecting the run-on time

It is advisable to run the fan for a few minutes after cooking has finished to neutralise any lingering vapours and odours in the air.

With the run-on option the fan switches itself off automatically after a pre-selected time.

- After you have finished cooking, press the run-on option control **5**  **15**
  - Once: the fan will switch itself off after 5 minutes (**5** lights up).
  - Twice: the fan will switch itself off after 15 minutes (**15** lights up).
  - If you press the run-on option control **5**  **15** again, the fan will remain on (**5**  **15** will go out).


## Switching the fan off


- Use the On/Off control  to switch the fan off.

The  symbol will go out.

## Switching the hob lighting on/off

The hob lighting can be switched on and off independently of the fan.

- To do this, press .

The  symbol will light up when the hob lighting is switched on.

## Operation (Manual mode)

---

### Power management




The cooker hood features a power management system to help save energy. The fan power level is reduced and the lighting is switched off automatically.

- If the Booster setting has been selected, the fan will automatically switch to level 3 after 5 minutes.
- From levels 3, 2 or 1 the power will be reduced by one level after 2 hours and then in 30 minutes stages until the fan finally switches off.
- The hob lighting will switch off automatically after 12 hours.

### Switching Power management on/off

You can deactivate Power management.

This can result in increased electricity consumption.

- Switch off the fan and the lighting.
- Press the run-on option button **5**  **15** for approx. 10 seconds, until **1** lights up in the power level display.
- Then press in turn,
  - the lighting control ,
  - the "-" control and then
  - the lighting control  again.

If Power management is switched on, the **1** and **B** indicators will light up constantly.

If it is switched off, **1** and **B** will flash.

- Press "-" to switch Power management off.

The **1** and **B** indicators will flash.

- To switch it on, press "+".

The **1** and **B** indicators will light up constantly.

- Confirm the setting with the run-on option button **5**  **15**.


All the indicator lamps will go out.

If you do not confirm within 4 minutes, the cooker hood will revert to the old setting.


# Operation (Automatic and Manual modes)




## Glass feature lighting: switching on, off and dimming it

The glass feature lighting can be switched on and off and dimmed independently of the fan.

- To switch it on press the  glass feature lighting control



The lighting will come on at the previously used brightness level.

The  control is used for dimming the glass feature lighting.

- With the lighting switched on, press and hold the  control. The brightness will gradually dim until you release the control.
- Press and hold the  control again to increase the brightness to the level required and then release it.
- Press the  control to switch the glass feature lighting off.

## Operating hours counters





The number of hours the appliance has been in operation is stored in memory.

When the Grease filter symbol  or the Charcoal filter symbol  lights up, the operating hours counters are signalling that the filters need to be cleaned or changed. Further information about cleaning and changing the filters and resetting the operating hours counter can be found under "Cleaning and care".


## Altering the operating hours counter for the grease filter

You can set the operating hours counter to suit the type of cooking you do.

It is set at the factory for 30 hours.

- Select a shorter time of 20 hours if you fry a lot.
  - If you only cook occasionally we recommend that you still select a short time because grease which has built up gradually over a long period of time will harden on the filter and make cleaning more difficult.
  - Select a longer time of 40 or 50 hours if you use very little fat for cooking.
- Use the On/Off control  to switch the fan off.
  - Press the run-on control  15 and the operating hours control   at the same time.


## Operation (Automatic and Manual modes)

The Grease filter symbol  and one of the fan power level indicators will flash.

Fan power level indicators **1** to **B** show the time set:

- 1..... 20 hours
- 2..... 30 hours
- 3..... 40 hours
- B**..... 50 hours

■ Press the "-" symbol for a shorter operating time, or the "+" symbol to select a longer operating time.

■ Confirm your choice by pressing the operating hours control .

All the indicator lamps will go out


If you do not confirm within 4 minutes, the cooker hood will revert to the old setting.


### Activating and altering the charcoal filter operating hours counter

The charcoal filter is needed for recirculation mode.

The operating hours counter for the charcoal filter needs to be activated once and the operating hours counter needs to be set to suit the kind of cooking you do:

■ Use the On/Off control  to switch the fan off.


■ Press the "+" symbol and the operating hours control  at the same time.

The Charcoal filter symbol  and one of the fan power levels will flash.

Fan power level indicators **1** to **B** show the time set:

- 1..... 120 hours
- 2..... 180 hours
- 3..... 240 hours
- B**..... deactivated

■ Press the "-" symbol for a shorter operating time, or the "+" symbol to select a longer operating time.


■ Confirm your choice by pressing the operating hours control .


All the indicator lamps will go out.


If you do not confirm within 4 minutes, the cooker hood will revert to the old setting.


### Reading the filter operating hours counter

To check the percentage of time set already used

■ Press the On/Off control  to switch the fan on.

■ Press and hold the operating hours control .

– Once, to read the Grease filter operating hours. The grease filter symbol  lights up.

– Twice, to read the Charcoal filter operating hours. The Charcoal filter symbol  lights up.

One or more of the power level indicators will flash.

The number of fan power level indicators flashing shows the percentage of the operating time which has already been used up.

- 1 ..... 25 %
- 1 and 2 ..... 50 %



## Operation (Automatic and Manual modes)

---

**1 to 3** ..... 75 %

**1 to B** ..... 100 %

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

## Energy saving tips

---

This cooker hood operates very efficiently and economically. The following will help you to save even more energy when using it:

- Ensure that there is sufficient ventilation in the kitchen when cooking. In extraction mode, if there is insufficient air flow the cooker hood cannot operate efficiently and this causes increased operating noise levels.
- Always cook with the lowest possible setting. This produces fewer cooking vapours, so you can use a lower cooker hood power level and therefore benefit from reduced energy consumption.
- Clean or change the filters at regular intervals. Heavily soiled filters reduce performance, increase the risk of fire and are unhygienic.
- Use the Con@ctivity function. The cooker hood will switch on and off automatically at the optimum power level for the cooking you are doing, which ensures low energy consumption.
- If you are operating the cooker hood manually, please note the following:
  - Check the power level selected on the cooker hood. A lower power level is generally sufficient for the majority of cooking. Only use the Booster setting when necessary.
  - When a large volume of cooking vapours are being produced, switch to a high power level in good time. This is more efficient than operating the cooker hood for longer to try to capture cooking vapours which have already been distributed throughout the kitchen.
  - Make sure that you switch the cooker hood off after use. If cooking vapours and odours still need to be removed from the kitchen air after cooking, use the run-on function. The fan will switch off automatically after the selected run-on time.

## Housing

### General information

The surfaces and controls are susceptible to scratches and abrasion.

Please observe the following cleaning instructions.

- All external surfaces and controls can be cleaned using hot water with a small amount of washing-up liquid applied with a well wrung-out soft sponge or cloth.

Make sure that water does not get into the cooker hood.

Only clean the area of the controls with a damp cloth.

- Then wipe the surfaces dry using a soft cloth.

Do not use:

- cleaning agents containing soda, acids, chlorides or solvents,
- abrasive cleaning agents, e.g. powder cleaners or cream cleaners and abrasive sponges, as well as pot scourers or sponges which have been used previously with abrasive cleaning agents.

### Important for appliances with lacquered housing

- Please observe the general notes on cleaning earlier in this section.

It is very difficult to clean this type of surface without causing minor marks to the surface material. This can become particularly noticeable if there is halogen lighting in the kitchen.


### Important for appliances with glass surfaces

- Glass surfaces can be cleaned using a proprietary non-abrasive cleaning agent designed specifically for use on glass.

# Cleaning and care


## Grease filters and panel for edge extraction

The edge extraction panel and the re-usable metal grease filter in the appliance remove solid particles (grease, dust, etc.) from the kitchen vapours, preventing soiling of the cooker hood.

 An oversaturated filter is a fire hazard.

### Cleaning interval


The edge extraction panel should be cleaned regularly (at least every 3 - 4 weeks) to avoid a build-up of grease.

The operating hours counter will remind you to clean the edge extraction panel and the grease filter regularly via the grease filter symbol  which will light up.


- You can set the operating hours counter interval to suit the type of cooking you do (see "Operation").

## Removing the panel and grease filters

The panel and grease filter can fall out when you are handling them. This can result in damage. Make sure you hold the panel and the grease filter securely at all times when handling them.

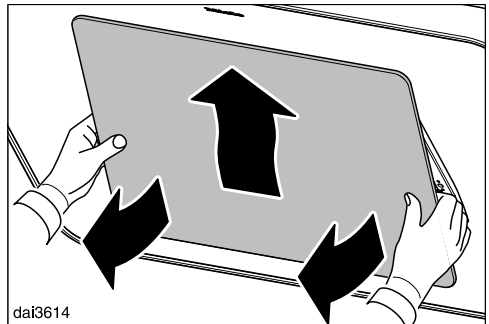


- Pull the panel out of the holder at the bottom, press it back a little at the top, then unhook it and carefully lift it out.

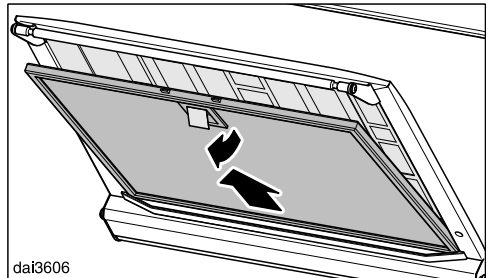

- Release the locking clip on the grease filter, allow it to swing out towards you slightly, then unhook it and take it out.

## Removing the drip tray

Condensate collects in the drip tray underneath the grease filter. This tray can be removed for cleaning.

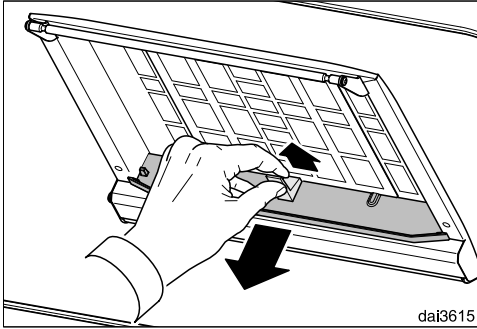

- After taking the grease filter out, hold the drip tray in the middle and pull it slightly upwards and then carefully pull it out towards you.
- Pour any condensate away.

## Cleaning the panel by hand

- Follow the instructions under "Housing".

## Cleaning the grease filter and the drip tray by hand

- Clean the grease filter and the drip tray with a soft nylon brush in a mild solution of hot water and a little washing-up liquid. Do not use "neat" washing-up liquid.

## Unsuitable cleaning agents

Unsuitable cleaning agents can cause damage to the surface of the filters if used regularly.

Do not use:

- cleaning agents containing descaling agents
- powder cleaners, cream cleaners
- aggressive multi-purpose cleaning agents or spray cleaners for grease
- oven sprays

## Cleaning the grease filter and the drip tray in a dishwasher


- Place the grease filter and the drip tray upright or slightly inclined in the lower basket, ensuring the spray arm is not obstructed.
- Use a standard household dishwasher detergent.
- Select a dishwasher programme with a wash temperature between 50°C and 65°C.

Depending on the cleaning agent used, cleaning the filter in a dishwasher can cause permanent discolouration to internal surfaces of the filter. However, this will not affect the functioning of the filter in any way.


# Cleaning and care

## After cleaning

- After cleaning, leave the filter to dry on an absorbent surface before replacing it.
- When removing the panel and grease filter for cleaning, also clean off any residues of oil or fat from the now accessible parts of the casing to prevent the risk of these catching fire.
- Replace the drip tray.
- Replace the grease filter, making sure that the locking clip is facing outwards.

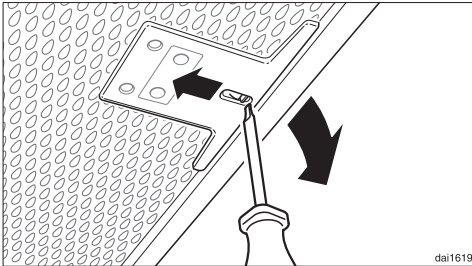


- If the grease filter is inadvertently replaced the wrong way round, insert a small screwdriver blade into the slit to disengage the clip.

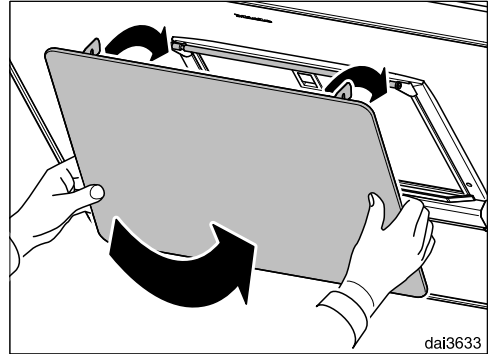


- Hook the panel in at the top and then push it into position at the bottom.


## Resetting the grease filter operating hours counter

After cleaning, the operating hours counter needs to be re-set.

- Whilst the fan is switched on, press the Grease filter control  for approx. 3 seconds, until only the **1** is flashing.

The Grease filter symbol  goes out.

If you want to clean the grease filters before the operating hours counter has reached its maximum,


- Touch the Grease filter control  for approx. 6 seconds, until only the **1** is flashing.

## Charcoal filter

Recirculation cooker hoods must be fitted with a charcoal filter in addition to the grease filter. This is designed to absorb cooking odours. It is fitted in the top of the cooker hood.

### Fitting/replacing a charcoal filter


- Take the charcoal filter out of its packaging.

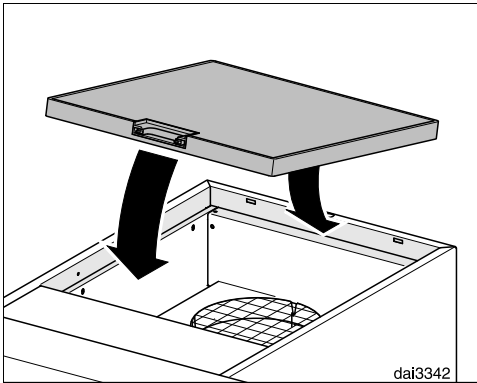

- Fit the charcoal filter into the holder in the top of the cooker hood.
- When fitting for the first time, activate the operating hours counter (see "Operation").

### When to change the charcoal filter


- Always replace the charcoal filter when it no longer absorbs kitchen odours effectively. It should, however be replaced at least every 6 months.


The filter operating hours counter reminds you to replace the charcoal filter regularly by illuminating the charcoal filter symbol .

- The charcoal filter operating hours counter needs to be activated before using for the first time (see "Operation").


### Resetting the charcoal filter operating hours counter

After changing the charcoal filter, the operating hours counter needs to be re-set.

- Touch the Charcoal filter control  for approx. 3 seconds with the cooker hood switched on until only the indicator light for level 1 is flashing.

The Charcoal filter symbol  will go out.

If you want to replace the charcoal filter **before** the operating hours counter has reached its maximum:

- Touch the Charcoal filter control  for approx. 6 seconds until only the indicator light for level 1 is flashing.

### Disposing of charcoal filters

- Used charcoal filters can be disposed of with the normal household waste.

### Reactivatable charcoal filter

A reactivatable charcoal filter is available for this cooker hood. By reactivating it in an oven it can be reused several times.

- It is supplied with its own installation and usage instructions which must be observed.

## Cleaning and care


---

Charcoal filters are available to order via the Miele Webshop, the Miele Spare Parts Department (see end of this booklet for contact details) or from your Miele dealer.

The charcoal filters are listed under "Technical data" at the back of this booklet.



## Before installation


 Before installation, it is important to read the information given on the following pages as well as the "Warning and Safety instructions" at the beginning of this booklet.

## Installation instructions

See enclosed Installation sheet for instructions on how to install this appliance.


# Installation

## Assembly parts

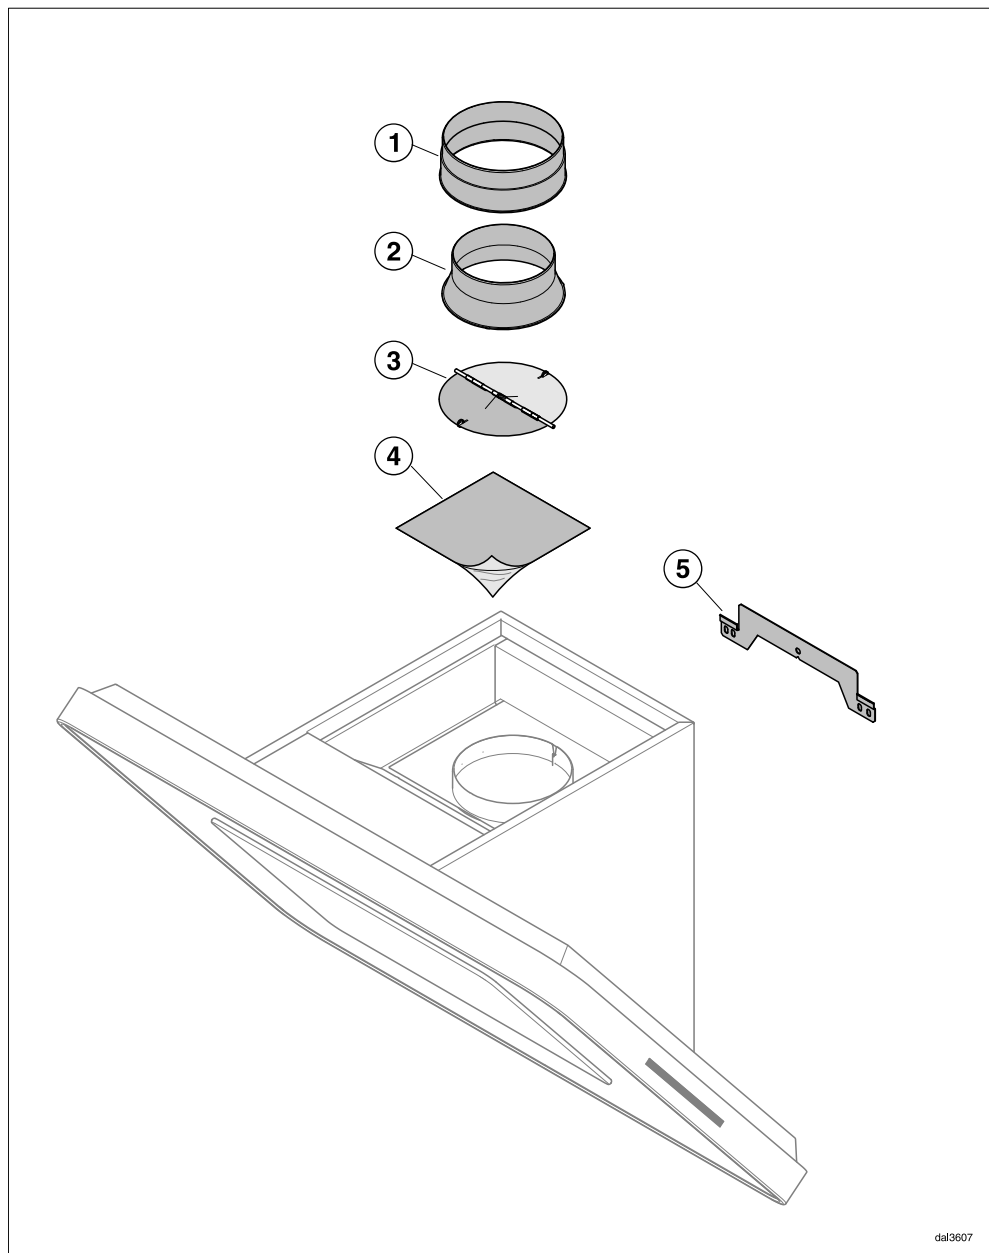

dal3607


- ① **1 exhaust connection**  
for exhaust ducting  $\varnothing$  150 mm
- ② **1 reducing collar**  
for exhaust ducting  $\varnothing$  125 mm
- ③ **1 non-return flap**  
for installation in the exhaust socket of the fan motor (not for recirculation mode). The non-return flap may already be fitted depending on model.
- ④ **Cover foil**  
for use when changing extraction ducting direction
- ⑤ **Wall bracket**  
for securing the cooker hood to the wall



5569-D046B051-531

**5 screws 5 x 60 mm** and  
**5 plugs 8 x 50 mm**  
**3 washers 6.4 mm**  
for securing to the wall.

The screws and plugs are designed for use in solid walls only. For other types of wall construction, alternative fixings will be required. Make sure the wall is able to take the weight of the cooker hood.

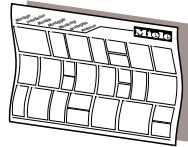


dfluo3/mile

**Installation instructions**

# Installation

## Appliance dimensions

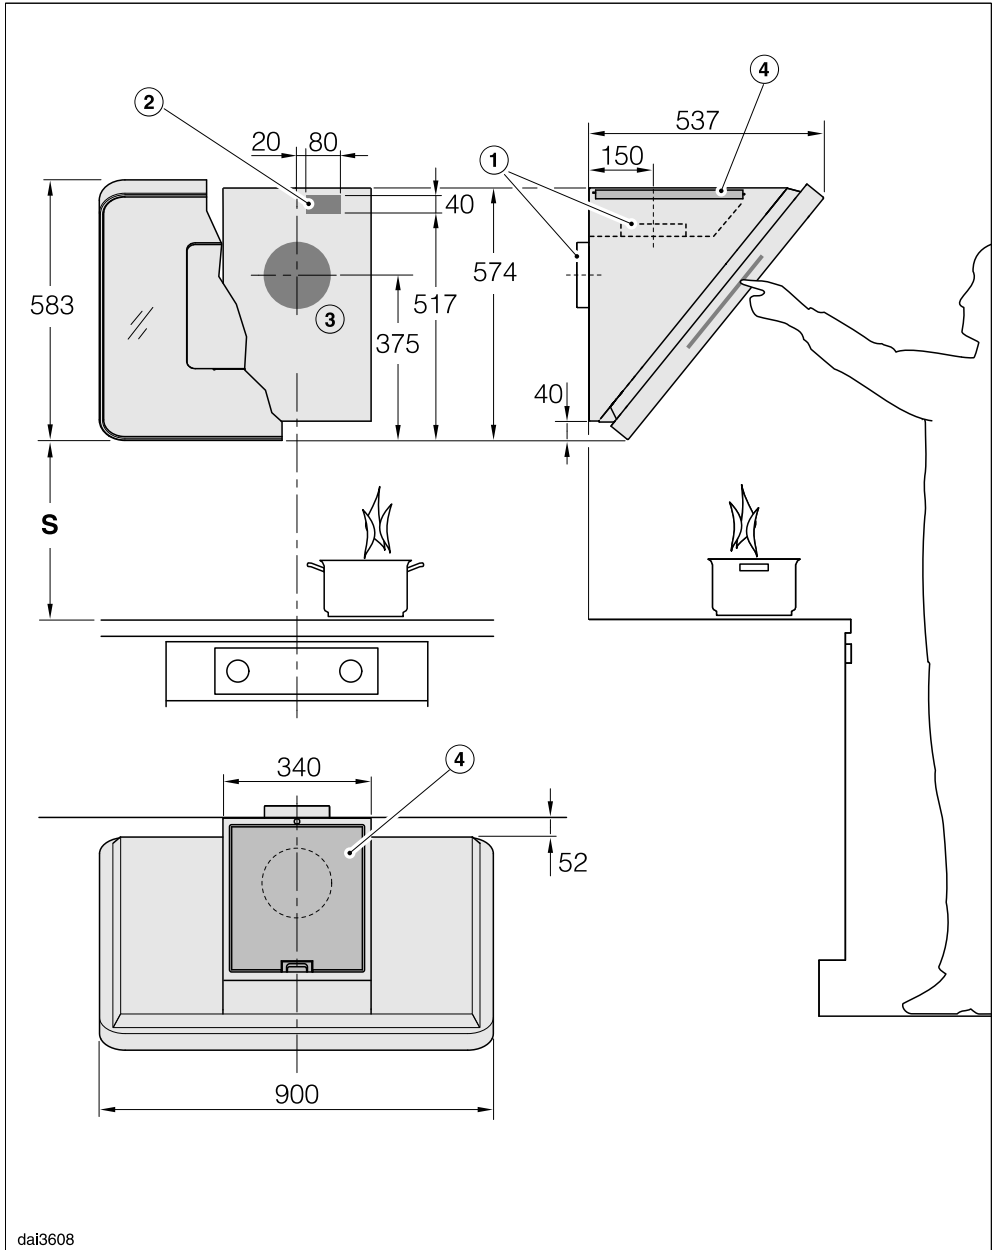

dai3608

The diagram is not drawn to scale.

- ① Extraction ducting upwards or to the rear.
- ② Cut-out for cooker hoods with hard-wired connection rather than a plug.
- ③ 200 mm  $\varnothing$  cut-out ensures sufficient space through the wall for the extraction ducting to flex.
- ④ Ventilation outlet for recirculation mode. A gap of at least 300 mm must be maintained between the top of the cooker hood and the ceiling or any furniture above it.

Connection for air extraction  $\varnothing$ 150 mm, or  $\varnothing$ 125 mm with reducing collar.

Please observe installation positions for the socket and for the ducting outlet shown on the relevant drawings when using the DADC 6000 tower.

## Safety distance between hob and cooker hood (S)

When planning the installation height of your cooker hood, the minimum safety distance between the top of a cooker or hob and the bottom of the cooker hood is as follows, unless a greater distance is specified by the manufacturer of your cooking appliance.

See "Warning and Safety" instructions for further information.

Cooking appliance	Minimum distance S
Electric hob	450 mm
Electric grill, deep fat fryer (electric)	650 mm
Multi-burner gas hob, total output $\leq$ 12.6 kW, no burner $>$ 4.5 kW	650 mm
Multi-burner gas hob, total output $>$ 12.6 kW and $\leq$ 21.6 kW, no burner $>$ 4.8 kW.	760 mm
Multi-burner gas hob, total output $>$ 21.6 kW, or multi-burner gas hob where one burner $>$ 4.8 kW.	Not possible
Single burner gas hob, output $\leq$ 6 kW.	650 mm
Single burner gas hob, output $>$ 6 kW and $\leq$ 8.1 kW.	760 mm
Single burner gas hob, output $>$ 8.1 kW	Not possible


# Installation

## Installation recommendations

- Account should also be taken of the height of the person who will be using the hood most often. They should have sufficient space to work comfortably at the hob, and be able to reach the hood controls with ease.
- Please be aware that if positioned too high, extraction will be inefficient.
- To achieve optimum vapour extraction, the cooker hood must cover the hob. It should be positioned centrally over the hob, not to the side of it.
- The hob should be no wider than the cooker hood, and if possible, it should be narrower.
- The installation area must be easily accessible. The cooker hood should be easily accessible and easy to dismantle in the event that service is required. This should be taken into consideration when planning the position of cupboards, shelves, ceilings or features in the vicinity of the cooker hood.

## Drilling diagram for wall mounting

- Please follow the directions given in the installation instructions supplied for drilling.

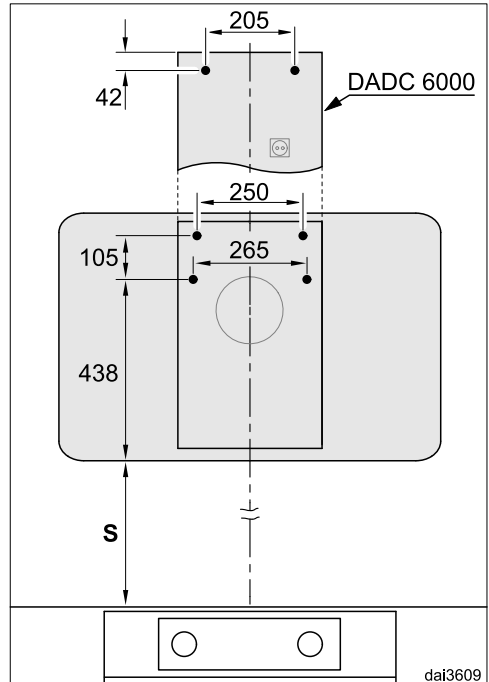

- For pre-installation of a back wall where the holes have to be pre-drilled, please refer to the drilling distances in the drawing above (screws  $\varnothing$  5 mm).

## Connection for air extraction

**⚠** If the cooker hood is used at the same time as a heating appliance that relies on oxygen from the same room, there is a risk in certain circumstances of toxic fumes building up.

It is essential that the "Warning and Safety" instructions are observed.

The cooker hood should be installed according to local and national building regulations. Seek approval from the building inspector where necessary.


Use smooth or flexible ducting made from approved non-flammable materials for exhaust ducting.

To achieve the most efficient air extraction with the lowest noise levels, please note the following:

- The diameter of the exhaust ducting should not be less than 150 mm.
- If flat ducting is being used, the cross section must not be smaller than the cross sectional area of the exhaust connection.
- The exhaust ducting should be as short and straight as possible.
- Only use wide radius bends.
- The exhaust duct must not be kinked or compressed.
- Ensure that all connections are strong and airtight.

Remember that any constriction of the air flow will reduce extraction performance and increase operating noise.


- If the exhaust is ducted through an outside wall, a telescopic wall vent or a roof vent (available as an optional accessory) is recommended.

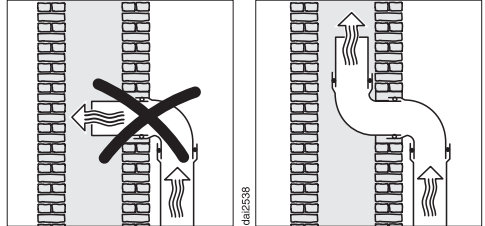

- If the exhaust air is to be ducted into a flue, the ducting must be directed in the flow direction of the flue.
- When ducting is horizontal it must be laid to slope away at at least 1 cm per metre. This is to ensure that condensate cannot drain back into the appliance.
- If the exhaust ducting is to run through rooms, ceiling space etc. where there may be great variations in temperature between the different areas, the problem of condensation will need to be addressed. The exhaust ducting will need to be suitably insulated.

# Connection for air extraction

## Condensate trap

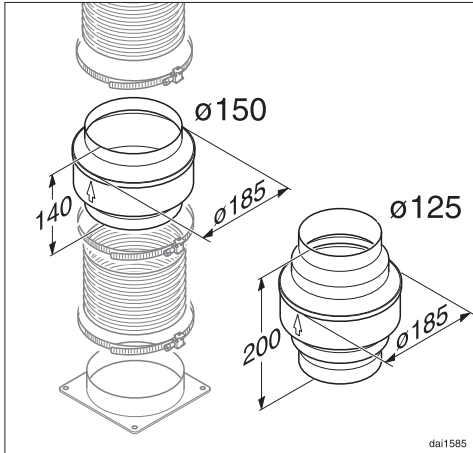


In addition to insulating the exhaust ducting, we recommend that a suitable condensate trap is also installed to collect and evaporate any condensate which may occur.

Condensate traps for 125 mm or 150 mm ducting are available as optional accessories.

A condensate trap can only be fitted in extraction ducting which is directed upwards out of the cooker hood.


- When installing a condensate trap, ensure that it is positioned vertically and as closely as possible above the exhaust socket. The arrow on the housing indicates the direction of air-flow.

## Silencer

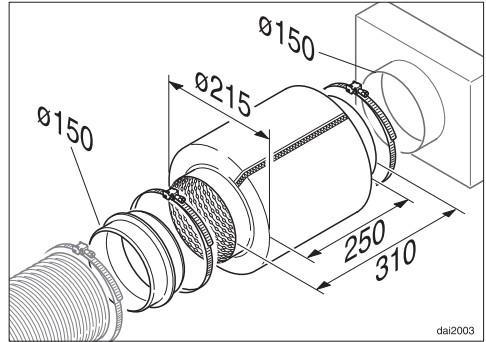

To achieve even further reductions in noise levels, a special silencer (optional accessory) can be fitted in the ducting system.

## Extraction mode

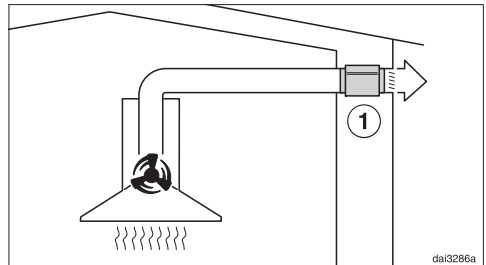

The silencer not only reduces noise from the motor outside the house, but also sounds from outside (e.g. traffic noise). For this reason the silencer must be positioned as close as possible to the ducting exit ①.



Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work. All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety and building code regulations.

The connection data is given on the data plate (See "After sales service"). Ensure that this data matches the voltage and frequency of the household mains supply.

This cooker hood must only be connected to a properly installed electrical circuit.

The electrical installation must comply with VDE 0100!

For extra safety, it is advisable to protect the appliance with a suitable residual current device (RCD) with a trip range of 30 mA (DIN VDE 0664).

It is advisable to connect this appliance via a suitable plug and socket to make it easy to disconnect for servicing purposes (in accordance with VDE 0701). The socket and switch must be easily accessible after the appliance has been installed.

Alternatively it can be hard-wired.

If the mains socket and switch are not accessible after the appliance has been installed, or if it is hard-wired, a separator for each terminal must be present. There must be an all-pole contact gap of at least 3 mm in the switch.

This includes the switch, fuses and relays (in accordance with EN 60335).

# Activating Con@ctivity 2.0

---

## Installing the Con@ctivity 2.0 Stick

In order to use the Con@ctivity 2.0 function, the hob must first be fitted with the Con@ctivity 2.0 Stick.

- Please read the separate installation instructions supplied with the Con@ctivity 2.0 Stick.

## Activating Con@ctivity 2.0



Wireless connection must be activated between the hob and the cooker hood before the Con@ctivity 2.0 function can be used.

Both appliances must be installed and operational.

Wireless connection must be activated on the cooker hood and the hob at the same time. Activation on the cooker hood is described below.

Activation on the hob is described in the relevant Operating and installation instructions. Please refer to the Operating instructions before starting. Activate the cooker hood first, then the hob.

## Activating the cooker hood

- The hob and cooker hood must be switched off.
- Press the run-on option control **5**  **15** for approx. 10 seconds until the indicator for power level **1** lights up.
- Then press in turn,
  - the "—" control,
  - then the "+" control,
  - then the lighting control .

The cooker hood is now in signing on/off mode.

If a wireless connection has not yet been established **2** and **3** will flash at the same time.


If a wireless connection has already been established, **2** and **3** will light up constantly (Con@ctivity 2.0 is already activated or a remote control is signed on).

- To activate Con@ctivity 2.0, press the "+" control.

The search for a signal will start.

- Meanwhile, start activating the hob.

## Activating the hob

- **While** the cooker hood is searching for a signal, start activating the hob. More information about this can be found in the Operating instructions for the hob.
- When the hob registers that connection has been established, confirm activation on the cooker hood with the run-on option control **5**  **15**. All indicators will go out.
- Confirm activation on the hob.

Con@ctivity 2.0 is now ready to use.

If you do not confirm within 4 minutes, activation will not take place.

You only need to carry out the activation procedure once. If the appliances are disconnected from the electricity supply, during a power cut for example, they will still remain activated.

## Activation failed

- If connection cannot be established despite activating the Con@ctivity function on the cooker hood and hob, the function must be deactivated on both appliances and then the procedure repeated.

## Deactivating Con@ctivity 2.0

- Deactivation on the cooker hood is carried out in the same way as activation, by selecting "-" instead of "+".
- To deactivate the hob, please refer to the operating instructions supplied with it.

Please bear in mind that disabling the signal will also disable any remote control function and this will have to be activated again.

# After Sales / Guarantee

---

In the event of a fault which you cannot remedy yourself, please contact your Miele dealer or the Miele Service Department.

Contact details for Miele are given at the end of this booklet. N.B. A call-out fee will be charged for service visits where the problem could have been resolved as described in these instructions.

When contacting your dealer or Miele, please quote the model and serial number of your appliance. These are shown on the data plate.

## Position of the data plate

The data plate is visible after removing the grease filter.

## Guarantee: U.K.

In the U.K., the appliance is guaranteed for 2 years from the date of purchase. However, you must activate your cover by calling 0330 160 6640 or registering online at [www.miele.co.uk](http://www.miele.co.uk).

Please note that telephone calls may be monitored and recorded for training purposes.

## Guarantee: Other countries

For information on the appliance guarantee specific to your country please contact Miele. See end of this booklet for contact details.

## Note for test institutes

All information required regarding comparison testing and measuring noise levels is given in the

**"Comparison tests"** leaflet.

The latest version of this leaflet can be ordered by email from:

– [testinfomiele.de](mailto:testinfomiele.de)

Please quote your postal address, as well as the model and serial number of your cooker hood (see data plate).

## Technical data

Fan motor	90 W
Hob lighting	9.7 W
Glass feature lighting	12.8 W
Total connected load	112.5 W
Voltage, frequency	AC 230 V, 50 Hz
Fuse rating	10 A
Mains connection cable length	1.5 m
Weight	
DA 6996 W	28 kg

### Optional accessory for recirculation mode

Charcoal filter DKF 25-1 or DKF 25-R (reactivatable).

### Conformity declaration

Miele hereby declares that the cooker hood listed at the end of this booklet complies with the basic requirements and other relevant regulations of Guideline 1999/5/EC.

A copy of the full Declaration of Conformity can be obtained from the address on the back page.

# Technical data

## Data sheet for household cooker hoods

In acc. with delegated regulation (EU) No. 65/2014 and regulation (EU) No. 66/2014

<b>MIELE</b>	
<b>Model name / identifier</b>	DA 6996 W
Annual Energy Consumption (AEC <sub>hood</sub> )	32,8 kWh/year
Energy efficiency class	
A+ (most efficient) to F (least efficient)	A+
Energy efficiency index (EEI <sub>hood</sub> )	44,7
Fluid Dynamic Efficiency (FDE <sub>hood</sub> )	35,3
Fluid Dynamic Efficiency class	
A (most efficient) to G (least efficient)	A
Lighting Efficiency (LE <sub>hood</sub> )	60,0 lx/W
Lighting Efficiency class	
A (most efficient) to G (least efficient)	A
Grease Filtering Efficiency	85,4 %
Grease Filtering Efficiency class	
A (most efficient) to G (least efficient)	B
Airflow at best efficiency point	310,8 m <sup>3</sup> /h
Air flow (min. speed)	260 m <sup>3</sup> /h
Air flow (max. speed)	410 m <sup>3</sup> /h
Air flow (intensive or boost setting)	650 m <sup>3</sup> /h
Max. air flow (Q <sub>max</sub> )	650 m <sup>3</sup> /h
Air pressure at best efficiency point	391 Pa
Airborne acoustical A-weighted sound power emissions (min. speed)	44 dB
Airborne acoustical A-weighted sound power emissions (max. speed)	55 dB
Airborne acoustical A-weighted sound power emissions (intensive or boost setting)	65 dB
Electrical power input at best efficiency point	95,7 W
Power consumption in off mode (P <sub>o</sub> )	W
Power consumption in standby mode (P <sub>s</sub> )	0,15 W
Nominal power of lighting system	10,0 W
Average illumination of the lighting system on the cooking surface	600 lx
Time increase factor	0,7

## United Kingdom

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Customer Contact Centre Tel: 0330 160 6600  
E-mail: mielecare@miele.co.uk  
Internet: www.miele.co.uk

## Australia

Miele Australia Pty. Ltd.  
ACN 005 635 398  
ABN 96 005 635 398  
1 Gilbert Park Drive, Knoxfield, VIC 3180  
Tel: 1300 464 353  
Internet: www.miele.com.au

## China

Miele (Shanghai) Trading Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District  
200040 Shanghai, PRC  
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511  
E-mail: info@miele.cn, Internet: www.miele.cn

## Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay, Hong Kong  
Tel: (852) 2610 1025, Fax: (852) 3579 1404  
Email: customerservices@miele.com.hk  
Website: www.miele.hk

## India

Miele India Pvt. Ltd.  
Ground Floor, Copia Corporate Suites  
Plot No. 9, Jasola, New Delhi - 110025  
Tel: 011-46 900 000, Fax: 011-46 900 001  
E-mail: customercare@miele.in, Internet: www.miele.in

## Ireland

Miele Ireland Ltd.  
2024 Bianconi Avenue  
Citywest Business Campus, Dublin 24  
Tel: (01) 461 07 10, Fax: (01) 461 07 97  
E-Mail: info@miele.ie, Internet: www.miele.ie

## Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

# Miele

## Malaysia

Miele Sdn Bhd  
Suite 12-2, Level 12  
Menara Sapura Kencana Petroleum  
Solaris Dutamas No. 1, Jalan Dutamas 1  
50480 Kuala Lumpur, Malaysia  
Phone: +603-6209-0288  
Fax: +603-6205-3768

## New Zealand

Miele New Zealand Limited  
IRD 98 463 631  
Level 2, 10 College Hill  
Freemans Bay, Auckland 1011, NZ  
Tel: 0800 464 353  
Internet: www.miele.co.nz

## Singapore

Miele Pte. Ltd.  
163 Penang Road  
# 04 - 03 Winsland House II  
Singapore 238463  
Tel: +65 6735 1191, Fax: +65 6735 1161  
E-Mail: info@miele.com.sg  
Internet: www.miele.sg

## South Africa

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: (011) 875 9000, Fax: (011) 875 9035  
E-mail: info@miele.co.za  
Internet: www.miele.co.za

## United Arab Emirates

Miele Appliances Ltd.  
Gold & Diamond Park  
Office No. 217-6, Sheikh Zayed Road  
P.O. Box 11 47 82 - Dubai  
Tel: +971 4 3044 999  
Fax: +971 4 3418 852  
800-MIELE (643353)  
E-Mail: info@miele.ae  
Internet: www.miele.ae

DA 6996 W



en-GB

M.-Nr. 10 504 440 / 00